



# Configuring Static and Dynamic NAT Translation

- [Network Address Translation Overview, on page 1](#)
- [Information About Static NAT, on page 2](#)
- [Dynamic NAT Overview, on page 3](#)
- [Timeout Mechanisms, on page 3](#)
- [NAT Inside and Outside Addresses, on page 5](#)
- [Pool Support for Dynamic NAT, on page 5](#)
- [Static and Dynamic Twice NAT Overview, on page 6](#)
- [Guidelines and Limitations for Static NAT, on page 6](#)
- [Restrictions for Dynamic NAT, on page 7](#)
- [Guidelines and Limitations for Dynamic Twice NAT, on page 8](#)
- [Configuring Static NAT, on page 8](#)
- [Configuring Dynamic NAT, on page 16](#)
- [Information About VRF Aware NAT, on page 26](#)
- [Configuring VRF Aware NAT, on page 26](#)

## Network Address Translation Overview

Network Address Translation (NAT) enables private IP internetworks that use nonregistered IP addresses to connect to the Internet. NAT operates on a device, usually connecting two networks, and translates private (not globally unique) IP addresses in the internal network into legal IP addresses before packets are forwarded to another network. You can configure NAT to advertise only one IP address for the entire network to the outside world. This ability provides additional security, effectively hiding the entire internal network behind one IP address.

A device configured with NAT has at least one interface to the inside network and one to the outside network. In a typical environment, NAT is configured at the exit router between a stub domain and a backbone. When a packet leaves the domain, NAT translates the locally significant source IP address into a globally unique IP address. When a packet enters the domain, NAT translates the globally unique destination IP address into a local IP address. If more than one exit point exists, NAT configured at each point must have the same translation table.

NAT is described in RFC 1631.

## Information About Static NAT


Static Network Address Translation (NAT) allows the user to configure one-to-one translations of the inside local addresses to the outside global addresses. It allows both IP addresses and port number translations from the inside to the outside traffic and the outside to the inside traffic. The Cisco Nexus device supports Hitless NAT, which means that you can add or remove a NAT translation in the NAT configuration without affecting the existing NAT traffic flows.

Static NAT creates a fixed translation of private addresses to public addresses. Because static NAT assigns addresses on a one-to-one basis, you need an equal number of public addresses as private addresses. Because the public address is the same for each consecutive connection with static NAT, and a persistent translation rule exists, static NAT enables hosts on the destination network to initiate traffic to a translated host if an access list exists that allows it.

With dynamic NAT and Port Address Translation (PAT), each host uses a different address or port for each subsequent translation. The main difference between dynamic NAT and static NAT is that static NAT allows a remote host to initiate a connection to a translated host if an access list exists that allows it, while dynamic NAT does not.

The figure shows a typical static NAT scenario. The translation is always active so both translated and remote hosts can originate connections, and the mapped address is statically assigned by the **static** command.

**Figure 1: Static NAT**

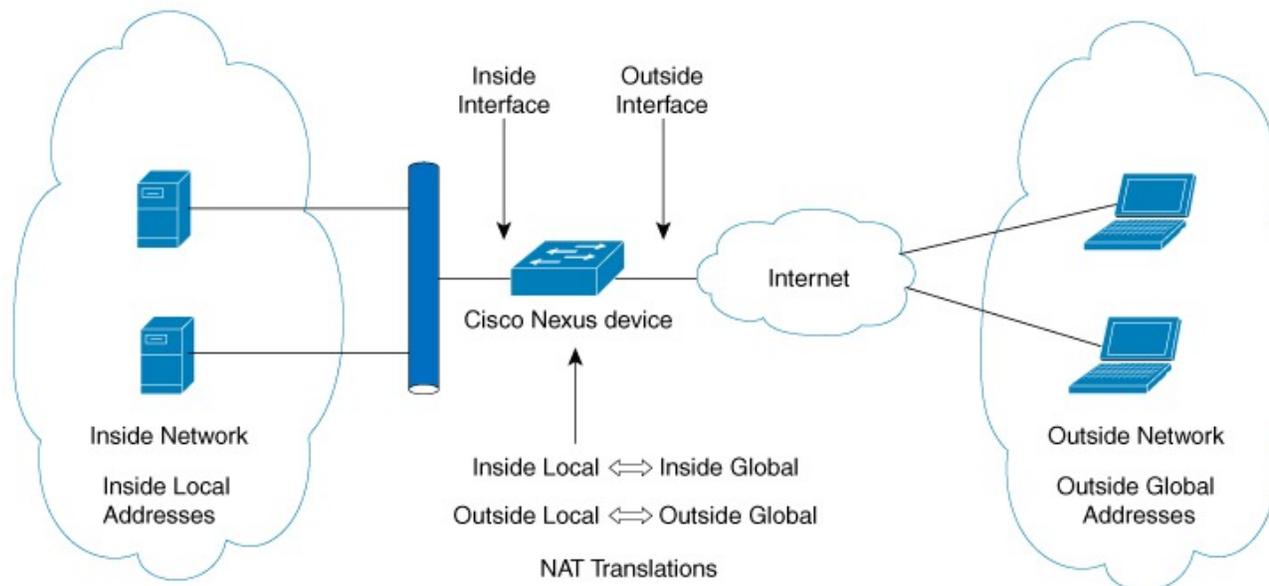

These are key terms to help you understand static NAT:

- NAT inside interface—The Layer 3 interface that faces the private network.
- NAT outside interface—The Layer 3 interface that faces the public network.
- Local address—Any address that appears on the inside (private) portion of the network.
- Global address—Any address that appears on the outside (public) portion of the network.

- Legitimate IP address—An address that is assigned by the Network Information Center (NIC) or service provider.
- Inside local address—The IP address assigned to a host on the inside network. This address does not need to be a legitimate IP address.
- Outside local address—The IP address of an outside host as it appears to the inside network. It does not have to be a legitimate address, because it is allocated from an address space that can be routed on the inside network.
- Inside global address—A legitimate IP address that represents one or more inside local IP addresses to the outside world.
- Outside global address—The IP address that the host owner assigns to a host on the outside network. The address is a legitimate address that is allocated from an address or network space that can be routed.

## Dynamic NAT Overview

Dynamic Network Address Translation (NAT) translates a group of real IP addresses into mapped IP addresses that are routable on a destination network. Dynamic NAT establishes a one-to-one mapping between unregistered and registered IP addresses; however, the mapping can vary depending on the registered IP address that is available at the time of communication.

A dynamic NAT configuration automatically creates a firewall between your internal network and outside networks or the Internet. Dynamic NAT allows only connections that originate inside the stub domain—a device on an external network cannot connect to devices in your network, unless your device has initiated the contact.

Dynamic NAT translations do not exist in the NAT translation table until a device receives traffic that requires translation. Dynamic translations are cleared or timed out when not in use to make space for new entries. Usually, NAT translation entries are cleared when the ternary content addressable memory (TCAM) entries are limited. The default minimum timeout for dynamic NAT translations is 30 minutes. The minimum value of the sampling-timeout in the **ip nat translation sampling-timeout** command is 120 seconds. However it is recommended to configure the **ip nat translation sampling-timeout** value to 15 minutes or higher.

Dynamic NAT supports Port Address Translation (PAT) and access control lists (ACLs). PAT, also known as overloading, is a form of dynamic NAT that maps multiple unregistered IP addresses to a single registered IP address by using different ports. Your NAT configuration can have multiple dynamic NAT translations with same or different ACLs. However, for a given ACL, only one interface can be specified.

## Timeout Mechanisms

After dynamic NAT translations are created, they must be cleared when not in use so that newer translations can be created, especially because the number of TCAM entries is limited. **syn-timeout** and **finrst-timeout** is supported only on Cisco Nexus 3500 Series switches. The following NAT translation timeout timers are supported on the switch:

- **syn-timeout**—Timeout value for TCP data packets that send the SYN request, but do not receive a SYN-ACK reply.

The timeout value ranges from 1 second to 172800 seconds. The default value is 60 seconds.




---

**Note** **syn-timeout** is not supported on Cisco 3100 Series switches.

---

- **finrst-timeout**—Timeout value for the flow entries when a connection is terminated by receiving RST or FIN packets. Use the same keyword to configure the behavior for both RST and FIN packets.
  - If an RST packet is received after the connection is established, SYN-->SYN-ACK-->RST, the flows are expired after the configured timeout value.
  - If a FIN packet is received after the connection is established, SYN-->SYN-ACK-->FIN, the finrst timer starts.
  - If a FIN-ACK is received from the other side, the translation entry is cleared immediately, else it clears after the timeout value completes.




---

**Note** If dynamic pool-based configuration is used and a FIN-ACK is received, the translation entry is not cleared.

**finrst-timeout** is not supported on Cisco 3100 Series switches.

---

The timeout value ranges from 1 second to 172800 seconds. The default value is 60 seconds.

- **tcp-timeout**—Timeout value for TCP translations for which connections have been established after a three-way handshake (SYN, SYN-ACK, ACK). If no active flow occurs after the connection has been established, the translations expire as per the configured timeout value. This timeout value starts after the sampling timeout value completes.

The timeout value ranges from 60 seconds to 172800 seconds, including the sampling-timeout.

- **udp-timeout**—Timeout value for all NAT UDP packets.

The timeout value ranges from 60 seconds to 172800 seconds, including the sampling-timeout.

- **timeout**—Timeout value for dynamic NAT translations.

The timeout value ranges from 60 seconds to 172800 seconds, including the sampling-timeout.

- **sampling-timeout**—Time after which the device checks for dynamic translation activity.

The timeout value ranges from 120 seconds to 172800 seconds.




---

**Note** **sampling-timeout** is not supported on Cisco 3100 Series switches.

---

The **tcp-timeout**, **udp-timeout**, and the **timeout** value timers are triggered after the timeout configured for the **ip nat translation sampling-timeout** command expires.

The SYN, FIN and RST timers are not used for dynamic pool-based NAT.



---

**Note** All the above timers will take additional time (01 to 30 seconds) to expire. This additional time is to randomize the timer expiry events for performance and optimization.

---

## NAT Inside and Outside Addresses

NAT inside refers to networks owned by an organization that must be translated. When NAT is configured, hosts within this network will have addresses in one space (known as the local address space) that will appear to those outside the network as being in another space (known as the global address space).

Similarly, NAT outside refers to those networks to which the stub network connects. They are not generally under the control of the organization. Hosts in outside networks can be subject to translation and can have local and global addresses.

NAT uses the following definitions:

- Local address—A local IP address that appears on the inside of a network.
- Global address—A global IP address that appears on the outside of a network.
- Inside local address—The IP address that is assigned to a host on the inside network. The address is probably not a legitimate IP address assigned by the Internet Network Information Center (InterNIC) or a service provider.
- Inside global address—A legitimate IP address (assigned by InterNIC or a service provider) that represents one or more inside local IP addresses to the outside world.
- Outside local address—The IP address of an outside host as it appears to the inside network. The address is not necessarily legitimate; it was allocated from the address space that is routable on the inside.
- Outside global address—The IP address that is assigned to a host on the outside network by the owner of the host. The address was allocated from a globally routable address or a network space.

## Pool Support for Dynamic NAT

Dynamic NAT allows the configuration of a pool of global addresses that can be used to dynamically allocate a global address from the pool for every new translation. The addresses are returned to the pool after the session ages out or is closed. This allows for a more efficient use of addresses based on requirements.

Support for PAT includes the use of the global address pool. This further optimizes IP address utilization. PAT exhausts one IP address at a time with the use of port numbers. If no port is available from the appropriate group and more than one IP address is configured, PAT moves to the next IP address and tries to allocate the original source port again. This process continues until PAT runs out of available ports and IP addresses.

With dynamic NAT and PAT, each host uses a different address or port for each subsequent translation. The main difference between dynamic NAT and static NAT is that static NAT allows a remote host to initiate a connection to a translated host if an access list exists that allows it, while dynamic NAT does not.

# Static and Dynamic Twice NAT Overview

When both the source IP address and the destination IP address are translated as a single packet that goes through a Network Address Translation (NAT) device, it is referred to as twice NAT. Twice NAT is supported for static and dynamic translations.

Twice NAT allows you to configure two NAT translations (one inside and one outside) as part of a group of translations. These translations can be applied to a single packet as it flows through a NAT device. When you add two translations as part of a group, both the individual translations and the combined translation take effect.

A NAT inside translation modifies the source IP address and port number when a packet flows from inside to outside. It modifies the destination IP address and port number when the packet returns from outside to inside. NAT outside translation modifies the source IP address and port number when the packet flows from outside to inside, and it modifies the destination IP address and port number when the packet returns from inside to outside.

Without twice NAT, only one of the translation rules is applied on a packet, either the source IP address and port number or the destination IP address and port number.

Static NAT translations that belong to the same group are considered for twice NAT configuration. If a static configuration does not have a configured group ID, the twice NAT configuration will not work. All inside and outside NAT translations that belong to a single group that is identified by the group ID are paired to form twice NAT translations.

Dynamic twice NAT translations dynamically select the source IP address and port number information from pre-defined **ip nat pool** or **interface overload** configurations. Packet filtration is done by configuring ACLs, and traffic must originate from the dynamic NAT translation rule direction such that source translation is done by using dynamic NAT rules.

Dynamic twice NAT allows you to configure two NAT translations (one inside and one outside) as part of a group of translations. One translation must be dynamic and other translation must be static. When these two translations are part of a group of translations, both the translations can be applied on a single packet as it goes through the NAT device either from inside to outside or from outside to inside.

## Guidelines and Limitations for Static NAT

Static NAT has the following configuration guidelines and limitations:

- NAT is supported on Cisco Nexus 31108PC-V, Cisco Nexus 31108TC-V, Cisco Nexus 3132Q-V, Cisco Nexus 3132Q/3132Q-X, Cisco Nexus 3164Q, Cisco Nexus 3172PQ, Cisco Nexus 3172TQ, Cisco Nexus 31128PQ switches. However NAT is not supported on Cisco Nexus 3048 and Cisco Nexus 3064 switches.
- NAT supports up to 1024 translations which include both static and dynamic NAT.
- The Cisco Nexus device supports NAT on the following interface types:
  - Switch Virtual Interfaces (SVIs)
  - Routed ports
  - Layer 3 port channels
- NAT is supported for IPv4 Unicast only.

- The Cisco Nexus device does not support the following:
  - Application layer translation. Layer 4 and other embedded IPs are not translated, including FTP, ICMP failures, IPSec, and HTTPs.
  - NAT and VLAN Access Control Lists (VACLs) that are configured on an interface at the same time.
  - PAT translation of fragmented IP packets.
  - NAT translation on software forwarded packets. For example, packets with IP-options are not NAT translated.
- Egress ACLs are applied to the original packets and not the NAT translated packets.
- HSRP and VRRP are not supported on a NAT interface.
- Warp mode latency performance is not supported on packets coming from the outside to the inside domain.
- If an IP address is used for Static NAT or PAT translations, it cannot be used for any other purpose. For example, it cannot be assigned to an interface.
- For Static NAT, the outside global IP address should be different from the outside interface IP address.
- If the translated IP is part of the outside interface subnet, then use the **ip local-proxy-arp** command on the NAT outside interface.
- Twice NAT is not supported. (Twice NAT is a variation of NAT in that both the source and destination addresses are modified by NAT as a datagram crosses address domains (inside to outside or outside to inside.)
- NAT statistics are not available.
- When configuring a large number of translations (more than 100), it is faster to configure the translations before configuring the NAT interfaces.
- NAT configurations such as `ip nat inside` or `ip nat outside` are not supported on loopback interfaces.

## Restrictions for Dynamic NAT

The following restrictions apply to dynamic Network Address Translation (NAT):

- Fragmented packets are not supported.
- Application layer gateway (ALG) translations are not supported. ALG, also known as application-level gateway, is an application that translates IP address information inside the payload of an application packet.
- NAT and VLAN Access Control Lists (VACLs) are not supported together on an interface. You can configure either NAT or VACLs on an interface.
- Egress ACLs are not applied to translated packets.
- MIBs are not supported.
- Cisco Data Center Network Manager (DCNM) is not supported.

- Dynamic NAT on traffic coming from outside domains is not supported.
- Dynamic NAT translations are not synchronized with active and standby devices.
- Stateful NAT is not supported. However, NAT and Hot Standby Router Protocol (HSRP) can coexist.
- When creating a new translation on a Cisco Nexus 3548 Series switch, the flow is software forwarded until the translation is programmed in the hardware, which might take a few seconds. During this period, there is no translation entry for the inside global address. Therefore, returning traffic is dropped. To overcome this limitation, create a loopback interface and give it an IP address that belongs to the NAT pool.
- ICMP NAT translation is supported only on Cisco Nexus 3500 Series switches.
- NAT configurations such as `ip nat inside` or `ip nat outside` are not supported on loopback interfaces.

## Guidelines and Limitations for Dynamic Twice NAT

See the following guidelines for configuring dynamic twice NAT:

- In dynamic twice NAT, if dynamic NAT flows are not created before creating static NAT flows, dynamic twice NAT flows are not created correctly.
- When an empty ACL is created, the default rule of **permit ip any any** is configured. The NAT-ACL does not match further ACL entries if the first ACL is blank.
- The maximum number of supported ICMP translations or flow entries is 176 for an optimal utilization of the TCAM space.
- NAT is ECMP aware and it supports a maximum of 24 ECMP paths.

## Configuring Static NAT

### Enabling Static NAT

#### SUMMARY STEPS

1. `switch# configure terminal`
2. `switch(config)# feature nat`
3. (Optional) `switch(config)# copy running-config startup-config`

#### DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>switch# configure terminal</code>	Enters global configuration mode.
Step 2	<code>switch(config)# feature nat</code>	Enables the static NAT feature on the device.

	Command or Action	Purpose
Step 3	(Optional) switch(config)# <b>copy running-config startup-config</b>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

## Configuring Static NAT on an Interface

### SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **interface** *type slot/port*
3. switch(config-if)# **ip nat** {**inside** | **outside**}
4. (Optional) switch(config)# **copy running-config startup-config**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# <b>configure terminal</b>	Enters global configuration mode.
Step 2	switch(config)# <b>interface</b> <i>type slot/port</i>	Specifies an interface to configure, and enters interface configuration mode.
Step 3	switch(config-if)# <b>ip nat</b> { <b>inside</b>   <b>outside</b> }	Specifies the interface as inside or outside.  <b>Note</b> Only packets that arrive on a marked interface can be translated.  This configuration is not supported on loopback interface.
Step 4	(Optional) switch(config)# <b>copy running-config startup-config</b>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

### Example

This example shows how to configure an interface with static NAT from the inside:

```
switch# configure terminal
switch(config)# interface ethernet 1/4
switch(config-if)# ip nat inside
```

## Enabling Static NAT for an Inside Source Address

For inside source translation, the traffic flows from inside interface to the outside interface. NAT translates the inside local IP address to the inside global IP address. On the return traffic, the destination inside global IP address gets translated back to the inside local IP address.



**Note** When the Cisco Nexus device is configured to translate an inside source IP address (Src:ip1) to an outside source IP address (newSrc:ip2), the Cisco Nexus device implicitly adds a translation for an outside destination IP address (Dst: ip2) to an inside destination IP address (newDst: ip1).

## SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **ip nat inside source static** *local-ip-address global-ip-address* [**group group-id**]
3. (Optional) switch(config)# **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	switch(config)# <b>ip nat inside source static</b> <i>local-ip-address global-ip-address</i> [ <b>group group-id</b> ]	Configures static NAT to translate the inside global address to the inside local address or to translate the opposite (the inside local traffic to the inside global traffic).
<b>Step 3</b>	(Optional) switch(config)# <b>copy running-config startup-config</b>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

### Example

This example shows how to configure static NAT for an inside source address:

```
switch# configure terminal
switch(config)# ip nat inside source static 1.1.1.1 5.5.5.5
switch(config)# copy running-config startup-config
```

## Enabling Static NAT for an Outside Source Address

For outside source translation, the traffic flows from the outside interface to the inside interface. NAT translates the outside global IP address to the outside local IP address. On the return traffic, the destination outside local IP address gets translated back to outside global IP address.

## SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **ip nat outside source static** *global-ip-address local-ip-address* [**group group-id**] [**add-route**]
3. (Optional) switch(config)# **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# <b>configure terminal</b>	Enters global configuration mode.
Step 2	switch(config)# <b>ip nat outside source static</b> <i>global-ip-address local-ip-address [group group-id]</i> <b>[add-route]</b>	Configures static NAT to translate the outside global address to the outside local address or to translate the opposite (the outside local traffic to the outside global traffic).
Step 3	(Optional) switch(config)# <b>copy running-config startup-config</b>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

## Example

This example show how to configure static NAT for an outside source address:

```
switch# configure terminal
switch(config)# ip nat outside source static 2.2.2.2 6.6.6.6
switch(config)# copy running-config startup-config
```

## Configuring Static PAT for an Inside Source Address

You can map services to specific inside hosts using Port Address Translation (PAT).

## SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **ip nat inside source static** *{inside-local-address outside-local-address | {tcp|udp} inside-local-address {local-tcp-port | local-udp-port} inside-global-address {global-tcp-port | global-udp-port}}*
3. (Optional) switch(config)# **copy running-config startup-config**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# <b>configure terminal</b>	Enters global configuration mode.
Step 2	switch(config)# <b>ip nat inside source static</b> <i>{inside-local-address outside-local-address   {tcp udp}</i> <i>inside-local-address {local-tcp-port   local-udp-port}</i> <i>inside-global-address {global-tcp-port   global-udp-port}}</i>	Maps static NAT to an inside local port to an inside global port.
Step 3	(Optional) switch(config)# <b>copy running-config startup-config</b>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

**Example**

This example shows how to map UDP services to a specific inside source address and UDP port:

```
switch# configure terminal
switch(config)# ip nat inside source static udp 20.1.9.2 63 35.48.35.48 130
switch(config)# copy running-config startup-config
```

## Configuring Static PAT for an Outside Source Address

You can map services to specific outside hosts using Port Address Translation (PAT).

**SUMMARY STEPS**

1. switch# **configure terminal**
2. switch(config)# **ip nat outside source static** *{outside-global-address outside-local-address | {tcp | udp} outside-global-address {global-tcp-port | global-udp-port} outside-local-address {global-tcp-port | global-udp-port}}*
3. (Optional) switch(config)# **copy running-config startup-config**

**DETAILED STEPS**

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	switch(config)# <b>ip nat outside source static</b> <i>{outside-global-address outside-local-address   {tcp   udp} outside-global-address {global-tcp-port   global-udp-port} outside-local-address {global-tcp-port   global-udp-port}}</i>	Maps static NAT to an outside global port to an outside local port.
<b>Step 3</b>	(Optional) switch(config)# <b>copy running-config startup-config</b>	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

**Example**

This example shows how to map TCP services to a specific outside source address and TCP port:

```
switch# configure terminal
switch(config)# ip nat outside source static tcp 20.1.9.2 63 35.48.35.48 130
switch(config)# copy running-config startup-config
```

## Configuring Static Twice NAT

All translations within the same group are considered for creating static twice Network Address Translation (NAT) rules.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip nat inside source static** *inside-local-ip-address* *inside-global-ip-address* [**group** *group-id*]
4. **ip nat outside source static** *outside-global-ip-address* *outside-local-ip-address* [**group** *group-id*] [**add-route**]
5. **interface** *type number*
6. **ip address** *ip-address mask*
7. **ip nat inside**
8. **exit**
9. **interface** *type number*
10. **ip address** *ip-address mask*
11. **ip nat outside**
12. **end**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> <pre>switch&gt; enable</pre>	Enables privileged EXEC mode.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal</pre>	Enters privileged EXEC mode.
Step 3	<b>ip nat inside source static</b> <i>inside-local-ip-address</i> <i>inside-global-ip-address</i> [ <b>group</b> <i>group-id</i> ]  <b>Example:</b> <pre>switch(config)# ip nat inside source static 10.1.1.1 192.168.34.4 group 4</pre>	Configures static twice NAT to translate an inside local IP address to the corresponding inside global IP address.  • The <b>group</b> keyword determines the group to which a translation belongs.
Step 4	<b>ip nat outside source static</b> <i>outside-global-ip-address</i> <i>outside-local-ip-address</i> [ <b>group</b> <i>group-id</i> ] [ <b>add-route</b> ]  <b>Example:</b> <pre>switch(config)# ip nat outside source static 209.165.201.1 10.3.2.42 group 4 add-route</pre>	Configures static twice NAT to translate an outside global IP address to the corresponding outside local IP address.  • The <b>group</b> keyword determines the group to which a translation belongs.
Step 5	<b>interface</b> <i>type number</i>  <b>Example:</b> <pre>switch(config)# interface ethernet 1/2</pre>	Configures an interface and enters interface configuration mode.
Step 6	<b>ip address</b> <i>ip-address mask</i>  <b>Example:</b> <pre>switch(config-if)# ip address 10.2.4.1 255.255.255.0</pre>	Sets a primary IP address for an interface.

	Command or Action	Purpose
<b>Step 7</b>	<b>ip nat inside</b> <b>Example:</b> switch(config-if)# ip nat inside	Connects the interface to an inside network, which is subject to NAT. <b>Note</b> This configuration is not supported on loopback interface.
<b>Step 8</b>	<b>exit</b> <b>Example:</b> switch(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 9</b>	<b>interface type number</b> <b>Example:</b> switch(config)# interface ethernet 1/1	Configures an interface and enters interface configuration mode.
<b>Step 10</b>	<b>ip address ip-address mask</b> <b>Example:</b> switch(config-if)# ip address 10.5.7.9 255.255.255.0	Sets a primary IP address for an interface.
<b>Step 11</b>	<b>ip nat outside</b> <b>Example:</b> switch(config-if)# ip nat outside	Connects the interface to an outside network, which is subject to NAT. <b>Note</b> This configuration is not supported on loopback interface.
<b>Step 12</b>	<b>end</b> <b>Example:</b> switch(config-if)# end	Exits interface configuration mode and returns to privileged EXEC mode.

## Configuration Example for Static NAT and PAT

This example shows the configuration for static NAT:

```
ip nat inside source static 103.1.1.1 11.3.1.1
ip nat inside source static 139.1.1.1 11.39.1.1
ip nat inside source static 141.1.1.1 11.41.1.1
ip nat inside source static 149.1.1.1 95.1.1.1
ip nat inside source static 149.2.1.1 96.1.1.1
ip nat outside source static 95.3.1.1 95.4.1.1
ip nat outside source static 96.3.1.1 96.4.1.1
ip nat outside source static 102.1.2.1 51.1.2.1
ip nat outside source static 104.1.1.1 51.3.1.1
ip nat outside source static 140.1.1.1 51.40.1.1
```

This example shows the configuration for static PAT:

```
ip nat inside source static tcp 10.11.1.1 1 210.11.1.1 101
ip nat inside source static tcp 10.11.1.1 2 210.11.1.1 201
ip nat inside source static tcp 10.11.1.1 3 210.11.1.1 301
ip nat inside source static tcp 10.11.1.1 4 210.11.1.1 401
```

```
ip nat inside source static tcp 10.11.1.1 5 210.11.1.1 501
ip nat inside source static tcp 10.11.1.1 6 210.11.1.1 601
ip nat inside source static tcp 10.11.1.1 7 210.11.1.1 701
ip nat inside source static tcp 10.11.1.1 8 210.11.1.1 801
ip nat inside source static tcp 10.11.1.1 9 210.11.1.1 901
ip nat inside source static tcp 10.11.1.1 10 210.11.1.1 1001
ip nat inside source static tcp 10.11.1.1 11 210.11.1.1 1101
ip nat inside source static tcp 10.11.1.1 12 210.11.1.1 1201
```

## Example: Configuring Static Twice NAT

The following example shows how to configure the inside source and outside source static twice NAT configurations:

```
Switch> enable
Switch# configure terminal
Switch(config)# ip nat inside source static 10.1.1.1 192.168.34.4 group 4
Switch(config)# ip nat outside source static 209.165.201.1 10.3.2.42 group 4
Switch(config)# interface ethernet 1/2
Switch(config-if)# ip address 10.2.4.1 255.255.255.0
Switch(config-if)# ip nat inside
switch(config-if)# exit
switch(config)# interface ethernet 1/1
switch(config-if)# ip address 10.5.7.9 255.255.255.0
switch(config-if)# ip nat outside
Switch(config-if)# end
```

## Verifying the Static NAT Configuration

To display the static NAT configuration, perform this task:

### SUMMARY STEPS

1. switch# show ip nat translations

### DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# show ip nat translations	Shows the translations for the inside global, inside local, outside local, and outside global IP addresses.

### Example

This example shows how to display the static NAT configuration:

```
switch# sh ip nat translations
Pro Inside global      Inside local      Outside local      Outside global
--- ---              ---              51.3.1.1          104.1.1.1
--- ---              ---              95.4.1.1          95.3.1.1
--- ---              ---              96.4.1.1          96.3.1.1
--- ---              ---              51.40.1.1         140.1.1.1
--- ---              ---              51.42.1.1         142.1.2.1
```

```

--- ---
--- 11.1.1.1      101.1.1.1      51.1.2.1      102.1.2.1
--- 11.3.1.1      103.1.1.1      ---           ---
--- 11.39.1.1     139.1.1.1      ---           ---
--- 11.41.1.1     141.1.1.1      ---           ---
--- 95.1.1.1      149.1.1.1      ---           ---
--- 96.1.1.1      149.2.1.1      ---           ---
    130.1.1.1:590  30.1.1.100:5000 ---           ---
    130.2.1.1:590  30.2.1.100:5000 ---           ---
    130.3.1.1:590  30.3.1.100:5000 ---           ---
    130.4.1.1:590  30.4.1.100:5000 ---           ---
    130.1.1.1:591  30.1.1.101:5000 ---           ---

```

# Configuring Dynamic NAT

## Configuring Dynamic Translation and Translation Timeouts

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip access-list** *access-list-name*
4. **permit** *protocol source source-wildcard any*
5. **deny** *protocol source source-wildcard any*
6. **exit**
7. **ip nat inside source list** *access-list-name interface type number overload*
8. **interface** *type number*
9. **ip address** *ip-address mask*
10. **ip nat inside**
11. **exit**
12. **interface** *type number*
13. **ip address** *ip-address mask*
14. **ip nat outside**
15. **exit**
16. **ip nat translation tcp-timeout** *seconds*
17. **ip nat translation max-entries** *number-of-entries*
18. **ip nat translation udp-timeout** *seconds*
19. **ip nat translation timeout** *seconds*
20. **end**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b> <b>Example:</b>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>

	Command or Action	Purpose
	Switch> enable	
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Switch# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>ip access-list <i>access-list-name</i></b> <b>Example:</b> Switch(config)# ip access-list acl1	Defines an access list and enters access-list configuration mode.
<b>Step 4</b>	<b>permit <i>protocol source source-wildcard any</i></b> <b>Example:</b> Switch(config-acl)# permit ip 10.111.11.0/24 any	Sets conditions in an IP access list that permit traffic matching the conditions.
<b>Step 5</b>	<b>deny <i>protocol source source-wildcard any</i></b> <b>Example:</b> Switch(config-acl)# deny udp 10.111.11.100/32 any	Sets conditions in an IP access list that deny packets from entering a network. The <b>deny</b> rule is treated as a <b>permit</b> rule, and the packets matching the criteria mentioned in the deny rule are forwarded without NAT translation.
<b>Step 6</b>	<b>exit</b> <b>Example:</b> Switch(config-acl)# exit	Exits access-list configuration mode and returns to global configuration mode.
<b>Step 7</b>	<b>ip nat inside source list <i>access-list-name</i> interface <i>type number</i> overload</b> <b>Example:</b> Switch(config)# ip nat inside source list acl1 interface ethernet 1/1 overload	Establishes dynamic source translation by specifying the access list defined in Step 3.
<b>Step 8</b>	<b>interface <i>type number</i></b> <b>Example:</b> Switch(config)# interface ethernet 1/4	Configures an interface and enters interface configuration mode.
<b>Step 9</b>	<b>ip address <i>ip-address mask</i></b> <b>Example:</b> Switch(config-if)# ip address 10.111.11.39 255.255.255.0	Sets a primary IP address for the interface.
<b>Step 10</b>	<b>ip nat inside</b> <b>Example:</b> Switch(config-if)# ip nat inside	Connects the interface to an inside network, which is subject to NAT.
<b>Step 11</b>	<b>exit</b> <b>Example:</b>	Exits interface configuration mode and returns to global configuration mode.

	Command or Action	Purpose
	<code>Switch(config-if)# exit</code>	<b>Note</b> This configuration is not supported on loopback interface.
<b>Step 12</b>	<b>interface</b> <i>type number</i> <b>Example:</b> <code>Switch(config)# interface ethernet 1/1</code>	Configures an interface and enters interface configuration mode.
<b>Step 13</b>	<b>ip address</b> <i>ip-address mask</i> <b>Example:</b> <code>Switch(config-if)# ip address 172.16.232.182 255.255.255.240</code>	Sets a primary IP address for an interface.
<b>Step 14</b>	<b>ip nat outside</b> <b>Example:</b> <code>Switch(config-if)# ip nat outside</code>	Connects the interface to an outside network. <b>Note</b> This configuration is not supported on loopback interface.
<b>Step 15</b>	<b>exit</b> <b>Example:</b> <code>Switch(config-if)# exit</code>	Exits interface configuration mode and returns to global configuration mode.
<b>Step 16</b>	<b>ip nat translation tcp-timeout</b> <i>seconds</i> <b>Example:</b> <code>Switch(config)# ip nat translation tcp-timeout 50000</code>	Specifies the timeout value for TCP-based dynamic NAT entries. <ul style="list-style-type: none"><li>• Dynamically created NAT translations are cleared when the configured timeout limit is reached. All configured timeouts are triggered after the timeout configured for the <b>ip nat translation sampling-timeout</b> command expires.</li></ul>
<b>Step 17</b>	<b>ip nat translation max-entries</b> <i>number-of-entries</i> <b>Example:</b> <code>Switch(config)# ip nat translation max-entries 300</code>	Specifies the maximum number of dynamic NAT translations. The number of entries can be between 1 and 1023.
<b>Step 18</b>	<b>ip nat translation udp-timeout</b> <i>seconds</i> <b>Example:</b> <code>Switch(config)# ip nat translation udp-timeout 45000</code>	Specifies the timeout value for UDP-based dynamic NAT entries. <ul style="list-style-type: none"><li>• Dynamically created NAT translations are cleared when the configured timeout limit is reached. All configured timeouts are triggered after the timeout configured for the <b>ip nat translation sampling-timeout</b> command expires.</li></ul>
<b>Step 19</b>	<b>ip nat translation timeout</b> <i>seconds</i> <b>Example:</b> <code>switch(config)# ip nat translation timeout 13000</code>	Specifies the timeout value for dynamic NAT translations.

	Command or Action	Purpose
Step 20	<b>end</b>  <b>Example:</b> Switch(config)# end	Exits global configuration mode and returns to privileged EXEC mode.

## Configuring Dynamic NAT Pool

You can create a NAT pool by either defining the range of IP addresses in a single **ip nat pool** command or by using the **ip nat pool** and **address** commands

### SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **feature nat**
3. switch(config)# **ip nat pool** *pool-name* [*startip endip*] {**prefix** *prefix-length* | **netmask** *network-mask*}
4. (Optional) switch(config-ipnat-pool)# **address** *startip endip*
5. (Optional) switch(config)# **no ip nat pool** *pool-name*

### DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# <b>configure terminal</b>	Enters global configuration mode.
Step 2	switch(config)# <b>feature nat</b>	Enables the NAT feature on the device.
Step 3	switch(config)# <b>ip nat pool</b> <i>pool-name</i> [ <i>startip endip</i> ] { <b>prefix</b> <i>prefix-length</i>   <b>netmask</b> <i>network-mask</i> }	Creates a NAT pool with a range of global IP addresses. The IP addresses are filtered by using either a prefix length or a network mask.
Step 4	(Optional) switch(config-ipnat-pool)# <b>address</b> <i>startip endip</i>	Specifies the range of global IP addresses if they were not specified during creation of the pool.
Step 5	(Optional) switch(config)# <b>no ip nat pool</b> <i>pool-name</i>	Deletes the specified NAT pool.

### Example

This example shows how to create a NAT pool with a prefix length:

```
switch# configure terminal
switch(config)# ip nat pool pool1 30.1.1.1 30.1.1.2 prefix-length 24
switch(config)#
```

This example shows how to create a NAT pool with a network mask:

```
switch# configure terminal
switch(config)# ip nat pool pool5 20.1.1.1 20.1.1.5 netmask 255.0.255.0
switch(config)#
```

This example shows how to create a NAT pool and define the range of global IP addresses using the **ip nat pool** and **address** commands:

```
switch# configure terminal
switch(config)# ip nat pool pool7 netmask 255.255.0.0
switch(config-ipnat-pool)# address 40.1.1.1 40.1.1.5
switch(config-ipnat-pool)#
```

This example shows how to delete a NAT pool:

```
switch# configure terminal
switch(config)# no ip nat pool pool4
switch(config)#
```

## Configuring Source Lists

You can configure a source list of IP addresses for the inside interface and the outside interface.

### Before you begin

Ensure that you configure a pool before configuring the source list for the pool.

### SUMMARY STEPS

1. switch# **configure terminal**
2. (Optional) switch# **ip nat inside source list** *list-name* **pool** *pool-name* [**overload**]
3. (Optional) switch# **ip nat outside source list** *list-name* **pool** *pool-name* [**add-route**]

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	(Optional) switch# <b>ip nat inside source list</b> <i>list-name</i> <b>pool</b> <i>pool-name</i> [ <b>overload</b> ]	Creates a NAT inside source list with pool with or without overloading.
<b>Step 3</b>	(Optional) switch# <b>ip nat outside source list</b> <i>list-name</i> <b>pool</b> <i>pool-name</i> [ <b>add-route</b> ]	Creates a NAT outside source list with pool without overloading.

### Example

This example shows how to create a NAT inside source list with pool without overloading:

```
switch# configure terminal
switch(config)# ip nat inside source list list1 pool pool1
switch(config)#
```

This example shows how to create a NAT inside source list with pool with overloading:

```
switch# configure terminal
switch(config)# ip nat inside source list list2 pool pool2 overload
```

```
switch(config)#
```

This example shows how to create a NAT outside source list with pool without overloading:

```
switch# configure terminal
switch(config)# ip nat outside source list list3 pool pool3
switch(config)#
```

## Configuring Dynamic Twice NAT for an Inside Source Address

For an inside source address translation, the traffic flows from the inside interface to the outside interface. You can configure dynamic twice NAT for an inside source address.

### Before you begin

Ensure that you enable NAT on the switch.

### SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **ip nat outside source static** *outside-global-ip-address outside-local-ip-address* | [**tcp** | **udp**] *outside-global-ip-address outside-global-port outside-local-ip-address outside-local-port* [**group group-id**] [**add-route**] [**dynamic**]
3. switch(config)# **ip nat inside source list** *access-list-name* [**interface type slot/port overload** | **pool pool-name** ] [**group group-id**] [**dynamic** ]
4. switch(config)# **ip nat pool** *pool-name* [*startip endip*] {**prefix prefix-length** | **netmask network-mask**}
5. switch(config)# **interface type slot/port**
6. switch(config-if)# **ip nat outside**
7. switch(config-if)# **exit**
8. switch(config)# **interface type slot/port**
9. switch(config-if)# **ip nat inside**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# <b>configure terminal</b>	Enters global configuration mode.
Step 2	switch(config)# <b>ip nat outside source static</b> <i>outside-global-ip-address outside-local-ip-address</i>   [ <b>tcp</b>   <b>udp</b> ] <i>outside-global-ip-address outside-global-port outside-local-ip-address outside-local-port</i> [ <b>group group-id</b> ] [ <b>add-route</b> ] [ <b>dynamic</b> ]	Configures static NAT to translate an outside global address to an inside local address or to translate inside local traffic to inside global traffic.  The <b>group</b> keyword determines the group to which a translation belongs.
Step 3	switch(config)# <b>ip nat inside source list</b> <i>access-list-name</i> [ <b>interface type slot/port overload</b>   <b>pool pool-name</b> ] [ <b>group group-id</b> ] [ <b>dynamic</b> ]	Establishes dynamic source translation by creating a NAT inside source list with pool with or without overloading.  The <b>group</b> keyword determines the group to which a translation belongs.

	Command or Action	Purpose
<b>Step 4</b>	switch(config)# <b>ip nat pool</b> <i>pool-name</i> [ <i>startip endip</i> ] { <b>prefix</b> <i>prefix-length</i>   <b>netmask</b> <i>network-mask</i> }	Creates a NAT pool with a range of global IP addresses. The IP addresses are filtered by using either a prefix length or a network mask.
<b>Step 5</b>	switch(config)# <b>interface</b> <i>type slot/port</i>	Configures an interface and enters interface configuration mode.
<b>Step 6</b>	switch(config-if)# <b>ip nat outside</b>	Connects the interface to an outside network.
<b>Step 7</b>	switch(config-if)# <b>exit</b>	Exits interface configuration mode and returns to global configuration mode.
<b>Step 8</b>	switch(config)# <b>interface</b> <i>type slot/port</i>	Configures an interface and enters interface configuration mode.
<b>Step 9</b>	switch(config-if)# <b>ip nat inside</b>	Connects the interface to an inside network, which is subject to NAT.

### Example

This example shows how to configure dynamic twice NAT for an inside source address:

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# ip nat outside source static 2.2.2.2 4.4.4.4 group 20 dynamic
switch(config)# ip nat inside source list acl_1 pool pool_1 overload group 20 dynamic
switch(config)# ip nat pool pool_1 3.3.3.3 3.3.3.10 prefix-length 24
switch(config)# interface Ethernet1/8
switch(config-if)# ip nat outside
switch(config-if)# exit
switch(config)# interface Ethernet1/15
switch(config-if)# ip nat inside
```

## Configuring Dynamic Twice NAT for an Outside Source Address

For an outside source address translation, the traffic flows from the outside interface to the inside interface. You can configure dynamic twice NAT for an outside source address.

### Before you begin

Ensure that you enable NAT on the switch.

### SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **ip nat inside source static** *inside-local-ip-address* *inside-global-ip-address* | [**tcp** | **udp**] *inside-local-ip-address* *local-port* *inside-global-ip-address* *global-port* [**group** *group-id*] [**dynamic**]
3. switch(config)# **ip nat outside source list** *access-list-name* [**interface** *type slot/port* **pool** *pool-name*] [**group** *group-id*] [**add-route**] [**dynamic**]
4. switch(config)# **ip nat pool** *pool-name* [*startip endip*] {**prefix** *prefix-length* | **netmask** *network-mask*}

5. switch(config)# **interface** *type slot/port*
6. switch(config-if)# **ip nat outside**
7. switch(config-if)# **exit**
8. switch(config)# **interface** *type slot/port*
9. switch(config-if)# **ip nat inside**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	switch# <b>configure terminal</b>	Enters global configuration mode.
<b>Step 2</b>	switch(config)# <b>ip nat inside source static</b> <i>inside-local-ip-address inside-global-ip-address</i>   [ <b>tcp</b>   <b>udp</b> ] <i>inside-local-ip-address local-port</i> <i>inside-global-ip-address global-port</i> [ <b>group group-id</b> ] [ <b>dynamic</b> ]	Configures static NAT to translate an inside global address to an inside local address or to translate inside local traffic to inside global traffic.  The <b>group</b> keyword determines the group to which a translation belongs.
<b>Step 3</b>	switch(config)# <b>ip nat outside source list</b> <i>access-list-name</i> [ <b>interface</b> <i>type slot/port pool pool-name</i> ] [ <b>group group-id</b> ] [ <b>add-route</b> ] [ <b>dynamic</b> ]	Establishes dynamic source translation by creating a NAT outside source list with pool.
<b>Step 4</b>	switch(config)# <b>ip nat pool</b> <i>pool-name</i> [ <i>startip endip</i> ] { <b>prefix prefix-length</b>   <b>netmask network-mask</b> }	Creates a NAT pool with a range of global IP addresses. The IP addresses are filtered by using either a prefix length or a network mask.
<b>Step 5</b>	switch(config)# <b>interface</b> <i>type slot/port</i>	Configures an interface and enters interface configuration mode.
<b>Step 6</b>	switch(config-if)# <b>ip nat outside</b>	Connects the interface to an outside network.
<b>Step 7</b>	switch(config-if)# <b>exit</b>	Exits interface configuration mode and returns to global configuration mode.
<b>Step 8</b>	switch(config)# <b>interface</b> <i>type slot/port</i>	Configures an interface and enters interface configuration mode.
<b>Step 9</b>	switch(config-if)# <b>ip nat inside</b>	Connects the interface to an inside network, which is subject to NAT.

## Example

This example shows how to configure dynamic twice NAT for an outside source address:

```
switch# configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# ip nat inside source static 7.7.7.7 5.5.5.5 group 30 dynamic
switch(config)# ip nat outside source list acl_2 pool pool_2 group 30 dynamic
switch(config)# ip nat pool pool_2 4.4.4.4 4.4.4.10 prefix-length 24
switch(config)# interface Ethernet1/6
switch(config-if)# ip nat outside
switch(config-if)# exit
switch(config)# interface Ethernet1/11
switch(config-if)# ip nat inside
```

## Clearing Dynamic NAT Translations

To clear dynamic translations, perform the following task:

Command	Purpose
<b>clear ip nat translation</b> [ all   inside <i>global-ip-address local-ip-address</i> [outside <i>local-ip-address global-ip-address</i> ]   outside <i>local-ip-address global-ip-address</i> ]	Deletes all or specific dynamic NAT translations.

### Example

This example shows how to clear all dynamic translations:

```
switch# clear ip nat translation all
```

This example shows how to clear dynamic translations for inside and outside addresses:

```
switch# clear ip nat translation inside 2.2.2.2 4.4.4.4 outside 5.5.5.5 7.7.7.7
```

## Verifying Dynamic NAT Configuration

To display dynamic NAT configuration, perform the following tasks:

Command	Purpose
<b>show ip nat translations</b>	Displays active Network Address Translation (NAT) translations.  Displays additional information for each translation table entry, including when an entry was created and used.
<b>show ip nat translations verbose</b>	Displays active Network Address Translation (NAT) translations including dynamic translations in a more readable format.
<b>show run nat</b>	Displays NAT configuration.

### Example

This example shows how to display running configuration for NAT:

```
switch# show run nat

!Command: show running-config nat
!Time: Wed Apr 23 11:17:43 2014

version 6.0(2)A3(1)
feature nat

ip nat inside source list list1 pool pool1
ip nat inside source list list2 pool pool2 overload
ip nat inside source list list7 pool pool7 overload
```

```

ip nat outside source list list3 pool pool3
ip nat pool pool1 30.1.1.1 30.1.1.2 prefix-length 24
ip nat pool pool2 10.1.1.1 10.1.1.2 netmask 255.0.255.0
ip nat pool pool3 30.1.1.1 30.1.1.8 prefix-length 24
ip nat pool pool5 20.1.1.1 20.1.1.5 netmask 255.0.255.0
ip nat pool pool7 netmask 255.255.0.0
    address 40.1.1.1 40.1.1.5

```

This example shows how to display active NAT translations:

#### Inside pool with overload

```

switch# show ip nat translation
Pro  Inside global      Inside local      Outside local     Outside global
icmp 20.1.1.3:64762     10.1.1.2:133     20.1.1.1:0       20.1.1.1:0
icmp 20.1.1.3:64763     10.1.1.2:134     20.1.1.1:0       20.1.1.1:0

```

```

switch# sh ip nat translations verbose
Pro Inside global      Inside local      Outside local     Outside global
any 1.1.1.1            10.1.1.2         ---              ---
    Flags:0x1 Entry-id:0 State:0x0 Group_id:0 Format(H:M:S) Time-left:0:0:-1
icmp 101.1.0.1:65351  101.0.0.1:0      102.1.0.1:231    102.1.0.1:231
    Flags:0x82 Entry-id:101 State:0x3 Group_id:0 VRF: red Format(H:M:S) Time-left:12:0:9
udp  101.1.0.1:65383  101.0.0.1:63     102.1.0.1:63     102.1.0.1:63
    Flags:0x82 Entry-id:103 State:0x3 Group_id:0 VRF: red Format(H:M:S) Time-left:12:0:9
tcp  101.1.0.1:64549  101.0.0.1:8809   102.1.0.1:9087   102.1.0.1:9087
    Flags:0x82 Entry-id:102 State:0x1 Group_id:0 VRF: red Format(H:M:S) Time-left:12:0:9
    syn:0:1:9 fin-rst:12:0:9

```

#### Outside pool without overload

```

switch# show ip nat translation
Pro  Inside global      Inside local      Outside local     Outside global
any  ---              ---              177.7.1.1:0      77.7.1.64:0
any  ---              ---              40.146.1.1:0     40.46.1.64:0
any  ---              ---              10.4.146.1:0     10.4.46.64:0

```

```

switch# show ip nat translations verbose
Pro Inside global      Inside local      Outside local     Outside global
any 1.1.1.1            10.1.1.2         ---              ---
    Flags:0x1 Entry-id:0 State:0x0 Group_id:0 Format(H:M:S) Time-left:0:0:-1
any 101.1.0.1        101.0.0.1        ---              ---
    Flags:0x0 Entry-id:92 State:0x3 Group_id:0 VRF: red Format(H:M:S) Time-left:12:0:11

```

## Example: Configuring Dynamic Translation and Translation Timeouts

The following example shows how to configure dynamic overload Network Address Translation (NAT) by specifying an access list:

```

Switch> enable
Switch# configure terminal
Switch(config)# ip access-list acl1

```

```

Switch(config-acl)# permit ip 10.111.11.0/24 any
Switch(config-acl)# deny udp 10.111.11.100/32 any
Switch(config-acl)# exit
Switch(config)# ip nat inside source list acl1 interface ethernet 1/1 overload
Switch(config)# interface ethernet 1/4
Switch(config-if)# ip address 10.111.11.39 255.255.255.0
Switch(config-if)# ip nat inside
Switch(config-if)# exit
Switch(config)# interface ethernet 1/1
Switch(config-if)# ip address 172.16.232.182 255.255.255.240
Switch(config-if)# ip nat outside
Switch(config-if)# exit
Switch(config)# ip nat translation tcp-timeout 50000
Switch(config)# ip nat translation max-entries 300
Switch(config)# ip nat translation udp-timeout 45000
Switch(config)# ip nat translation timeout 13000
Switch(config)# end

```

## Information About VRF Aware NAT

VRF aware NAT is supported by static and dynamic NAT configurations. When the traffic is configured to flow from a non-default VRF (inside) to the same non-default VRF (outside), the match-in-vrf option of the IP NAT command must be specified.

When the traffic is configured to flow from a non-default VRF (inside) to a default VRF (outside), the match-in-vrf option of the IP NAT command cannot be specified. A NAT outside configuration is not supported on a non-default VRF interface when the NAT inside is configured on a default VRF interface.

When overlapping addresses are configured across different VRFs for a NAT inside interface, a NAT outside interface should not be the default VRF interface. For example, vrfA and vrfB are configured as NAT inside interfaces with same source subnets and a NAT outside interface is configured as the default VRF. NAT is not supported in a configuration like this because of the ambiguity in routing packets from a NAT outside interface to NAT inside interface.

## Configuring VRF Aware NAT

### Before you begin

Ensure that you enable NAT on the switch.

### SUMMARY STEPS

1. switch# **configure terminal**
2. switch(config)# **[no] ip nat** *inside | outside* **source list** *ACL\_NAME* [*interface INTERFACE NAME* **overload** ] [*pool POOL NAME* **overload** ] [**group** *group-id*] [**dynamic**] [**vrf** *<vrf-name>*] [**match-in-vrf** ]
3. switch(config)# **[no] ip nat** *inside | outside* **source static** *LOCAL IP GLOBAL IP* [*tcp | udp LOCAL IP LOCAL PORT GLOBAL IP GLOBAL PORT*] [**group** *group-id*] [**dynamic**] [**vrf** *<vrf-name>*] [**match-in-vrf** ]
4. switch(config)# **interface** *type slot/port* [**vrf** *<vrf-name>* **ip nat** *inside | outside*

## DETAILED STEPS

	Command or Action	Purpose
Step 1	switch# <b>configure terminal</b>	Enters global configuration mode.
Step 2	switch(config)# <b>[no] ip nat inside   outside source list</b> <i>ACL_NAME</i> [ <i>interface INTERFACE NAME</i> <b>overload</b> ] ][ <i>pool POOL NAME</i> <b>overload</b> ] [ <b>group</b> <i>group-id</i> ] <b>[dynamic]</b> [ <b>vrf</b> < <i>vrf-name</i> > <b>[match-in-vrf]</b> ]	Creates or deletes dynamic NAT with VRF specific.  The <b>group</b> keyword determines the group to which a translation belongs.
Step 3	switch(config)# <b>[no] ip nat inside   outside source static</b> <i>LOCAL IP GLOBAL IP</i>   [ <i>tcp   udp LOCAL IP LOCAL</i> <i>PORT GLOBAL IP GLOBAL PORT</i> ] [ <b>group</b> <i>group-id</i> ] <b>[dynamic]</b> [ <b>vrf</b> < <i>vrf-name</i> > <b>[match-in-vrf]</b> ]	Creates or deletes a VRF specific static NAT.  The <b>group</b> keyword determines the group to which a translation belongs.
Step 4	switch(config)# <b>interface</b> <i>type slot/port</i> [ <b>vrf</b> < <i>vrf-name</i> > <b>ip</b> <b>nat</b> <i>inside   outside</i>	Enables NAT on a VRF-aware interface.

See the output of **show run nat** command.

```
#show run nat
...
feature nat
ip nat inside source static 1.1.1.1 1.1.1.100 vrf red match-in-vrf
ip nat outside source static 2.2.2.200 2.2.2.2 vrf red match-in-vrf add-route
ip nat inside source list nat-acl-in1 pool pool-in1 vrf red match-in-vrf overload
ip nat outside source list nat-acl-out1 pool pool-out1 vrf red match-in-vrf add-route
interface Ethernet1/3
    ip nat outside
interface Ethernet1/5
    ip nat inside

N3548#show ip nat translation verbose
Pro Inside global      Inside local      Outside local      Outside global
any 1.1.1.1            10.1.1.2          ---                ---
    Flags:0x1  Entry-id:0  State:0x0  Group_id:0  Format(H:M:S)  Time-left:0:0:-1
icmp 101.1.0.1:65351  101.0.0.1:0      102.1.0.1:231     102.1.0.1:231
    Flags:0x82  Entry-id:101  State:0x3  Group_id:0  VRF: red  Format(H:M:S)  Time-left:12:0:9
udp 101.1.0.1:65383  101.0.0.1:63     102.1.0.1:63      102.1.0.1:63
    Flags:0x82  Entry-id:103  State:0x3  Group_id:0  VRF: red  Format(H:M:S)  Time-left:12:0:9
tcp 101.1.0.1:64549  101.0.0.1:8809   102.1.0.1:9087    102.1.0.1:9087
    Flags:0x82  Entry-id:102  State:0x1  Group_id:0  VRF: red  Format(H:M:S)  Time-left:12:0:9

syn:0:1:9  fin-rst:12:0:9
```

