

Configuring Advanced BGP

This chapter describes how to configure advanced features of the Border Gateway Protocol (BGP) on Cisco NX-OS switches.

This chapter includes the following sections:

- Information About Advanced BGP, on page 1
- Prerequisites for Advanced BGP, on page 9
- Guidelines and Limitations for Advanced BGP, on page 10
- Default Settings for BGP, on page 11
- Configuring Advanced BGP, on page 11
- Configuring an Autonomous System Path Containing Your Own Autonomous System, on page 31
- Verifying the Advanced BGP Configuration, on page 44
- Displaying BGP Statistics, on page 45
- Related Topics, on page 46
- Additional References, on page 46

Information About Advanced BGP

BGP is an interdomain routing protocol that provides loop-free routing between organizations or autonomous systems. Cisco NX-OS supports BGP version 4. BGP version 4 includes multiprotocol extensions that allow BGP to carry routing information for IP routes and multiple Layer 3 protocol address families. BGP uses TCP as a reliable transport protocol to create TCP sessions with other BGP-enabled switches called BGP peers. When connecting to an external organization, the router creates external BGP (eBGP) peering sessions. BGP peers within the same organization exchange routing information through internal BGP (iBGP) peering sessions.

Peer Templates

BGP peer templates allow you to create blocks of common configurations that you can reuse across similar BGP peers. Each block allows you to define a set of attributes that a peer then inherits. You can choose to override some of the inherited attributes as well, making it a very flexible scheme for simplifying the repetitive nature of BGP configurations.

Cisco NX-OS implements three types of peer templates:

- The **peer-session** template defines BGP peer session attributes, such as the transport details, remote autonomous system number of the peer, and session timers. A peer-session template can also inherit attributes from another peer-session template (with locally defined attributes that override the attributes from an inherited peer-session).
- A peer-policy template defines the address-family dependent policy aspects for a peer including the inbound and outbound policy, filter-lists, and prefix-lists. A peer-policy template can inherit from a set of peer-policy templates. Cisco NX-OS evaluates these peer-policy templates in the order specified by the preference value in the inherit configuration. The lowest number is preferred over higher numbers.
- The **peer** template can inherit the peer-session and peer-policy templates to allow for simplified peer definitions. It is not mandatory to use a peer template but it can simplify the BGP configuration by providing reusable blocks of configuration.

Authentication

You can configure authentication for a BGP neighbor session. This authentication method adds an MD5 authentication digest to each TCP segment sent to the neighbor to protect BGP against unauthorized messages and TCP security attacks.



The MD5 password must be identical between BGP peers.

Route Policies and Resetting BGP Sessions

You can associate a route policy to a BGP peer. Route policies use route maps to control or modify the routes that BGP recognizes. You can configure a route policy for inbound or outbound route updates. The route policies can match on different criteria, such as a prefix or AS_path attribute, and selectively accept or deny the routes. Route policies can also modify the path attributes.

When you change a route policy applied to a BGP peer, you must reset the BGP sessions for that peer. Cisco NX-OS supports the following three mechanisms to reset BGP peering sessions:

- Hard reset—A hard reset tears down the specified peering sessions, including the TCP connection, and deletes routes coming from the specified peer. This option interrupts packet flow through the BGP network. Hard reset is disabled by default.
- Soft reconfiguration inbound—A soft reconfiguration inbound triggers routing updates for the specified
 peer without resetting the session. You can use this option if you change an inbound route policy. Soft
 reconfiguration inbound saves a copy of all routes received from the peer before processing the routes
 through the inbound route policy. If you change the inbound route policy, Cisco NX-OS passes these
 stored routes through the modified inbound route policy to update the route table without tearing down
 existing peering sessions. Soft reconfiguration inbound can use significant memory resources to store
 the unfiltered BGP routes. Soft reconfiguration inbound is disabled by default.
- Route Refresh—A route refresh updates the inbound routing tables dynamically by sending route refresh
 requests to supporting peers when you change an inbound route policy. The remote BGP peer responds
 with a new copy of its routes that the local BGP speaker processes with the modified route policy. Cisco
 NX-OS automatically sends an outbound route refresh of prefixes to the peer.

• BGP peers advertise the route refresh capability as part of the BGP capability negotiation when establishing the BGP peer session. Route refresh is the preferred option and enabled by default.



Note BGP also uses route maps for route redistribution, route aggregation, route dampening, and other features. See Configuring Route Policy Manager, for more information on route maps.

eBGP

External BGP (eBGP) allows you to connect BGP peers from different autonomous systems to exchange routing updates. Connecting to external networks enables traffic from your network to be forwarded to other networks and across the Internet.

You should use loopback interfaces for establishing eBGP peering sessions because loopback interfaces are less susceptible to interface flapping. An interface flap occurs when the interface is administratively brought up or down because of a failure or maintenance issue. See the Configuring eBGP section for information on multihop, fast external failovers, and limiting the size of the AS-path attribute.

eBGP Next-Hop Unchanged

In an external BGP (eBGP) session, by default, the device changes the next-hop attribute of a BGP route (to its own address) when the device sends out a route. If the eBGP Next-Hop Unchanged feature is configured, BGP sends routes to an eBGP multihop peer without modifying the next-hop attribute. The next-hop attribute is unchanged. The BGP Next-hop Unchanged feature provides flexibility when designing and migrating networks. It can be used only between eBGP peers configured as multihop.

For example, consider a network with eBGP connection between Devices A, B, and C. Suppose Device A announces 100 prefixes to Device B. Device B is configured with an outbound route map to Device C and the match ip prefix list and set ip next-hop unchanged are configured on the route map. Device B propagates the unchanged next-hop address only for the routes that match the prefix list. For the other prefixes, it puts itself as the next-hop address.

iBGP

nternal BGP (iBGP) allows you to connect BGP peers within the same autonomous system. You can use iBGP for multihomed BGP networks (networks that have more than one connection to the same external autonomous system).

The following figure shows an iBGP network within a larger BGP network.

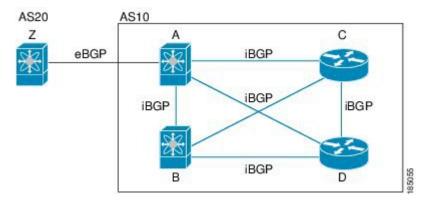


Figure 1: iBGP Network

iBGP networks are fully meshed. Each iBGP peer has a direct connection to all other iBGP peers to prevent network loops.



Note


Figure 2: AS Confederation

You should configure a separate interior gateway protocol in the iBGP network.

AS Confederations

A fully meshed iBGP network becomes complex as the number of iBGP peers grows. You can reduce the iBGP mesh by dividing the autonomous system into multiple subautonomous systems and grouping them into a single confederation. A confederation is a group of iBGP peers that use the same autonomous system number to communicate to external networks. Each subautonomous system is fully meshed within itself and has a few connections to other subautonomous systems in the same confederation.

The following figure shows the BGP network from Figure below, split into two subautonomous systems and one confederation.

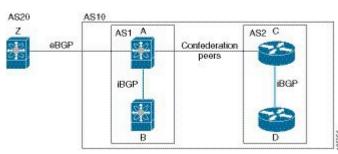

In this example, AS10 is split into two subautonomous systems, AS1 and AS2. Each subautonomous system is fully meshed, but there is only one link between the subautonomous systems. By using AS confederations, you can reduce the number of links compared to the fully meshed autonomous system in Figure **AS Confederation**.

Route Reflector


You can alternately reduce the iBGP mesh by using a route reflector configuration. Route reflectors pass learned routes to neighbors so that all iBGP peers do not need to be fully meshed.

Figure **iBGP Network** shows a simple iBGP configuration with four meshed iBGP speakers (router A, B, C, and D). Without route reflectors, when router A receives a route from an external neighbor, it advertises the route to all three iBGP neighbors.

When you configure an iBGP peer to be a route reflector, it becomes responsible for passing iBGP learned routes to a set of iBGP neighbors.

In the following figure, router B is the route reflector. When the route reflector receives routes advertised from router A, it advertises (reflects) the routes to routers C and D. Router A no longer has to advertise to both routers C and D.

Figure 3: Route Reflector

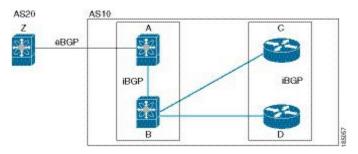

The route reflector and its client peers form a cluster. You do not have to configure all iBGP peers to act as client peers of the route reflector. You must configure any nonclient peer as fully meshed to guarantee that complete BGP updates reach all peers.

Capabilities Negotiation

A BGP speaker can learn about BGP extensions supported by a peer by using the capabilities negotiation feature. Capabilities negotiation allows BGP to use only the set of features supported by both BGP peers on a link.

If a BGP peer does not support capabilities negotiation, Cisco NX-OS will attempt a new session to the peer without capabilities negotiation if you have configured the address family as IPv4.

Route Dampening

Route dampening is a BGP feature that minimizes the propagation of flapping routes across an internetwork. A route flaps when it alternates between the available and unavailable states in rapid succession.

For example, consider a network with three BGP autonomous systems: AS1, AS2, and AS3. Suppose that a route in AS1 flaps (it becomes unavailable). Without route dampening, AS1 sends a withdraw message to AS2. AS2 propagates the withdrawal message to AS3. When the flapping route reappears, AS1 sends an advertisement message to AS2, which sends the advertisement to AS3. If the route repeatedly becomes unavailable, and then available, AS1 sends many withdrawal and advertisement messages that propagate through the other autonomous systems.

Route dampening can minimize flapping. Suppose that the route flaps. AS2 (in which route dampening is enabled) assigns the route a penalty of 1000. AS2 continues to advertise the status of the route to neighbors. Each time that the route flaps, AS2 adds to the penalty value. When the route flaps so often that the penalty exceeds a configurable suppression limit, AS2 stops advertising the route, regardless of how many times that it flaps. The route is now dampened.

The penalty placed on the route decays until the reuse limit is reached. At that time, AS2 advertises the route again. When the reuse limit is at 50 percent, AS2 removes the dampening information for the route.

Note

The router does not apply a penalty to a resetting BGP peer when route dampening is enabled, even though the peer reset withdraws the route.

Load Sharing and Multipath

BGP can install multiple equal-cost eBGP or iBGP paths into the routing table to reach the same destination prefix. Traffic to the destination prefix is then shared across all the installed paths.

The BGP best-path algorithm considers the paths as equal-cost paths if the following attributes are identical:

- · Weight
- Local preference
- AS_path
- Origin code
- Multi-exit discriminator (MED)
- IGP cost to the BGP next hop

BGP selects only one of these multiple paths as the best path and advertises the path to the BGP peers.



Note Paths received from different AS confederations are considered as equal-cost paths if the external AS_path values and the other attributes are identical.



Note When you configure a route reflector for iBGP multipath, and the route reflector advertises the selected best path to its peers, the next hop for the path is not modified.

Route Aggregation

You can configure aggregate addresses. Route aggregation simplifies route tables by replacing a number of more specific addresses with an address that represents all the specific addresses. For example, you can replace these three more specific addresses, 10.1.1.0/24, 10.1.2.0/24, and 10.1.3.0/24 with one aggregate address, 10.1.0.0/16.

Aggregate prefixes are present in the BGP route table so that fewer routes are advertised.



Note Cisco NX-OS does not support automatic route aggregation.

Route aggregation can lead to forwarding loops. To avoid this problem, when BGP generates an advertisement for an aggregate address, it automatically installs a summary discard route for that aggregate address in the local routing table. BGP sets the administrative distance of the summary discard to 220 and sets the route type to discard. BGP does not use discard routes for next-hop resolution.

BGP Conditional Advertisement

BGP conditional advertisement allows you to configure BGP to advertise or withdraw a route based on whether or not a prefix exists in the BGP table. This feature is useful, for example, in multihomed networks, in which you want BGP to advertise some prefixes to one of the providers only if information from the other provider is not present.

Consider an example network with three BGP autonomous systems: AS1, AS2, and AS3, where AS1 and AS3 connect to the Internet and to AS2. Without conditional advertisement, AS2 propagates all routes to both AS1 and AS3. With conditional advertisement, you can configure AS2 to advertise certain routes to AS3 only if routes from AS1 do not exist (if for example, the link to AS1 fails).

BGP conditional advertisement adds an exist or not-exist test to each route that matches the configured route map. See the Configuring BGP Conditional Advertisement section for more information.

BGP Next-Hop Address Tracking

BGP monitors the next-hop address of installed routes to verify next-hop reachability and to select, install, and validate the BGP best path. BGP next-hop address tracking speeds up this next-hop reachability test by triggering the verification process when routes change in the RIB that may affect BGP next-hop reachability.

BGP receives notifications from the RIB when next-hop information changes (event-driven notifications). BGP is notified when any of the following events occurs:

- Next hop becomes unreachable.
- · Next hop becomes reachable.
- Fully recursed IGP metric to the next hop changes.
- First hop IP address or first hop interface changes.
- Next hop becomes connected.
- Next hop becomes unconnected.
- Next hop becomes a local address.
- Next hop becomes a nonlocal address.



Note Reachability and recursed metric events trigger a best-path recalculation.

Event notifications from the RIB are classified as critical and noncritical. Notifications for critical and noncritical events are sent in separate batches. However, a noncritical event is sent with the critical events if the noncritical event is pending and there is a request to read the critical events.

- Critical events are related to the reachability (reachable and unreachable), connectivity (connected and unconnected), and locality (local and nonlocal) of the next hops. Notifications for these events are not delayed.
- Noncritical events include only the IGP metric changes.

See the Configuring BGP Next-Hop Address Tracking section for more information.

Site of Origin

The site of origin prevents routing loops when you have a multihomed VPN site. Routes learned from the same site are tagged with the same site-of-origin value that is configured at the PE on all the PE-CE links to the same site. Routes with a particular site-of-origin value are never readvertised back to a CE with the same site-of-origin value configured at the PE-CE link. This process prevents a CE router from relearning routes that originated from the same site. BGP and EIGRP use site of origin to prevent loops.

You can override the autonomous system number (ASN) of a site with the ASN of the provider. This feature is often used with the site of origin to identify the site where a route originated and prevent routing loops between routers within a VPN.

Route Redistribution

You can configure BGP to redistribute static routes or routes from other protocols. You configure a route policy with the redistribution to control which routes are passed into BGP. A route policy allows you to filter routes based on attributes such as the destination, origination protocol, route type, route tag, and so on. See Configuring Route Policy Manager, for more information.

BFD

This feature supports bidirectional forwarding detection (BFD). BFD is a detection protocol designed to provide fast forwarding-path failure detection times. BFD provides subsecond failure detection between two adjacent devices and can be less CPU-intensive than protocol hello messages because some of the BFD load can be distributed onto the data plane on supported modules.

BFD for BGP is supported on eBGP single-hop peers and iBGP single-hop peers. For iBGP single-hop peers using BFD, you must configure the update-source option in neighbor configuration mode. BFD is not supported on other iBGP peers or for multihop eBGP peers.

BFD is supported for the following types of interfaces:

- Layer 3 physical and subinterface
- Layer 3 port channel and subinterface
- Switch virtual interface (SVI)

BFD for BGP does not support authentication or per-link BFD sessions on a port channel.

See Configuring Bidirectional Forwarding Detection for more information.

Tuning BGP

You can modify the default behavior of BGP through BGP timers and by adjusting the best-path algorithm.

BGP Timers

BGP uses different types of timers for neighbor session and global protocol events. Each established session has a minimum of two timers for sending periodic keepalive messages and for timing out sessions when peer keepalives do not arrive within the expected time. In addition, there are other timers for handling specific features. Typically, you configure these timers in seconds. The timers include a random adjustment so that the same timers on different BGP peers trigger at different times.

Tuning the Best-Path Algorithm

You can modify the default behavior of the best-path algorithm through optional configuration parameters, including changing how the algorithm handles the multi-exit discriminator attribute and the router ID.

Multiprotocol BGP

BGP on Cisco NX-OS supports multiple address families. Multiprotocol BGP (MP-BGP) carries different sets of routes depending on the address family. For example, BGP can carry one set of routes for IPv4 unicast routing and one set of routes for IPv4 multicast routing. You can use MP-BGP for reverse-path forwarding (RPF) checks in IP multicast networks.



Note Because Multicast BGP does not propagate multicast state information, you need a multicast protocol, such as Protocol Independent Multicast (PIM).

Use the router address-family and neighbor address-family configuration modes to support multiprotocol BGP configurations. MP-BGP maintains separate RIBs for each configured address family, such as a unicast RIB and a multicast RIB for BGP.

A multiprotocol BGP network is backward compatible but BGP peers that do not support multiprotocol extensions cannot forward routing information, such as address family identifier information, that the multiprotocol extensions carry.

RFC 5549

BGP supports RFC 5549, which allows an IPv4 prefix to be carried over an IPv6 next hop. Because BGP is running on every hop, and all routers are capable of forwarding IPv4 and IPv6 traffic, there is no need to support IPv6 tunnels between any routers. BGP installs IPv4 over an IPv6 route to the Unicast Route Information Base (URIB)

Prerequisites for Advanced BGP

BGP has the following prerequisites:

- You must enable the BGP feature (see the Enabling the BGP Feature section).
- You should have a valid router ID configured on the system.

- You must have an AS number, either assigned by a Regional Internet Registry (RIR) or locally administered.
- You must have reachability (such as an interior gateway protocol (IGP), a static route, or a direct connection) to the peer that you are trying to make a neighbor relationship with.
- You must explicitly configure an address family under a neighbor for the BGP session establishment.

Guidelines and Limitations for Advanced BGP

BGP has the following configuration guidelines and limitations:

- Prefix peering operates only in passive TCP mode. It accepts incoming connections from remote peers if the peer address falls within the prefix.
- The dynamic AS number prefix peer configuration overrides the individual AS number configuration inherited from a BGP template.
- If you configure a dynamic AS number for prefix peers in an AS confederation, BGP establishes sessions with only the AS numbers in the local confederation.
- BGP sessions created through a dynamic AS number prefix peer ignore any configured eBGP multihop time-to-live (TTL) value or a disabled check for directly connected peers.
- Configure a router ID for BGP to avoid automatic router ID changes and session flaps.
- Use the maximum-prefix configuration option per peer to restrict the number of routes received and system resources used.
- Configure the update-source to establish a session with eBGP multihop sessions.
- Specify a BGP route map if you configure redistribution.
- Configure the BGP router ID within a VRF.
- If you decrease the keepalive and hold timer values, the network might experience session flaps.
- The following guidelines and limitations apply to the remove-private-as command.
 - If the local AS number of the device is a private AS number, you cannot use the remove-private-as
 configuration command for any other neighbor on the same device. As a workaround, you can use
 the local-as command on each neighbor with a public local AS number.
 - If the real AS number of the device is a private AS number and the remove-private-as all command is configured for a neighbor with a public local-as number, use local-as number [no-prepend [replace-as]] command to ensure that the real private AS number is not appended to the AS path.
 - If the real AS number of the device is a public AS number and the remove-private-as all command is configured for a neighbor, you cannot configure a private local-as number for the same neighbor. As a workaround, you must remove the existing configuration to proceed further.
 - The remove-private-as all command removes private AS numbers from the AS path even if the path contains both public and private AS numbers.
 - The remove-private-as command removes private AS numbers even if the AS path contains only private AS numbers. There is no likelihood of a 0-length AS path because this command can be

applied to eBGP peers only, in which case the AS number of the local device is appended to the AS path.

- The remove-private-as command removes private AS numbers even if the private AS numbers appear before the confederation segments in the AS path.
- When you remove private AS numbers from the AS path, the path length of the prefixes that are sent out will decrease. Because the AS path length is a key element of BGP best-path selection, it might be necessary to retain the path length. The replace-as keyword ensures that the path length is retained by replacing all removed AS numbers with the local router's AS number.

Default Settings for BGP

Table below lists the default settings for BGP parameters.

Table 1: Default BGP Parameters

Parameters	Default
BGP feature	disabled
keep alive interval	60 seconds
hold timer	180 seconds

Configuring Advanced BGP



Note If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Enabling IP Forward on an Interface

To use RFC 5549, you must configure at least one IPv4 address. If you do not want to configure an IPv4 address, you must enable the ip forward feature to use RFC 5549.

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	

	Command or Action	Purpose
Step 2	interface type slot/port	Enters interface configuration mode.
	Example:	
	<pre>switch(config)# interface ethernet 1/2 switch(config-if)#</pre>	
Step 3	ip forward	Allows IPv4 traffic on the interface even when
	Example:	there is no IP address configuration on that interface.
	<pre>switch(config-if)# ip forward switch(config-if)#</pre>	

Example

This example shows how to enable the ip forward feature on an interface:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# ip forward
```

Configuring BGP Session Templates

You can use BGP session templates to simplify BGP configuration for multiple BGP peers with similar configuration needs. BGP templates allow you to reuse common configuration blocks. You configure BGP templates first, and then apply these templates to BGP peers.

With BGP session templates, you can configure session attributes such as inheritance, passwords, timers, and security.

A peer-session template can inherit from one other peer-session template. You can configure the second template to inherit from a third template. The first template also inherits this third template. This indirect inheritance can continue for up to seven peer-session templates.

Any attributes configured for the neighbor take priority over any attributes inherited by that neighbor from a BGP template.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

When editing a template, you can use the **no** form of a command at either the peer or template level to explicitly override a setting in a template. You must use the **default** form of the command to reset that attribute to the default state.

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	

I

	Command or Action	Purpose
Step 2	router bgp autonomous-system-number	Enables BGP and assigns the autonomous
	Example:	system number to the local BGP speaker.
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>	
Step 3	template peer-session template-name	Enters peer-session template configuration
	Example:	mode.
	<pre>switch(config-router)# template peer-session BaseSession switch(config-router-stmp)#</pre>	
Step 4	(Optional) password number password	Adds the cleartext password test to the
	Example:	neighbor. The password is stored and displayed in type 3 encrypted form (3DES).
	<pre>switch(config-router-stmp)# password 0 test</pre>	in type 5 energyfted form (5DES).
Step 5	(Optional) timers <i>keepalive hold</i>	Adds the BGP keepalive and holdtimer value
	Example:	to the peer-session template.
	<pre>switch(config-router-stmp)# timers 30 90</pre>	The default keepalive interval is 60. The default hold time is 180.
Step 6	exit	Exits peer-session template configuration
	Example:	mode.
	<pre>switch(config-router-stmp)# exit switch(config-router)#</pre>	
Step 7	neighbor ip-address remote-as as-number	Places the router in the neighbor configuration
	Example:	mode for BGP routing and configures the neighbor IP address.
	<pre>switch(config-router)# neighbor</pre>	neighbór ní address.
	192.168.1.2 remote-as 65536 switch(config-router-neighbor)#	
Step 8	inherit peer-session template-name	Applies a peer-session template to the peer.
	Example:	
	<pre>switch(config-router-neighbor)# inherit peer-session BaseSession switch(config-router-neighbor)</pre>	
Step 9	(Optional) description text	Adds a description for the neighbor.
	Example:	
	<pre>switch(config-router-neighbor)# description Peer Router A switch(config-router-neighbor)</pre>	
Step 10	(Optional) show bgp peer-session <i>template-name</i>	Displays the peer-policy template.
	Example:	

	Command or Action	Purpose
	<pre>switch(config-router-neighbor)# show bgp peer-session BaseSession</pre>	
Step 11	(Optional) copy running-config startup-config	Saves this configuration change.
	Example:	
	<pre>switch(config-router-neighbor)# copy running-config startup-config</pre>	

Example

Use the **show bgp neighbor** command to see the template applied. See the Cisco Nexus 3000 Series Command Reference for details on all commands available in the template.

This example shows how to configure a BGP peer-session template and apply it to a BGP peer:

```
switch# configure terminal
switch(config)# router bgp 65536
switch(config-router)# template peer-session BaseSession
switch(config-router-stmp)# timers 30 90
switch(config-router-stmp)# exit
switch(config-router)# neighbor 192.168.1.2 remote-as 65536
switch(config-router-neighbor)# inherit peer-session BaseSession
switch(config-router-neighbor)# description Peer Router A
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor)# copy running-config startup-config
```

Configuring BGP Peer-Policy Templates

You can configure a peer-policy template to define attributes for a particular address family. You assign a preference to each peer-policy template and these templates are inherited in the order specified, for up to five peer-policy templates in a neighbor address family.

Cisco NX-OS evaluates multiple peer policies for an address family using the preference value. The lowest preference value is evaluated first. Any attributes configured for the neighbor take priority over any attributes inherited by that neighbor from a BGP template.

Peer-policy templates can configure address family-specific attributes such as AS-path filter lists, prefix lists, route reflection, and soft reconfiguration.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).



When editing a template, you can use the **no** form of a command at either the peer or template level to explicitly override a setting in a template. You must use the default form of the command to reset that attribute to the default state.

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	router bgp autonomous-system-number	Enables BGP and assigns the autonomous
	Example:	system number to the local BGP speaker.
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>	
Step 3	template peer-policy template-name	Creates a peer-policy template.
	Example:	
	<pre>switch(config-router)# template</pre>	
	<pre>peer-policy BasePolicy switch(config-router-ptmp)#</pre>	
Step 4	(Optional) advertise-active-only	Advertises only active routes to the peer.
	Example:	
	<pre>switch(config-router-ptmp)# advertise-active-only</pre>	
Step 5	(Optional) maximum-prefix number	Sets the maximum number of prefixes allowed
	Example:	from this peer.
	<pre>switch(config-router-ptmp)# maximum-prefix 20</pre>	
Step 6	exit	Exits peer-policy template configuration mode.
	Example:	
	<pre>switch(config-router-ptmp)# exit switch(config-router)#</pre>	
Step 7	neighbor ip-address remote-as as-number	Places the router in neighbor configuration
	Example:	mode for BGP routing and configures the neighbor IP address.
	<pre>switch(config-router)# neighbor 192.168.1.2 remote-as 65536 switch(config-router-neighbor)#</pre>	heighbol if address.
Step 8	address-family { ipv4 ipv6} { multicast unicast }	Enters global address family configuration mode for the specified address family.
	Example:	
	<pre>switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#</pre>	

	Command or Action	Purpose
Step 9	inherit peer-policy template-name preference	Applies a peer-policy template to the peer
	Example:	address family configuration and assigns the
	<pre>switch(config-router-neighbor-af)# inherit peer-policy BasePolicy 1</pre>	preference value for this peer policy.
Step 10	(Optional) show bgp peer-policy <i>template-name</i>	Displays the peer-policy template.
	Example:	
	<pre>switch(config-router-neighbor-af)# show bgp peer-policy BasePolicy</pre>	
Step 11	(Optional) copy running-config startup-config	Saves this configuration change.
	Example:	
	<pre>switch(config-router-neighbor-af)# copy running-config startup-config</pre>	

Example

Use the **show bgp neighbor** command to see the template applied. See the Cisco Nexus 3000 Series Command Reference for details on all commands available in the template.

This example shows how to configure a BGP peer-session template and apply it to a BGP peer:

```
switch# configure terminal
switch(config)# router bgp 65536
switch(config-router)# template peer-session BasePolicy
switch(config-router-ptmp)# maximum-prefix 20
switch(config-router-ptmp)# exit
switch(config-router)# neighbor 192.168.1.1 remote-as 65536
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# inherit peer-policy BasePolicy
switch(config-router-neighbor-af)# copy running-config startup-config
```

Configuring BGP Peer Templates

You can configure BGP peer templates to combine session and policy attributes in one reusable configuration block. Peer templates can also inherit peer-session or peer-policy templates. Any attributes configured for the neighbor take priority over any attributes inherited by that neighbor from a BGP template. You configure only one peer template for a neighbor, but that peer template can inherit peer-session and peer-policy templates.

Peer templates support session and address family attributes, such as eBGP multihop time-to-live, maximum prefix, next-hop self, and timers.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).



Note When editing a template, you can use the **no** form of a command at either the peer or template level to explicitly override a setting in a template. You must use the default form of the command to reset that attribute to the default state.

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	router bgp autonomous-system-number	Enters BGP mode and assigns the autonomous
	Example:	system number to the local BGP speaker.
	<pre>switch(config)# router bgp 65536</pre>	
Step 3	template peer template-name	Enters peer template configuration mode.
	Example:	
	<pre>switch(config-router)# template peer BasePeer switch(config-router-neighbor)#</pre>	
Step 4	(Optional) inherit peer-session template-name	Inherits a peer-session template in the peer
	Example:	template.
	<pre>switch(config-router-neighbor)# inherit peer-session BaseSession</pre>	
Step 5	(Optional) address-family { ipv4 ipv6} { multicast unicast }	Configures the global address family configuration mode for the specified address
	Example:	family.
	<pre>switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#</pre>	
Step 6	(Optional) inherit peer template-name	Applies a peer template to the neighbor address
	Example:	family configuration.
	<pre>switch(config-router-neighbor-af)# inherit peer BasePolicy</pre>	
Step 7	exit	Exits BGP neighbor address family
	Example:	configuration mode.
	<pre>switch(config-router-neighbor-af)# exit switch(config-router-neighbor)#</pre>	
Step 8	(Optional) timers keepalive hold	Adds the BGP timer values to the peer.
	Example:	

	Command or Action	Purpose	
	<pre>switch(config-router-neighbor)# timers 45 100</pre>	These values override the timer values in the peer-session template, BaseSession.	
Step 9	exit	Exits BGP peer template configuration mode.	
	Example:		
	<pre>switch(config-router-neighbor)# exit switch(config-router)#</pre>		
Step 10	neighbor ip-address remote-as as-number	Places the router in neighbor configuration	
	Example:	mode for BGP routing and configures the neighbor IP address.	
	<pre>switch(config-router)# neighbor 192.168.1.2 remote-as 65536 switch(config-router-neighbor)#</pre>	lognoor ir uddross.	
Step 11	inherit peer template-name	Inherits the peer template.	
	Example:		
	<pre>switch(config-router-neighbor)# inherit peer BasePeer</pre>		
Step 12	(Optional) timers keepalive hold	Adds the BGP timer values to this neighbor.	
	Example:	These values override the timer values in the	
	<pre>switch(config-router-neighbor)# timers 60 120</pre>	peer template and the peer-session template.	
Step 13	(Optional) show bgp peer-template <i>template-name</i>	Displays the peer template.	
	Example:		
	<pre>switch(config-router-neighbor-af)# show bgp peer-template BasePeer</pre>		
Step 14	(Optional) copy running-config startup-config	Saves this configuration change.	
	Example:		
	<pre>switch(config-router-neighbor-af)# copy running-config startup-config</pre>		

Example

Use the **show bgp neighbor** command to see the template applied. See the Cisco Nexus 3600 Series Command Reference for details on all commands available in the template.

This example shows how to configure a BGP peer template and apply it to a BGP peer:

```
switch# configure terminal
switch(config)# router bgp 65536
switch(config-router)# template peer BasePeer
switch(config-router-neighbor)# inherit peer-session BaseSession
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# inherit peer-policy BasePolicy 1
switch(config-router-neighbor-af)# exit
```

```
switch(config-router-neighbor)# exit
switch(config-router)# neighbor 192.168.1.2 remote-as 65536
switch(config-router-neighbor)# inherit peer BasePeer
switch(config-router-neighbor)# copy running-config startup-config
```

Configuring Prefix Peering

BGP supports the definition of a set of peers using a prefix for both IPv4 and IPv6. This feature allows you to not have to add each neighbor to the configuration.

When defining a prefix peering, you must specify the remote AS number with the prefix. BGP accepts any peer that connects from that prefix and autonomous system if the prefix peering does not exceed the configured maximum peers allowed.

When a BGP peer that is part of a prefix peering disconnects, Cisco NX-OS holds its peer structures for a defined prefix peer timeout value. An established peer can reset and reconnect without danger of being blocked because other peers have consumed all slots for that prefix peering.

To configure the BGP prefix peering timeout value, use the following command in router configuration mode:

Command	Purpose	
timers prefix-peer-timeout value	Configures the timeout value for prefix peering. The range is from 0 to 1200 seconds. The default value is 30.	
<pre>Example : switch (config-router) # timers prefix-peer-timeout 120</pre>	Note For prefix peers, set the prefix peer timeout to be greater than the configured graceful restart timer. If the prefix peer timeout is greater than the graceful restart timer, a peer's route is retained during its restart. If the prefix peer timeout is less than the graceful restart timer, the peer's route is purged by the prefix peer timeout, which may occur before the restart is complete.	
<pre>timers prefix-peer-wait interval Example : switch(config-router)# timers prefix-peer-wait 50</pre>	Configures the BGP prefix peering wait timer on a per-VRF basis or on the default VRF. You can use the timers prefix-peer-wait command to disable the peer prefix wait time so that there is no delay before BGP prefixes are inserted into the routing information base (RIB). The range of the interval is from 0 to 1200 seconds. The default value is 90 seconds.	
	Note The timer is only applicable for BGP dynamic neighbors. It is only set when BGP is restarted or is coming up for the first time for dynamic BGP neighbors.	

To configure the maximum number of peers, use the following command in neighbor configuration mode:

Command	Purpose
maximum-peers value	Configures the maximum number of peers for this prefix
Example :	peering. The range is from 1 to 1000.
<pre>switch(config-router-neighbor)# maximum-peers 120</pre>	

This example shows how to configure a prefix peering that accepts up to 10 peers:

```
switch(config)# router bgp 65536
switch(config-router)# timers prefix-peer-timeout 120
switch(config-router)# neighbor 10.100.200.0/24 remote-as 65536
switch(config-router-neighbor)# maximum-peers 10
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)#
```

This example shows how to disable the peer prefix wait time:

```
switch(config)# router bgp 100
switch(config-router)# timers prefix-peer-wait 50
switch(config-router)#
```

Use the **show ip bgp neighbors** command to show the details of the configuration for that prefix peering with a list of the currently accepted instances and the counts of active, maximum concurrent, and total accepted peers.

Configuring BGP Authentication

You can configure BGP to authenticate route updates from peers using MD5 digests.

To configure BGP to use MD5 authentication, use the following command in neighbor configuration mode:

Command	Purpose
password [0 3 7] <i>string</i>	Configures an MD5 password for BGP neighbor
Example :	sessions.
switch(config-router-neighbor)# password BGPpassword	

Resetting a BGP Session

If you modify a route policy for BGP, you must reset the associated BGP peer sessions. If the BGP peers do not support route refresh, you can configure a soft reconfiguration for inbound policy changes. Cisco NX-OS automatically attempts a soft reset for the session.

To configure soft reconfiguration inbound, use the following command in neighbor address-family configuration mode:

Command	Purpose
soft-reconfiguration inbound always	Enables soft reconfiguration to store the inbound BGP
Example :	route updates. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.
<pre>switch(config-router-neighbor-af)# soft-reconfiguration inbound always</pre>	

To reset a BGP neighbor session, use the following command in any mode:

L

Command	Purpose
<pre>clear bgp ip { unicast multicast } ip-address soft { in out }</pre>	Resets the BGP session without tearing down the TCP session.
Example :	
switch# clear bgp ip unicast 192.0.2.1 soft in	

Modifying the Next-Hop Address

You can modify the next-hop address used in a route advertisement in the following ways:

- Disable the next-hop calculation and use the local BGP speaker address as the next-hop address.
- Set the next-hop address as a third-party address. Use this feature in situations where the original next-hop address is on the same subnet as the peer that the route is being sent to. Using this feature saves an extra hop during forwarding.

To modify the next-hop address, use the following parameters in commands address-family configuration mode:

Command	Purpose	
next-hop-self	Uses the local BGP speaker address as the next-hop address	
Example :	in route updates. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.	
<pre>switch(config-router-neighbor-af)# next-hop-self</pre>		
next-hop-third-party	Sets the next-hop address as a third-party address. Use this	
Example :	command for single-hop EBGP peers that do not have next-hop-self configured.	
<pre>switch(config-router-neighbor-af)# next-hop-third-party</pre>		

Configuring BGP Next-Hop Address Tracking

BGP next-hop address tracking is enabled by default and cannot be disabled.

You can modify the delay interval between RIB checks to increase the performance of BGP next-hop tracking. You can configure the critical timer for routes that affect BGP next-hop reachability, and you can configure the noncritical timer for all other routes in the BGP table.

To modify the BGP next-hop address tracking, use the following commands address-family configuration mode:

Command	Purpose	
nexthop trigger-delay { critical non-critical } <i>milliseconds</i>	Specifies the next-hop address tracking delay timer for critical next-hop reachability routes and for noncritical routes. The	
Example :	range is from 1 to 4294967295 milliseconds. The critical timer default is 3000. The noncritical timer default is 10000	
switch(config-router-af)# nexthop trigger-delay critical 5000	timer derault is 5000. The honerflicar timer derault is 1000	
nexthop route-map name	Specifies a route map to match the BGP next-hop addresses	
Example :	to. The name can be any case-sensitive, alphanumeric string up to 63 characters.	
<pre>switch(config-router-af)# nexthop route-map nextHopLimits</pre>		

Configuring Next-Hop Filtering

BGP next-hop filtering allows you to specify that when a next-hop address is checked with the RIB, the underlying route for that next-hop address is passed through the route map. If the route map rejects the route, the next-hop address is treated as unreachable.

BGP marks all next-hops that are rejected by the route policy as invalid and does not calculate the best path for the routes that use the invalid next-hop address.

To configure BGP next-hop filtering, use the following command in address-family configuration mode:

Command	Purpose
nexthop route-map name	Specifies a route map to match the BGP next-hop route to.
Example :	The name can be any case-sensitive, alphanumeric string up to 63 characters.
<pre>switch(config-router-af)# nexthop route-map nextHopLimits</pre>	

Controlling Reflected Routes Through Next-Hop-Self

NX-OS enables controlling the iBGP routes being sent to a specific peer through the **next-hop-self** [all] arguments. By using these arguments, you can selectively change the next-hop of routes even if the route is reflected.

Command	Purpose
<pre>next-hop-self [all] Example: switch(config-router-af)# next-hop-self all</pre>	Uses the local BGP speaker address as the next-hop address in route updates. The all keyword is optional. If you specify all, all routes are sent to the peer with next-hop-self. If you do not specify all, the next hops of reflected routes are not changed.

Shrinking Next-Hop Groups When A Session Goes Down

You can configure BGP to shrink ECMP groups in an accelerated way when a session goes down.

This feature applies to the following BGP path failure events:

- Any single or multiple Layer 3 link failures
- BFD failure detections for BGP neighbors
- Administrative shutdown of BGP neighbors (using the shutdown command)

The accelerated handling of Layer 3 link failures is enabled by default and does not require a configuration command to be enabled.

To configure the accelerated handling of the last two events, use the following command in the router configuration mode:

Command	Purpose	
neighbor-down fib-accelerate	Withdraws the corresponding next hop from all next-hop groups (ECMP groups and single next-hop routes) whenever a BGP session goes down.	
Example :		
<pre>switch(config-router)# neighbor-down fib-accelerate</pre>	Note	This command applies to both IPv4 and IPv6 address-family routes and is supported only in a BGP-only environment where all non-direct routes are installed by BGP.

Disabling Capabilities Negotiation

You can disable capabilities negotiations to interoperate with older BGP peers that do not support capabilities negotiation.

To disable capabilities negotiation, use the following command in neighbor configuration mode:

Command	Purpose
dont-capability-negotiate	Disables capabilities negotiation. You must manually
Example :	reset the BGP sessions after configuring this comma
<pre>switch(config-router-neighbor)# dont-capability-negotiate</pre>	

Configuring BGP Additional Paths

GP supports sending and receiving multiple paths per prefix and advertising such paths.

Advertising the Capability of Sending and Receiving Additional Paths

You can configure BGP to advertise the capability of sending and receiving additional paths to and from the BGP peers. To do so, use the following commands in neighbor address-family configuration mode:

	Command or Action	Purpose
Step 1	<pre>[no] capability additional-paths send [disable] Example: switch(config-router-neighbor-af)# capability addtional-paths send</pre>	Advertises the capability to send additional paths to the BGP peer. The disable option disables the advertising capability of sending additional paths. The no form of this command disables the capability of sending additional paths.
Step 2	<pre>[no] capability additional-paths receive [disable] Example: switch(config-router-neighbor-af)# capability addtional-paths receive</pre>	Advertises the capability to receive additional paths from the BGP peer. The disable option disables the advertising capability of receiving additional paths. The no form of this command disables the capability of receiving additional paths.
Step 3	<pre>show bgp neighbor Example: switch(config-router-neighbor-af)# show bgp neighbor</pre>	Displays whether the local peer has advertised the additional paths send or receive capability to the remote peer.

Procedure

Example

This example shows how to configure BGP to advertise the capability to send and receive additional paths to and from the BGP peer:

```
switch# configure terminal
switch(config)# router bgp 100
switch(config-router)# neighbor 10.131.31.2 remote-as 100
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# capability additional-paths send
switch(config-router-neighbor-af)# capability additional-paths receive
```

Configuring the Sending and Receiving of Additional Paths

You can configure the capability of sending and receiving additional paths to and from the BGP peers. To do so, use the following commands in address-family configuration mode:

	Command or Action	Purpose
Step 1	[no] additional-paths send	Enables the send capability of additional paths
	Example:	for all of the neighbors under this address family for which the capability has not been disabled
	<pre>switch(config-router-af)# additional-paths send</pre>	The no form of this command disables the send capability.

	Command or Action	Purpose
Step 2	[no] additional-paths receive	Enables the receive capability of additional
	Example:	paths for all of the neighbors under this address family for which the capability has not been
	<pre>switch(config-router-af)# additional-paths</pre>	disabled.
	receive	The no form of this command disables the receive capability.
Step 3	show bgp neighbor	Displays whether the local peer as advertised
	Example:	the additional paths send or receive capability to the remote peer.
	<pre>switch(config-router-af)# show bgp neighbor</pre>	

Example

This example shows how to enable the additional paths send and receive capability for all neighbors under the specified address family for which this capability has not been disabled:

```
switch# configure terminal
switch(config)# router bgp 100
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# additional-paths send
switch(config-router-af)# additional-paths receive
```

Configuring Advertised Paths

You can specify the paths that are advertised for BGP. To do so, use the following commands in route-map configuration mode:

	Command or Action	Purpose
Step 1	[no] set ip next-hop unchanged	Specifies and unchanged next-hop IP address.
	Example:	
	<pre>switch(config-route-map)# set ip next-hop unchanged</pre>	
Step 2	[no] set path-selection all advertise	Specifies that all paths be advertised for a given
	Example:	prefix.
	<pre>switch(config-route-map)# set path-selection all advertise</pre>	• all—Advertises all available valid paths.
		The no form of this command specifies that only the best path be advertised.
Step 3	show bgp {ipv4 ipv6} unicast [ip-address ipv6-prefix] [vrf vrf-name]	Displays the path ID for the additional paths of a prefix and advertisement information for these
	Example:	paths.

Command or Action	Purpose
<pre>switch(config-route-map)# show bgp ipv4 unicast</pre>	

Example

This example show how to specify that all paths be advertised for the prefix list p1:

```
switch# configure terminal
switch(config)# route-map PATH_SELECTION_RMAP
switch(config-route-map)# match ip address prefix-list p1
switch(config-route-map)# set path-selection all advertise
```

Configuring Additional Path Selection

You can configure the capability fo selecting additional paths for a prefix. To do so, use the following commands in address-family configuration mode:

Procedure

	Command or Action	Purpose
Step 1	[no] additional-paths selection route-map map-name	Configures the capability of selecting additional paths for a prefix.
	Example:	The no form of this command disables the
	<pre>switch(config-router-af)# additional paths selection route-map map1</pre>	additional paths selection capability.
Step 2	show bgp {ipv4 ipv6} unicast [ip-address ipv6-prefix] [vrf vrf-name]	Displays the path ID for the additional paths of a prefix and advertisement information for these
	Example:	paths.
	<pre>switch(config-route-af)# show bgp ipv4 unicast</pre>	

Example

This example shows how to configure additional paths selection under the specified address family:

```
switch# configure terminal
switch(config)# router bgp 100
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# additional-paths selection route-map PATH_SELECTION_RMAP
```

Configuring eBGP

This section includes the following topics:

Configuring eBGP Next-Hop Unchanged

You can configure eBGP to send routes to an eBGP multihop peer without changing the next-hop address. By default, the device changes the next-hop address of a BGP route to its own address when the device sends out a route.

	Command	Purpose
Step	disable-connected-check	Disables checking whether or not a single-hop eBGP peer is directly connected. You must manually reset the BGP sessions after using this command.
1	Example :	
	switch(config-router-neighbor)# disable-connected-check	
Step	configure terminal	Enters global configuration mode.
2	Example:	
	switch# configure terminal	
Step	route-map name	Enters route map configuration mode.
3	Example:	
	<pre>switch(config)# route-map route</pre>	
Step	set ip next-hop unchanged	Configures the device to send BGP updates to the
4	Example:	specified eBGP peer without modifying the next-he address.
	<pre>switch(config-route-map)# set ip next-hop unchanged</pre>	
Step	exit	Exits route map configuration mode.
5	Example:	
	<pre>switch(config-route-map)# exit</pre>	

This example shows how to set eBGP next-hop unchanged to send routes without changing the next-hop address:

```
switch# configure terminal
switch(config)# route-map route
switch(config-route-map)# set ip next-hop unchanged
switch(config-route-map)# exit
switch(config)#
```

Disabling eBGP Single-Hop Checking

You can configure eBGP to disable checking whether a single-hop eBGP peer is directly connected to the local router. Use this option for configuring a single-hop loopback eBGP session between directly connected switches.

To disable checking whether or not a single-hop eBGP peer is directly connected, use the following command in neighbor configuration mode:

Command	Purpose
disable-connected-check	Disables checking whether or not a single-hop eBGP peer
Example :	is directly connected. You must manually reset the BGP sessions after using this command.
<pre>switch(config-router-neighbor)# disable-connected-check</pre>	

Configuring eBGP Multihop

You can configure the eBGP time-to-live (TTL) value to support eBGP multihop. In some situations, an eBGP peer is not directly connected to another eBGP peer and requires multiple hops to reach the remote eBGP peer. You can configure the eBGP TTL value for a neighbor session to allow these multihop sessions.

To configure eBGP multihop, use the following command in neighbor configuration mode:

Command	Purpose
ebgp-multihop ttl-value	Configures the eBGP TTL value for eBGP multihop. The
Example :	range is from 2 to 255. You must manually reset the BGP sessions after using this command.
<pre>switch(config-router-neighbor)# ebgp-multihop 5</pre>	

Configuring eBGP Routes in the Same Autonomous System

You can configure eBGP learned routes from a remote autonomous system (AS) to advertise to another eBGP peer in the same AS.

Note When route updates are sent between peers within the same AS number, they are dropped unless you enter the **allowas-in** command.

To disable AS peer checking, use the following command in neighbor configuration mode:

	Command	Purpose
Step 1	<pre>router bgp autonomous-system-number Example : switch(config)# router bgp 64496</pre>	Enables BGP and assigns the AS number to the local BGP speaker. The AS number can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format.
Step 2	<pre>neighbor ipv4 remote-as as-number Example : switch (config-router)# neighbor 209.165.201.1 remote-as 64497</pre>	Configures the specified address type and AS number for a remote BGP peer. The ip-address format is x.x.x.x. The IPv6 address-format is A:B::C:D.

L

	Command	Purpose
1 1	address family ipv4 unicast	Enters neighbor address family configuration mode
3	Example :	for the unicast specified address family.
	<pre>switch(config-router)# address family ip4 unicast</pre>	
-	disable-peer-as-check	Disables AS checking so that routes are updated
4	Example :	between peers in the same AS.
	switch(config-router-neighbor-af)# disable-peer-as-check	
-	show bgp neighbor	Displays information about BGP peers.
5	Example :	
	<pre>switch(config-router-neighbor-af)# show bgp ipv4 unicast neighbors</pre>	

This example shows how to display BGP peer information:

```
switch(config)# show bgp neighbor 1.222.222.2
bgp neighbor is 1.222.222.2, remote as 2222, ebgp link, peer index 1
bgp version 4, remote router id1.100.1.2 ####output trunicated####
for address family:ipv4 unicast
bgp table version 54, neighbor version 54
3 accepted paths consume 108 bytes of memory
10 sent paths
peer asn check is disabled
```

#####output omitted#####

Disabling a Fast External Failover

Typically, when a BGP router loses connectivity to a directly connected eBGP peer, BGP triggers a fast external failover by resetting the eBGP session to the peer. You can disable this fast external failover to limit the instability caused by link flaps.

To disable a fast external failover, use the following command in router configuration mode:

Command	Purpose
no fast-external-fallover	Disables a fast external failover for eBGP peers. This
Example :	command is enabled by default.
<pre>switch(config-router)# no fast-external-fallover</pre>	

Limiting the AS-path Attribute

You can configure eBGP to discard routes that have a high number of AS numbers in the AS-path attribute.

To discard routes that have a high number of AS numbers in the AS-path attribute, use the following command in router configuration mode:

Command	Purpose
maxas-limit number	Discards eBGP routes that have a number of AS-path segments
Example :	that exceed the specified limit. The range is from 1 to 2000
<pre>switch(config-router)# maxas-limit 50</pre>	

Configuring Local AS Support

The local AS feature allows a router to appear to be a member of a second autonomous system (AS), in addition to its real AS. Local AS allows two ISPs to merge without modifying peering arrangements. Routers in the merged ISP become members of the new autonomous system but continue to use their old AS numbers for their customers.

Local AS can only be used for true eBGP peers. You cannot use this feature for two peers that are members of different confederation subautonomous systems.

To configure eBGP local AS support, use the following command in neighbor configuration mode:

Command	Purpose
local-as <i>number</i> [no-prepend [replace-as [dual-as]]]	Configures eBGP to prepend the local AS <i>number</i> to the AS_PATH attribute.
Example: switch(config-router-neighbor)# local-as 1.1	The local-as <i>number</i> can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format.
	The no-prepend keyword ensures that the local-as <i>number</i> is not prepended to any downstream BGP neighbors except for the partner who is peering with the local-as <i>number</i> .
	The replace-as keyword ensures that only the local-as <i>number</i> of the peering session is prepended to the AS_PATH attribute. The autonomous-system number from the local BGP routing process is not prepended.
	The dual-as keyword configures the eBGP neighbor to establish a peering session using the real autonomous-system number (from the local BGP routing process) or by using the autonomous-system number configured as the Local AS).

Configuring AS Confederations

To configure an AS confederation, you must specify a confederation identifier. The group of autonomous systems within the AS confederation looks like a single autonomous system with the confederation identifier as the autonomous system number.

To configure a BGP confederation identifier, use the following command in router configuration mode:

L

Command	Purpose
confederation identifier as-number	Configures a confederation identifier for an AS confederation.
Example: switch(config-router)# confederation identifier 64512	Each confederation has a different sub-AS number, usually a private one (from 64512 to 65534). This command triggers an automatic notification and session reset for the BGP neighbor sessions.

To configure the autonomous systems that belong to the AS confederation, use the following command in router configuration mode:

Command	Purpose
bgp confederation peers <i>as-number</i> [<i>as-number</i> 2]	Specifies a list of autonomous systems that belong to the confederation.
<pre>Example : switch(config-router)# bgp confederation peers 5 33 44</pre>	This command triggers an automatic notification and session reset for the BGP neighbor sessions.

Configuring an Autonomous System Path Containing Your Own Autonomous System

Enable the feature for BGP to accept the autonomous system (AS) path that contains your own AS.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
Step 2	router bgp as-number	Enters BGP mode and assigns the autonomous system number to the local BGP speaker. The <i>as-number</i> value range is from 1 to 65535.
Step 3	neighbor ip-address remote-as as-number	Enters neighbor configuration mode for BGP routing and configures the neighbor IP address.
Step 4	address-family { ipv4 ipv6} { multicast unicast }	Enters router address family configuration for the specified address family.
Step 5	[no default] allowas-in [allowas-in-cnt]	Enables the allowas-in feature for BGP and configures the number of occurrences of the AS number.

	Command or Action	Purpose
		For allowas-in-cnt , enter an integer between 1 and 10. By default, the number of occurrences of the AS number is set to 3.
Step 6	end	Exits router address family configuration mode.
Step 7	(Optional) show running-config bgp	Displays the BGP configuration.
Step 8	copy running-config startup-config	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.

Example

This example shows how to configure the allowas-in feature for BGP and configure it for a unicast IPv4 address family:

```
switch# configure terminal
switch(config)# router bgp 77
switch(config-router)# neighbor 6.20.1.1 remote-as 66
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# allowas-in 5
switch(config-router-neighbor-af)# end
```

Configuring Route Reflector

You can configure iBGP peers as route reflector clients to the local BGP speaker, which acts as the route reflector. Together, a route reflector and its clients form a cluster. A cluster of clients usually has a single route reflector. In such instances, the cluster is identified by the router ID of the route reflector. To increase redundancy and avoid a single point of failure in the network, you can configure a cluster with more than one route reflector. You must configure all route reflectors in the cluster with the same 4-byte cluster ID so that a route reflector can recognize updates from route reflectors in the same cluster.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	Step 2 router bgp as-number	Enters BGP mode and assigns the autonomous
Example: system number to	system number to the local BGP speaker.	
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>	

	Command or Action	Purpose	
Step 3	<pre>cluster-id cluster-id Example: switch(config-router)# cluster-id 192.0.2.1</pre>	Configures the local router as one of the route reflectors that serve the cluster. You specify a cluster ID to identify the cluster. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.	
Step 4	address-family {ipv4 ipv6} { unicast multicast}	Enters router address family configuration mode for the specified address family.	
	<pre>Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#</pre>		
Step 5	<pre>(Optional) client-to-client reflection Example: switch(config-router-af)# client-to-client reflection</pre>	Configures client-to-client route reflection. This feature is enabled by default. This command triggers an automatic soft clear or refresh of BGP neighbor sessions.	
Step 6	<pre>exit Example: switch(config-router-neighbor)# exit switch(config-router)#</pre>	Exits router address configuration mode.	
Step 7	<pre>neighbor ip-address remote-as as-number Example: switch(config-router)# neighbor 192.0.2.10 remote-as 65536 switch(config-router-neighbor)#</pre>	Configures the IP address and AS number for a remote BGP peer.	
Step 8	<pre>address-family { ipv4 ipv6 } { unicast multicast } Example: switch(config-router-neighbor)# address-family ipv4 unicast switch(config-router-neighbor-af)#</pre>	Enters neighbor address family configuration mode for the specified address family.	
Step 9	<pre>route-reflector-client Example: switch(config-router-neighbor-af)# route-reflector-client</pre>	Configures the switch as a BGP route reflector and configures the neighbor as its client. This command triggers an automatic notification and session reset for the BGP neighbor sessions.	
Step 10	<pre>(Optional) show bgp ip { unicast multicast } neighbors Example: switch(config-router-neighbor-af)# show bgp ip unicast neighbors</pre>		

	Command or Action	Purpose
Step 11	(Optional) copy running-config startup-config	Saves this configuration change.
	Example:	
	<pre>switch(config-router-neighbor-af)# copy running-config startup-config</pre>	

Example

This example shows how to configure the router as a route reflector and add one neighbor as a client:

```
switch(config) # router bgp 65536
switch(config-router) # neighbor 192.0.2.10 remote-as 65536
switch(config-router-neighbor) # address-family ip unicast
switch(config-router-neighbor-af) # route-reflector-client
switch(config-router-neighbor-af) # copy running-config startup-config
```

Configuring Route Dampening

You can configure route dampening to minimize eBGP route flaps propagating through your iBGP network.

To configure route dampening, use the following command in address-family or VRF address family configuration mode:

Command	Purpose
dampening [{ half-life reuse-limit suppress-limit max-suppress-time route-map	Disables capabilities negotiation. The parameter values are as follows:
map-name }]	• half-life—The range is from 1 to 45.
Example :	• reuse-limit—The range is from 1 to 20000.
<pre>switch(config-router-af)# dampening route-map bgpDamp</pre>	• suppress-limit—The range is from 1 to 20000.
	• max-suppress-time—The range is from 1 to 255.

Configuring Load Sharing and ECMP

You can configure the maximum number of paths that BGP adds to the route table for equal-cost multipath load balancing.

To configure the maximum number of paths, use the following command in router address-family configuration mode:

Command	Purpose
maximum-paths [ibgp] maxpaths	Configures the maximum number of equal-cost paths for
Example :	load sharing. The range is from 1 to 16. The default is 1.
<pre>switch(config-router-af)# maximum-paths 12</pre>	

L

Configuring Maximum Prefixes

You can configure the maximum number of prefixes that BGP can receive from a BGP peer. If the number of prefixes exceeds this value, you can optionally configure BGP to generate a warning message or tear down the BGP session to the peer.

To configure the maximum allowed prefixes for a BGP peer, use the following command in neighbor address-family configuration mode:

Command	Purpose
maximum-prefix <i>maximum</i> [<i>threshold</i>] [restart <i>time</i> warming-only]	Configures the maximum number of prefixes from a peer. The parameter ranges are as follows:
Example :	• <i>maximum</i> — The range is from 1 to 300000.
<pre>switch(config-router-neighbor-af)# maximum-prefix 12</pre>	• <i>Threshold</i> — The range is from 1 to 100 percent. The default is 75 percent.
	• <i>time</i> — The range is from 1 to 65535 minutes.
	This command triggers an automatic notification and session reset for the BGP neighbor sessions if the prefix limit is exceeded.

Configuring Dynamic Capability

You can configure dynamic capability for a BGP peer.

To configure dynamic capability, use the following command in neighbor configuration mode:

Command	Purpose
dynamic-capability	Enables dynamic capability. This command triggers an
Example :	automatic notification and session reset for the BGP neighbor sessions.
<pre>switch(config-router-neighbor)# dynamic-capability</pre>	This command is enabled by default.

Configuring Aggregate Addresses

You can configure aggregate address entries in the BGP route table.

To configure an aggregate address, use the following command in router address-family configuration mode:

Command	Purpose
aggregate-address <i>ip-prefix/length</i> [as-set] [summary-only] [advertise-map <i>map-name</i>] [attribute-map <i>map-name</i>] [suppress-map <i>map-name</i>] Example : switch (config-router-af) #	 Creates an aggregate address. The path advertised for this route is an autonomous system set that consists of all elements contained in all paths that are being summarized: The as-set keyword generates autonomous system set path information and community information from contributing paths. The summary-only keyword filters all more specific routes from updates.
aggregate-address 192.0.2.0/8 as-set	 The advertise-map keyword and argument specify the route map used to select attribute information from selected routes.
	• The attribute-map keyword and argument specify the route map used to select attribute information from the aggregate.
	• The suppress-map keyword and argument conditionally filters more specific routes.

Suppressing BGP Routes

You can configure Cisco NX-OS to advertise newly learned BGP routes only after these routes are confirmed by the Forwarding Information Base (FIB) and programmed in the hardware. After the routes are programmed, subsequent changes to these routes do not require this hardware-programming check. BGP route suppression is not enabled by default.



Note

When you enable fib-suppression on the switch for routes that are not programmed locally in the hardware because of hardware table exhaustion, BGP advertises these failed routes even though they are not programmed locally in the hardware.

To suppress BGP routes, use the following command in the router configuration mode:

Command	Purpose
suppress-fib-pending	Suppresses newly learned BGP routes (IPv4 or IPv6) from being
Example :	advertised to downstream BGP neighbors until the routes have been programmed in the hardware.
<pre>switch(config-router)# suppress-fib-pending</pre>	

Configuring BGP Conditional Advertisement

You can configure BGP conditional advertisement to limit the routes that BGP propagates. You define the following two route maps:

• Advertise map—Specifies the conditions that the route must match before BGP considers the conditional advertisement. This route map can contain any appropriate match statements.

• Exist map or nonexist map—Defines the prefix that must exist in the BGP table before BGP propagates a route that matches the advertise map. The nonexist map defines the prefix that must not exist in the BGP table before BGP propagates a route that matches the advertise map. BGP processes only the permit statements in the prefix list match statements in these route maps.

If the route does not pass the condition, BGP withdraws the route if it exists in the BGP table.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

	Command or Action	Purpose	
Step 1	configure terminal	Enters global configuration mode.	
	Example:		
	<pre>switch# configure terminal switch(config)#</pre>		
Step 2	router bgp as-number	Enters BGP mode and assigns the autonomous	
	Example:	system number to the local BGP speaker.	
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>		
Step 3	neighbor ip-address remote-as as-number	Places the router in neighbor configuration	
	Example:	mode for BGP routing and configures the neighbor IP address.	
	<pre>switch(config-router)# neighbor 192.168.1.2 remote-as 65537 switch(config-router-neighbor)#</pre>	neighbor ir address.	
Step 4	address-family { ipv4 ipv6 } { unicast multicast }	Enters address family configuration mode.	
	Example:		
	<pre>switch(config-router-neighbor)# address-family ipv4 multicast switch(config-router-neighbor-af)#</pre>		
Step 5	Step 5 advertise-map adv-map { exist-map exist-rmap non-exist-map nonexist-rmap } Configures BGP to condition routes based on the two com		
	<pre>Example: switch(config-router-neighbor-af)# advertise-map advertise exist-map exist</pre>	• <i>adv-map</i> —Specifies a route map with match statements that the route must pass before BGP passes the route to the next route map. The adv-map is a case-sensitive, alphanumeric string up to 63 characters.	
		• <i>exist-rmap</i> —Specifies a route map with match statements for a prefix list. A prefix in the BGP table must match a prefix in the prefix list before BGP will advertise	

	Command or Action	Purpose
		the route. The exist-rmap is a case-sensitive, alphanumeric string up to 63 characters.
		• <i>nonexist-rmap</i> —Specifies a route map with match statements for a prefix list. A prefix in the BGP table must not match a prefix in the prefix list before BGP will advertise the route. The nonexist-rmap is a case-sensitive, alphanumeric string up to 63 characters.
Step 6	(Optional) show ip bgp neighbor	Displays information about BGP and the configured conditional advertisement route maps.
	Example:	
	<pre>switch(config-router-neighbor-af)# show ip bgp neighbor</pre>	
Step 7	(Optional) copy running-config startup-config	Saves this configuration change.
	Example:	
	<pre>switch(config-router-neighbor-af)# copy running-config startup-config</pre>	

Example

This example shows how to configure BGP conditional advertisement:

```
switch# configure terminal
switch(config)# router bgp 65536
switch(config-router)# neighbor 192.0.2.2 remote-as 65537
switch(config-router-neighbor)# address-family ipv4 unicast
switch(config-router-neighbor-af)# advertise-map advertise exist-map exist
switch(config-router-neighbor)# exit
switch(config-router-neighbor)# exit
switch(config-router-neighbor)# exit
switch(config-router-map advertise
switch(config)# route-map advertise
switch(config)# route-map)# match as-path pathList
switch(config-route-map)# exit
switch(config-route-map)# exit
switch(config-route-map)# match ip address prefix-list plist
switch(config-route-map)# exit
switch(config-route-map)# exit
switch(config-route-map)# exit
```

Configuring Route Redistribution

You can configure BGP to accept routing information from another routing protocol and redistribute that information through the BGP network. Optionally, you can assign a default route for redistributed routes.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

Procedure

	Command or Action	Purpose	
Step 1	configure terminal	Enters global configuration mode.	
	Example:		
	<pre>switch# configure terminal switch(config)#</pre>		
Step 2	router bgp as-number	Enters BGP mode and assigns the autonomous	
	Example:	system number to the local BGP speaker.	
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>		
Step 3	address-family { ipv4 ipv6 } { unicast multicast }	Enters address family configuration mode.	
	Example:		
	<pre>switch(config-router)# address-family ipv4 unicast switch(config-router-af)#</pre>		
Step 4	redistribute { direct { eigrp ospf ospfv3 rip } instance-tag static } route-map map-name	Redistributes routes from other protocols into BGP. See the Configuring Route Maps section for more information about route maps.	
	Example:		
	<pre>switch(config-router-af)# redistribute eigrp 201 route-map Eigrpmap</pre>		
Step 5	(Optional) default-metric value	Generates a default route into BGP.	
	Example:		
	<pre>switch(config-router-af)# default-metric 33</pre>		
Step 6	(Optional) copy running-config startup-config	Saves this configuration change.	
	Example:		
	<pre>switch(config-router-af)# copy running-config startup-config</pre>		

Example

This example shows how to redistribute EIGRP into BGP:

```
switch# configure terminal
switch(config)# router bgp 65536
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# redistribute eigrp 201 route-map Eigrpmap
switch(config-router-af)# copy running-config startup-config
```

Disabling BGP Dampening with Redistribution

When an IGP metric of routes redistributed into BGP changes, BGP has internal dampening that prevents an immediate route update to the BGP peers. It affects how BGP handles IGP metric changes reported for redistributed routes. BGP dampens these changes through a batch process with a 10-minute delay. This command enables you to adjust that delay or remove it altogether for a quicker response to these changes.

Procedure

	Command or Action	Purpose	
Step 1	configure terminal	Enters global configuration mode.	
	Example:		
	<pre>switch# configure terminal switch(config)#</pre>		
Step 2	router bgp as-number	Enters BGP mode and assigns the autonomous	
	Example: system number to the local BGP spe		
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>		
Step 3	address-family { ipv4 ipv6 } { unicast multicast }	Enters address family configuration mode.	
	Example:		
	<pre>switch(config-router)# address-family ipv4 unicast switch(config-router-af)#</pre>		
Step 4	dampen-igp-metric seconds	Configures dampening of IGP metric-related	
	Example:	changes for redistributed routes.	
	switch(config-router-af)# dampen-igp-metric 100		

Example

This example shows how to configure BGP dampening for redistributed routes:

```
switch# configure terminal
switch(config)# router bgp 100
switch(config-router)# address-family ipv4 unicast
switch(config-router-af)# dampen-igp-metric 100
switch(config-router-af)#
```

Configuring Multiprotocol BGP

You can configure MP-BGP to support multiple address families, including IPv4 unicast and multicast routes.

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

Command or Action		Purpose	
Step 1	configure terminal	Enters global configuration mode.	
	Example:		
	<pre>switch# configure terminal switch(config)#</pre>		
Step 2	router bgp as-number	Enters BGP mode and assigns the autonomous	
	Example:	system number to the local BGP speaker	
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>		
Step 3	neighbor ip-address remote-as as-number	Places the router in neighbor configuration	
	Example:	mode for BGP routing and configures the neighbor IP address.	
	<pre>switch(config-router)# neighbor 192.168.1.2 remote-as 65537 switch(config-router-neighbor)#</pre>	neighbol ir address.	
Step 4	address-family { ipv4 ipv6 } { unicast multicast }	Enters address family configuration mode.	
	Example:		
	<pre>switch(config-router-neighbor)# address-family ipv4 multicast switch(config-router-neighbor-af)#</pre>		
Step 5	(Optional) copy running-config startup-config	Saves this configuration change.	
	Example:		
	<pre>switch(config-router-neighbor-af)# copy running-config startup-config</pre>		

Procedure

Example

This example shows how to enable advertising and receiving IPv4 routes for multicast RPF for a neighbor:

```
switch# configure terminal
switch(config)# interface ethernet 1/2
switch(config-if)# ipv6 address 2001:0DB8::1
switch(config-if)# router bgp 65536
switch(config-router)# neighbor 192.168.1.2 remote-as 35537
switch(config-router-neighbor)# address-family ipv4 multicast
switch(config-router-neighbor-af)# exit
switch(config-router-neighbor)# address-family ipv6 multicast
switch(config-router-neighbor-af)# copy running-config startup-config
```

Configuring BGP Extended Community Site of Origin

To configure BGP extended community site of origin, use the following commands

Command	Purpose
router bgp as-number Example :	Configures a BGP routing process and enters router configuration mode.
<pre>switch(config)# router bgp 1 switch(config-router)#</pre>	
<pre>vrf vrf-name Example: switch(config-router) # vrf 450 switch(config-router-vrf) #</pre>	Enters the router VRF configuration mode and associates this BGP instance with a VRF.
<pre>neighbor ip-address remote-as as-number Example: switch(config-router-vrf)# neighbor 1::1 remote-as 2 switch(config-router-vrf-neighbor)#</pre>	Configures the IP address and AS number for a remote BGP peer.
<pre>address-family { ipv4 ipv6 } { multicast unicast } Example : switch (config-router-vrf-neighbor) # address-family ipv6 unicast switch (config-router-vrf-neighbor-af) #</pre>	Enters global address family configuration mode for the specified address family.
<pre>soo value Example: switch(config-router-vrf-neighbor-af)# soo 22:14</pre>	Configures the site of origin BGP extended community value. The value is in one of the following formats: • asn:number • IP address:number The number range is from 0 to 65535 for a 2-byte ASN or from 0 to 4294967295 for a 4-byte ASN.

Tuning BGP

You can modify the default behavior of BGP through BGP timers and by adjusting the best-path algorithm.

Configuring Virtualization

Before you begin

Ensure that you have enabled the BGP feature (see the Enabling the BGP Feature section).

	Command or Action	Purpose
Step 1	configure terminal	Enters configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	vrf context vrf-name	Creates a new VRF and enters VRF
	Example:	configuration mode.
	<pre>switch(config)# vrf context RemoteOfficeVRF switch(config-vrf)#</pre>	
Step 3	exit	Exits VRF configuration mode.
	Example:	
	<pre>switch(config-vrf)# exit switch(config)#</pre>	
Step 4	router bgp as-number	Creates a new BGP process with the configured
	Example:	autonomous system number.
	<pre>switch(config)# router bgp 65536 switch(config-router)#</pre>	
Step 5	vrf vrf-name	Enters the router VRF configuration mode and
	Example:	associates this BGP instance with a VRF.
	<pre>switch(config-router)# vrf RemoteOfficeVRF switch(config-router-vrf)#</pre>	
Step 6	neighbor <i>ip-address</i> remote-as <i>as-number</i>	Configures the IP address and AS number for
•	Example:	a remote BGP peer.
	<pre>switch(config-router-vrf)# neighbor 209.165.201.1 remote-as 65536 switch(config-routervrf-neighbor)#</pre>	
Step 7	(Optional) bestpath as-path multipath-relax	Allows the switch to treat paths received from
	Example:	different autonomous systems for multipath, if their autonomous path lengths are the same and
	<pre>switch(config-router-vrf)# bestpath as-path multipath-relax</pre>	other multipath conditions are met.
Step 8	(Optional) copy running-config startup-config	Saves this configuration change.
	Example:	
	<pre>switch(config-router-neighbor)# copy running-config startup-config</pre>	

Example

This example shows how to create a VRF and configure the router ID in the VRF:

```
switch# configure terminal
switch(config)# vrf context NewVRF
switch(config-vrf)# exit
switch(config)# router bgp 65536
switch(config-router)# vrf NewVRF
switch(config-router-vrf)# neighbor 209.165.201.1 remote-as 65536
switch(config-router-vrf-neighbor)# copy running-config startup-config
```

Verifying the Advanced BGP Configuration

Command	Purpose
<pre>show bgp all [summary] [vrf vrf-name]</pre>	Displays the BGP information for all address families.
<pre>show bgp convergence [vrf vrf-name]</pre>	Displays the BGP information for all address families.
<pre>show bgp ip {unicast} [ip-address] community {regexp expression [community] [no-advertise] [no-export] [no-export-subconfed]} [vrf vrf-name]</pre>	Displays the BGP routes that match a BGP community.
<pre>show bgp [vrf vrf-name] ip {unicast} [ip-address] community-list list-name [vrf vrf-name]</pre>	Displays the BGP routes that match a BGP community list.
<pre>show bgp ip {unicast} [ip-address] extcommunity {regexp expression generic [non-transitive transitive] aa4:nn [exact-match]} [vrf vrf-name]</pre>	Displays the BGP routes that match a BGP extended community.
<pre>show bgp ip {unicast} [ip-address] extcommunity-list list-name [exact-match] [vrf vrf-name]</pre>	Displays the BGP routes that match a BGP extended community list.
<pre>show bgp ip {unicast} [ip-address] {dampening dampened-paths [regexp expression]} [vrf vrf-name]</pre>	Displays the information for BGP route dampening. Use the clear bgp dampening command to clear the route flap dampening information.
<pre>show bgp ip {unicast} [ip-address] history-paths [regexp expression] [vrf vrf-name]</pre>	Displays the BGP route history paths.
<pre>show bgp ip {unicast} [ip-address] filter-list list-name [vrf vrf-name]</pre>	Displays the information for the BGP filter list.
<pre>show bgp ip {unicast} [ip-address] neighbors [ip-address] [vrf vrf-name]</pre>	Displays the information for BGP peers. Use the clear bgp neighbors command to clear these neighbors.
<pre>show bgp ip {unicast} [ip-address] {nexthop nexthop-database} [vrf vrf-name]</pre>	Displays the information for the BGP route next hop.

To display the BGP configuration information, perform one of the following tasks:

Command	Purpose
show bgp paths	Displays the BGP path information.
<pre>show bgp ip {unicast} [ip-address] policy name [vrf vrf-name]</pre>	Displays the BGP policy information. Use the clear bgp policy command to clear the policy information.
<pre>show bgp ip {unicast} [ip-address] prefix-list list-name [vrf vrf-name]</pre>	Displays the BGP routes that match the prefix list.
<pre>show bgp ip {unicast} [ip-address] received-paths [vrf vrf-name]</pre>	Displays the BGP paths stored for soft reconfiguration.
<pre>show bgp ip {unicast} [ip-address] regexp expression [vrf vrf-name]</pre>	Displays the BGP routes that match the AS_path regular expression.
<pre>show bgp ip {unicast} [ip-address] route-map map-name [vrf vrf-name]</pre>	Displays the BGP routes that match the route map.
<pre>show bgp peer-policy name [vrf vrf-name]</pre>	Displays the information about BGP peer policies.
show bgp peer-session name [vrf vrf-name]	Displays the information about BGP peer sessions.
show bgp peer-template <i>name</i> [vrf <i>vrf-name</i>]	Displays the information about BGP peer templates. Use the clear bgp peer-template command to clear all neighbors in a peer template.
show bgp process	Displays the BGP process information.
show ip bgp options	Displays the BGP status and configuration information. This command has multiple options. See the Cisco Nexus 3000 Series Command Reference for more information.
show ip mbgp options	Displays the BGP status and configuration information. This command has multiple options. See the Cisco Nexus 3000 Series Command Reference for more information.
show running-configuration bgp	Displays the current running BGP configuration.

Displaying BGP Statistics

To display BGP statistics, use the following commands:

Command	Purpose
<pre>show bgp ip {unicast} [ip-address] flap-statistics [vrf vrf-name]</pre>	Displays the BGP route flap statistics. Use the clear bgp flap-statistics command to clear these statistics.
<pre>show bgp sessions [vrf vrf-name]</pre>	Displays the BGP sessions for all peers. Use the clear bgp sessions command to clear these statistics.

Command	Purpose
<pre>show bgp sessions [vrf vrf-name]</pre>	Displays the BGP sessions for all peers. Use the clear bgp sessions command to clear these statistics.
show bgp statistics	Displays the BGP statistics.

Related Topics

The following topics can give more information on BGP:

Configuring Route Policy Manager

Additional References

For additional information related to implementing BGP, see the following sections:

MIBs

I	MIBs	MIBs Link
I	BGP4-MIB	To locate and download MIBs, go to the following: MIB Locator.
(CISCO-BGP4-MIB	