



CHAPTER 5

Administering DCNM Authentication Settings

This chapter describes how to administer Cisco Data Center Network Manager (DCNM) authentication settings.

This chapter includes the following topics:

- [Information About Administering DCNM Authentication Settings, page 5-1](#)
- [Licensing Requirements for Administering DCNM Authentication Settings, page 5-4](#)
- [Prerequisites for Administering DCNM Authentication Settings, page 5-4](#)
- [Guidelines and Limitations for Administering DCNM Authentication Settings, page 5-4](#)
- [Configuring DCNM Authentication Settings, page 5-5](#)
- [Viewing Cisco DCNM Local Users, page 5-12](#)
- [Field Descriptions for DCNM Authentication Settings, page 5-13](#)
- [Additional References, page 5-15](#)
- [Feature History for DCNM Authentication Settings, page 5-15](#)

Information About Administering DCNM Authentication Settings

Cisco DCNM authentication settings determine how a Cisco DCNM server authenticates users who attempt to access the server with the Cisco DCNM client. They also determine the user role for the user, which affects what the user can configure in the Cisco DCNM client.

This section contains the following topics:

- [Users and User Roles, page 5-2](#)
- [Local Authentication and Cisco DCNM Local Users, page 5-2](#)
- [RADIUS and TACACS+ Authentication, page 5-2](#)
- [User Role Assignment by RADIUS and TACACS+, page 5-3](#)
- [Fallback to Local Authentication, page 5-3](#)
- [Password Recovery, page 5-3](#)
- [Users and Device Credentials, page 5-4](#)
- [Virtualization Support, page 5-4](#)

Send document comments to nexus7k-docfeedback@cisco.com

Users and User Roles

Cisco DCNM implements user-based access to allow you to control who can access a Cisco DCNM server by using the Cisco DCNM client. User access is secured by a password. Cisco DCNM supports strong passwords.

When you ensure that each person who accesses Cisco DCNM has a unique user account, user-based access allows you to determine what actions are taken by each user.

In addition, Cisco DCNM allows you to assign a role to each user. Roles determine what actions a user can take in the Cisco DCNM client. As described in [Table 5-1](#), Cisco DCNM supports two user roles.

Table 5-1 Cisco DCNM User Roles

Cisco DCNM Role	Description
User	<ul style="list-style-type: none"> • Cannot change Cisco DCNM authentication mode • Cannot add or delete Cisco DCNM local user accounts • Can change the details of its own local user account • Can use all other features
Administrator	<ul style="list-style-type: none"> • Has full control of Cisco DCNM authentication settings • Can use all other features

Local Authentication and Cisco DCNM Local Users

The Cisco DCNM database contains any Cisco DCNM local users that you create.



Note

Cisco DCNM server users are local to the Cisco DCNM server. Creating, changing, and removing Cisco DCNM server users has no effect on user accounts on managed devices.

A Cisco DCNM server uses local users to grant access in the following cases:

- When the authentication mode is local
- When no authentication server for the current authentication mode is reachable.

You can use local authentication as the primary authentication mode. If you specify RADIUS or TACACS+ as the primary authentication mode, the Cisco DCNM server always falls back to local authentication if no authentication server for the current authentication mode is reachable.

RADIUS and TACACS+ Authentication

You can configure Cisco DCNM to authenticate users with either the RADIUS or TACACS+ AAA protocol.

Cisco DCNM supports primary, secondary, and tertiary authentication servers for RADIUS and TACACS+. Only a primary server is required. For each authentication server, you can specify the port number that the server listens to for authentication requests.

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

During authentication, if the primary server for the current authentication mode does not respond to the authentication request, the Cisco DCNM server sends the authentication request to the secondary server. If the secondary server does not respond, Cisco DCNM sends the authentication request to the tertiary server.

If none of the servers configured for the current authentication mode responds to an authentication request, the Cisco DCNM server falls back to local authentication.

User Role Assignment by RADIUS and TACACS+

Cisco DCNM supports the assignment of a user role by the RADIUS or TACACS+ server that grants a user access to the Cisco DCNM client. The user role assigned to a user is in effect for the current session in the Cisco DCNM client only.

To assign a Cisco DCNM user role by RADIUS, configure the RADIUS server to return the RADIUS vendor-specific attribute 26/9/1, which is the Cisco-AV-Pair attribute. To assign a Cisco DCNM user role by TACACS+, the TACACS+ server must return a cisco-av-pair attribute-value pair. If an authentication response does not assign the user role, Cisco DCNM assigns the User role. [Table 5-2](#) shows the supported attribute-value pair values for each Cisco DCNM user role.

Table 5-2 Cisco DCNM User Role Assignment Values

Cisco DCNM Role	RADIUS Cisco-AV-Pair Value	TACACS+ Shell cisco-av-pair Value
User	shell:roles = "network-operator"	cisco-av-pair=shell:roles="network-operator"
Administrator	shell:roles = "network-admin"	cisco-av-pair=shell:roles="network-admin"

Fallback to Local Authentication

Local authentication always is the fallback method for RADIUS and TACACS+ authentication modes. If none of the servers configured for the current authentication mode is available, the Cisco DCNM server uses the local database to authenticate a login requests. This behavior is designed to help you prevent accidental lockout from Cisco DCNM.

For users who need fallback support, the usernames of their local user accounts must be identical to their usernames on the authentication servers. Also, we recommend that their passwords in the local user accounts should be identical to their passwords on the authentication servers. This provides transparent fallback support. Because the user cannot determine whether an authentication server or the local database is providing the authentication service, using usernames and passwords on authentication servers that are different than the usernames and passwords in the local database means that the user cannot be certain which username and password should be given.

Password Recovery

If no one can log into the Cisco DCNM client as a user with a Cisco DCNM Administrator role, reinstall the Cisco DCNM server, which allows you to specify the username and password for a local user account that is assigned the Administrator role. For more information, see the [“Reinstalling the Cisco DCNM Server”](#) section on page 2-15.

Send document comments to nexus7k-docfeedback@cisco.com

Users and Device Credentials

Each Cisco DCNM server user has unique device credentials, regardless of whether the user authenticates with a local user account or an account on a RADIUS or TACACS+ server. This allows you to maintain accounting logs on managed devices that reflect the actions of each Cisco DCNM server user. For more information, see the [“Information About Devices and Credentials” section on page 7-1](#).

Virtualization Support

Cisco NX-OS support for virtual device contexts has no effect on Cisco DCNM server users.

Cisco DCNM server users can configure any managed device.

Licensing Requirements for Administering DCNM Authentication Settings

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco DCNM	Administering Cisco DCNM authentication settings requires no license. Any feature not included in a license package is bundled with the Cisco DCNM and is provided at no charge to you. For information about obtaining and installing a Cisco DCNM LAN Enterprise license, see the “Installing Licenses” section on page 2-11 .

Prerequisites for Administering DCNM Authentication Settings

Administering Cisco DCNM server users has the following prerequisites:

- To add, delete, or modify Cisco DCNM local users, you must be logged into the Cisco DCNM client with a user account that is assigned the Administrator Cisco DCNM role.

Guidelines and Limitations for Administering DCNM Authentication Settings

Administering Cisco DCNM authentication settings has the following configuration guidelines and limitations:

- Create a Cisco DCNM user account for each person who uses the Cisco DCNM client. Do not allow people to share a user account.
- Delete unused Cisco DCNM user accounts.
- Grant an administrator user account only to those who need to perform administrator tasks in the Cisco DCNM client.


Send document comments to nexus7k-docfeedback@cisco.com

- We recommend that you use strong passwords. Common guidelines for strong passwords include a minimum password length of eight characters and at least one letter, one number, and one symbol. For example, the password Re1Ax@h0m3 has ten characters and contains uppercase and lowercase letters in addition to one symbol and three numbers.

Configuring DCNM Authentication Settings

Figure 5-1 shows the DCNM Authentication Settings content pane.

Figure 5-1 DCNM Authentication Settings Content Pane

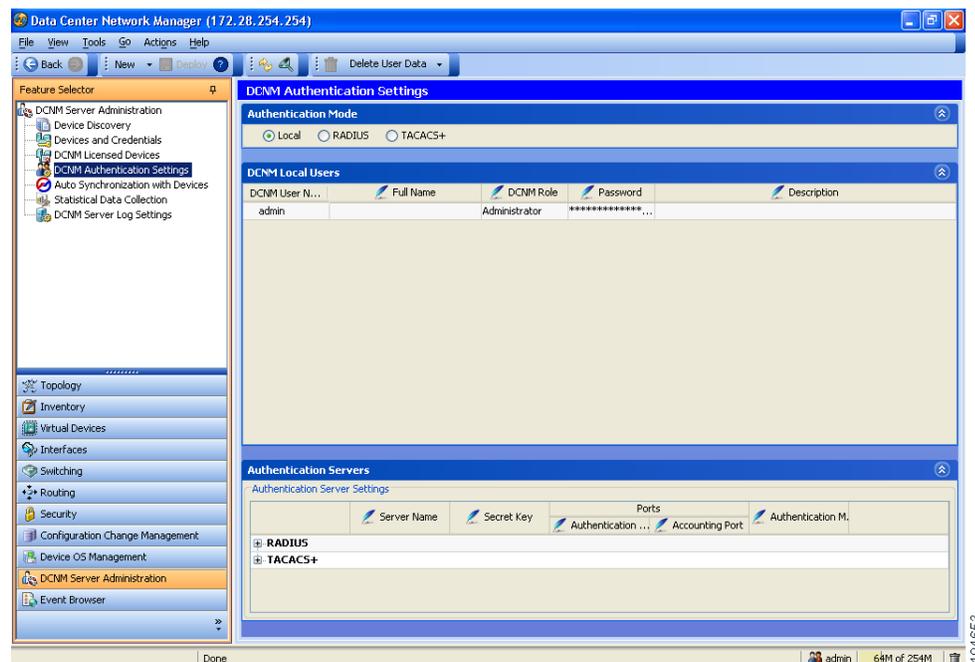

This section includes the following topics:

- [Configuring the Authentication Mode, page 5-6](#)
- [Adding a Cisco DCNM Local User, page 5-6](#)
- [Changing the Password of a Cisco DCNM Local User, page 5-7](#)
- [Changing the Full Name, Role, or Description of a Cisco DCNM Local User, page 5-8](#)
- [Deleting a Cisco DCNM Server User, page 5-9](#)
- [Adding Authentication Servers, page 5-9](#)
- [Changing Authentication Server Settings, page 5-11](#)
- [Removing an Authentication Server, page 5-11](#)

Send document comments to nexus7k-docfeedback@cisco.com

Configuring the Authentication Mode

You can configure the mode that the Cisco DCNM server uses to authenticate Cisco DCNM client users.

BEFORE YOU BEGIN

Log into the Cisco DCNM client with a user account that has the Administrator user role.

If you want to enable RADIUS or TACACS+ authentication mode, you must configure at least one authentication server for the desired authentication mode.

DETAILED STEPS

To configure the authentication mode, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
 - Step 2** If necessary, expand the Authentication Mode section.
 - Step 3** Choose the authentication mode.
 - Step 4** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
 - Step 5** Restart the Cisco DCNM server. For more information, see the [“Stopping the Cisco DCNM Server” section on page 2-19](#) and the [“Starting the Cisco DCNM Server” section on page 2-9](#).
-

Adding a Cisco DCNM Local User

You can add a Cisco DCNM local user account.



Note

Adding a Cisco DCNM local user account does not affect the user account configuration on any Cisco NX-OS device.

BEFORE YOU BEGIN

Log into the Cisco DCNM client with a user account that has the Administrator user role.

Determine the username and password for the new Cisco DCNM local user account.



Note

We recommend that you use a strong password. Common guidelines for strong passwords include a minimum password length of eight characters and at least one letter, one number, and one symbol. For example, the password Re1Ax@h0m3 has ten characters and contains uppercase and lowercase letters in addition to one symbol and three numbers.

Send document comments to nexus7k-docfeedback@cisco.com

DETAILED STEPS

To add a Cisco DCNM local user, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
 - Step 2** If necessary, expand the **DCNM Local Users** section.
A table of users appears in the DCNM Local Users section.
 - Step 3** From the menu bar, choose **Actions > Add User**.
A new row appears at the bottom of the list of users. By default, all fields in the new row are blank.
 - Step 4** In the DCNM User Name column of the new row, enter the username. The username can be 1 to 198 characters. Entries can contain case-sensitive letters, numbers, and symbols.
 - Step 5** (Optional) In the Full Name column, double-click the entry and add a name. For example, enter the real name of the person who will use the Cisco DCNM local user account. The maximum length is 255 case-sensitive letters, numbers, and symbols.
 - Step 6** In the DCNM Role column, double-click the entry and choose the role. By default, the role is User.
 - Step 7** In the Password column, double-click the entry and then click the down-arrow button.
 - Step 8** In the New Password field and the Confirm Password field, enter the password. The password can be 1 to 255 characters. Entries can contain case-sensitive letters, numbers, and symbols.
 - Step 9** Click **OK**.
 - Step 10** (Optional) In the Description column, double-click the entry and add a description of the user account. For example, you could use this entry to provide e-mail and telephone contact details of the person who will be using this Cisco DCNM server user account. The maximum length is 255 case-sensitive letters, numbers, and symbols.
 - Step 11** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
-

Changing the Password of a Cisco DCNM Local User

You can change the password of a Cisco DCNM local user.

BEFORE YOU BEGIN

An Administrator role is required if you want to change the password of a local user account other than the account that you use to log into the Cisco DCNM client. If your user account is a local user account and it has the User role, you can change the password of your account only.

Determine what the new password should be.



Note

We recommend that you use a strong password. Common guidelines for strong passwords include a minimum password length of eight characters and at least one letter, one number, and one symbol. For example, the password Re1Ax@h0m3 has ten characters and contains uppercase and lowercase letters in addition to one symbol and three numbers.

Send document comments to nexus7k-docfeedback@cisco.com

DETAILED STEPS

To change the password of a Cisco DCNM local user, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Server Authentication Settings**.
 - Step 2** If necessary, expand the **DCNM Local Users** section.
A table of users appears in the DCNM Local Users section.
 - Step 3** In the User Name column, click the username for the user account that you want to change.
The row of the username that you clicked is highlighted.
 - Step 4** In the Password column, double-click the entry and then click the down-arrow button.
 - Step 5** In the New Password field and the Confirm Password field, enter the new password. The password can be 1 to 255 characters. Entries can contain case-sensitive letters, numbers, and symbols.
 - Step 6** Click **OK**.
 - Step 7** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
-

Changing the Full Name, Role, or Description of a Cisco DCNM Local User

You can change the full name, role, or description of a Cisco DCNM local user.



Note

You cannot change the username. Instead, add a local user account with the desired username and remove the local user account with the unwanted username.

BEFORE YOU BEGIN

Determine what the new full name or description should be.

An Administrator role is required if you want to change the full name, role, or description of a local user account other than the local user account that you use to log into the Cisco DCNM client. If your user account is a local user account and it has the User role, you can change the full name and description for your account only.

DETAILED STEPS

To change the full name or description of a Cisco DCNM local user, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
 - Step 2** If necessary, expand the **DCNM Local Users** section.
A table of users appears in the DCNM Local Users section.
 - Step 3** In the User Name column, click the username of the local user account that you want to change.
The row of the username that you clicked is highlighted.

Send document comments to nexus7k-docfeedback@cisco.com

-
- Step 4** (Optional) In the Full Name column, double-click the entry and enter the new name. The maximum length is 255 case-sensitive letters, numbers, and symbols.
- Step 5** (Optional) In the DCNM Role column, double-click the entry and choose the new role. You can choose Administrator or User.
- Step 6** (Optional) In the Description column, double-click the entry and enter the new description of the user account. The maximum length is 255 case-sensitive letters, numbers, and symbols.
- Step 7** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
-

Deleting a Cisco DCNM Server User

You can remove a Cisco DCNM local user account.

BEFORE YOU BEGIN

Log into the Cisco DCNM client with a user account that has the Administrator user role.
Ensure that you are removing the correct Cisco DCNM local user account.

DETAILED STEPS

To delete a Cisco DCNM local user account, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
- Step 2** If necessary, expand the **DCNM Local Users** section.
A table of users appears in the DCNM Local Users section.
- Step 3** In the User Name column, click the username of the user account that you want to remove.
The row of the username that you clicked is highlighted.
- Step 4** From the menu bar, choose **Actions > Delete User**.
- Step 5** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
-

Adding Authentication Servers

You can add RADIUS and TACACS+ servers to the Cisco DCNM authentication settings.

BEFORE YOU BEGIN

Ensure that you have the following information about each authentication server that you want to add:

- AAA protocol: RADIUS or TACACS+
- Server IPv4 address or DNS name that can be resolved by the Cisco DCNM server.
- Secret key.
- Port number on which the server accepts authentication requests.

Send document comments to nexus7k-docfeedback@cisco.com

- (RADIUS only) Port number on which the server accepts accounting messages.
- Authentication protocol: PAP, CHAP, MSCHAP, or ASCII.
- (Optional) Username and password of a valid user account on the server for server verification.

Determine whether the server should be a primary, secondary, or tertiary server, which depends upon your authentication server failover strategy.

DETAILED STEPS

To add authentication servers, follow these steps:

Step 1 From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.

Step 2 If necessary, expand the **Authentication Servers** section.

The Authentication Server Settings table shows RADIUS and TACACS+ server settings.

Step 3 If necessary, expand the **RADIUS** or **TACACS+** server rows.

Step 4 For each authentication server that you want to add, follow these steps:

- Choose the row in which you want to add the server.



Note The Cisco DCNM client does not allow you to add a secondary server if you have not added a primary server. In addition, you cannot add a tertiary server if you have not added a secondary server.

- Double-click the **Server Name** field and enter the server IPv4 address or DNS host name.



Note If you enter a host name that the Cisco DCNM server cannot resolve, the Server Name field is highlighted in red.

- Double-click the **Secret Key** field and enter the secret key (sometimes called a shared secret) of the authentication server.

- (Optional) If you need to change the default Authentication Port or Accounting Port (RADIUS only), double-click the applicable port field and enter the new port number.

- Double-click the **Authentication Method** field and choose the authentication protocol that Cisco DCNM must use when sending authentication requests to the authentication server.

Step 5 (Optional) If you want to verify that the Cisco DCNM server can authenticate a user with a new authentication server, follow these steps:

- To the right of the row for the authentication server that you want to verify, click **Verify**.

A Verification dialog box appears.

- Enter a username and password for a valid user account on the authentication server.

- Click **Verify**.

The Cisco DCNM client displays a message indicating whether the verification attempt succeeded or failed. Verification failure may mean that the authentication server is unavailable or that the authentication settings are incorrect.

Send document comments to nexus7k-docfeedback@cisco.com

Step 6 From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.

Changing Authentication Server Settings

You can change the settings for authentication servers that you have already configured in the Cisco DCNM client. If you have more than one RADIUS or TACACS+ server, you can change which server is primary, secondary, or tertiary.

DETAILED STEPS

To change authentication server settings, follow these steps:

- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
- Step 2** If necessary, expand the **Authentication Servers** section.
The Authentication Server Settings table shows RADIUS and TACACS+ server settings.
- Step 3** If necessary, expand the **RADIUS** or **TACACS+** server rows.
- Step 4** (Optional) If you want to change the settings of an authentication server, double-click each field that you need to change and enter the changes.
- Step 5** (Optional) If you want to reorder RADIUS or TACACS+ servers, right-click a server and choose **Move Up** or **Move Down**, as needed.
- Step 6** (Optional) If you want to verify that the Cisco DCNM server can authenticate a user with an authentication server, follow these steps:
- To the right of the row for the authentication server that you want to verify, click **Verify**.
A Verification dialog box appears.
 - Enter a username and password for a valid user account on the authentication server.
 - Click **Verify**.
- The Cisco DCNM client displays a message indicating whether the verification attempt succeeded or failed. Verification failure may mean that the authentication server is unavailable or that the authentication settings are incorrect.
- Step 7** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
-

Removing an Authentication Server

You can remove a RADIUS or TACACS+ authentication server from the Cisco DCNM authentication settings.

BEFORE YOU BEGIN

You cannot remove all authentication servers for the current authentication mode. Instead, change the authentication mode first and then remove all the authentication servers.

Send document comments to nexus7k-docfeedback@cisco.com

DETAILED STEPS

To remove an authentication server, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
 - Step 2** If necessary, expand the **Authentication Servers** section.
The Authentication Server Settings table shows RADIUS and TACACS+ server settings.
 - Step 3** If necessary, expand the **RADIUS** or **TACACS+** server rows.
 - Step 4** Right-click the authentication server that you want to remove and choose **Remove Server**.
 - Step 5** From the menu bar, choose **File > Deploy** to apply your changes to the Cisco DCNM server.
-

Viewing Cisco DCNM Local Users

To view Cisco DCNM server user accounts, from the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings** and then, if necessary, expand the DCNM Local Users section.

Cisco DCNM server user accounts, including usernames and descriptions, appear in the Contents pane. Passwords appear masked for security. For information about the fields that appear, see the [“Field Descriptions for DCNM Authentication Settings”](#) section on page 5-13.

Verifying Authentication Server Settings

You can verify that the Cisco DCNM server can authenticate a user with a particular authentication server that you have configured.

DETAILED STEPS

To verify settings for an authentication server, follow these steps:

-
- Step 1** From the Feature Selector pane, choose **DCNM Server Administration > DCNM Authentication Settings**.
 - Step 2** If necessary, expand the **Authentication Servers** section.
The Authentication Server Settings table shows RADIUS and TACACS+ server settings.
 - Step 3** Click **Verify**.
A Verification dialog box appears.
 - Step 4** Enter a username and password for a valid user account on the authentication server.
 - Step 5** To the right of the row for the authentication server that you want to verify, click **Verify**.

Send document comments to nexus7k-docfeedback@cisco.com

The Cisco DCNM client displays a message indicating whether the verification attempt succeeded or failed. Verification failure may mean that the authentication server is unavailable or that the authentication settings are incorrect.

Field Descriptions for DCNM Authentication Settings

This section includes the following field descriptions for the DCNM Authentication Settings feature:

- [Authentication Mode Section, page 5-13](#)
- [DCNM Local Users Section, page 5-13](#)
- [Authentication Servers Section, page 5-14](#)

Authentication Mode Section

Table 5-3 *Authentication Mode Section*

Field	Description
Local	Whether Cisco DCNM authenticates users with the local user database only.
RADIUS	Whether Cisco DCNM authenticates users with a RADIUS server. When no configured RADIUS server is reachable, Cisco DCNM falls back to using the local database for user authentication.
TACACS+	Whether Cisco DCNM authenticates users with a TACACS+ server. When no configured TACACS+ server is reachable, Cisco DCNM falls back to using the local database for user authentication.

DCNM Local Users Section

Table 5-4 *DCNM Local Users Section*

Field	Description
DCNM User Name	<i>Display only.</i> Name of the Cisco DCNM server user account. This name can be used to log into the Cisco DCNM client when the authentication mode is local or when no authentication server for the current authentication mode is reachable. Entries are case sensitive. Valid characters are all letters, numbers, and symbols. The minimum length is 1 character. The maximum length is 198 characters.
Full Name	Other name for the user account, such as the name of the person who uses the Cisco DCNM server user account. This name cannot be used to log into the Cisco DCNM client. Valid characters are all letters, numbers, and symbols. The maximum length is 255 characters. This field is blank by default.

Send document comments to nexus7k-docfeedback@cisco.com

Table 5-4 DCNM Local Users Section (continued)

Field	Description
DCNM Role	Role of the user account. Valid values are User and Administrator. For more information, see Table 5-1 . By default, a Cisco DCNM server user account is assigned the role of User.
Password	Password for the Cisco DCNM server user. This field is always masked for security. Entries are case sensitive. Valid characters are all letters, numbers, and symbols. The minimum length is 1 character. The maximum length is 255 characters.
Description	Description of the Cisco DCNM server user. Valid characters are all letters, numbers, and symbols. The maximum length is 255 characters. This field is blank by default.

Authentication Servers Section

Table 5-5 Authentication Servers Section

Field	Description
Server Name	DNS name or IPv4 address of the authentication server. <ul style="list-style-type: none"> DNS name—If you specify a DNS name, the Cisco DCNM server must be able to resolve the IP address of the server. Valid DNS names characters are alphanumeric. IPv4 address—If you specify an IP address, valid entries are in dotted decimal format.
Secret Key	Shared secret of the authentication server. Valid entries are case-sensitive letters, numbers, and symbols.
Authentication Port	TCP or UDP port number that the authentication server listens to for authentication requests. By default, the authentication port for a RADIUS server is UDP port 1812 and the authentication port for a TACACS+ server is TCP port 49.
Accounting Port	UDP port number that the RADIUS authentication server listens to for authentication requests. By default, the accounting port for a RADIUS server is UDP port 1813.
Authentication Method	Authentication protocol that the Cisco DCNM server uses in authentication requests to the authentication server. Supported authentication methods are as follows: <ul style="list-style-type: none"> PAP CHAP MSCHAP ASCII

Send document comments to nexus7k-docfeedback@cisco.com

Additional References

For additional information related to administering Cisco DCNM authentication settings, see the following sections:

- [Related Documents, page 5-15](#)
- [Standards, page 5-15](#)

Related Documents

Related Topic	Document Title
Logging into the Cisco DCNM client	Opening the Cisco DCNM Client, page 4-7

Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

Feature History for DCNM Authentication Settings

[Table 5-6](#) lists the release history for this feature.

Table 5-6 Feature History for DCNM Authentication Settings

Feature Name	Releases	Feature Information
RADIUS and TACACS+ server support	4.2(1)	This feature was added, including fallback authentication with Cisco DCNM local users when no authentication server for the current authentication mode is reachable.
Cisco DCNM local users	4.2(1)	This feature was preexisting.
DCNM Server Users	4.1(2)	No change from Release 4.0

Send document comments to nexus7k-docfeedback@cisco.com