



CHAPTER 1

Overview of Networking Concepts in Cisco Unity Connection 9.x

Each Cisco Unity Connection server (or cluster) has a maximum number of users that it can serve. When the messaging needs of your organization require more than one Connection server or cluster, or you need a way to combine multiple Connection directories or to interconnect Connection with Cisco Unity, you can link Connection servers or clusters together to form sites, and link a Connection site with another Connection site or with a Cisco Unity site to form a Cisco Voicemail Organization.


See the following sections:

- [About Cisco Unity Connection 9.x Sites and Intrasite Links, page 1-1](#)
- [About Cisco Voicemail Organizations and Intersite Links in Cisco Unity Connection 9.x, page 1-2](#)
- [About VPIM Networking in Cisco Unity Connection 9.x, page 1-5](#)
- [Directory Synchronization in Cisco Unity Connection 9.x, page 1-5](#)
- [Cisco Unity Connection 9.x Directory Size Limits, page 1-10](#)
- [Messaging in Cisco Unity Connection 9.x, page 1-11](#)
- [Cross-Server Sign-In, Transfers, and Live Reply in Cisco Unity Connection 9.x, page 1-12](#)
- [Addressing and Dial Plan Considerations in Cisco Unity Connection 9.x, page 1-13](#)
- [Migrating Users From Cisco Unity to Cisco Unity Connection 9.x, page 1-17](#)

About Cisco Unity Connection 9.x Sites and Intrasite Links

You can join two or more Connection servers or clusters (up to a maximum of ten) to form a well-connected network, referred to as a Connection site. The servers that are joined to the site are referred to as locations. (When a Connection cluster is configured, the cluster counts as one location in the site.) Within a site, each location uses SMTP to exchange directory synchronization information and messages directly with every other location. Each location is said to be linked to every other location in the site via an intrasite link. [Figure 1-1](#) illustrates a site of five Connection locations joined by intrasite links.

Figure 1-1 A Cisco Unity Connection Site Joined by Intrasite Links Among All Locations

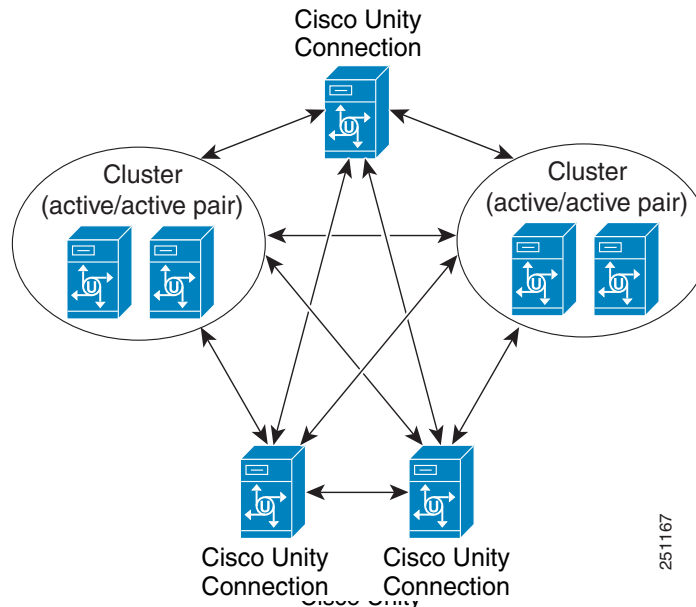

The Connection site concept was known as a Digital Network in release 7.x. You can join 7.x locations and 8.x locations in the same Connection site (intrasite links), as long as you do not link the site to any other site (intersite links require that each Connection location be at release 9.x).

Each Cisco Unity Connection server (or cluster) is represented in the site as a single Connection location, which is created locally during installation and which cannot be deleted from the server itself. When you join the server (or cluster) to an existing location in a site, a Connection location is automatically created for the server (or cluster) on all other locations in the site, and these locations begin to perform directory synchronization with the new location. A Connection location can only belong to a single site.

About Cisco Voicemail Organizations and Intersite Links in Cisco Unity Connection 9.x

You can use an intersite link to connect one Cisco Unity Connection site to another Connection site, allowing you to scale your organization from a maximum of ten locations to a maximum of twenty. Or, you can use an intersite link to connect an 9.x Connection server or site to a Cisco Unity server or Cisco Unity Digital Network. The linked sites are referred to as a Cisco Voicemail Organization.

To create an intersite link, you select a single location from each site to act as a gateway to the other site. All directory synchronization communications pass between the two site gateways, thereby limiting the connectivity requirements and bandwidth usage to the link between those two site gateway locations.

Only one intersite link is supported per site. So, you can link a single Connection site to a single Cisco Unity site, or a single Connection site to another Connection site.


See the following sections for additional details:

- [About Linking Two Cisco Unity Connection Sites, page 1-3](#)
- [About Linking Cisco Unity Connection and Cisco Unity Sites, page 1-3](#)

Messages composed by Cisco Unity users that include external recipients are routed by the mail system to a folder that the Interoperability Gateway periodically checks. The Interoperability Gateway picks up a message to be processed from the folder, looks up and translates the sender and recipient information into the required format, adds or removes message properties as applicable, converts and encrypts or decrypts the audio if applicable for the destination location, performs message part and format conversion, and hands the message back to the messaging system for delivery. For several of these tasks, the Interoperability Gateway needs access to Cisco Unity directory information. To get this information, it contacts the Cisco Unity web services resource on a Cisco Unity 8.x server in the Cisco Unity site. (The Interoperability Gateway can be configured to use both a primary and secondary web services server. The site gateway can be used as the web services server, although any 8.x server in the site can be used.)

Figure 1-3 depicts—at a high level—the role of the Interoperability Gateway for Microsoft Exchange, the site gateways, and the intersite link in connecting Cisco Unity and Cisco Unity Connection sites. The Cisco Unity site can consist of a single Cisco Unity server, a failover pair, or a Digital Network containing multiple Cisco Unity servers or failover pairs. Likewise, the Connection site can consist of a single Connection server, a Connection cluster, or more than one server or cluster.

Figure 1-3 Cisco Voicemail Organization Consisting of a Cisco Unity Site Connected to a Cisco Unity Connection Site via an Intersite Link

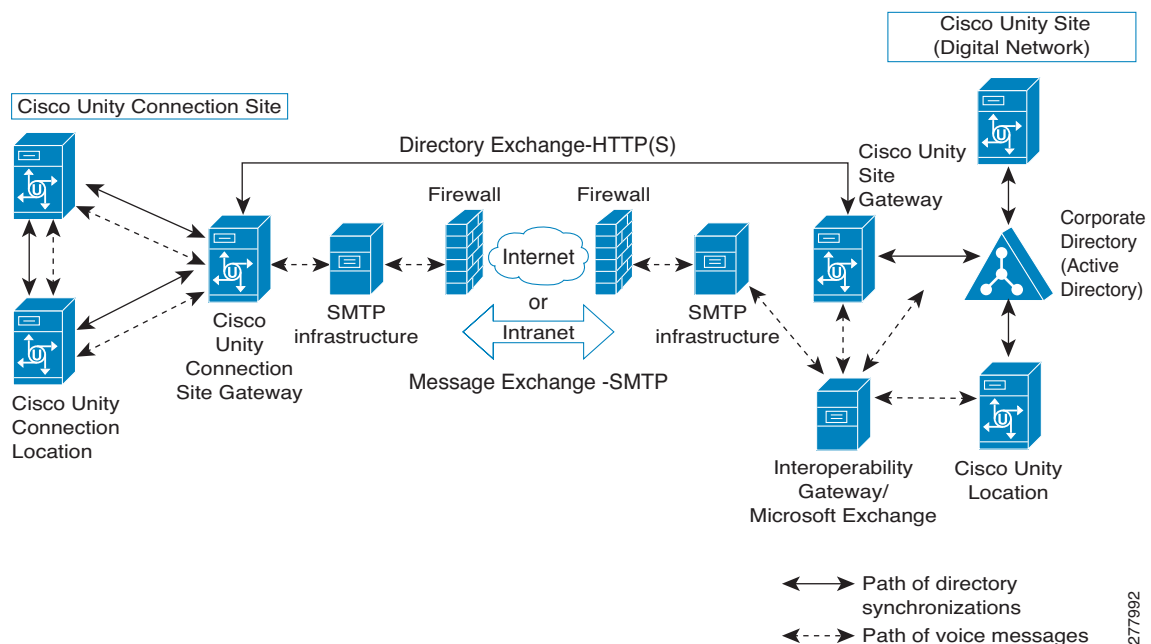

Note that in order to link Cisco Unity and Cisco Unity Connection sites, all servers in the Connection site must be running Connection 9.x. The Cisco Unity site gateway must be running Cisco Unity 8.x. Other Cisco Unity servers in the Cisco Unity site may be running Cisco Unity 5.0 and later with Microsoft Exchange provided that the applicable engineering special is installed to add Connection Networking support. For additional details and requirements, see the *Cisco Unity Networking Options Requirements* at http://www.cisco.com/en/US/docs/voice_ip_comm/unity/compatibility/matrix/cunetoptionsreqs.html.)

When you use a Connection cluster as the Connection site gateway, only the publisher server in the cluster participates in directory synchronization with Cisco Unity. However, the subscriber server can continue to provide message exchange over the intersite link if the publisher server is down. Likewise,

when you use a Cisco Unity failover pair as the Cisco Unity site gateway, only the primary Cisco Unity server participates in directory synchronization with Connection, although message exchange can continue even when the secondary Cisco Unity server is active.

About VPIM Networking in Cisco Unity Connection 9.x

Cisco Unity Connection 9.x supports the Voice Profile for Internet Mail (VPIM) protocol, which is an industry standard that allows different voice messaging systems to exchange voice and text messages over the Internet or any TCP/IP network. VPIM is based on the Simple Mail Transfer Protocol (SMTP) and the Multi-Purpose Internet Mail Extension (MIME) protocol.

VPIM Networking is supported for use with Cisco Unified Communications Manager Business Edition (CMBE).

Connection 9.x supports up to 10 VPIM locations and 100,000 VPIM contacts in the Connection directory. These same limits apply either to the directory of a single Connection server or cluster pair, or to the global directory in a site.

If you deploy VPIM in a Connection networking site, we recommend that you designate a single Connection location in the site as the bridgehead to handle the configuration of VPIM locations and contacts. The VPIM location data and all contacts at the VPIM location (including automatically created contacts) are replicated from the bridgehead to other locations within the site. When a VPIM message is sent by a user who is homed on a Connection location other than the bridgehead, the message first passes to the bridgehead, which handles forwarding the message to the destination server. Likewise, messages from VPIM contacts are received by the bridgehead and relayed to the home server of the Connection recipient.

If you deploy VPIM in a Cisco Voicemail Organization, you must independently configure each site for VPIM. VPIM locations and contacts are not replicated across intersite links, and site gateways do not relay VPIM messages to other sites.

For detailed information about VPIM networking, see the [“VPIM Networking in Cisco Unity Connection 9.x”](#) chapter.

Directory Synchronization in Cisco Unity Connection 9.x

Each location in a Cisco Unity Connection site or Cisco Voicemail Organization has its own directory of users and other objects that were created on the location and are said to be “homed” on that location. The collection of objects and object properties that are replicated among locations and sites is referred to as the global directory.

See the following sections for details on the specific objects and object properties that are replicated during directory synchronization:

- [Replication Within a Cisco Unity Connection Site, page 1-5](#)
- [Replication Between Two Cisco Unity Connection Sites, page 1-7](#)
- [Replication Between Cisco Unity and Cisco Unity Connection Sites, page 1-8](#)

Replication Within a Cisco Unity Connection Site

Within a Cisco Unity Connection site, each location replicates the objects and object properties shown in [Table 1-1](#) from its directory to every other location:

Table 1-1 *Replicated Objects in a Cisco Unity Connection Site*

Replicated Object	Replicated Properties
Users with mailboxes	<ul style="list-style-type: none"> • Alias • First name, last name, display name, alternate names • Extension, cross-server transfer extension, and alternate extensions • Directory listing status • Partition • Recorded name • SMTP address and SMTP proxy addresses
System contacts	All properties
System distribution lists	All properties, including list membership
Partitions	All properties
Search spaces	All properties, including membership
Connection location	<ul style="list-style-type: none"> • Display name • Host address • SMTP domain name • Connection version
VPIM location	All properties except Contact Creation settings (contact creation is handled on the Connection location that homes the VPIM location)

In most cases, you can use replicated objects just as you would use local objects; for example, you can assign a remote user to be the message recipient of a system call handler, or configure the search scope of a user to use a remote search space. Note the following exceptions:

- System call handler owners must be local users.
- Objects that belong to a partition (users, contacts, handlers, system distribution lists, and VPIM locations) can only belong to local partitions. You can, however, add a remote partition to a local search space.

When a replicated object that is homed on a Connection location is added, modified or deleted, the location sends an object change request containing details about the change to all other locations. The object change requests for a given location are ordered and tracked with a number known as the Unique Sequence Number (USN). For each change, the location increments the USN by one, and notes the change in its database. When a remote location receives an object change request with a USN value that is one higher than the previous request it received from the sender, it updates its copy of the Connection directory accordingly, and increments its tracked copy of the USN for the sender. If a remote location misses one or more changes and receives a change request with a USN that is more than one higher than the previous request it received from this location, it can retrieve the missed changes by requesting the USN values that it missed.

In addition to the USN, each location has another associated number known as the Replication Set. The Replication Set value is used to track the set of changes to which a USN belongs. The Replication Set value is automatically changed during an upgrade, restore, or rollback operation. This ensures that any changes to the database as a result of the operation are replicated to the network. For example, if Location A receives a message with replication set 10 and USN 5 from Location B, and then receives a

message with replication set 9 and USN 5 from Location B, it knows to ignore the message with replication set 9 because it is a lower number and the message predates the message with replication set 10. If Location A receives another message from Location B with replication set 10 and USN 5 again, Location A knows this is a duplicate message and can ignore it.

When a bulk operation is in progress on a location, replication is paused on that location until the operation completes.

Replication Between Two Cisco Unity Connection Sites

As shown in [Table 1-2](#), the same objects and object properties are replicated between two Cisco Unity Connection sites as within a single Connection site, with the following exceptions:

- System contacts are not replicated between sites.
- For each site, you can choose whether to synchronize all system distribution lists that are homed on the remote site. Also, for each individual list, you can choose whether the list is offered for replication to the remote site.
- System distribution list membership is not replicated between sites.
- VPIM locations (and contacts) are not replicated between sites.

Table 1-2 *Objects That Are Replicated from One Cisco Unity Connection Site to Another*

Replicated Object	Replicated Properties
Users with mailboxes	<ul style="list-style-type: none"> • Alias • First name, last name, display name, alternate names • Extension, cross-server transfer extension, and alternate extensions • Directory listing status • Partition • Recorded name¹ • SMTP address and SMTP proxy addresses
System distribution lists ²	<ul style="list-style-type: none"> • Alias • Display name • Extension • Partition • Recorded name¹
Partitions	All properties
Search spaces	All properties
Connection locations	<ul style="list-style-type: none"> • Display name • Host address • SMTP domain name • Connection version

1. For each site, you can choose whether to synchronize recorded names for remote site objects.

2. A local site system distribution list is only synchronized by the remote site if the Include Distribution Lists When Synchronizing Directory Data check box is checked for the intersite link on the remote site gateway, and the Replicate to Remote Sites Over Intersite Links check box is checked for the list.

Just as with intrasite links, you can use replicated objects from a remote site just as you would use local objects, except that call handler owners must be local users, and objects that belong to a partition can only belong to local partitions.

Intersite replication is accomplished by means of a Feeder service and a Reader service running on each site gateway. The Reader service periodically polls the remote site gateway for any directory changes since the last poll interval. The Feeder service checks the change tracking database for directory changes and responds to poll requests with the necessary information.

On each site gateway, you can configure the schedule on which the Reader polls the remote Feeder for directory data, and the schedule on which it polls for recorded names. In Cisco Unity Connection Administration on a site gateway, you can access the schedules on the Tools > Task Management page by selecting either the Synchronize Directory With Remote Network task or the Synchronize Voice Names With Remote Network task. Alternatively, you can access either task by using the Related Links field on the Edit Intersite Link page.

When the Synchronize Voice Names With Remote Network task is enabled, the Reader will process recorded name files for remote users and system distribution lists (if applicable). Once a recorded name is created for a remote object on the local site, it is updated only if the remote and local filenames for the recorded name differ. If, for example, you change the outgoing codec for recorded names on the remote site gateway, the local site will not update its files because the change does not affect filenames. In order to pull updated copies of recorded names in this case, you must clear all existing recorded names from the local site gateway and then do a full resynchronization by using the Clear Recorded Names button and the Resync All button on the Search Intersite Links page in Connection Administration.

Replication Between Cisco Unity and Cisco Unity Connection Sites

When you link a Cisco Unity site and a Cisco Unity Connection site, a contact (known as a Connection Networking subscriber in the Cisco Unity Administrator) is added to the Cisco Unity directory and to Active Directory for each Connection user. Likewise, a user (known as a Cisco Unity user in Cisco Unity Connection Administration) is added to the Connection site global directory for each Cisco Unity user. Connection system contacts and VPIM contacts are not replicated to Cisco Unity, nor are Cisco Unity networking contacts (AMIS, Bridge, VPIM, Internet, or Trusted Internet subscribers) replicated to Connection.

A system distribution list may be replicated from one site to another if the local site is configured to pull lists from the remote site, and if the list itself is configured to allow replication to other sites. Lists that contain system contacts or networking contacts cannot be configured to allow replication to other sites. For those lists that are replicated, only the list name and other information used in addressing are replicated; list membership is not replicated.

[Table 1-3](#) lists the objects that are replicated between Cisco Unity and Cisco Unity Connection sites, and the object properties that are replicated.

Table 1-3 Objects That Are Replicated Between Cisco Unity and Cisco Unity Connection Sites

Replicated Object	Replicated Properties
Cisco Unity Connection users with mailboxes	<ul style="list-style-type: none"> • Alias • First name, last name, display name, alternate names • Extension, cross-server transfer extension, and alternate extensions¹ • Directory listing status • Recorded name² • SMTP address and SMTP proxy addresses
Cisco Unity users	<ul style="list-style-type: none"> • Alias • First name, last name, display name, alternate names • Extension, transfer extension, and alternate extensions • Directory listing status • Recorded name²
System distribution lists ³	<ul style="list-style-type: none"> • Alias • Display name • Extension¹ • Recorded name²
Locations	<ul style="list-style-type: none"> • Display name • Host address • SMTP domain name

1. Connection extensions are replicated to Cisco Unity only if they do not conflict with existing objects in the dialing domain as defined on the Cisco Unity site gateway.
2. For each site, you can choose whether to synchronize recorded names for remote site objects.
3. A system distribution list is only synchronized from another site if the intersite link is configured to allow synchronization of remote lists, and the list itself is configured to allow replication to other sites.

Intersite replication is accomplished by means of a Feeder service and a Reader service running on each site gateway. The Reader service periodically polls the remote site gateway for any directory changes since the last poll interval. The Feeder service checks the change tracking database for directory changes and responds to poll requests with the necessary information.

On the Connection site gateway, you can configure the schedule on which the Reader polls the remote Feeder for directory data, and the schedule on which it polls for recorded names. In Cisco Unity Connection Administration on a site gateway, you can access the schedules on the Tools > Task Management page by selecting either the Synchronize Directory With Remote Network task or the Synchronize Voice Names With Remote Network task. Alternatively, you can access either task by using the Related Links field on the Edit Intersite Link page.

On the Cisco Unity site gateway, you can enable or disable synchronization of recorded names, and configure the interval at which the Reader polls the Cisco Unity Connection Feeder for directory updates and recorded names. Note that unlike the Connection Reader, which has separate configurable schedules for polling directory data and recorded names, the Cisco Unity Reader polls for both (if recorded name synchronization is enabled) during each cycle.

When the Synchronize Voice Names With Remote Network task is enabled, the Reader will process recorded name files for remote users and system distribution lists (if applicable). When a recorded name has been created for a remote object on the local site, it is updated only if the remote and local filenames for the recorded name differ. If, for example, you change the outgoing codec for recorded names on the remote site gateway, the local site will not update its files because the change does not affect filenames. In order to pull updated copies of recorded names from Cisco Unity to Connection, you must clear all existing recorded names from the Connection site gateway by using the Clear Recorded Names button on the Networking > Links > Search Intersite Links page in Connection Administration. In order to pull updated copies of recorded names from Connection to Cisco Unity, use the Clear Voice Names button on the Network > Connection Networking Profile page in the Cisco Unity Administrator.

Cisco Unity Connection 9.x Directory Size Limits

The Cisco Unity Connection global directory (the entire collection of local and replicated objects) is subject to certain size limits. The same limits apply both to a single Connection site or to a Cisco Voicemail Organization of linked sites (regardless of whether a Connection site is linked to another Connection site or to a Cisco Unity site). In a Cisco Voicemail Organization, exceeding the limits affects the ability to link sites together, and to replicate additional directory objects across the intersite link when the sites have been linked. In Connection 9.x, there are separate limits on the number of users and contacts and on the number of system distribution lists.

The size limits at the time of the 9.x release are:

- A combined total of 100,000 users and system contacts (both contacts associated with a VPIM location and those not associated with a location)
- 100,000 system distribution lists
 - 25,000 users per system distribution list
 - 1.5 million total list members across all system distribution lists
 - 20 levels of nesting (where one system distribution list is included as a member of another list)



Note

Additional directory object limits exist, and the directory object limits may have been updated since the time of release. For detailed and up-to-date limit information, see the *System Requirements for Cisco Unity Connection Release 9.x* at http://www.cisco.com/en/US/docs/voice_ip_comm/connection/9x/requirements/9xcucsysreqs.html.

When you attempt to link a Connection site to another Connection site or to a Cisco Unity site, both the user and system contact limit and the system distribution list limit are checked by the Connection site gateway. If the combined number of users and contacts on the gateway after the link is created would exceed the user and contact limit, or the combined number of system distribution lists on the gateway would exceed the list limit, you will not be able to link the sites. (Note that the global directory sizes of two sites do not necessarily match after they are linked because contacts are not replicated across the intersite link. However, each Connection site is still subject to the maximum size limits, which include system contacts.)

Consider the following example of the user and system contact limit check. Connection site A has 40,000 users and 5,000 system contacts, and Connection site B has 50,000 users and 15,000 contacts. If you linked these sites together, the global directory on Connection site A would have 95,000 user and contact objects (40,000 plus 5,000 plus 50,000). However, the global directory on Connection site B would have a total of 105,000 user and contact objects (50,000 plus 15,000 plus 40,000). Attempting to join these two sites would fail because the user and contact limit is exceeded on site B. However, attempting to join

Connection site A with a Cisco Unity site that has 50,000 users and 15,000 networking contacts would succeed, because the Connection site global directory of 95,000 user and contact objects would not exceed the 100,000 user and system contact limit.

In addition to checking the limits at the time two sites are joined, each Connection site gateway also checks the user and system contacts limit and the system distribution lists limit each time the Reader service runs. If the limits have been exceeded by five percent or more, the Reader service will no longer create new directory objects for remote site objects. It will, however, continue to make changes to existing objects or delete them if they are removed from the remote site. This state is therefore known as “delete mode.” In order to get the Reader out of delete mode, you must remove a sufficient quantity of objects of the appropriate type to get to less than five percent above the limit (for example, remove remote users, local users, or local system contacts if the user and system contact limit has been exceeded, or remove local or remote system distribution lists if the system distribution list limit has been exceeded.)

Messaging in Cisco Unity Connection 9.x

See the following sections for details on how messaging is handled in specific networking situations:

- [How Messages to System Distribution Lists Are Handled Within a Cisco Unity Connection Site, page 1-11](#)
- [How Messages to System Distribution Lists Are Handled Within a Cisco Unity Connection Site, page 1-11](#)

How Messages to System Distribution Lists Are Handled Within a Cisco Unity Connection Site

Because system distribution lists are replicated among locations in a Cisco Unity Connection site, a user can address messages to any system distribution list at any location, as long as the list is reachable in the user search scope.

When a user addresses a message to a system distribution list, the local Cisco Unity Connection location parses the distribution list membership. The sending location delivers the message directly to local users on the list. If there are remote Connection users on the list, the sending location delivers the message to each location that homes these remote users. If there are VPIM users on the list, the sending server either delivers the message to the VPIM destination if the VPIM location is homed locally, or passes it to the server on which the location is homed and that server handles forwarding the message to the destination server.

Connection includes the following predefined system distribution lists: All Voicemail Users, Undeliverable Messages, and All Voicemail-Enabled Contacts. Each Connection server in your organization has a distinct version of each of these lists. If you have not changed the names of these lists to be unique, during initial replication each server automatically adds the remote server name to the display name of any remote lists whose names overlap with local list names.

By default, the predefined lists on each Connection location have the same recorded name, and the All Voicemail Users and All Voicemail-Enabled Contacts lists have the same extension at each location (the Undeliverable Messages list by default is not assigned an extension, because users do not typically address messages to this list). When setting up a Connection site, you should consider modifying the recorded name of each All Voicemail Users list and each All Voicemail-Enabled Contacts list; if you do

not, users can hear a confusing list of choices when they address messages by name to one of these lists. When users address by extension to a list whose extension overlaps that of another list, they reach the first list that is located when Connection searches the partitions of the user search space in order.

**Tip**

Distribution lists can be nested such that a distribution list contains other lists. You can create one master All Voicemail Users distribution list for a site that contains the All Voicemail Users list of each Connection location.

How Messages to System Distribution Lists Are Handled Between Sites

With intersite networking (either between Cisco Unity Connection sites or between Cisco Unity and Connection sites), replication of system distribution lists is optional, and when lists are replicated, only the information needed to address a message to the list is replicated. Therefore, when a user addresses a message to a system distribution list that is homed in another site, the message is routed to the remote site gateway (if the remote site is a Connection site) or to the Interoperability Gateway for Microsoft Exchange (if the remote site is a Cisco Unity site). At this point, the system distribution list recipient is handled as though the message originated within the remote site.

It is possible to nest system distribution lists such that a local list contains remote lists as members. For example, you could nest the All Voicemail Users distribution list from one site within the All Voicemail Users list of the other site. (If you are networking Cisco Unity with Connection, note that Connection users may be automatically created as members of the All Subscribers list or other lists depending on the template that you specify when creating the intersite link.) When you nest a remote list as a member of a local list, we recommend the following practices:

- Avoid nesting local lists as members of the remote list.
- Do not allow the local list to replicate to the remote site.

Cross-Server Sign-In, Transfers, and Live Reply in Cisco Unity Connection 9.x

In order to limit replication traffic and keep the directory size manageable, only a subset of user information is replicated from the home location of the user to other locations. For this reason, only the user home location has information about call transfer settings, greetings, and other specific details for the user. In order for a location to properly handle calls destined for a user on a different location, the location that receives the call must hand off the call to the home location of the user. The purpose of the cross-server features is to make the user experience in a networked environment almost the same as in a single server environment, as shown in [Table 1-4](#).

Table 1-4 *Cross-Server Features*

Feature	Description
Cross-server sign-in	Cross-server sign-in allows administrators to provide users who are homed on different locations with one phone number that they can call to sign in. When calling from outside the organization, users—no matter which is their home server—call the same number and are transferred to the applicable home server to sign in.

Table 1-4 *Cross-Server Features (continued)*

Feature	Description
Cross-server transfer	Cross-server transfer enables calls from the automated attendant or from a directory handler of one server to be transferred to a user on another server, according to the call transfer and screening settings of the called user.
Cross-server live reply	Cross-server live reply allows users who listen to their messages by phone to reply to a message from a user on another server by calling the user (according to the call transfer and screening settings of the called user).

The cross-server features can be enabled both within a site and across the entire Cisco voicemail organization. For more information and instructions on enabling the cross-server features, see the “[Cross-Server Sign-In, Transfers, and Live Reply in Cisco Unity Connection 9.x](#)” chapter.

Addressing and Dial Plan Considerations in Cisco Unity Connection 9.x

See the following sections for addressing and dial plan considerations in specific networking situations:

- [Addressing Options for Non-Networked Phone Systems, page 1-13](#)
- [Identified User Messaging, page 1-14](#)
- [Considerations for Intersite Networking Between Cisco Unity and Cisco Unity Connection, page 1-14](#)

Addressing Options for Non-Networked Phone Systems

If your organization has a separate phone system for each location, users at one location dial a complete phone number, not just an extension, when calling someone at another location. When users sign in to send messages to users on another networked location, the number that they enter when addressing a message by extension depends on whether the numbering plans overlap across locations.

When user extensions on one location overlap with user extensions on another location, you can provide unique extensions for each user by setting up alternate extensions for each user account. For each user, enter a number for the alternate extension that is the same as the full phone number for the user, and make sure that the alternate extension is in a partition that is a member of the search spaces that users at other locations use. Once this has been set up, when users sign in to send messages, the number that they enter when addressing messages is the same number that they use when calling.

When numbering plans do not overlap across networked locations—that is, when user extensions are unique across locations—users can enter an extension when addressing a message to a user who is associated with another location. Optionally, as a convenience for users in this circumstance, you may choose to add alternate extensions to each user account, so that users do not need to remember two different numbers—one for calling a user directly, and one for addressing a message. However, if you do not set up alternate extensions, be sure to tell users to use the extension instead of the full phone number when addressing messages to users who are associated with another location.

Note that alternate extensions have other purposes beyond their use in networking, such as handling multiple line appearances on user phones.

Identified User Messaging

When a user calls another user, and the call is forwarded to the greeting of the called user, the ability of Cisco Unity Connection to identify that it is a user who is leaving a message is referred to as identified user messaging. Because Connection is able to identify the caller as a user:

- Connection plays the internal greeting of the called user when the caller leaves a message.
- Connection plays the recorded name of the user who left the message when the recipient listens to the message.
- Connection allows the recipient to record a reply.

It is important to note the difference between the following two circumstances:

- A user signs in to Connection, and then records and sends a message. In this circumstance, when the user has signed in, Connection can identify the message as being from the user, regardless of which location the message recipient is homed on. In this case, the phone system is not involved and the recipient phone does not ring. Instead, the message is sent via networking message exchange (by using SMTP).
- A user places a phone call to another user, and then leaves a message. This circumstance is the basis of identified user messaging.

As long as identified user messaging is enabled on a Connection location, Connection is able to identify both local and remote users. Note, however, that for identified user messaging to work in both cases, the initial search scope of the call must be set to a search space that locates the correct user based on the calling extension, regardless of whether the caller is a local or remote user.

If a user calls from an extension that is in a partition that is not a member of the search space that was set as the initial search scope for the call, the call is not identified as coming from the user. If the extension of the user overlaps with an extension in another partition that also appears in this search space, the call is identified as coming from the first object that Connection finds when searching the partitions in the order that they appear in the search space.

In situations where numbering plans overlap across locations, it is therefore possible to have a user leave a message that is incorrectly identified as coming from another user with the same extension in a different partition. Because the initial search scope of the call is based on call routing rules, to avoid this situation, use the following configuration guidelines:

- Maintain a separate search space for each location in which the partition containing its users appears first in the search space. (By default, each Connection server uses its own default partition and default search space, which are replicated to other locations when the server is networked.)
- On each location, set up forwarded call routing rules specific to every other location by specifying a routing rule condition that applies only to calls from that location (for example, based on the port or phone system of the incoming call). Configure the rule to set the search scope of the call to the search space in which the partition containing users at the location appears first.

Considerations for Intersite Networking Between Cisco Unity and Cisco Unity Connection

See the following sections:

- [Cisco Unity Connection Search Spaces and Cisco Unity Users](#), page 1-15
- [Cisco Unity Dialing Domains and Cisco Unity Connection Users](#), page 1-15
- [Combining Cisco Unity Unified Messaging and Cisco Unity Connection Integrated Messaging When Users Have Accounts in the Same Active Directory Deployment](#), page 1-16

Cisco Unity Connection Search Spaces and Cisco Unity Users

When you link a Cisco Unity site and a Cisco Unity Connection site, a partition is automatically created in the Connection directory for each Cisco Unity server, and all Cisco Unity users and system distribution lists that are homed on the server are placed in the partition. However, the partition is not automatically added to search spaces on the Connection locations. In order for Connection users to have permission to address messages to Cisco Unity users, you must add the partition to the search spaces used by those Connection users. Note that the order a partition appears in a search space is important if users address messages by extension. If, for example, Connection and Cisco Unity users have overlapping 4-digit extensions and you want Connection users to be able to reach other Connection users by their 4-digit primary extension and reach Cisco Unity users by a unique 7-digit alternate extension, make sure that the Cisco Unity partition appears after any Connection partitions that contain the overlapping 4-digit extensions.

Cisco Unity Dialing Domains and Cisco Unity Connection Users

A dialing domain is a collection of servers that access the same directory and that are integrated with the same phone system or phone system network. A dialing domain is a grouping scheme that allows Cisco Unity to handle call transfers and addressing by extension from one server to another. Within the dialing domain, extensions must be unique just as the phone extensions in the phone system must be unique.

When you link a Cisco Unity site and a Cisco Unity Connection site, the Connection user and system distribution list objects that are created in the Cisco Unity directory belong to the dialing domain that is configured on the Cisco Unity site gateway. Because the Connection search space and partition design accommodates overlapping extensions and may include users who have a primary extension and alternate extensions in different partitions, you must choose how to map Connection extensions to the Cisco Unity dialing domain. To do so, for each Connection location, you specify a single partition that Cisco Unity pulls extensions from. (In Cisco Unity Connection Administration, you configure the Local Partition That Cisco Unity Users Can Address to By Extension field on the Edit Location page for the local location.) For example, consider a Connection user, Kelly Bader, who has two extensions—a primary extension (4441) in the “Sales Partition” and an alternate extension (2025555) in the “Chicago Partition.” If the partition that maps extensions to the dialing domain for Kelly’s home server location is “Chicago Partition,” Cisco Unity users can address to Kelly by entering extension 2025555; they will not be able to address to her by entering extension 4441. If the partition that maps to the dialing domain for Kelly’s location is changed to “Sales Partition,” Cisco Unity users can address to Kelly by entering extension 4441 but not by entering extension 2025555. (In either case, Cisco Unity users can address to Kelly by name rather than by extension.)

If the extension of a Connection user conflicts with an existing extension in the dialing domain, and the user has alternate extensions available in the partition that Cisco Unity pulls from, Cisco Unity will attempt to assign one of the alternate extensions of the user as the extension of the corresponding contact object. If there are no alternate extensions available or if the alternate extensions all conflict with existing extensions in the dialing domain, the new object is created without an extension, and can only be addressed by name. Similarly, if the object does not have any extension in the partition that maps to the dialing domain, the new object is created without an extension.

Combining Cisco Unity Unified Messaging and Cisco Unity Connection Integrated Messaging When Users Have Accounts in the Same Active Directory Deployment

When you link a Cisco Unity Unified Messaging site with a Connection site and users in both sites have email accounts in the same Active Directory environment, the contacts that Cisco Unity creates for Connection users can complicate the user experience when users address messages via ViewMail for Outlook or other email clients.

Consider as an example the following two users:

- Pat Jones, a Cisco Unity user with a Unified Messaging account that uses the alias `pjones@example.com`. Pat uses Microsoft Outlook and Cisco Unity ViewMail for Outlook to access email and voice messages in one mailbox.
- Robin Smith, a Connection user who also has a separate Microsoft Exchange email account with alias `rsmith@example.com`. Robin uses Microsoft Outlook and Connection ViewMail for Outlook to access email in the Exchange mailbox and voice messages in the Connection mailbox.

Prior to linking the Cisco Unity and Connection sites, the contacts list that Pat and Robin use in Outlook contains one entry for Pat Jones as `pjones@example.com` and one for Robin Smith as `rsmith@example.com`. Robin also has `rsmith@example.com` defined as an SMTP proxy address in Connection in order to send voice messages with Connection ViewMail for Outlook and receive messages that are addressed by using the Outlook contacts list. (Before the two sites are linked, however, Pat and Robin cannot use their ViewMail clients to send voice messages to each other.)

Once the two sites are linked, Cisco Unity adds an additional contact to Active Directory for Robin Smith. By default, this contact has a display name of “Robin Smith - Voicemail” to distinguish it from Robin’s Exchange account. (The -Voicemail display name suffix is configurable.) The contact has an SMTP address in the format `UCI_<alias>_BH-<Connection location identifier>@<domain generated according to Exchange Contact-creation policies>`. Cisco Unity users can and should use this contact when addressing voice messages via ViewMail. Voice messages addressed to Connection user email accounts rather than to their contacts are delivered as emails with voice attachments and will not light the user message waiting indicator or otherwise be accessible via Connection.

If another Connection user tries to address a voice message to the “Robin Smith - Voicemail” contact in the contacts list, this message will be returned as undeliverable by default, because Connection does not recognize the `UCI_<alias>_BH-<Connection location identifier>@<Cisco Unity site gateway domain>` address as belonging to a Connection user. To mitigate this issue, you can add the address as an SMTP proxy address for the user. (You can use Active Directory Users and Computers to export a list of Connection contacts, then add SMTP proxy addresses to Connection users in bulk by using the Bulk Administration Tool. For information on using the Bulk Administration Tool, see the “[Using the Cisco Unity Connection Bulk Administration Tool](#)” chapter of the *User Moves, Adds, and Changes Guide for Cisco Unity Connection Release 9.x*, at http://www.cisco.com/en/US/docs/voice_ip_comm/connection/9x/user_mac/guide/9xcucmacx.html.) With the SMTP proxy address in place for Robin, other Connection users can send voice messages to the “Robin Smith - Voicemail” contact. However, if a Connection user tries to address an email to the contact, the email will be returned as undeliverable.

Cisco Unity users have one entry in Active Directory even after the sites are linked. Users in either site can address voice messages to the entry in ViewMail for Outlook.

Note that if you choose to synchronize one or more Connection system distribution lists into a Cisco Unity Unified Messaging deployment, an Active Directory group is created for each list, which users can see in the contacts list. The group is created with the same configurable suffix (“- Voicemail” by default) added to the display name. As with the user contact entries, Connection users who try to address messages to the group will receive a non-delivery receipt in response. However, in this case, you

cannot currently mitigate the issue for synchronized distribution lists by using SMTP proxy addresses because you cannot configure SMTP proxy addresses for lists. To work around the issue, you have a couple of options:

- Do not synchronize Connection system distribution lists to the Cisco Unity site. Instead, create any lists that Cisco Unity users need directly on the Cisco Unity site, adding Connection contacts as members when necessary.
- Use multiple contact lists in Microsoft Exchange to segment addressing between Cisco Unity and Connection users so that Connection users do not have access to the addresses of groups that Cisco Unity creates for Connection lists.

Note that while Connection users should not address messages to Connection system distribution lists by using the group address-book entry, they can address messages to Connection lists by entering the list address in the format <list alias>@<Connection server SMTP domain>.

Migrating Users From Cisco Unity to Cisco Unity Connection 9.x

When intersite networking is configured between Cisco Unity and Cisco Unity Connection, you can gradually migrate Cisco Unity users to Cisco Unity Connection 9.x. For more information, see the “[Migrating from Cisco Unity to Cisco Unity Connection 9.x by Gradually Moving Data](#)” chapter in the *Reconfiguration and Upgrade Guide for Cisco Unity Connection Release 9.x* at http://www.cisco.com/en/US/docs/voice_ip_comm/connection/9x/upgrade/guide/9xcucrugx.html.

