



## Post Technology Refresh Configurations

- [Packaged CCE 2000 Agents Deployment, on page 1](#)
- [Packaged CCE 4000 Agents Deployment, on page 5](#)
- [Packaged CCE 12000 Agents Deployment, on page 10](#)
- [Packaged CCE Lab Only Deployments, on page 14](#)

## Packaged CCE 2000 Agents Deployment

### Single-stage Configurations

#### Prerequisite:

Upload [CA Certificates](#) or import [Self-signed Certificates](#) of upgraded components.

The following table outlines the post-upgrade configurations required for components.



#### Note

- If you have changed the IP address or hostname of a component, update the inventory for the respective component. For more information, see [Update Inventory, on page 2](#).
- If you have rebuilt components, follow the tasks detailed in the following table.

Sequence	Task
1	<a href="#">Update Inventory, on page 2</a>
2	<a href="#">Configure CCE Components, on page 3</a>
3	<a href="#">Configure External HDS, on page 3 (optional)</a>
4	<a href="#">Configure Customer Voice Portal, on page 3</a>
5	<a href="#">Configure Cisco Unified Customer Voice Portal Reporting Server (optional)</a>
6	<a href="#">Configure Cisco IOS Enterprise Voice Gateway</a>
7	<a href="#">Email and Chat (optional)</a>

Sequence	Task
8	<a href="#">Configure Cisco Finesse</a>
9	<a href="#">Configure Cisco Unified Intelligence Center</a>
10	<a href="#">Configure Cisco Identity Service</a>
11	<a href="#">Configure Cisco Unified Communications Manager</a>
12	<a href="#">Register with Cisco Smart Software Manager</a>
13	<a href="#">Complete Upgrade on the Destination Server, on page 5</a>
14	<a href="#">Synchronize Source Server to the Destination Server, on page 3</a>

## Update Inventory

After you perform a Technology Refresh upgrade, sign in to the **Unified CCE Administration** of Principal AW on the destination server. On the **Inventory** page, you can update the IP address or hostname, and choose to rebuild Virtual Machines (VMs) for the upgraded solution components. For more information, see [Update IP Address or Hostname](#).



### Note

- While you are updating the [Inventory file](#), ensure to do the following:
  - If you are upgrading a hardware, update the VMWare ESXi server Side A host details (including HW layout) and Side B host details (without HW layout) in the VM\_HOST machine type. This update has to be done along with other core machines.
 

If you are upgrading a hardware from M4 Tested Reference Configuration to M5 Tested Reference Configuration, provide M5TRC as the HW layout. You can move from M3/M4 Tested Reference Configuration to M5 Tested Reference Configuration or Specification Based Configuration, but vice versa is not supported.
  - Update all Core machines with required details before updating Optional machines.
  - When you update the inventory for Rogger, AW-HDS-DDS, and PG, the Unified CCE services on these components get activated automatically.
  - Set the `isReinstalled` value to `yes` if you are setting up a new VM.
  - If you wish to use CUCM Publisher from the source server, you can either reuse the existing application user or create a new application user. To reuse the existing application user, provide the credentials of this user in the `connectionInfo` column while updating the `CCE_PG`. To create a new application user, provide a unique `userName` and `password`.
- Do not delete any components while the Technology Refresh upgrade is in progress.
- A banner appears on the **Overview** or **Inventory** page indicating that the Inventory has machines with IP address or hostnames not configured.
- A banner appears on the **Inventory** page when the hardware refresh is in progress, providing an option to `sync-all` and `cutover`. It indicates that all AWs and both sides of Rogger, Logger, and Router are configured with correct IP address or hostnames.

## Configure CCE Components

The following table outlines the configuration tasks required for CCE components in Packaged CCE 2000 Agent deployments.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components</a>
2	Configure <a href="#">Cisco SNMP Setup</a> for Rogger (optional)

## Configure External HDS

The following table outlines the configuration tasks required for External HDS in Packaged CCE deployments.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components</a>
2	<a href="#">Cisco SNMP Setup</a>

## Configure Customer Voice Portal

The following table outlines the Cisco Unified Customer Voice Portal (CVP) configuration tasks for Packaged CCE 2000 Agents deployment.



**Note** The CVP configurations are site specific. Side A and Side B configurations per site must be the same.

### Configuration Tasks

For CVP security details, see *Configuration Guide for Cisco Unified Customer Voice Portal* at <https://www.cisco.com/en/us/support/customer-collaboration/unified-customer-voice-portal/products-installation-and-configuration-guides-list>

[Configure SNMP](#)

## Solution Synchronization and Cutover

### Synchronize Source Server to the Destination Server

During the staging and testing of the newer 12.6(x) systems, the existing 12.0(x)/12.5(x) production servers continue to process calls. On the day of the cutover, the data in the 12.6(x) staged servers can be updated with that of the production server, by running the EDMT tool on Logger, BA, AW, and HDS database on 12.6(x) staged systems.

This updates the database with production server schema version. However, due to the 12.6(1) database schema version being different from its base 12.0(1) or 12.5(1) version, the updated database is incompatible with 12.6(1). The administrator would have to manually use upgrade.exe utility to upgrade the database schema before starting the CCE Logger or Distributor service.

The utility is present in the `icm\bin` folder, and needs to be run against each of the database that was updated from the production server.

Perform the following steps to use the Upgrade.exe Utility:

```
<Install Drive>: \icm\bin>upgrade.exe -s <Server Name> -d <Database name>
-dt <Database Type> -i <Instance Name> where <Database Type> - can be either "logger"
or "hds", depending on the database that requires the schema to be upgraded.
```

```
For Example C:\icm\bin>upgrade -s PRGR-A -d abc_sideA -dt logger -i abc
```

# - The value as stored in **columns Major, CCMinor, and AWMinor** of Version table in the CCE database.



#### Note

- Take a backup of Logger and AW-HDS-DDS databases on the destination server before synchronization.
- Stop the Router, Logger, AW-HDS, and Apache Tomcat services on the destination servers before running EDMT tool while changing over to synchronize.
- After each EDMT run, start the Router, Logger, AW-HDS, and Apache Tomcat services and do a manual synchronization on the destination server in the inventory. For more information, see [Synchronize Components on the Destination Server using Inventory, on page 4](#).
- To be in sync with configuration details of the source server, EDMT can be run multiple times on the destination server. However, after first synchronization, if any of the following configuration changes are done in the CCE Administration on the source server, the changes won't reflect on the destination server in subsequent synchronizations. So, these updates have to be manually configured on the destination server.
  - Cloud Connect integration, Default Media Server settings, Courtesy Callback, SIP Server Group, Route Pattern, and Locations
  - Addition, modification, or deletion of machines in the inventory

## Synchronize Components on the Destination Server using Inventory

This procedure explains how to synchronize all solution components on the destination server.



#### Note

You can do a full synchronization of all components (using **sync-all**) from Principal AW; however it cannot be initiated after the **cutover** is completed.

### Procedure

- Step 1** Navigate to **Unified CCE Administration > Infrastructure > Inventory**.
- Step 2** On the banner message, click **sync-all**.
- Step 3** Click **Next** to confirm initiating full synchronization.  
Full synchronization may take several minutes.
- Step 4** After the successful initiation of synchronization, click **Done**.

If initiation of synchronization fails, an error message appears. Click **Close** to exit and fix the error as required.

## Complete Upgrade on the Destination Server

This procedure explains how to complete the upgrade on the destination server and make it ready for production.

### Procedure

- Step 1** Navigate to the **Unified CCE Administration > Infrastructure > Inventory**.
- Step 2** On the banner message, click **cutover**.
- Step 3** Click **Next** to initiate validations for cutover.
- If validations are successful, click **Next** to confirm initiating cutover.
  - If validations fail, an error message appears. Click the **x** icon to exit and fix the errors as required.
- Step 4** After the successful completion of cutover, click **Done**.

# Packaged CCE 4000 Agents Deployment

## Single-stage Configurations

### Prerequisite:

Upload [CA Certificates](#) or import [Self-signed Certificates](#) of upgraded components.

The following table outlines the post-upgrade configurations required for components.



- Note**
- If you have changed the IP address or hostname of a component, update the inventory for the respective component. For more information, see [Update IP Address or Hostname](#).
  - If you have rebuilt components, follow the tasks detailed in the following table.

Sequence	Task
1	<a href="#">Update Inventory, on page 9</a>
2	<a href="#">Configure CCE Components, on page 6</a>
3	<a href="#">Configure External HDS, on page 3</a> (optional)
4	<a href="#">Configure Cisco Unified Customer Voice Portal</a>
5	<a href="#">Configure Cisco Unified Communications Manager</a>

Sequence	Task
6	<a href="#">Configure Cisco Unified Intelligence Center</a>
7	<a href="#">Configure Cisco Finesse</a>
8	<a href="#">Configure Live Data</a>
9	<a href="#">Configure Cisco Identity Service</a>
10	<a href="#">Configure Cisco Unified Customer Voice Portal Reporting Server (optional)</a>
11	<a href="#">Configure Cisco IOS Enterprise Voice Gateway</a>
12	<a href="#">Configure Enterprise Chat and Email (ECE) (optional) Email and Chat</a>
13	<a href="#">Configure Customer Collaboration Platform(CCP), on page 7 (optional)</a>
14	<a href="#">Register with Cisco Smart Software Manager</a>
15	<a href="#">Complete Upgrade on the Destination Server, on page 5</a>
16	<a href="#">Synchronize Source Server to the Destination Server, on page 3</a>

## Configure CCE Components

The following table outlines the configuration tasks required for CCE components in Packaged CCE 4000 Agent deployments.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components</a>
2	Configure <a href="#">Cisco SNMP Setup</a> for Rogger (optional)
3	Configure <a href="#">Cisco SNMP Setup</a> for AW-HDS-DDS (optional)

## Configure Cisco Unified Customer Voice Portal

The following table outlines the Cisco Unified Customer Voice Portal (CVP) configuration tasks for Packaged CCE 4000 or 12000 Agent deployments.



**Note** The CVP configurations are site specific. Side A and Side B configurations per site must be the same.

### Configuration Tasks

For CVP security details, see *Configuration Guide for Cisco Unified Customer Voice Portal* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-customer-voice-portal/products-installation-and-configuration-guides-list.html>.

**Configuration Tasks**

[Configure SNMP](#)

## Configure Customer Collaboration Platform(CCP)

Follow the steps to create new feed for task routing, associate the feed to the campaigns and configure the CCE for Multichannel Routing Collaboration Platform.

### Procedure

- Step 1** Sign in to Unified Customer Collaboration Platform(CCP) with your Customer Collaboration Platform administrator account (<https://<hostname/> IP address of CCP>).
- Step 2** In Customer Collaboration Platform, click on the **Configuration** tab.  
**Manage Feeds** and **Manage Campaigns** screens are displayed.
- Step 3** In the left panel, on **Manage Feeds** screen, click on **New** and create a new feed.
- Step 4** In the right panel of the **Manage Campaigns** screen, click on **New** and create a new campaign.  
You can create a new campaign and associate the available feed.  
From the Administration tab, you can also associate the notificaitons to the campaign.
- Step 5** In the Administration page, select **CCE Configuration for Multichannel Routing**.  
Provide the details of Media Routing PG for Host Side A and Host Side B, and enter the port values. Click **Save**.

## Multistage Configurations

### Prerequisite:

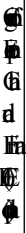








Upload [CA Certificates](#) or import [Self-signed Certificates](#) of upgraded components.

The following table outlines the post-upgrade configurations required for each component.



- Note**
- If you have changed the IP address or hostname of a component, update the inventory for the respective component. For more information, see [Update IP Address or Hostname](#).
  - If you have rebuilt components, follow the tasks detailed in the following table.

Sequence	Task
1	<ul style="list-style-type: none"> <li><a href="#">Update Core Machines</a></li> <li><a href="#">Configure Cisco Identity Service</a></li> </ul>

Sequence	Task
2	 <p>Update Optional Machines Email and Chat</p>
3	 <p>Update Peripheral Set Configure Cisco Finesse</p>
4	 <p>Update Peripheral Set Configure Cisco Unified Customer Voice Portal Configure Cisco Unified Customer Voice Portal Reporting Server (optional)</p>
5	 <p>Update Optional Machines</p>
6	 <p>Update Optional Machines Configure Cisco IOS Enterprise Voice Gateway</p>
7	 <p>Update Core Machines Configure Cisco Unified Intelligence Center</p>
8	 <p>Update Inventory, on page 9 Configure CCE Components, on page 6</p>
9	 <p>Update Optional Machines Configure External HDS, on page 3</p>
10	 <p>Update Core Machines Configure Live Data</p>



Sequence	Task
11	Update Peripheral Set
12	Update Optional Machines Update IP Address or Hostname Configure Customer Collaboration Platform(CCP), on page 7
13	Update Peripheral Set Configure Cisco Unified Communications Manager
14	Update Optional Machines
12	
13	
14	Register with Cisco Smart Software Manager
15	Complete Upgrade on the Destination Server, on page 5
16	Synchronize Source Server to the Destination Server, on page 3

<sup>1</sup> Required in 4000 Agent deployments.

<sup>2</sup> Router and Logger are required only in 12000 Agent deployments.

## Update Inventory

After you perform a Technology Refresh upgrade, sign in to the **Unified CCE Administration** of Principal AW on the destination server. On the **Inventory** page, you can update the IP address or hostname, and choose to rebuild Virtual Machines (VMs) for the upgraded solution components. For more information, see [Update IP Address or Hostname](#).

**Note**

- While you are updating the [Inventory file](#), ensure to do the following:
  - Update all Core machines with required details before updating the Peripheral Set or Optional machines.
  - Set the `isReinstalled` value to `yes` if you are setting up a new VM.
  - In multistage Technology Refresh, during the Central Controller upgrade, EDMT invalidates all the component IP addresses. So, you must update the inventory for all components after upgrading the Central Controller.
- When you update the inventory for Rogger<sup>3</sup>, Router, Logger<sup>4</sup>, AW-HDS-DDS, and PG, the Unified CCE services on these components get activated automatically.
- Do not delete any components while the Technology Refresh upgrade is in progress.
- A banner appears on the **Overview** or **Inventory** page indicating that the inventory has machines with IP address or hostnames not configured.
- A banner appears on the **Inventory** page when the hardware refresh is in progress, providing an option to `sync-all` and `cutover`. It indicates that all AWs and both sides of Rogger, Logger, and Router are configured with correct IP address or hostnames.

## Packaged CCE 12000 Agents Deployment

### Single-stage Configurations

**Prerequisite:**

Upload [CA Certificates](#) or import of upgraded components.

The following table outlines the post-upgrade configurations required for components.

**Note**

- If you have changed the IP address or hostname of a component, update the inventory for the respective component. For more information, see [Update IP Address or Hostname](#).
- If you have rebuilt components, follow the tasks detailed in the following table.

Sequence	Task
1	<a href="#">Update Inventory, on page 9</a>
2	<a href="#">Configure CCE Components, on page 11</a>

<sup>3</sup> Applicable only in 2000 and 4000 Agent deployments.

<sup>4</sup> Router and Logger are applicable only in 12000 Agent deployments.

Sequence	Task
3	<a href="#">Configure External HDS, on page 3 (optional)</a>
4	<a href="#">Configure Cisco Unified Customer Voice Portal</a>
5	<a href="#">Configure Cisco Unified Communications Manager</a>
6	<a href="#">Configure Cisco Unified Intelligence Center</a>
7	<a href="#">Configure Cisco Finesse</a>
8	<a href="#">Configure Live Data</a>
9	<a href="#">Configure Cisco Identity Service</a>
10	<a href="#">Configure Cisco Unified Customer Voice Portal Reporting Server (optional)</a>
11	<a href="#">Configure Cisco IOS Enterprise Voice Gateway</a>
12	<a href="#">Configure Enterprise Chat and Email (ECE) (optional) Email and Chat</a>
13	<a href="#">Configure Customer Collaboration Platform(CCP), on page 7 (optional)</a>
14	<a href="#">Register with Cisco Smart Software Manager</a>
15	<a href="#">Complete Upgrade on the Destination Server, on page 5</a>
16	<a href="#">Synchronize Source Server to the Destination Server, on page 3</a>

## Configure CCE Components

The following table outlines the configuration tasks required for CCE components in Packaged CCE 12000 Agent deployments.

CCE Components	Task
1	<a href="#">Configure SQL Server for CCE Components</a>
2	<a href="#">Configure Cisco SNMP Setup for Logger (optional)</a>
3	<a href="#">Configure Cisco SNMP Setup for Router (optional)</a>
4	<a href="#">Configure Cisco SNMP Setup for HDS-DSS (optional)</a>
5	<a href="#">Configure Cisco SNMP Setup for AW-HDS (optional)</a>

## Multistage Configurations

### Prerequisite:
































































Upload [CA Certificates](#) or import [Self-signed Certificates](#) of upgraded components.

The following table outlines the post-upgrade configurations required for each component.



- Note**
- If you have changed the IP address or hostname of a component, update the inventory for the respective component. For more information, see [Update IP Address or Hostname](#).
  - If you have rebuilt components, follow the tasks detailed in the following table.

Sequence	Task
1	<ul style="list-style-type: none"> <li>Update Core Machines</li> <li>Configure Cisco Identity Service</li> </ul>
2	<ul style="list-style-type: none"> <li>Update Optional Machines</li> <li>Email and Chat</li> </ul>
3	<ul style="list-style-type: none"> <li>Update Peripheral Set</li> <li>Configure Cisco Finesse</li> </ul>
4	<ul style="list-style-type: none"> <li>Update Peripheral Set</li> <li>Configure Cisco Unified Customer Voice Portal</li> <li>Configure Cisco Unified Customer Voice Portal Reporting Server (optional)</li> </ul>
5	<ul style="list-style-type: none"> <li>Update Optional Machines</li> </ul>
6	<ul style="list-style-type: none"> <li>Update Optional Machines</li> <li>Configure Cisco IOS Enterprise Voice Gateway</li> </ul>
7	<ul style="list-style-type: none"> <li>Update Core Machines</li> <li>Configure Cisco Unified Intelligence Center</li> </ul>

Sequence	Task
8	  Update Inventory, on page 9  Configure CCE Components, on page 11                                         
9	 Update Optional Machines  Configure External HDS, on page 3
10	 Update Core Machines  Configure Live Data
11	 Update Peripheral Set
12	 Update Optional Machines  Update IP Address or Hostname  Configure Customer Collaboration Platform(CCP), on page 7
13	 Update Peripheral Set  Configure Cisco Unified Communications Manager
14	 Update Optional Machines
12	
13	   
14	 Register with Cisco Smart Software Manager
15	 Complete Upgrade on the Destination Server, on page 5
16	 Synchronize Source Server to the Destination Server, on page 3

<sup>5</sup> Required in 4000 Agent deployments.

<sup>6</sup> Router and Logger are required only in 12000 Agent deployments.

# Packaged CCE Lab Only Deployments

This section provides information about the post-upgrade configurations required for components in Packaged CCE Lab Only deployments.

Packaged CCE Lab Only deployments can be configured as simplex systems or duplex systems in 2000 Agent deployments. For more information on the required configurations, see [Single-stage Configurations, on page 1](#).