



Product Overview

This chapter describes the Cisco Aironet 350 and CB20A Wireless LAN Client Adapters and illustrates their role in a wireless network.

The following topics are covered in this chapter:

- [Introduction to the Client Adapters, page 1-2](#)
- [Hardware Components, page 1-3](#)
- [Software Components, page 1-5](#)
- [Network Configurations Using Client Adapters, page 1-8](#)



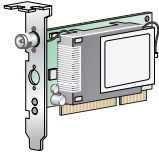

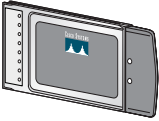
Introduction to the Client Adapters

The Cisco Aironet 350 and CB20A Wireless LAN Client Adapters are radio modules that provide transparent wireless data communications between fixed, portable, or mobile devices and other wireless devices or a wired network infrastructure. The client adapters are fully compatible when used in devices supporting Plug-and-Play (PnP) technology.

The primary function of the client adapters is to transfer data packets transparently through the wireless infrastructure through an access point connected to a wired LAN. The adapters operate similarly to a standard network product except that the cable is replaced with a radio connection and an access point is required to make the connection to the wire. No special wireless networking functions are required, and all existing applications that operate over a network can operate using the adapters.

This document covers the five client adapters described in [Table 1-1](#).

Table 1-1 Client Adapter Types

Client Adapter	Model Number	Description	Illustration
PC card	AIR-PCM35x	An IEEE 802.11b-compliant 2.4-GHz 11-Mbps PCMCIA card radio module that can be inserted into any device equipped with an <i>external</i> Type II or Type III PC card slot. Host devices can include laptops, notebook computers, personal digital assistants, and handheld or portable devices.	 47519
LM card	AIR-LMC35x	An IEEE 802.11b-compliant 2.4-GHz 11-Mbps PCMCIA card radio module that is usually preinstalled in a device equipped with an <i>internal</i> Type II or Type III PC card slot. Host devices usually include handheld or portable devices.	 47893
PCI card	AIR-PCI35x	An IEEE 802.11b-compliant 2.4-GHz 11-Mbps client adapter card radio module that can be inserted into any device equipped with an empty PCI expansion slot, such as a desktop personal computer.	 65189
Mini PCI card	AIR-MPI350	An IEEE 802.11b-compliant 2.4-GHz 11-Mbps client adapter card radio module that is preinstalled in a device equipped with an <i>internal</i> Type IIIA mini PCI card slot, such as a laptop computer.	 65190
PC-Cardbus card	AIR-CB20A	An IEEE 802.11a-compliant 5-GHz 54-Mbps client adapter card radio module with a Cardbus interface that can be inserted into any device equipped with an <i>external</i> Type II or Type III Cardbus slot. Host devices can include laptops and notebook computers.	 74795

**Note**

In the first three product model numbers, the *x* indicates the wired equivalent privacy (WEP) level of the card, where 0 = no WEP capability, 1 = 40-bit WEP, and 2 = 128-bit WEP. If the last two product model numbers contain K9, the card is 128-bit WEP capable.

**Note**

Install Wizard version 1.3 or later and its software components are not supported for use with Cisco Aironet 340 series client adapters or Windows 98, 98 SE, NT, and Me.

Terminology

The following terms are used throughout this document:

- **client adapter**—Refers to all five types of adapters.
- **PC card, LM card, PCI card, mini PCI card, or PC-Cardbus card**—Refers to a specific adapter.
- **workstation (or station)**—Refers to a computing device with an installed client adapter.
- **infrastructure device**—Refers to a device that connects client adapters to a wired LAN, such as an access point, bridge, or base station. Throughout this document, *access point* is used to represent infrastructure devices in general.

Hardware Components

The client adapter has three major hardware components: a radio, a radio antenna, and two LEDs.

Radio

Different radios are used for the 2.4-GHz and 5-GHz client adapters:

- The Cisco Aironet 350 series PC, LM, PCI, and mini PCI cards are IEEE 802.11b-compliant client adapters. They contain a direct-sequence spread spectrum (DSSS) radio that operates in the 2.4-GHz Industrial Scientific Medical (ISM) license-free band. The 100-mW radio transmits data over a half-duplex radio channel operating at up to 11 Mbps. These cards operate with other IEEE 802.11b-compliant client devices in ad hoc (or *peer-to-peer*) mode or with Cisco Aironet 340, 350, 1100, and 1200 Series Access Points (with a 2.4-GHz radio) and other IEEE 802.11b-compliant infrastructure devices in infrastructure mode. They are approved for indoor and outdoor use.

DSSS technology distributes a radio signal over a wide range of frequencies and then returns the signal to the original frequency range at the receiver. The benefit of this technology is its ability to protect the data transmission from interference. For example, if a particular frequency encounters noise or interference or both, enough redundancy is built into the signal on other frequencies that the client adapter usually will still be successful in its transmission.

- The Cisco Aironet AIR-CB20A PC-Cardbus card is an IEEE 802.11a-compliant client adapter. It contains an orthogonal frequency division multiplexing (OFDM) radio that operates in the Unlicensed National Information Infrastructure (UNII) 1 and UNII 2 license-free bands located in the lower 5-GHz portion of the radio frequency spectrum. The 20-mW radio transmits data over a half-duplex radio channel operating at up to 54 Mbps. This card interoperates with other IEEE 802.11a-compliant client devices in ad hoc mode or with Cisco Aironet 1200 Series Access Points

(with a 5-GHz radio) and other IEEE 802.11a-compliant infrastructure devices in infrastructure mode. It is approved for indoor use only except in the United States, which allows for outdoor use on channels 52 through 64.

Radio Antenna

The type of antenna used depends on your client adapter:

- PC cards have an integrated, permanently attached diversity antenna. The benefit of the diversity antenna system is improved coverage. The system works by allowing the card to switch and sample between its two antenna ports in order to select the optimum port for receiving data packets. As a result, the card has a better chance of maintaining the radio frequency (RF) connection in areas of interference. The antenna is housed within the section of the card that hangs out of the PC card slot when the card is installed.
- LM cards are shipped without an antenna; however, an antenna can be connected through the card's external connector.
- PCI cards are shipped with a 2-dBi dipole antenna that attaches to the card's antenna connector. However, other types of antennas may be used. PCI cards can be operated through only the primary (or right) antenna port.
- Mini PCI cards are designed to be used with either one or two antennas, which connect to the card's two antenna connectors. If two antennas are used, the radio automatically selects the antenna that presents the best RF signal. If only one antenna is used, the radio finds and uses it regardless of which connector it is plugged into.
- PC-Cardbus cards have an integrated, permanently attached non-diversity antenna that contains two antenna ports, one for transmitting and one for receiving. The card cannot switch and sample between the ports. The antenna is housed within the section of the card that hangs out of the Cardbus slot when the card is installed.

**Note**

Refer to the Antenna Mode (Transmit and Receive) parameters in [Table 5-4](#) and [Table 5-5](#) for information on setting the client adapter's antenna mode.

**Note**

External antennas used in combination with a power setting resulting in a radiated power level above 100 mW equivalent isotropic radiated power (EIRP) are not allowed for use within the European community and other countries that have adopted the European R&TTE directive or the CEPT recommendation Rec 70.03 or both. For more details on legal combinations of power levels and antennas in those countries, refer to the [“Declaration of Conformity with Regard to the R&TTE Directive 1999/5/EC”](#) section on [page C-4](#) and the [“Maximum Power Levels and Antenna Gains”](#) section on [page D-4](#).

LEDs

The client adapters have two LEDs that glow or blink to indicate the status of the adapter or to convey error messages. Refer to [Chapter 10](#) for an interpretation of the LED codes.

**Note**

Mini PCI cards do not have LEDs.

Software Components

The client adapter has three major software components: radio firmware, a driver, and client utilities. These components are installed together by running a single Install Wizard file that is available from Cisco.com. This file can be run on Windows 2000 or XP and can be used with any of the following client adapter types:

- 350 series PC, LM, PCI, and mini PCI cards
- PC-Cardbus (CB20A) cards

**Note**

Install Wizard version 1.3 or later and its software components are not supported for use with Cisco Aironet 340 series client adapters or Windows 98, 98 SE, NT, and Me.

[Chapter 3](#) provides instructions on using the Install Wizard to install or upgrade these software components.

**Note**

Prior to the release of the Install Wizard file, each software component had to be installed separately. This version of the *Cisco Aironet Wireless LAN Client Adapters Installation and Configuration Guide for Windows* pertains specifically to versions of the software that are available through the Install Wizard. If you are using, installing, or upgrading to versions of client adapter software that do not use the Install Wizard, refer to version OL-1394-04 of this manual for information and instructions.

Radio Firmware

The firmware controls the client adapter's radio. The client adapter is shipped with the firmware installed in Flash memory. However, Cisco recommends that you always use the latest version. You can upgrade the client adapter's firmware in three ways:

- Through the Install Wizard—The Install Wizard automatically upgrades the client adapter's firmware to the version included in the Install Wizard file.
- Through the driver—The driver included in the Install Wizard file is also bundled with client adapter firmware. Each time you insert a client adapter or reboot your computer, the driver loads and may install the firmware with which it is bundled (if that firmware is newer than the firmware that is currently installed in the adapter). You can use the Install Wizard's Disable Firmware Checking parameter or ACU's Automatically Load New Firmware When NDIS Driver Is Updated parameter to specify whether the driver upgrades the firmware. Refer to [page 3-6](#) and [page 9-11](#) for more information.
- Through ACU—The Load Firmware icon or Load New Firmware menu option in ACU enables you to upgrade the client adapter's firmware from an image (*.img) file that contains only firmware. Refer to the [“Upgrading the Firmware”](#) section on [page 9-8](#) for more information.

Driver

The driver provides an interface between a computer running a Windows operating system and the client adapter, thereby enabling Windows and the applications it runs to communicate with the adapter. The driver must be installed before the adapter can be used.

Client Utilities

Two client utilities are available for use with Cisco Aironet client adapters: Aironet Client Utility (ACU) and Aironet Client Monitor (ACM). These utilities are optional applications that interact with the radio firmware to adjust client adapter settings and display information about the adapter.

ACU enables you to create configuration profiles for your client adapter and perform user-level diagnostics. Because ACU performs a variety of functions, it is documented by function throughout this manual. However, an overview of the utility is provided below to familiarize you with its interface.

ACM, which is accessible from an icon in the Windows system tray, provides a small subset of the features available through ACU. Specifically, it enables you to access status information about your client adapter and perform basic tasks. [Chapter 8](#) provides detailed information and instructions on using ACM.




Note

If your computer is running Windows XP, you can configure your client adapter through the Windows operating system instead of through ACU. Refer to [Appendix E](#) for information. However, ACU is recommended for configuring the client adapter.

Overview of ACU

The Aironet Client Utility screen (see [Figure 1-1](#)) is the ACU primary screen.

Figure 1-1 Aironet Client Utility Screen

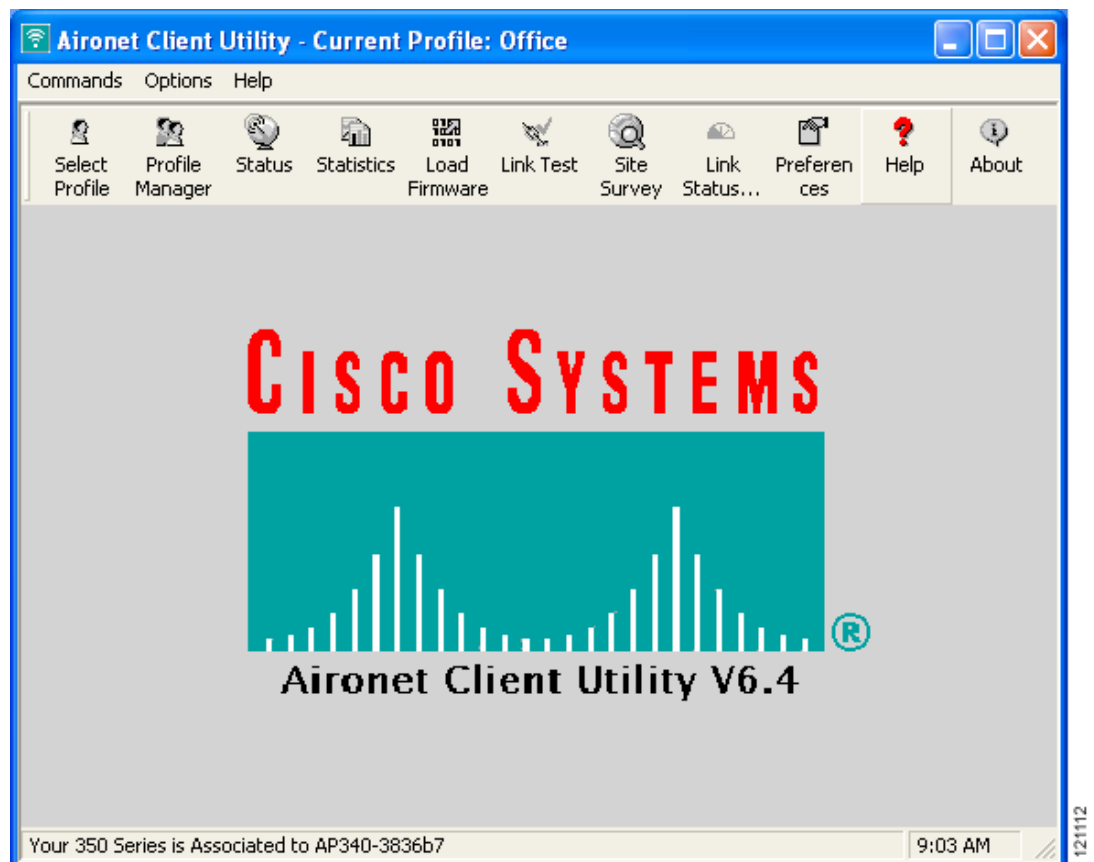

The title bar at the top of the Aironet Client Utility screen shows the profile that is being used by the client adapter.

The status bar at the bottom of the Aironet Client Utility screen reflects the current state of your client adapter. The following states are possible, where *radio_name* is the client adapter type and *ap_name* is the configured name of an access point:

- Your *radio_name* is Associated to *ap_name*
- Your *radio_name* is Not Associated!
- Authentication Started with *ap_name*
- Your *radio_name* is Authenticated to *ap_name*
- Authentication Failed with *ap_name*
- Your *radio_name* is in AdHoc Mode
- Your *radio_name* is being loaded with new firmware!
- The radio in your *radio_name* is turned OFF!
- Unable to read the status from your Wireless LAN Adapter!
- Your *radio_name* has a problem!



Note Aironet Extensions must be enabled on access points running Cisco IOS Release 12.2(4)JA or later in order for the *ap_name* to appear in the status bar.

The information shown in the status bar is updated once per second.

The right side of the status bar shows the current time of day. If you set the clock to display seconds in the Aironet Client Utility Preferences screen, the time includes seconds in addition to hours and minutes.



Note To enable the clock to display seconds, open ACU, click the **Preferences** icon or choose **Preferences** from the Options drop-down menu, check the **Display Seconds on Clock** check box, and click **OK**.

Buttons on the ACU Screens

The buttons on the ACU screens are used to perform specific functions. [Table 1-2](#) describes the most common buttons.

Table 1-2 Buttons on the ACU Screens

Button	Description
Apply	Saves any changes without exiting the screen
Cancel	Exits the screen without saving any changes
Defaults	Displays the default value of each parameter
Help	Provides information on the screen and its parameters
OK	Saves any changes and exits the screen
Start	Initiates a test
Stop	Stops a test that is running

Network Configurations Using Client Adapters

Client adapters can be used in a variety of network configurations. In some configurations, access points provide connections to your network or act as repeaters to increase wireless communication range. The maximum communication range is based on how you configure your wireless network.

This section describes and illustrates the two most common network configurations:

- Ad hoc wireless local area network (LAN)
- Wireless infrastructure with workstations accessing a wired LAN

For examples of more complex network configurations involving client adapters and access points, refer to the documentation for your access point.


**Note**

Refer to [Chapter 5](#) for information on setting the client adapter's network mode.

Ad Hoc Wireless LAN

An ad hoc (or *peer-to-peer*) wireless LAN (see [Figure 1-2](#)) is the simplest wireless LAN configuration. In a wireless LAN using an ad hoc network configuration, all devices equipped with a client adapter can be linked together and communicate directly with each other. The use of an infrastructure device, such as an access point, is not required.

Figure 1-2 Ad Hoc Wireless LAN

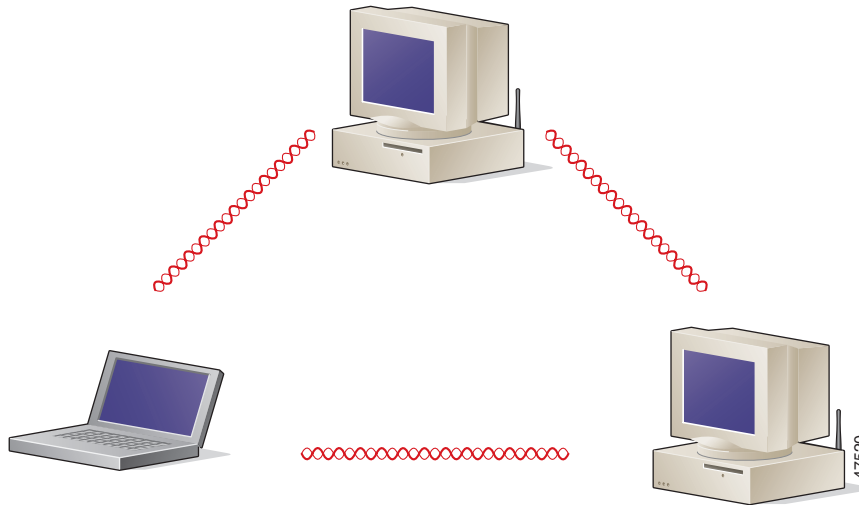

Wireless Infrastructure with Workstations Accessing a Wired LAN

A microcellular network can be created by placing two or more access points on a LAN. [Figure 1-3](#) shows a microcellular network with workstations accessing a wired LAN through several access points.

This configuration is useful with portable or mobile stations because it allows them to be directly connected to the wired network even while moving from one microcell domain to another. This process is transparent, and the connection to the file server or host is maintained without disruption. The mobile station stays connected to an access point as long as it can. However, once the transfer of data packets needs to be retried or beacons are missed, the station automatically searches for and associates to another access point. This process is referred to as *seamless roaming*.

Figure 1-3 Wireless Infrastructure with Workstations Accessing a Wired LAN

