

配置路由器，以使用 ISDN BRI 拨号连接多个站点

目录

[简介](#)

[先决条件](#)

[要求](#)

[使用的组件](#)

[规则](#)

[相关产品](#)

[配置](#)

[网络图](#)

[配置](#)

[验证](#)

[故障排除](#)

[故障排除命令](#)

[调试输出](#)

[相关信息](#)

简介

在某些情况下，您会需要配置路由器拨号多个站点。例如，您可能必须要拨通路由器连接到公司网络的某部分，并拨通网络服务提供商（ISP）路由器连接互联网。

本文提交中央路由器访问互联网的配置示例和远程办公室用途综合业务数字网络(ISDN)。远程办公室能也访问中央路由器和互联网到中央路由器。

先决条件

要求

在您继续进行此配置前，请保证您：

- 验证该ISDN第1层，并且2是UP。欲知更多信息，请参阅[使用show isdn status命令关于BRI故障排除](#)。
- 从ISP获取必要信息，例如认证方法，可能是质询握手验证协议(CHAP)或密码认证协议，用户名和密码，编号拨号和拨号接口的IP地址(除非接口使用一个协商得到的地址)。并且，如果NAT是需要的连接多台主机到ISP，请发现。
- 从远程路由器，请得到关于认证方法、用户名和密码、编号拨号和IP地址的信息。

使用的组件

本文档中的信息基于以下软件和硬件版本：

- Cisco 803路由器用Cisco IOS软件版本12.1(11) IP Plus。**注意：** 如果需要配置NAT，请保证您有IP Plus (有“”在IOS文件名)特性组。
- 思科2501路由器，是远程办公室运行Cisco IOS软件版本12.2(5)。

注意： ISP路由器的配置没有包括。参考一些配置示例的[拨号和接入技术支持页](#)。

本文档中的信息都是基于特定实验室环境中的设备创建的。本文档中使用的所有设备最初均采用原始（默认）配置。如果您是在真实网络上操作，请确保您在使用任何命令前已经了解其潜在影响。

规则

有关文档规则的详细信息，请参阅 [Cisco 技术提示规则](#)。

相关产品

此配置可以与有基本速率接口(BRI)接口的所有路由器一起使用。这包括有内置的BRI接口的路由器，例如Cisco 800 (例如，801，802，803，804)和Cisco1600 (例如，1603-R和1604-R)系列路由器。它也包括接受BRI广域网接口界面卡的路由器(WIC)或网络模块，类似1600，1700，2600和3600系列。[欲知关于BRI WIC或网络模块的更多信息，请参见"1600、1700、2600和3600系统路由器广域网接口卡/平台硬件兼容表"。](#)

注意： 请使用show version命令证实您的路由器是否有一个BRI接口。

配置


本部分提供有关如何配置本文档所述功能的信息。

注意： 要查找本文档所用命令的其他信息，请使用[命令查找工具](#)（[仅限注册用户](#)）。

网络图

本文档使用以下网络设置：

One Router Dialing Multiple Sites

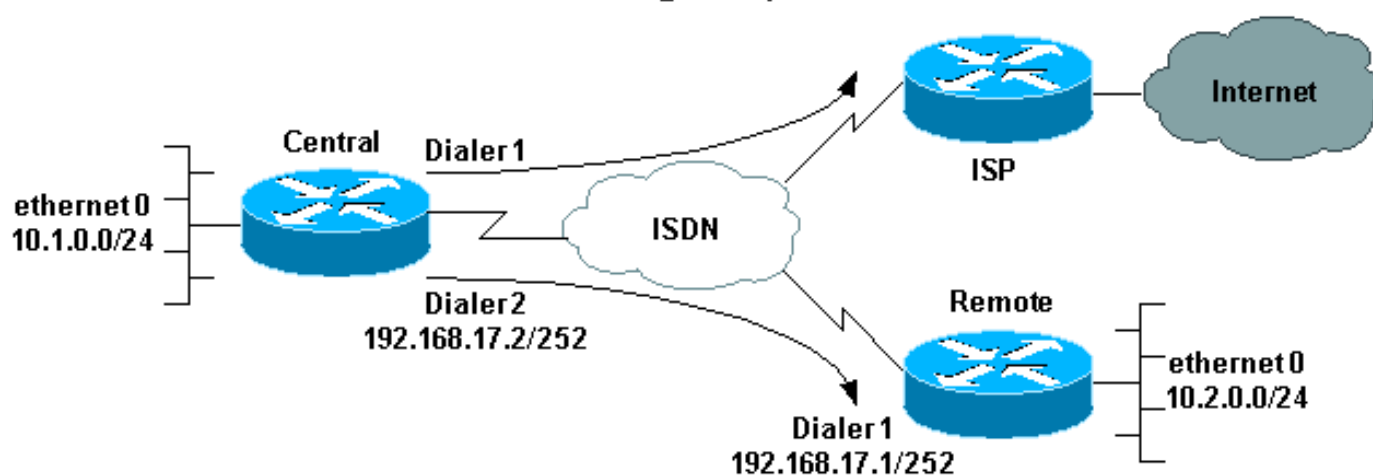

配置

在此配置中，中央路由器被命名为“中央”，远程公司办公室被命名“远程”。

在中央，拨号接口1配置访问互联网。IP地址由ISP动态地分配。NAT用于允许中央LAN、远程LAN和中央远程广域网的IP网络在一个动态分配的IP地址帮助下访问互联网。请与您的ISP联系证实您是否需要NAT。

注意：我们配置PAP和CHAP，因为这依靠什么ISP配置(然而，只有使用他们中的一个)。

中央

```
version 12.1
no parser cache
service timestamps debug datetime msec
service timestamps log datetime msec
!
hostname central
!
username remote password 0 remote
!--- Username and shared secret password for the router
(remote) !--- (used for CHAP authentication). !---
Shared secret password must be the same on both sides. !
interface Ethernet0 ip
address 10.1.0.1 255.255.255.0 ip nat inside !---
Ethernet 0 is an inside NAT interface. !--- All traffic
from this network will be translated. no cdp enable !
interface BRI0 !--- If you have additional BRIs, copy
this BRI 0 configuration to the other BRIs. no ip
address encapsulation ppp dialer pool-member 1 !---
Assign BRI0 as member of dialer pool 1. !--- Dialer pool
1 is specified in interface Dialer 1. dialer pool-member
2 !--- Assign BRI0 as member of dialer pool 2. !---
Dialer pool 2 is specified in interface Dialer 2. isdn
switch-type basic-net3 !--- This depends on the country.
no cdp enable ppp authentication chap pap callin !---
Permit one-way CHAP and PAP authentication. !---
Configure authentication on both the physical and dialer
interface. ! interface Dialer1 !--- Create a dialer
interface for every device to which you need to connect.
description CONNECTION TO INTERNET ip address negotiated
!--- This IP address is obtained from the ISP. If the
```

```

ISP permits a static !--- address, configure that
address instead. ip nat outside !--- The Outside NAT
interface. Because this interface only has one IP
address, !--- all traffic from the inside network will
be Port Address Translated (PAT). encapsulation ppp
dialer pool 1 !--- Dialer profile 1. Remember that
interface BRI 0 is a member of this profile. dialer
remote-name ISP dialer idle-timeout 180 dialer string
6122 !--- The number used to dial the ISP. dialer-group
1 !--- Apply interesting traffic definition from dialer-
list 1. no cdp enable ppp authentication chap pap callin
ppp chap hostname XXXXX !--- XXXXX is the username the
ISP expects in order to authenticate this router. !---
For more information, refer to the document on ppp chap
hostname. ppp chap password YYYYY !--- YYYYY is the
password the ISP expects in order to authenticate this
router. ppp pap sent-username XXXXX password YYYYY !---
PAP username and password. !--- This is required only if
the ISP does not support CHAP. ! interface Dialer2
description CONNECTION TO REMOTE OFFICE ip address
192.168.17.2 255.255.255.252 !--- IP address for the
connection to the remote office. !--- The remote office
BRI interface is in the same subnet. ip nat inside !---
Dialer 2 is an inside NAT interface. !--- With this
configuration, traffic from remote office is translated
!--- before it is sent to the ISP. encapsulation ppp
dialer pool 2 !--- Dialer profile 2. Remember that
interface BRI 0 is a member of this profile. dialer
remote-name remote !--- Specifies the remote router name
(remote). !--- This name must match that used by the
remote router to authenticate itself. !--- Remember that
we configured the router username and password earlier.
dialer idle-timeout 180 dialer string 6121 !--- Number
used to dial the remote office router. dialer-group 1 !-
-- Apply interesting traffic definition from dialer-list
1. no cdp enable ppp authentication chap callin ! ip nat
inside source list 101 interface Dialer1 overload !---
Establishes dynamic source translation (with PAT) for
addresses that are !--- identified by the access list
101. no ip http server ip classless ip route 0.0.0.0
0.0.0.0 Dialer1 !--- Default route. Such traffic will
use dialer 1 to the ISP. ip route 10.2.0.0 255.255.255.0
Dialer2 !--- Route to remote router network. Traffic for
10.2.0.0/24 uses Dialer2. ! access-list 101 permit ip
10.1.0.0 0.0.0.255 any access-list 101 permit ip
10.2.0.0 0.0.0.255 any access-list 101 permit ip
192.168.17.0 0.0.0.3 any !--- Defines an access list
that permits the addresses to be translated. !--- Note
that the Ethernet 0 network, the remote router network
and the !--- BRI network (between this router and the
remote one) will be translated. dialer-list 1 protocol
ip permit !--- Interesting traffic definition. !--- This
definition is applied to both connections. !--- If you
need to define different interesting traffic for each
connection, !--- create two dialer-lists and apply one
to each dialer profile with dialer-group. no cdp run !
line con 0 exec-timeout 3 0 line vty 0 4 exec-timeout 3
0 ! ! end

```

远程

```

version 12.2
 service timestamps debug datetime msec

```

```
service timestamps log datetime msec
!
hostname remote
!
username central password 0 remote
!--- Username and shared secret password for the router
(central) !--- (used for CHAP authentication). !---
Shared secret must be the same on both sides. ! isdn
switch-type basic-net3 ! interface Ethernet0 ip address
10.2.0.1 255.255.255.0 !--- Remember that this network
is included in the NAT statements on central. no cdp
enable ! interface BRI0 no ip address encapsulation ppp
dialer pool-member 1 !--- Assign BRI0 as member of
dialer pool 1. !--- Dialer pool 1 is specified in
interface Dialer 1. isdn switch-type basic-net3 no cdp
enable ppp authentication chap ! interface Dialer1 ip
address 192.168.17.1 255.255.255.252 encapsulation ppp
dialer pool 1 !--- Dialer profile 1. Remember that
interface BRI 0 is a member of this profile. dialer
remote-name central !--- Specifies the name of the other
router (central). !--- This name must match that used by
the remote router to authenticate itself. !--- Remember
that we configured the router username and password
earlier. dialer string 6131 !--- The number used to dial
the central router. dialer-group 1 !--- Apply
interesting traffic definition from dialer-list 1.
pulse-time 0 no cdp enable ppp authentication chap
callin ! ip classless ip route 0.0.0.0 0.0.0.0 Dialer1
!--- Default route. Such traffic will use dialer 1 to
the central router. no ip http server ! dialer-list 1
protocol ip permit !--- All IP traffic is interesting. !
line con 0 exec-timeout 3 0 line aux 0 line vty 0 4
exec-timeout 3 0 ! end
```

验证

本部分所提供的信息可用于确认您的配置是否正常工作。

[命令输出解释程序工具](#) ([仅限注册用户](#)) 支持某些 **show** 命令，使用此工具可以查看对 **show** 命令输出的分析。

- **show isdn active** —显示您曾经发出呼叫的ISDN编号，并且指示呼叫是否入站或出站。
- **show caller ip** —显示您提供的IP地址的一个主叫信息汇总。
- **show ip interface dialer 1|包括互联网**—列出拨号接口的IP信息和状态的摘要。
- **show dialer [interface type number]** —显示为按需拨号路由(DDR)配置的接口的一般诊断信息。

如果拨号程序适当地过来，此消息出现：

```
Dialer state is data link layer up
```

如果physical layer up出现，暗示线路通信协议出来，但是网络控制协议(NCP)没有。启动拨号的数据包的源地址和目标地址显示在 dial reason line 中。此**show**命令也显示计时器的配置和连接超时前的时间。

故障排除

本部分提供的信息可用于对配置进行故障排除。

故障排除命令

[命令输出解释程序工具](#) ([仅限注册用户](#)) 支持某些 **show** 命令，使用此工具可以查看对 **show** 命令输出的分析。

注意： 在发出 **debug** 命令之前，请参阅[有关 Debug 命令的重要信息](#)。

- **debug dialer** —显示关于数据包或事件的调试信息在拨号接口。
- **debug isdn q931** —显示关于呼叫建立及拆线的信息ISDN网络连接(在本地路由器(用户端)和网络之间的层3)。
- **debug ppp协商**—显示关于点对点协议(PPP)流量的信息并且在PPP组件的协商时交换，并且包括关于链路控制协议(LCP)、验证和NCP的信息。成功的PPP协商将首先开放LCP状态，然后进行验证，最后进行NCP协商。
- **debug ppp authentication** —导致**debug ppp**命令显示认证协议消息，包括CHAP信息包交换和PAP交换。
- **debug ip peer** —包含关于对等体的信息。

调试输出

要排除故障配置，请使用这些调试：

```
central#debug isdn q931
ISDN Q931 packets debugging is on

central#debug dialer
Dial on demand events debugging is on

central#debug ppp negotiation
PPP protocol negotiation debugging is on

central#debug ppp authentication
PPP authentication debugging is on

central#debug ip peer
IP peer address activity debugging is on
```

呼叫中央的路由器发起呼叫到互联网：198.133.219.25是在互联网的一个IP地址。

```
central#ping 198.133.219.25

:!!!!!
Success rate is 80 percent (4/5), round-trip min/avg/max = 40/41/44 ms

*Mar 1 00:06:12.984: BR0 DDR: rotor dialout [priority]
*Mar 1 00:06:12.988: BR0 DDR: Dialing cause ip (s=172.17.243.115,
d=198.133.219.25)
*Mar 1 00:06:12.988: BR0 DDR: Attempting to dial 6122
*Mar 1 00:06:12.996: ISDN BR0: TX -> SETUP pd = 8 callref = 0x01
!--- central initiates the call to ISDN number 6122. *Mar 1 00:06:13.000: Bearer Capability i =
0x8890 *Mar 1 00:06:13.008: Channel ID i = 0x83 *Mar 1 00:06:13.008: Called Party Number i =
0x80, '6122', Plan:Unknown, Type:Unknown *Mar 1 00:06:13.088: ISDN BR0: RX <- CALL_PROC pd = 8
callref = 0x81 *Mar 1 00:06:13.092: Channel ID i = 0x89 *Mar 1 00:06:13.244: ISDN BR0: RX <-
CONNECT pd = 8 callref = 0x81 !--- central receives a connect message : the ISDN B channel is
established. *Mar 1 00:06:13.252: ISDN BR0: TX -> CONNECT_ACK pd = 8 callref = 0x01 *Mar 1
00:06:13.260: %LINK-3-UPDOWN: Interface BRI0:1, changed state to up *Mar 1 00:06:13.268: BR0:1:
```

interface must be fifo queue, force FIFO *Mar 1 00:06:13.272: %DIALER-6-BIND: Interface BR0:1 bound to profile Dil *Mar 1 00:06:13.280: BR0:1 PPP: Treating connection as a callout *Mar 1 00:06:13.280: BR0:1 PPP: Phase is ESTABLISHING, Active Open *Mar 1 00:06:13.284: BR0:1 PPP: No remote authentication for call-out *Mar 1 00:06:13.284: BR0:1 LCP: O CONFREQ [Closed] id 1 len 10 *Mar 1 00:06:13.284: BR0:1 LCP: MagicNumber 0x108130DD (0x0506108130DD) *Mar 1 00:06:13.300: BR0:1 LCP: I CONFREQ [REQsent] id 132 Len 15 *Mar 1 00:06:13.300: BR0:1 LCP: AuthProto CHAP (0x0305C22305) *!--- The ISP wants to use CHAP authentication.* *Mar 1 00:06:13.304: BR0:1 LCP: MagicNumber 0xE4225290 (0x0506E4225290) *Mar 1 00:06:13.304: BR0:1 LCP: O CONFACK [REQsent] id 132 Len 15 *Mar 1 00:06:13.308: BR0:1 LCP: AuthProto CHAP (0x0305C22305) *Mar 1 00:06:13.308: BR0:1 LCP: MagicNumber 0xE4225290 (0x0506E4225290) *Mar 1 00:06:13.308: BR0:1 LCP: I CONFACK [ACKsent] id 1 Len 10 *Mar 1 00:06:13.312: BR0:1 LCP: MagicNumber 0x108130DD (0x0506108130DD) *Mar 1 00:06:13.312: BR0:1 LCP: State is Open *Mar 1 00:06:13.320: BR0:1 PPP: Phase is AUTHENTICATING, by the peer *Mar 1 00:06:13.328: BR0:1 AUTH: Started process 0 pid 22 *Mar 1 00:06:13.328: BR0:1 CHAP: I CHALLENGE id 118 Len 27 from "posets" *Mar 1 00:06:13.332: BR0:1 CHAP: Using alternate hostname XXXXX *Mar 1 00:06:13.332: BR0:1 CHAP: Username posets not found *Mar 1 00:06:13.336: BR0:1 CHAP: Using default password *Mar 1 00:06:13.336: BR0:1 CHAP: O RESPONSE id 118 Len 26 from "XXXXX" *Mar 1 00:06:13.360: BR0:1 CHAP: I SUCCESS id 118 Len 4 *!--- central receives a CHAP SUCCESS from ISP.* *Mar 1 00:06:13.360: BR0:1 PPP: Phase is UP *Mar 1 00:06:13.364: BR0:1 IPCP: O CONFREQ [Not negotiated] id 1 Len 10 *Mar 1 00:06:13.364: BR0:1 IPCP: Address 0.0.0.0 (0x030600000000) *Mar 1 00:06:13.368: BR0:1 IPCP: I CONFREQ [REQsent] id 108 Len 10 *Mar 1 00:06:13.368: BR0:1 IPCP: Address 194.183.201.1 (0x0306C2B7C901) *Mar 1 00:06:13.368: BR0:1: IPPool: validate address = 194.183.201.1 *Mar 1 00:06:13.372: BR0:1 set_ip_peer(3): new address 194.183.201.1 *Mar 1 00:06:13.372: BR0:1 IPCP: O CONFACK [REQsent] id 108 Len 10 *Mar 1 00:06:13.376: BR0:1 IPCP: Address 194.183.201.1 (0x0306C2B7C901) *Mar 1 00:06:13.380: BR0:1 IPCP: I CONFNAK [ACKsent] id 1 Len 10 *Mar 1 00:06:13.380: BR0:1 IPCP: Address 194.183.201.3 (0x0306C2B7C903) *!--- 194.183.201.3 is assigned by ISP to dialer 1 of central.* *Mar 1 00:06:13.384: BR0:1 IPCP: O CONFREQ [ACKsent] id 2 Len 10 *Mar 1 00:06:13.384: BR0:1 IPCP: Address 194.183.201.3 (0x0306C2B7C903) *Mar 1 00:06:13.396: BR0:1 IPCP: I CONFACK [ACKsent] id 2 Len 10 *Mar 1 00:06:13.400: BR0:1 IPCP: Address 194.183.201.3 (0x0306C2B7C903) *Mar 1 00:06:13.400: BR0:1 IPCP: State is Open *Mar 1 00:06:13.400: Dil IPCP: Install negotiated IP interface address 194.183.201.3 *Mar 1 00:06:13.412: BR0:1 DDR: dialer protocol up *Mar 1 00:06:13.416: Dil IPCP: Install route to 194.183.201.1 *Mar 1 00:06:14.360: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0:1, changed state to up *Mar 1 00:06:19.276: %ISDN-6-CONNECT: Interface BRI0:1 is now connected to 6122 unknown

[相关信息](#)

- [拨号和接入技术支持](#)
- [技术支持和文档 - Cisco Systems](#)