



## PIX 520

This chapter guides you through the installation of the PIX 520, and includes the following sections:

- [PIX 520 Product Overview, page 5-1](#)
- [Installing the PIX 520, page 5-4](#)
- [PIX 520 Feature Licenses, page 5-6](#)
- [Installing Failover, page 5-7](#)
- [Installing LAN-Based Failover, page 5-8](#)
- [Removing and Replacing the PIX 520 Chassis Cover, page 5-10](#)
- [Replacing a Lithium Battery, page 5-12](#)
- [Installing a Memory Upgrade, page 5-12](#)
- [Installing a Circuit Board in the PIX 520, page 5-15](#)
- [Installing the PIX 520 DC Model, page 5-21](#)



**Note**

The PIX 520 is not supported in software Version 7.0(1).

## PIX 520 Product Overview

This section describes the PIX 520 front and rear panels and the panel LEDs.

[Figure 5-1](#) shows the front view of the PIX 520.

**Figure 5-1** PIX 520 Front Panel


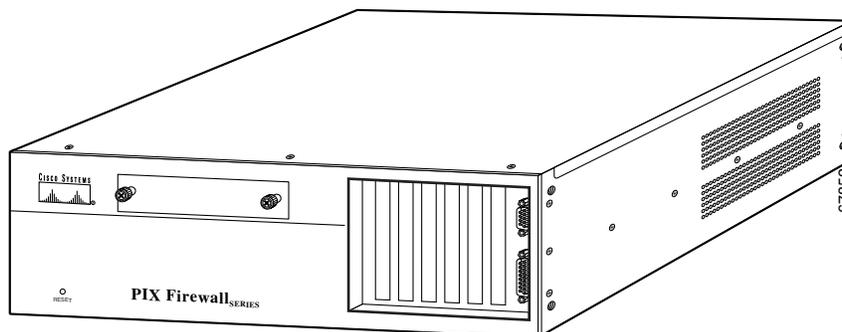


Figure 5-2 shows the rear view of the PIX 520.

**Figure 5-2 PIX 520 Rear Panel**

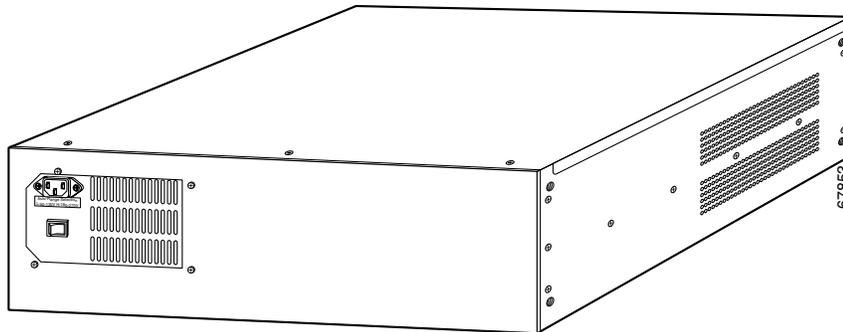

**Note**

Use of the four-port Ethernet circuit board changes the position of the outside and inside interfaces depending on the slot in which the circuit board is installed. Four-port Ethernet connectors are numbered from the top connector down sequentially. On horizontally mounted cards, the slots are numbered left to right.

The PIX 520 can be used with Ethernet circuit boards.

The four-port Ethernet circuit board provides four 10/100 Ethernet connections and has autosense capability. Connectors on the four-port Ethernet circuit board are numbered top to bottom sequentially; however, the actual device number depends on the slot in which the four-port Ethernet circuit board is installed.

Table 5-1 describes how the top connector is numbered.

**Table 5-1 Numbering Devices with a Four-Port Connector**

Slot 0 Contains	Slot 1 Contains	Slot 2 Contains	Four-Port Top Connector
4-port	Any	Any	ethernet0
Ethernet	4-port	Any	ethernet 1
Ethernet	Ethernet	4-port	ethernet2
Token Ring	4-port	Any	ethernet0
Token Ring	Token Ring	4-port	ethernet0
Token Ring	Ethernet	4-port	ethernet 1
Ethernet	Token Ring	4-port	ethernet 1

With the four-port Ethernet circuit board, having a circuit board in slot 3 makes the number of interfaces greater than six; while the circuit board in slot 3 cannot be accessed, its presence does not cause problems with the PIX security appliance.

Figure 5-3 shows the location of the interfaces if you install a four-port Ethernet circuit board in slot 0.

**Figure 5-3 Four-Port Ethernet Circuit Board Installed in Slot 0**

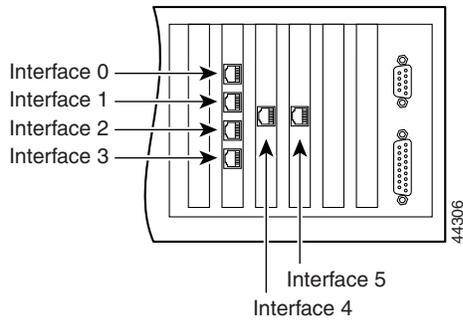


Figure 5-4 shows how the slots are numbered if a single-port Ethernet circuit board is inserted in slot 0, and a four-port Ethernet circuit board is inserted in slot 1.

**Figure 5-4 Single-Port Ethernet Circuit Board Installed in Slot 0 and Four-Port Ethernet Circuit Board Installed in Slot 1**


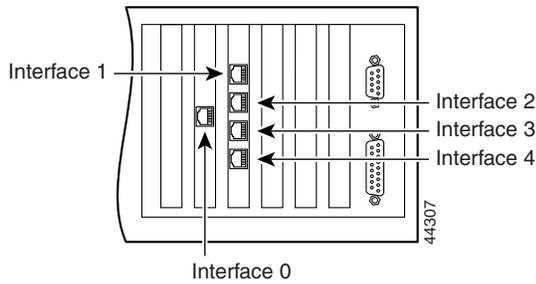


Figure 5-5 shows how the slots are numbered if single-port Ethernet circuit boards are installed in slot 0 and in slot 1, and a four-port Ethernet circuit board is inserted in slot 2.

**Figure 5-5 Single-Port Ethernet Circuit Board Installed in Slot 0 and 1 and Four-Port Ethernet Circuit Board Installed in Slot 2**

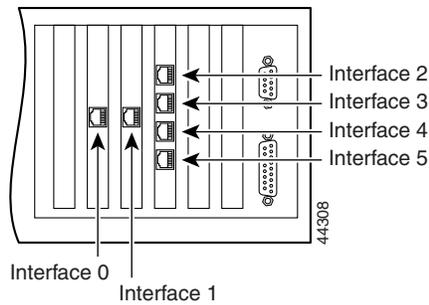


# Installing the PIX 520

To install the PIX 520, perform the following steps:

**Step 1** Refer to [Figure 5-6](#) for information on the features of the PIX 520.


**Figure 5-6** PIX 520 Front, Rear, and Side Panels

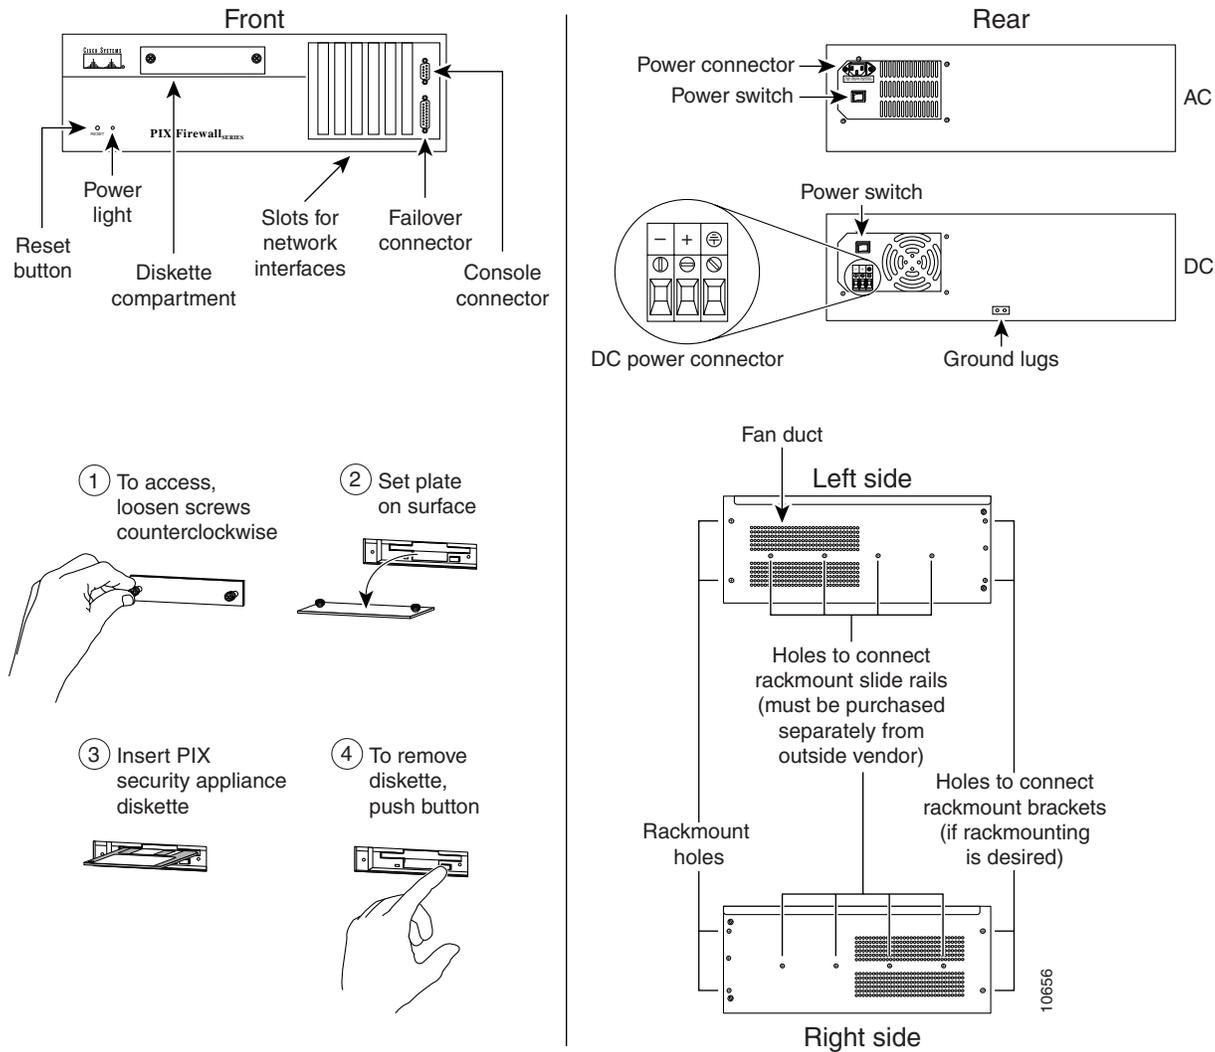

**Step 2** Connect network cables to each of the PIX security appliance network interfaces. On the PIX 520, connect the cables at the front of the unit.

If you are not installing a four-port Ethernet circuit board, add the cables as shown in [Figure 5-7](#).

**Figure 5-7 Up to Four Single-Port Interfaces in the PIX Security Appliance**

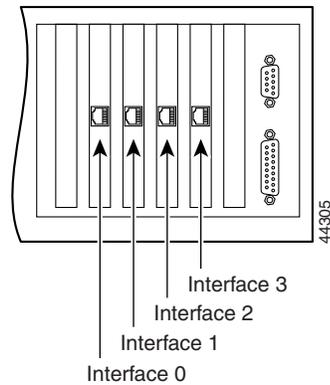


## Installing Interface Cables to the PIX 520

To install interface cables to the PIX 520, perform the following steps:

- Step 1** Locate the serial cable. The serial cable assembly consists of a null modem cable with RJ-45 connectors, two separate DB-9 connectors, and a separate DB-25 connector as shown in [Figure 5-8](#).
- Step 2** Install the serial cable between the PIX security appliance and your console computer.

**Figure 5-8 PIX Security Appliance Serial Cable Assembly**

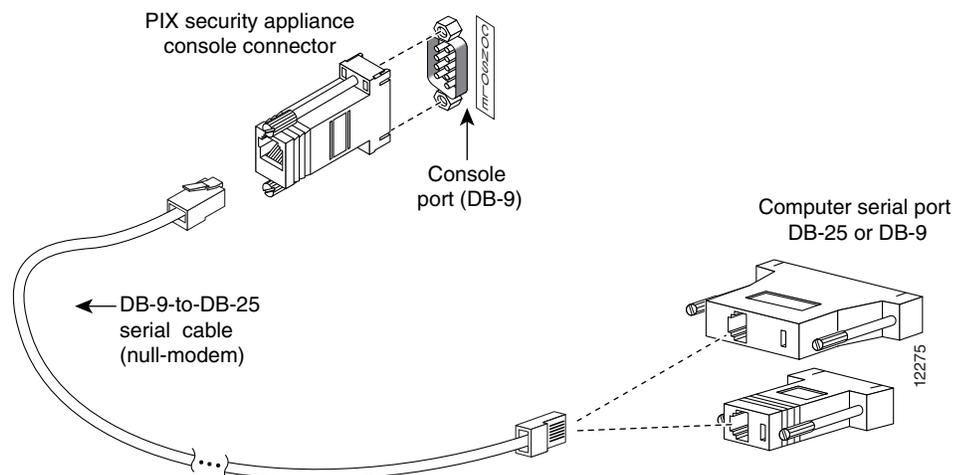

- Step 3** Connect one of the DB-9 serial connectors to the console connector on the front panel of the PIX security appliance.
- Step 4** Connect one end of the RJ-45 null modem cable to the DB-9 connector.
- Step 5** If you are installing an AC voltage PIX security appliance, connect the power cord to the power connector on the rear panel of the PIX security appliance, and to a power outlet.

If you are installing a DC voltage PIX security appliance, refer to the “Installing the PIX 520 DC Model” section on page 5-21.

**Step 6** The following options are available:

- a. If you have a second PIX security appliance to use as a failover unit, install the failover feature and cable as described in the “Installing Failover” section on page 5-7.



---

**Note** Do not power on the failover units until the primary unit is configured.

---

- If needed, install the PIX security appliance syslog server as described in the **logging** command page in the [command reference](#) online at:  
[http://www.cisco.com/en/US/products/sw/secursw/ps2120/prod\\_command\\_reference\\_list.html](http://www.cisco.com/en/US/products/sw/secursw/ps2120/prod_command_reference_list.html)
- b. If you need to install an optional circuit board such as a single-port Ethernet board, or the four-port Ethernet board, refer to the “Installing a Circuit Board in the PIX 520” section on page 5-15 for more information.
- c. If you need to install additional memory, refer to the “Installing a Memory Upgrade” section on page 5-12.

If you are ready to start configuring the PIX security appliance, power on the unit. Refer to the configuration guide online at:

[http://www.cisco.com/en/US/docs/security/asa/asa72/configuration/guide/conf\\_gd.html](http://www.cisco.com/en/US/docs/security/asa/asa72/configuration/guide/conf_gd.html)

---

Always check the [release notes](#) first before configuring the PIX security appliance for the latest release details. You can find the latest versions of release notes online at:

[http://www.cisco.com/en/US/products/sw/secursw/ps2120/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/sw/secursw/ps2120/prod_release_notes_list.html)

## PIX 520 Feature Licenses

If you have a PIX 520-UR unrestricted feature license, the following options are available:

- If you have a second PIX 520 to use as a failover unit, install the failover feature and cable as described in the “Installing Failover” section on page 5-7.
- If needed, install the PIX security appliance syslog server as described in the **logging** command in the [command reference](#) online at:  
[http://cisco.com/en/US/products/sw/secursw/ps2120/prod\\_command\\_reference\\_list.html](http://cisco.com/en/US/products/sw/secursw/ps2120/prod_command_reference_list.html)
- Refer to the “Installing LAN-Based Failover” section on page 5-8 for information about how to remove and replace the chassis cover if you need to install optional circuit boards.



**Note**

---

It is very important to remove the chassis cover before installing circuit boards in the PIX 520. Even though it appears possible to add or remove circuit boards from the back panel, removing the chassis cover greatly simplifies the process.

---

- If you need to install additional memory, refer to the “Installing a Memory Upgrade” section on page 5-12.

# Installing Failover

To install a failover connection, perform the following steps:


**Note**

This section only applies to PIX security appliance units with a “UR” (unrestricted) license.

**Step 1**

Power off both the primary and secondary units.



**Note**

Both PIX security appliances must be the same model number, have at least as much RAM, have the same Flash memory size, and be running the same software version.

**Step 2**

Locate the Failover cable (shown in [Figure 5-9](#)). This cable is shipped separately from the PIX security appliance. The cable is labeled Primary on one end and Secondary on the other. Install the cable for the PIX 520 as shown in [Figure 5-9](#).

**Figure 5-9 PIX 520 Failover Cable Connection**

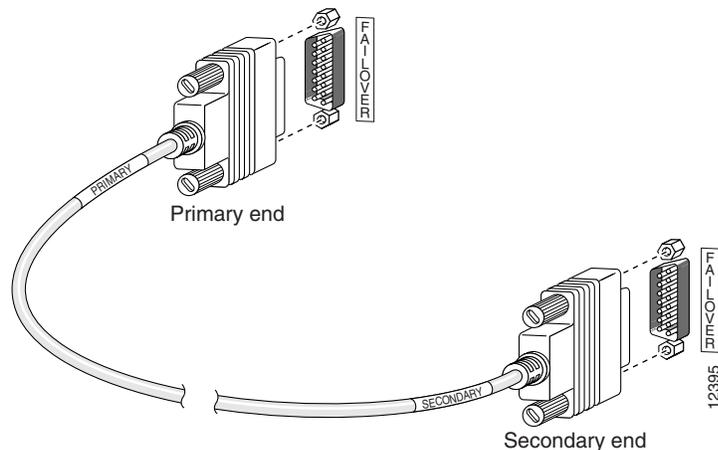
**Step 3**

Connect the Primary end of the Failover cable to the first PIX security appliance unit, that is, the one you have already configured.

**Step 4**

Connect the Secondary end of the Failover cable to the standby unit.

**Step 5**

Connect a power cord to the power connector on the rear panel of each unit, and the other end of each power cord to (preferably separate) power outlets.

**Step 6**

If you are using Stateful Failover, use one of the following types of connections, that is appropriate for your system, between the dedicated interfaces on the PIX security appliance units:

- Category 5 crossover cable directly connecting the primary unit to the secondary unit.
- 100BaseTX half-duplex hub using straight Category 5 cables.
- 100BaseTX full duplex on a dedicated switch or dedicated VLAN of a switch.
- All enabled interfaces must be connected between the active and standby units. Only configure the active unit. On the PIX 520, you can access the console and determine which unit is active with the **show failover** command in the [command reference](#) online at:

[http://cisco.com/en/US/products/sw/secursw/ps2120/prod\\_command\\_reference\\_list.html](http://cisco.com/en/US/products/sw/secursw/ps2120/prod_command_reference_list.html).

**Caution**

---

Do not turn the power on until the units are connected and the primary unit is configured completely.

---

**Step 7**

Use the power switch at the back of the units to power the primary unit on and then power on the standby unit.

Within a few seconds, the active unit automatically downloads its configuration to the standby unit.

If the primary unit fails, the secondary unit automatically becomes active.

---

## Installing LAN-Based Failover

LAN-based failover supports failover between two units connected over a dedicated Ethernet interface. LAN-based failover eliminates the need for a special Failover cable and overcomes the distance limitations imposed by the Failover cable.

For information on configuring a LAN-based failover, refer to the configuration guide online at:

[http://www.cisco.com/en/US/docs/security/asa/asa72/configuration/guide/conf\\_gd.html](http://www.cisco.com/en/US/docs/security/asa/asa72/configuration/guide/conf_gd.html)

**Note**

---

Both chassis must be the same model number, have the same amount of RAM, Flash memory, number and type of interfaces, and be running the same software version.

---

To set up a LAN-based failover connection, perform the following steps:

**Step 1**

Disconnect both the PIX security appliances, so that there is no traffic flow between them. If the Failover cable is connected to the PIX security appliance, disconnect it.

**Step 2**

Configure the PIX security appliances for LAN-based failover. Refer to the chapter on configuring LAN-based failover in the configuration guide online at:

[http://www.cisco.com/en/US/docs/security/asa/asa72/configuration/guide/conf\\_gd.html](http://www.cisco.com/en/US/docs/security/asa/asa72/configuration/guide/conf_gd.html)

**Step 3**

Power off both units.

**Step 4**

Connect the LAN failover interfaces to the dedicated switch/hub, as shown in [Figure 5-10](#).


**Note**

---

A dedicated LAN interface and a dedicated switch (or VLAN) is required to implement LAN-based failover. You cannot use a crossover Ethernet cable to connect the two PIX security appliances.

---

Figure 5-10 LAN-Based Failover Connections

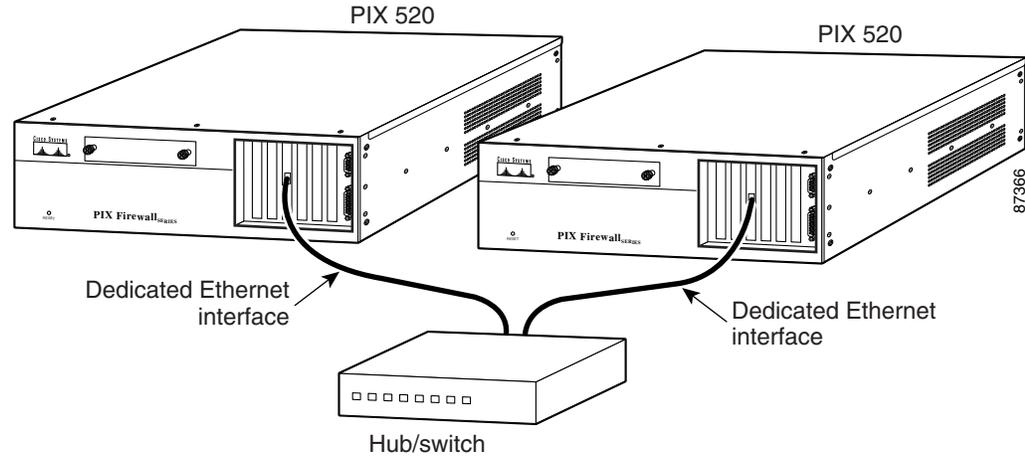

**Step 5** If you are using Stateful Failover, use one of the following types of connections, that is appropriate for your system, between the dedicated interfaces on the PIX security appliances:

- Category 5 crossover cable directly connecting the primary unit to the secondary unit.
- 100BaseTX full duplex on a dedicated switch or dedicated VLAN of a switch.
- 1000BaseTX full duplex on a dedicated switch or dedicated VLAN of a switch.



**Note** For Stateful Failover on the PIX 520, if you have Gigabit Ethernet (GE) interfaces, then the failover link must be GE.



**Caution**

Do not turn the power on until the units are connected and the primary unit is configured completely.

**Step 6** Power the primary unit on first, *then* power on the secondary unit. Within a few seconds, the active unit automatically downloads its configuration to the standby unit.

If the primary unit fails, the secondary unit automatically becomes active.

# Removing and Replacing the PIX 520 Chassis Cover

This section describes how to remove and replace the chassis cover from the PIX 520. This section includes the following topics:

- [Removing the Chassis Cover, page 5-10](#)
- [Replacing the Chassis Cover, page 5-11](#)

## Removing the Chassis Cover

To remove the chassis cover, perform the following steps:



### Note

Removing the PIX security appliance case does not affect your Cisco warranty. Upgrading the PIX security appliance does not require any special tools and does not create any radio frequency leaks.

**Step 1** Read the *Regulatory Compliance and Safety Information* document.

**Step 2** Ensure that the PIX security appliance is powered off. Unplug the power cord from the power outlet. Once the upgrade is complete, you can safely reconnect the power cord.




### Warning

**Before working on a system that has an On/Off switch, turn OFF the power and unplug the power cord.**


**Step 3** Remove the three screws holding the chassis cover in place, as shown in [Figure 5-11](#).

**Figure 5-11** Removing the Chassis Cover Screws

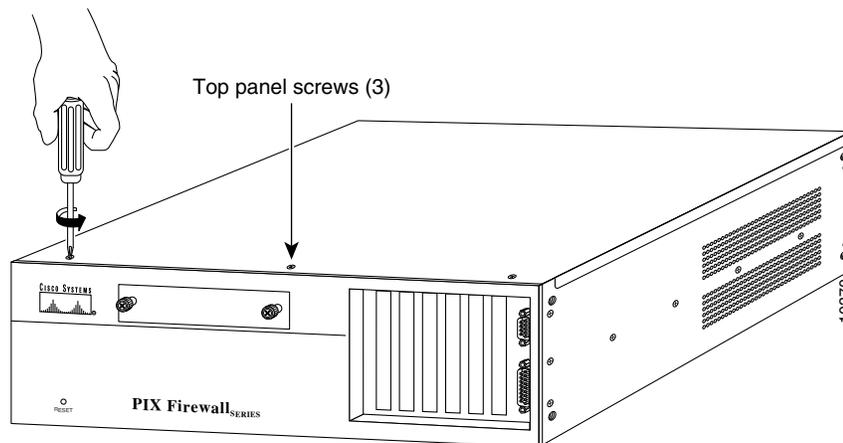

- Step 4** Remove the chassis cover as shown in [Figure 5-12](#).

**Figure 5-12 Removing the Chassis Cover**

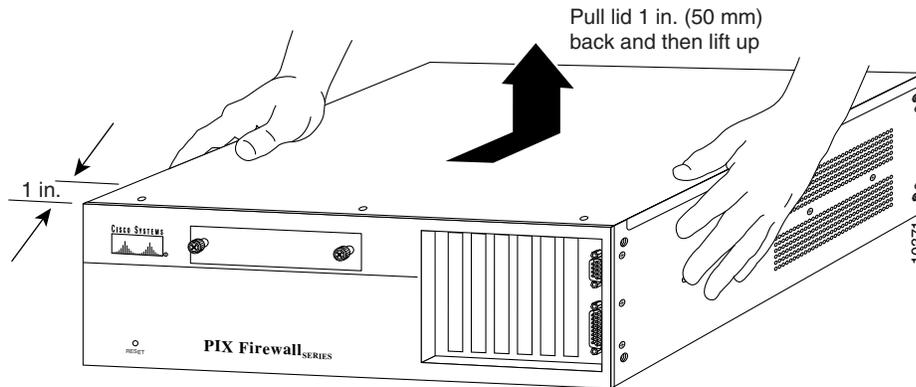

## Replacing the Chassis Cover




**Caution**

Do not operate PIX security appliance units without the chassis cover installed. The chassis cover protects the internal components, prevents electrical shorts, and provides proper air-flow for cooling the electronic components.

To replace the chassis cover, perform the following steps:

- Step 1** Replace the chassis cover, as shown in [Figure 5-13](#).
- Step 2** Secure the three screws.
- Step 3** Reinstall all interface cables.

**Figure 5-13 Replacing the Chassis Cover**

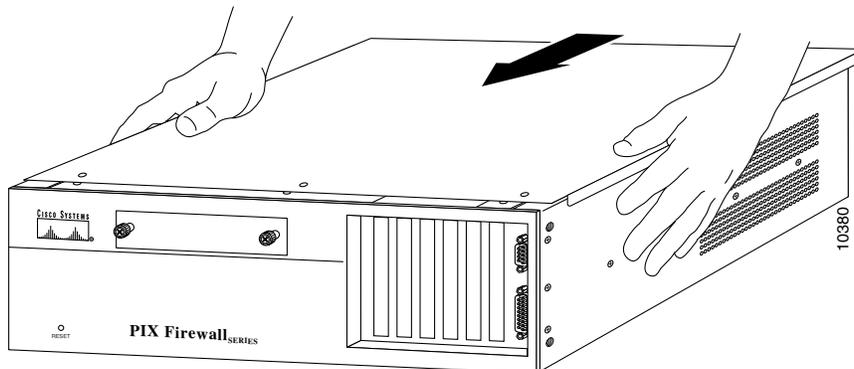

## Replacing a Lithium Battery

The PIX security appliance has a lithium battery on its main circuit board. This battery has an operating life of about ten years. When the battery loses its charge, the PIX security appliance cannot function. The lithium battery is not a field-replacable unit (FRU). Contact Cisco TAC to replace the battery.



### Note

Do not attempt to replace this battery yourself.



### Warning

**Danger of explosion exists if the lithium battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.**

## Installing a Memory Upgrade

Observe the following warnings, cautions, and notes when installing additional PIX security appliance system memory.

The following statement applies to DC models:



### Warning

**Before performing any of the following procedures, ensure that power is removed from the DC circuit. To ensure that all power is OFF, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the switch handle of the circuit breaker in the OFF position.**

The following statement applies to both AC and DC models:



### Warning

**Before working on a system that has an On/Off switch, turn OFF the power and unplug the power cord.**



### Caution

Always remove old memory before installing new memory.



### Note

After installing additional memory in the PIX 520, do not remove the memory strips and power on the unit, or the PIX security appliance will become inoperable.



### Caution


If you remove the PIX security appliance chassis cover, always reinstall the chassis cover. Running the PIX security appliance without the chassis cover causes overheating and damage to electrical components.

## Memory Installation Steps

To install additional system memory, perform the following steps:


- Step 1** If the unit is rack-mounted, remove network wires and any cords connecting to the PIX security appliance. The PIX 520 should be removed from the rack and placed on a stable working surface. Ensure that the unit is unplugged from its power source.
- Step 2** Unpack the items in the memory upgrade kit.
- Remove the chassis cover from the PIX security appliance. Remove all screws holding the assembly in place. Refer to the “[Removing and Replacing the PIX 520 Chassis Cover](#)” section on page 5-10 for more information.
- Step 3** Determine the location of your system memory sockets (see [Figure 5-14](#)).
- Step 4** Use the markings on the motherboard to determine the socket numbers. Always install the first memory strip into the lowest socket number. Progressively add memory boards into higher numbered sockets.

**Figure 5-14** PIX 520 System Memory Location

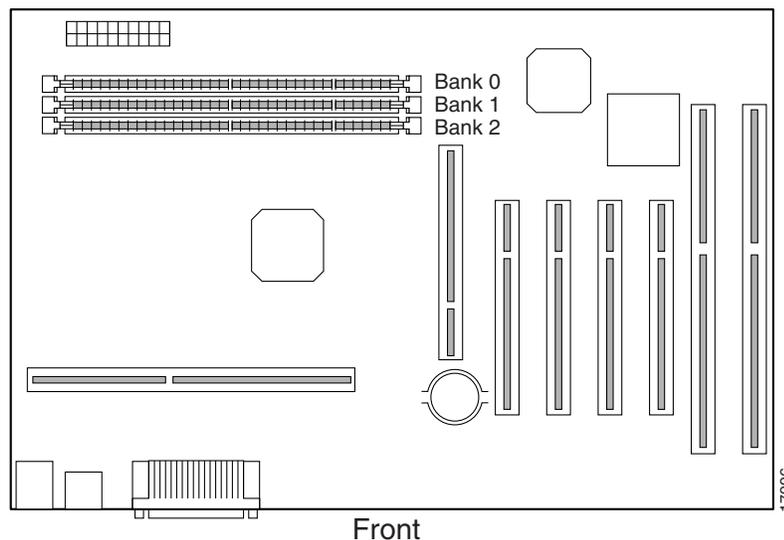


- Step 5** Locate the wrist grounding strap in the accessory kit and connect one end to the unit as shown in [Figure 5-17](#), or to the PIX security appliance chassis, and securely attach the other to your wrist so it contacts your bare skin.
- Step 6** With the wrist strap on your wrist, carefully grasp the memory strip from either end. Note that a DIMM strip has notches.
- Step 7** To install a DIMM strip:
- Remove the old memory strip by opening the two plastic wing connectors, and pulling the old strip up. Discard the old strip.
  - When installing the memory strip in the PIX 520, install the new strip in Bank 0 as shown in [Figure 5-15](#) and [Figure 5-16](#), by opening the two plastic wing connectors, inserting the strip, and closing the wing connectors.

**Figure 5-15** Inserting a DIMM Memory Strip in the PIX 520

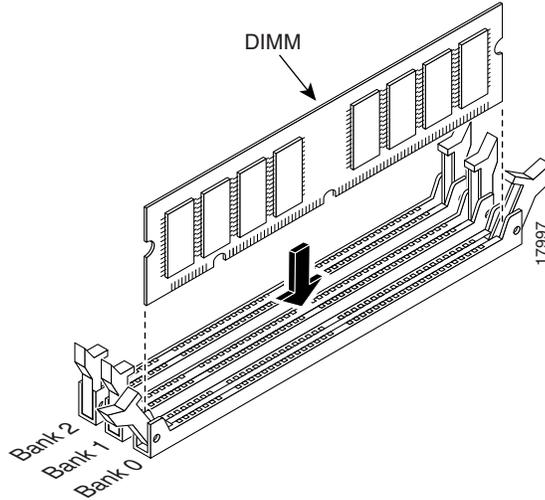

**Figure 5-16** Securing a DIMM Memory Strip in the PIX 520

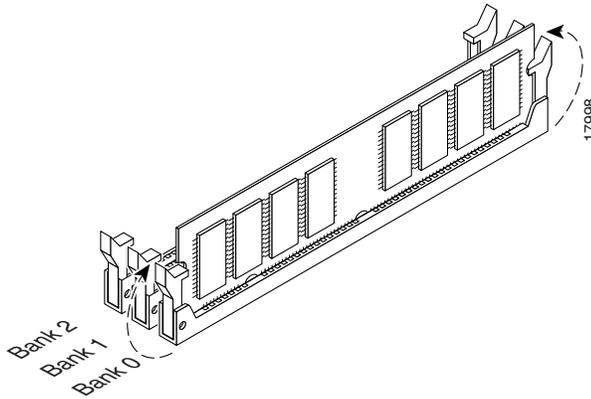

- When you finish inserting new RAM memory, replace the chassis cover on the chassis. Reattach the screws. If desired, rack mount the PIX security appliance and attach all cables and cords as discussed in previous sections. After the PIX security appliance is installed, you can view the amount of RAM memory in the system startup messages or with the **show version** command in the [command reference](#) online at:

[http://cisco.com/en/US/products/sw/secursw/ps2120/prod\\_command\\_reference\\_list.html](http://cisco.com/en/US/products/sw/secursw/ps2120/prod_command_reference_list.html).

## Installing a Circuit Board in the PIX 520

The information in this section refers to the installation of a circuit board in the PIX 520.

The 4-port 64 bit/66 MHz FE card (PIX-4FE-66) is supported in software Versions 6.3, 6.2(2), 6.1(4), and 5.2(9), and later versions. These are the minimum software versions that support the card.



### Note

The PIX-4FE card continues to be supported but is no longer manufactured.

The new card has the following characteristics:

- Includes an Intel 21154BE bridge and 4 Intel 82559 Ethernet MAC/PHY devices.
- Supports 10/100mbps full/half-duplex operation on each port.
- Retains bus performance when installed with other 66 MHz devices.
- Does not support auto MDI/MDIX operation.


This section includes the following topics:

- [16 MB Flash Circuit Board, page 5-18](#)
- [VPN Accelerator Circuit Board, page 5-19](#)
- [Gigabit Ethernet Circuit Board, page 5-20](#)
- [Installing the PIX 520 DC Model, page 5-21](#)


To install a circuit board in the PIX 520, perform the following steps:

- Step 1** Locate the grounding strap from the accessory kit. Fasten the grounding strap to your wrist so that it contacts your bare skin. Attach the other end to bare metal inside the PIX security appliance chassis as shown in [Figure 5-17](#).

**Figure 5-17 Attaching Grounding Strap to Your Wrist and to the PIX Security Appliance**

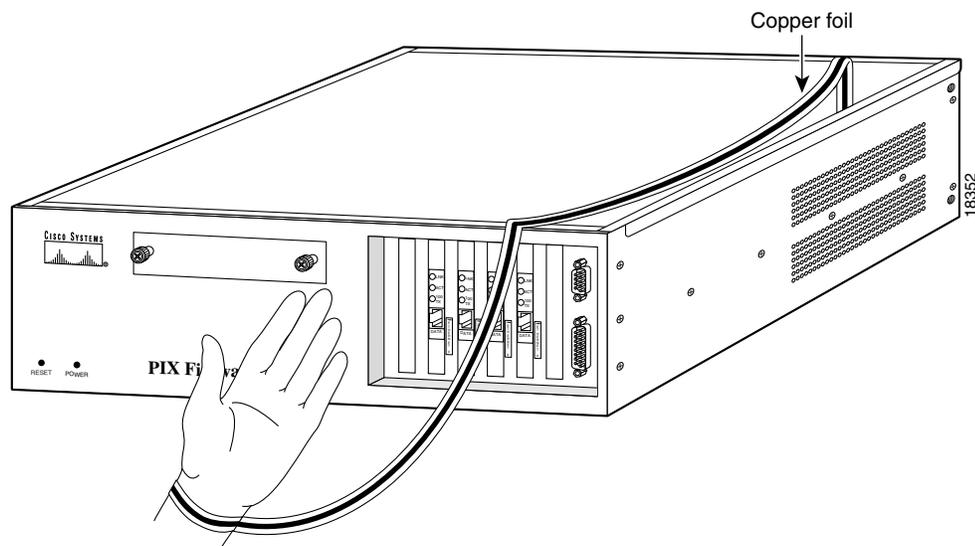


- Step 2** Insert the new circuit board, as shown in [Figure 5-18](#), and secure it using the screw provided with the circuit board.

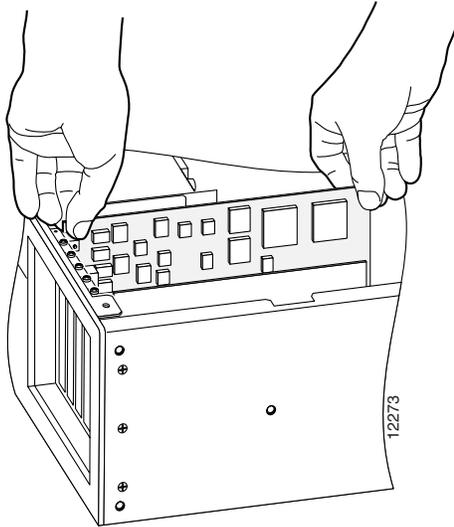**Figure 5-18** Installing the New Circuit Board

**Step 3** Figure 5-19 displays how the circuit boards are numbered according to their position. If you have Version 4.4 and a four-port Ethernet circuit board, refer to the “PIX 520 Product Overview” section on page 5-1.




**Note** When adding a network interface or encryption circuit board, install the new circuit board in the first empty slot to the right of the existing network interface circuit board.

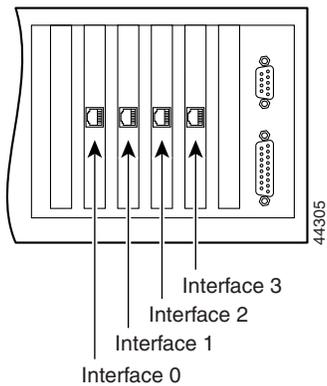**Figure 5-19** PIX Security Appliance Network Circuit Boards

- Step 4** If you are installing a 4-port circuit board, note that the circuit board will overlap the slot connector on the motherboard. This does not affect the use or operation of the circuit board. See [Figure 5-20](#).

**Figure 5-20** 4-Port Circuit Board Overlap

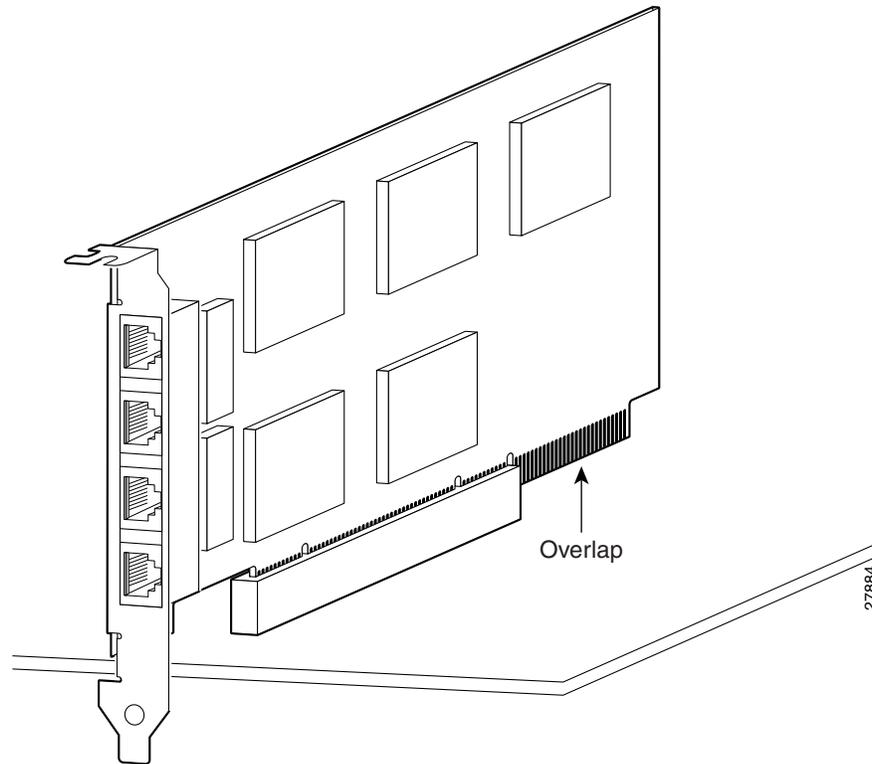


## 16 MB Flash Circuit Board

Along with upgrading your Flash memory to 16 MB, the PIX security appliance 16 MB Flash circuit board includes pre-installed PIX security appliance software and a UR (unrestricted) 56-bit DES encryption license. The 16 MB Flash circuit board installs into the PIX security appliance ISA slot.

An illustration of the 16 MB Flash circuit board is shown in [Figure 5-21](#).

**Figure 5-21** PIX Security Appliance 16 MB Flash Circuit Board

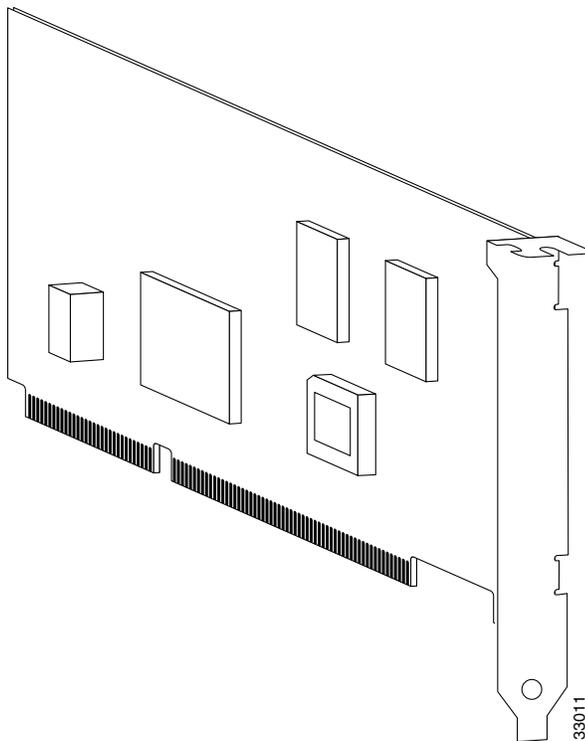

Use the following information to install a 16 MB Flash circuit board:

- The PIX security appliance must have a minimum of 32 MB of RAM memory.
- You must obtain a new activation key if you will be using 3DES.
- The PIX security appliance should not be downgraded to a software revision lower than 5.0(3) after the new software from the 16 MB circuit board is installed.
- If you downgrade from software Version 5.3 to 5.2 or lower, you will lose private data (keys, certifications, and CRLs) that are stored in Flash memory. You need to use the **clear flashfs** command, **downgrade 5.0 | 5.1 | 5.2** options if your PIX security appliance has 16 MB Flash memory, private data stored in the Flash memory, and you used the **ca save all** command to save these items in Flash memory.

To install the 16 MB Flash circuit board, perform the following steps:

---

**Step 1** Record the present PIX security appliance unit serial number.

**Step 2** Record the new serial number from the 16 MB Flash circuit board.



---

**Note** After installation, the serial number of the PIX security appliance changes to the serial number supplied with the 16 MB Flash circuit board.

---

**Step 3** Create a backup of your present configuration (to use later to reconfigure your system).

**Step 4** Obtain a new Activation key (if using 3DES).

**Step 5** Remove any previously installed Flash memory circuit boards from the unit.



---

**Caution** Do not remove or reposition the 16 MB Flash circuit board. The PIX security appliance will not work if this jumper is moved.

---

**Step 6** Install the 16 MB Flash circuit board into an available ISA slot in the PIX security appliance chassis.

---

## VPN Accelerator Circuit Board

The VPN Accelerator (PIX-VPN-ACCEL) is an encryption and accelerator circuit board. The VPN Accelerator uses a PCI interface and therefore can only be installed in PIX security appliance platforms with PCI slots. The VPN Accelerator begins to function immediately after installation without the need of special installation configurations.




---

**Note** The new VPN Accelerator cannot be used with the former PIX security appliance IPsec accelerator in the same chassis. The PIX security appliance IPsec accelerator was also known as the Private Link card.

---

An illustration of the VPN Accelerator is shown in [Figure 5-22](#).

**Figure 5-22** VPN Accelerator Circuit Board

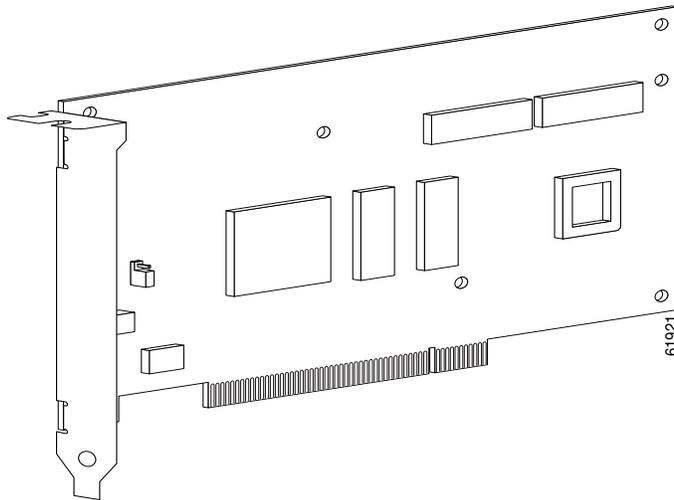


## Gigabit Ethernet Circuit Board

PIX security appliance supports 1000 Mbps (Gigabit) Ethernet. The Gigabit Ethernet circuit board uses only has one hardware speed and the following duplex options:

- 1000SXfull—Forces full-duplex operation
- 1000BaseSX—Forces half-duplex operation
- 1000auto—Auto negotiates full or half duplex

The Gigabit Ethernet circuit board and the fiber optic cable connection are shown in [Figure 5-23](#).

**Figure 5-23 Gigabit Ethernet Circuit Board**

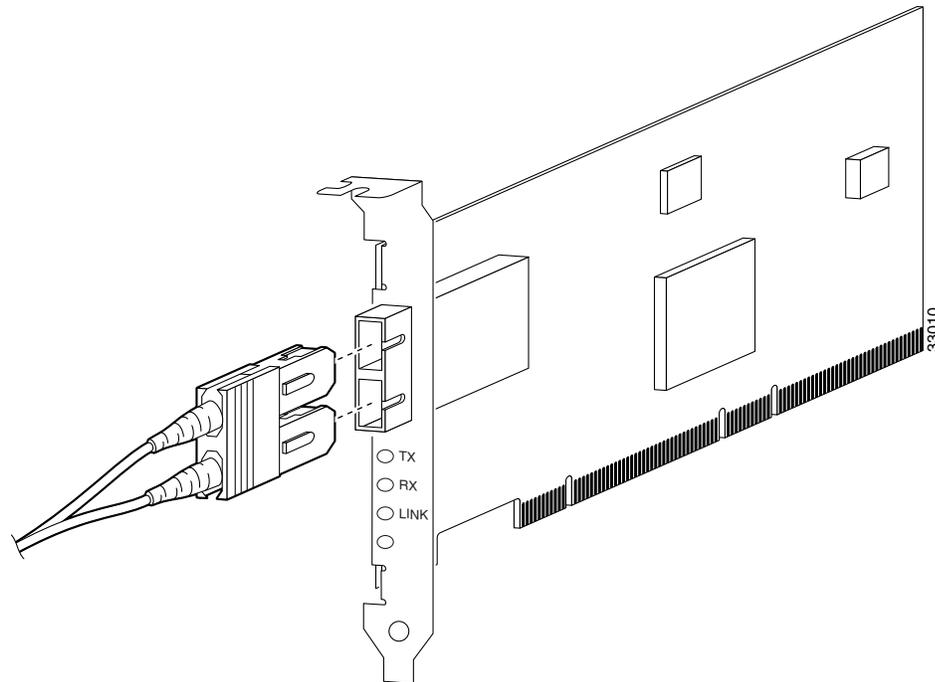

The Gigabit Ethernet circuit board has three LEDs:

- TX—Transmitting data
- RX—Receiving data
- LINK—The Gigabit Ethernet circuit board has established a network connection

## Installing the PIX 520 DC Model



### Warning


**Before performing any of the following procedures, ensure that power is removed from the DC circuit. To ensure that all power is OFF, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the switch handle of the circuit breaker in the OFF position.**

To install the PIX 520 DC power model, perform the following steps:

- Step 1** Read the [Regulatory Compliance and Safety Information](#) document.
- Step 2** Terminate the DC input wiring on a DC source capable of supplying at least 15 amps. A 15-amp circuit breaker is required at the 48 VDC facility power source. An easily accessible disconnect device should be incorporated into the facility wiring.
- Step 3** Be sure the PIX 520 power is off by checking the power switch at the rear of the unit.


- Step 4** As shown in [Figure 5-24](#), the PIX 520 is equipped with two grounding studs at the back of the unit, which you can use to connect a two-hole grounding lug to the PIX 520. Use the 10-32 nuts provided with the PIX 520 to connect a copper standard barrel grounding lug to the studs. The PIX 520 requires a lug where the distance between the center of each hole is 0.56 inches. A lug is not supplied with the PIX 520.

**Figure 5-24 Attaching a Grounding Lug to the PIX Security Appliance**

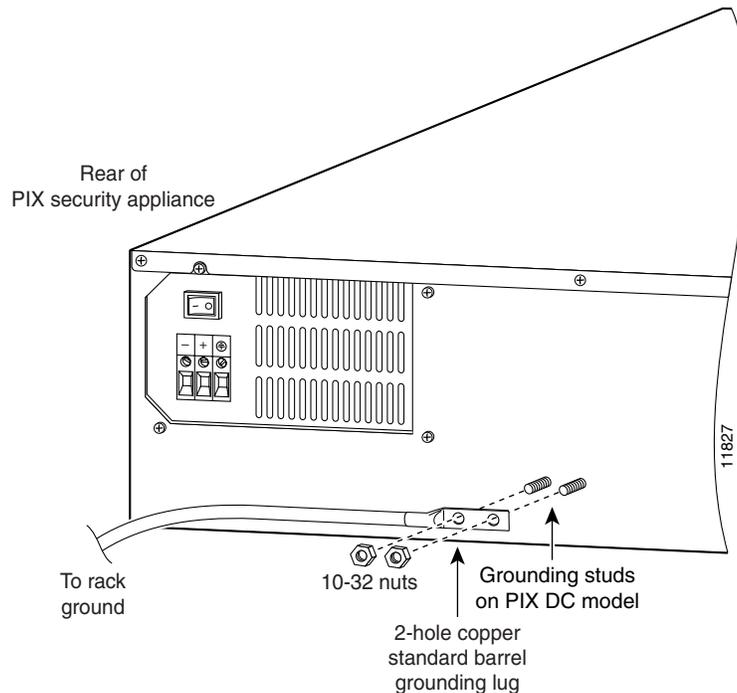

- Step 5** Ensure that power is removed from the DC circuit. To ensure that all power is OFF, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the switch handle of the circuit breaker in the OFF position.
- Step 6** Strip the ends of the wires for insertion into the power connect lugs on the PIX 520.
- Step 7** Insert the ground wire into the connector for the earth ground and tighten the screw on the connector (see [Figure 5-25](#)). Using the same method as for the ground wire, connect the negative wire and then the positive wire.

**Figure 5-25 Attaching DC Power Cables**

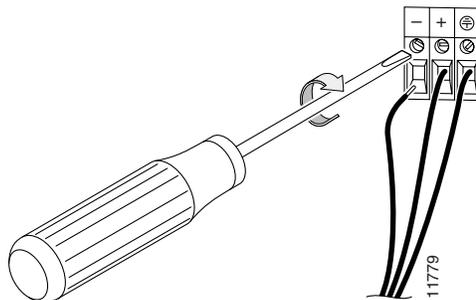

- Step 8** Reconnect power to the PIX 520. After wiring the DC power supply, remove the tape from the circuit breaker switch handle and reinstate power by moving the handle of the circuit breaker to the ON position.
- Step 9** Insert the PIX 520 system diskette in the drive at the front of the unit.
- Step 10** If needed, install the interface boards as described in the [“Installing a Circuit Board in the PIX 520” section on page 5-15](#).
- Step 11** Power on the unit from the switch at the rear of the unit.
- 



**Note** If you need to power cycle the DC PIX security appliance, wait at least five seconds between powering off the unit and powering it back on.

---

