



CHAPTER 27

SAN Device Virtualization

This chapter describes how to configure virtual devices to represent physical end devices for switches running Cisco MDS SAN-OS Release 3.1(2) and later.

Cisco SAN device virtualization (SDV) is a licensed feature included in the Cisco MDS 9000 Family Enterprise package (ENTERPRISE_PKG). See [Chapter 10, “Obtaining and Installing Licenses,”](#) for details about acquiring licenses.

This chapter includes the following sections:


- [About SDV, page 27-1](#)
- [Configuring SDV, page 27-4](#)
- [Default Settings, page 27-9](#)

About SDV

As of Cisco SAN-OS Release 3.1(2) and later, you can use Cisco SDV to create virtual devices that represent physical end-devices. Virtualization of SAN devices accelerates swayout or failover to a replacement disk array, and it also minimizes downtime when replacing host bus adapters (HBAs) or when re-hosting an application on a different server.


SAN devices that are virtualized can be either initiators or targets. You can virtualize targets to create a *virtual target*, and also virtualize initiators to create a *virtual initiator*. Such configurations do not distinguish between virtual initiators and virtual targets (see [Figure 27-1](#) and [Figure 27-2](#)).

Figure 27-1 Target Virtualization

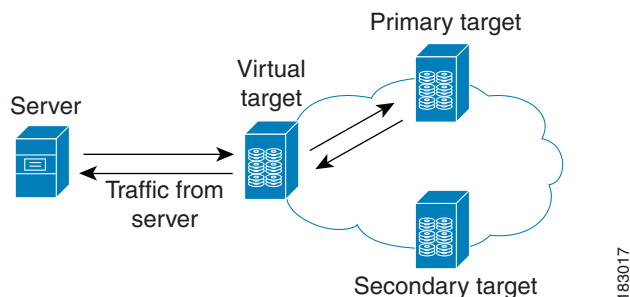

Send documentation comments to mdsfeedback-doc@cisco.com

Figure 27-2 Initiator Virtualization

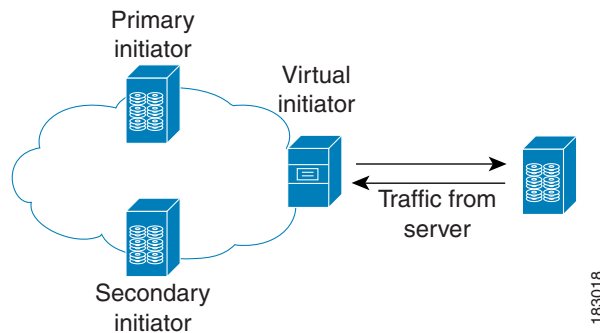


Note

While most of the examples in this chapter describe target virtualization, the same behaviors apply to initiator virtualization as well.

Typically, today's deployments for handling device failures are designed for high availability (HA), with redundancy being a key part of this design. Let's consider the case where a target is designed to be redundant. Here, two arrays are deployed—a primary and secondary. Enterprises often use some type of consistency technology (such as EMF SRDF) between the primary and secondary arrays to ensure that the secondary is a mirrored copy of the production LUN. However, if the primary array fails, it must be replaced by the secondary, as all I/O must occur on the secondary. Problems can occur because the time required to bring the secondary array up and have it working often takes longer than most can afford (Figure 27-3 illustrates this dilemma).

Figure 27-3 Typical Deployment for Handling Device Failures Before SDV

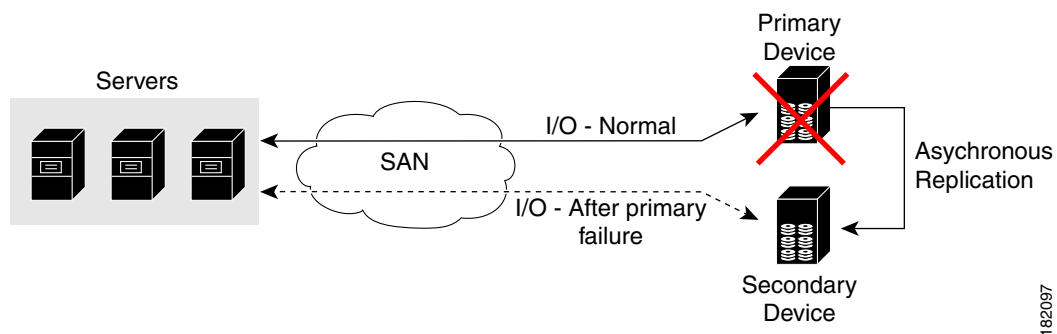

If a storage array is replaced *without* using Cisco SDV, then it may require the following:

- Taking down a server to modify zoning and account for the new array.
- Changing the Cisco SAN-OS configuration to accommodate Fibre Channel IDs (FC IDs) and pWWNs of the new array.
- Changing a server configuration to accommodate the new FC IDs and pWWNs.

More specifically, without SDV you might experience the following:

- It can take a considerable amount of time to configure a secondary device for a typical production environment.

Send documentation comments to mdsfeedback-doc@cisco.com

- In the zoning configuration, all the initiators must be re-zoned with the secondary device, and certain initiators must also be reconfigured. For example, the WWN and FC ID of the secondary device are different, so driver files must be changed and the server must be rebooted.
- Clustering (multiple initiators) compounds the problem, and the failover procedure must be repeated for each server of the cluster. Think of a server cluster as a set of HBAs—any storage array FC ID changes must be performed for each HBA.

SDV enables you to:

- Reduce the amount of time it takes for data migration, and ultimately the overall amount of downtime.
- Easily scale to larger numbers of devices.


Figure 27-4 illustrates the benefits of SDV. In this configuration, disk array Y replaces disk array X. When disk array X was deployed, the user created virtual devices for all the Fibre Channel interfaces using SDV. After data replication from disk array X was completed, the user briefly pauses activity on the application server and re-linked disk array Y to the virtual devices used by the server, completing the swapout of disk array X. No zoning changes or host operating system configuration changes were required during the time-critical period when the swap was performed; this significantly minimized application downtime.



Note

The array administrator will likely have to perform actions on array Y for it to become a primary device and accept server log ins before linking the virtual device to the array Y pWWN.

Figure 27-4 SDV Example

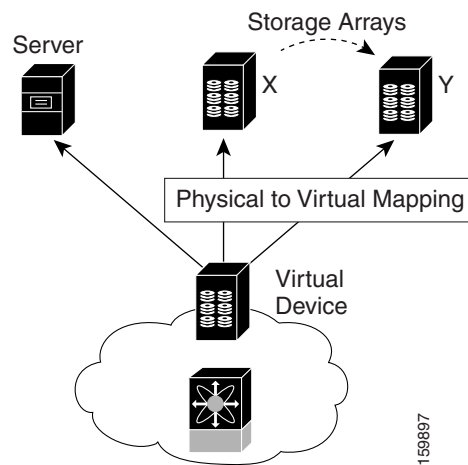

Key Concepts

The following terms are used throughout this chapter:

Send documentation comments to mdsfeedback-doc@cisco.com

- **Virtual device**
The virtualized or proxy representation of the real device, which is registered with the name server and has a pWWN and FC ID. A virtual device exists as long as its real (physical) counterpart is online. The virtual device pWWN and FC ID must be unique and cannot clash with any real device pWWNs and FC IDs.
- **Virtual domain**
Reserved by SDV to assign FC IDs to virtual devices. If the switch that reserved the domain goes down, another switch takes over its role using the same domain.

Configuring SDV

SDV is a distributed service and uses CFS (Cisco Fabric Services) distribution to synchronize the databases. When you configure SDV it starts a CFS session and locks the fabric. When a fabric is locked, Cisco SAN-OS software does not allow any configuration changes from a switch—other than the switch holding the lock—and issues a message to inform users about the locked status. Configuration changes are held in a pending database for the application. You must perform a commit operation to make the configuration active and to release the lock for all switches.

See [Chapter 13, “Using the CFS Infrastructure”](#) for more details about CFS,



Note

When you enable SDV, CFS distribution is also enabled; CFS distribution cannot be disabled for SDV.

The following sections describe how to configure SDV:

- [Configuring a Virtual Device, page 27-4](#)
- [Linking a Virtual Device with a Physical Device, page 27-6](#)
- [Resolving Fabric Merge Conflicts, page 27-7](#)


Configuring a Virtual Device

A virtual device is identified by an alphanumeric name of up to 32 characters and defines all the real devices (one primary and one or more secondary) that it represents. Upon the successful creation of a virtual device, the virtual device name is internally registered as the device alias name with the device alias database; the pWWN is automatically assigned by the system using Cisco OUI (Organizational Unique Identifier). A virtual device appears as a real, physical device. You can enumerate up to 128 devices for a virtual device. There is a limit of 4095 on the number of virtual devices that you can create in a single VSAN.

[Figure 27-5](#) shows a configuration that includes a new virtual device, vt1.

Send documentation comments to mdsfeedback-doc@cisco.com

Figure 27-5 Creating a Virtual Device

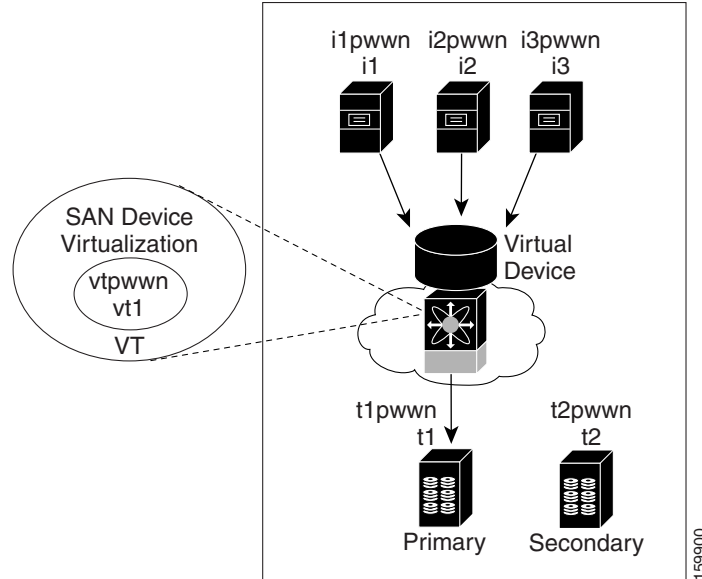

To configure a virtual target and commit it to the fabric configuration using Fabric Manager, follow these steps:

- Step 1** Expand SAN in the Logical Domains pane. Then expand the fabric in which your VSAN resides.
- Step 2** Expand the VSAN in which you wish to create the virtual target and select SDV. You see the switches in the VSAN that you selected listed in the Information pane.
- Step 3** In the **Control** tab, select enable from the dropdown menu in the Command column to enable SAN device virtualization for a particular switch in the VSAN(see [Figure 27-6](#)).

Figure 27-6 Enabling SAN Device Virtualization

The screenshot shows the Fabric Manager interface for the VSAN. The 'Control' tab is active, and a table lists the status of various switches. The 'enable' command is highlighted for switch sw-47-18.


Switch	Status	Command	LastCommand	Result
sw-47-18	enabled	enable	enable	success
sw-47-152	enabled	noSelection	enable	success
sw-47-151	enabled	noSelection	enable	success
sw-47-24	enabled	noSelection	enable	success
sw-46-180	enabled	noSelection	enable	success
sw-47-16	enabled	noSelection	enable	success
sw-47-17	enabled	noSelection	enable	success

- Step 4** Click the **Apply Changes** icon to commit the configuration change.
- Step 5** Click the **CFS** tab. Confirm that the SAN device virtualization feature is enabled for the switch.
- Step 6** Click the **Virtual Devices** tab and then click the **Create Row** icon.

Send documentation comments to mdsfeedback-doc@cisco.com

You see the Create Virtual Devices dialog box (see [Figure 27-7](#)).

Figure 27-7 Create Virtual Devices Dialog Box

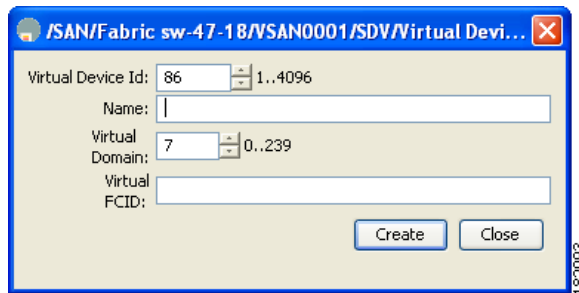

- Step 7** Select the Virtual Device ID from the drop-down list (ranges from 1 to 4096).
- Step 8** Enter a Name for the Virtual Device. Select the Virtual Domain and enter a Virtual FC ID for the virtual target.
- Step 9** Click **Create** to create the virtual target.
- Step 10** Click the **CFS** icon to commit and distribute the configuration changes.



Note

The pWWN of the virtual target does not appear in the zoning end devices database in Fabric Manager. If you want to zone the virtual device with a pWWN, you must enter it in the Add Member to Zone dialog box when creating a zone. However, if the device alias is in enhanced mode, the virtual device names appear in the device alias database in the Fabric Manager zoning window. In this case, users can choose to select either the device alias name or enter the pWWN in the Add Member to Zone dialog box.

For more information, see the [“Adding Zone Members” section on page 30-14](#).



Caution

Set the device alias mode to **enhanced** when using SDV (because the pWWN of a virtual device could change).

For example, SDV is enabled on a switch and a virtual device is defined. SDV assigns a pWWN for the virtual device, and it is zoned based on the pWWN in a zone. If you later disable SDV, this configuration is lost. If you reenable SDV and create the virtual device using the same name, there is no guarantee that it will get the same pWWN again. Hence, you would have to rezone the pWWN-based zone. However, if you perform zoning based on the device-alias name, there are no configuration changes required if or when the pWWN changes.

Be sure you understand how device alias modes work before enabling them. Refer to [Chapter 24](#), [“Distributing Device Alias Services”](#) for details and requirements about device alias modes.

Linking a Virtual Device with a Physical Device

After creating a virtual device and configuring it as part of a zone, you can define the primary device for it using the **link** command, which is also used to fail over to the secondary device.

Send documentation comments to mdsfeedback-doc@cisco.com


**Note**

When a link operation fails over to the secondary device, the virtual device is taken offline and then brought online.

To link a virtual target with a physical target using Fabric Manager, follow these steps:

-
- Step 1** Click the Real Devices tab and then click the Create Row icon.
- Step 2** Select the Virtual Device ID from the pull-down list or enter an existing ID for the virtual target that you are linking with a physical target(see [Figure 27-8](#)).
- Step 3** Select the Real Device ID of the physical target that you are linking with the virtual target.

Figure 27-8 Create Real Devices Dialog Box

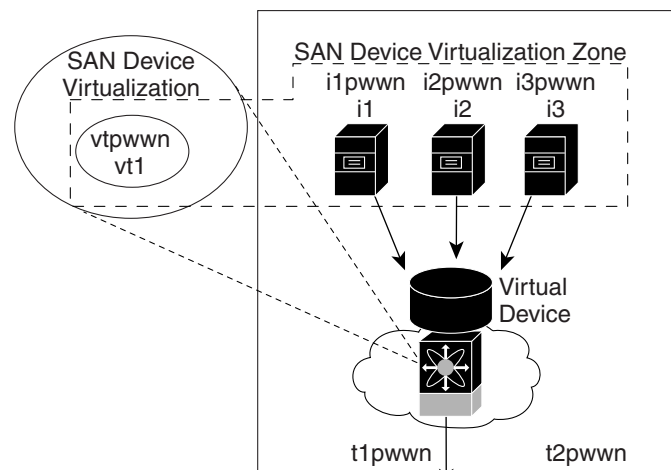

- Step 4** Choose either the pWWN or deviceAlias radio button, and select the appropriate pWWN or device alias from the pull-down menu. Note that the Name field is automatically populated when you select the pWWN or device alias.
- Step 5** Choose either the primary or secondary radio button for the Map Type.
- Step 6** Click the CFS icon to save and distribute these changes, or click Close to discard any unsaved changes.
-

Resolving Fabric Merge Conflicts

Whenever two fabrics merge SDV merges its database. A merge conflict can occur when there is a run-time information conflict or configuration mismatch. Run-time conflicts can occur do to:

- Identical pWWNs being assigned to different virtual devices
- The same virtual devices are assigned different pWWNs.
- The virtual device and virtual FC ID are mismatched.

Send documentation comments to mdsfeedback-doc@cisco.com

A *blank commit* is a commit operation that does not contain configuration changes, and enforces the SDV configuration of the committing switch fabric-wide. A blank commit operation resolves merge conflicts by pushing the configuration from the committing switch throughout the fabric, thereby reinitializing the conflicting virtual devices. Exercise caution while performing this operation, as it can easily take some virtual devices offline.

Merge failures resulting from a pWWN conflict can cause a failure with the device alias as well. A blank commit operation on a merge-failed VSAN within SDV should resolve the merge failure in the device alias.

You can avoid merge conflicts due to configuration mismatch by ensuring that:

- The pWWN and device alias entries for a virtual device are identical (in terms of primary and secondary).
- There are no virtual device name conflicts across VSANs in fabrics.

SDV Requirements and Guidelines

Be aware of the following requirements and guidelines as you plan and configure SDV:

- SDV should be enabled on switches where devices that are part of SDV zones are connected.
- SDV does not work for devices connected to non-MDS switches.
- Broadcast zoning is not supported for a zone with a virtual device.
- IVR and SDV cannot be used for the same device. In other words, a SDV-virtualized device cannot be part of a IVR zone or zoneset.
- Virtual device names should be unique across VSANs because they are registered with the device alias server, which is unaware of VSANs. For example, if you have enabled SDV and have registered a name, vt1 in both VSAN 1 and VSAN 2, then the device alias server cannot store both entries because they have the same name.
- You cannot specify the same primary device for different virtual devices.
- SDV does not work with soft zoning (*Soft zoning* means that zoning restrictions are applied only during interaction between the name server and the end device. If an end device somehow knows the FC ID of a device outside its zone, it can access that device), nor does it work with the **zone default-zone permit vsan** operation (which would otherwise permit or deny traffic to members in the default zone).
- If devices are not already zoned with the initiators, then you can configure SDV virtual device zones with no negative impact. If they are already zoned, then zoning changes are required.
- The real device-virtual device zone cannot coexist with the real device-real device zone. If the real devices are not already zoned together, then you can configure the real device-virtual device zone with no negative impact. If these devices are already zoned, then adding the real device-virtual device zone may cause the zone activation to fail. If this occurs, then you must delete one of the zones before activation.

For example, a user attempts to create a configuration with zone A, which consists of I, the initiator, and T, the target (I,T), and zone B, which consists of a virtual initiator, VI, and real target, T (zone VI, T). Such a configuration would fail. Likewise, an attempt to configure zone C, which consists of an initiator, I, and target T, with zone D, which consists of an initiator, I, and virtual target, VT (zone I, VT), would also fail.

Send documentation comments to mdsfeedback-doc@cisco.com

**Caution**

There must be at least one SDV-enabled switch that is *not* a Cisco MDS 9124 Switch between the server and the device that are being virtualized. In other words, SDV does not work when initiators and primary devices are connected to the same Cisco MDS 9124 Switch.

Default Settings

[Table 27-1](#) lists the default settings for SDV parameters.

Table 27-1 *Default SDV Configuration Parameters*

Parameters	Default
enable	disabled

Send documentation comments to mdsfeedback-doc@cisco.com