



## **Cisco Nexus 9336C-SE1 NX-OS Mode Switch Hardware Installation Guide**

**First Published:** 2025-09-03

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment causes interference to radio or television reception, which can be determined by turning the equipment off and on, users are encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications to this product not authorized by Cisco could void the FCC approval and negate your authority to operate the product.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2025 Cisco Systems, Inc. All rights reserved.



# CHAPTER 1

## Overview

---

- [Overview, on page 1](#)

## Overview

The Cisco Nexus 9336C-SE1 switch (N9336C-SE1) is a 1-rack mount unit (RU), top of rack (TOR) fixed-port switch designed for deployment in data centers.

To determine which transceivers, adapters, and cables this switch supports, see the [Cisco Transceiver Modules Compatibility Information](#) document.

This switch has these ports:

- 36 40/100G QSFP28 ports
- Two management ports (one 10/100/1000BASE-T port and one SFP port)
- One console port (RS-232)
- One USB port

This switch includes these user-replaceable components:

- Fan modules (6) with these airflow choices:
  - Port-side exhaust fan module with blue coloring (NXA-SFAN-35CFM-PE)
  - Port-side intake fan module with burgundy coloring (NXA-SFAN-35CFM-PI)

Both front-to-back and back-to-front airflow is supported.



### Note

To enable or disable displaying the serial number of the NXA-SFAN-35CFM-PI or NXA-SFAN-35CFM-PE fan, enter the **[no] hardware fan-sprom** command.



### Note


Each fan module has two rotors. The switch can function normally if one rotor inside any one fan module fails. In case of more than one rotor failure, the switch issues a warning and powers down in 2 minutes unless the fan module is replaced.

- Power supply modules (two—One for operations and one for redundancy [1+1]) with these choices:
  - 750-W port-side exhaust AC power supply with blue coloring (NXA-PAC-750W-PE)
  - 750-W port-side intake AC power supply with burgundy coloring (NXA-PAC-750W-PI)
  - 1100-W port-side exhaust AC power supply with blue coloring (NXA-PAC-1100W-PE2)
  - 1100-W port-side intake AC power supply with burgundy coloring (NXA-PAC-1100W-PI2)
  - 1100-W port-side exhaust DC power supply with blue coloring (NXA-PDC-1100W-PE)
  - 1100-W port-side intake DC power supply with burgundy coloring (NXA-PDC-1100W-PI)
  - 1100-W port-side exhaust HV power supply with blue coloring (NXA-PHV-1100W-PE)
  - 1100-W port-side intake HV power supply with burgundy coloring (NXA-PHV-1100W-PI)




**Note** All fan modules and power supplies must use the same airflow direction. Dual direction airflow is supported.

This figure shows the switch features on the port side of the chassis.

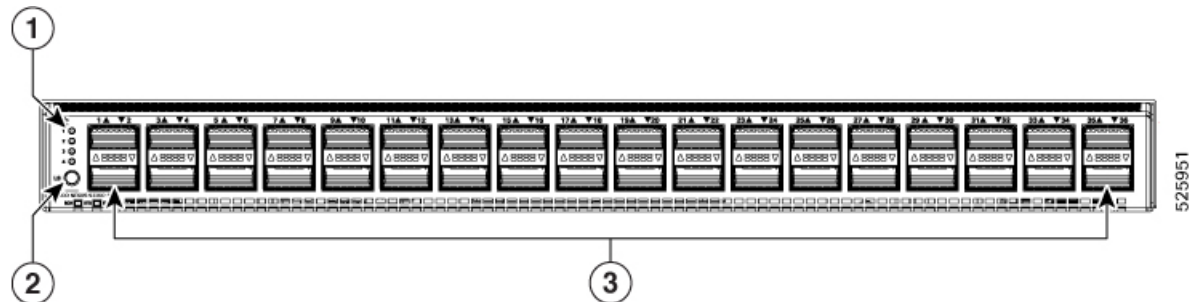

1	LEDs	3	36 40/100-Gigabit QSFP28 ports
2	Lane select button		


This figure shows the switch features on the power supply side of the chassis.

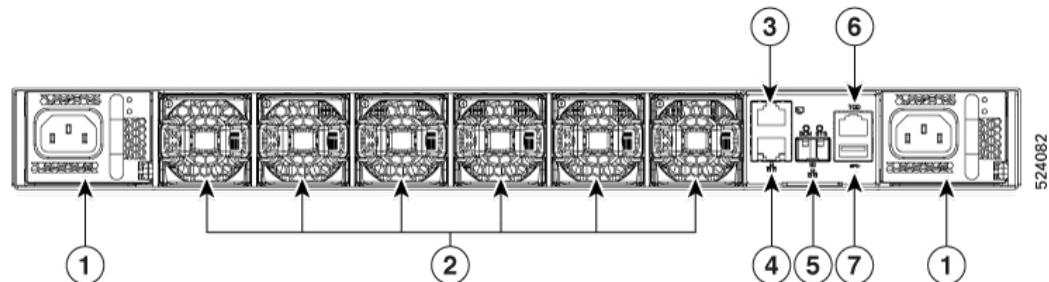

1	Power supply modules (1 or 2) (AC power supplies shown) with slots numbered 1 (left) and 2 (right)	4	Management port (Copper RJ45)	7	USB port
---	--	---	-------------------------------	---	----------

2	Fan modules (6) with slots numbered from 1 (left) to 6 (right)	5	Management Ethernet port		
3	Console port	6	Time of Day port		

This figure shows the side of the chassis.

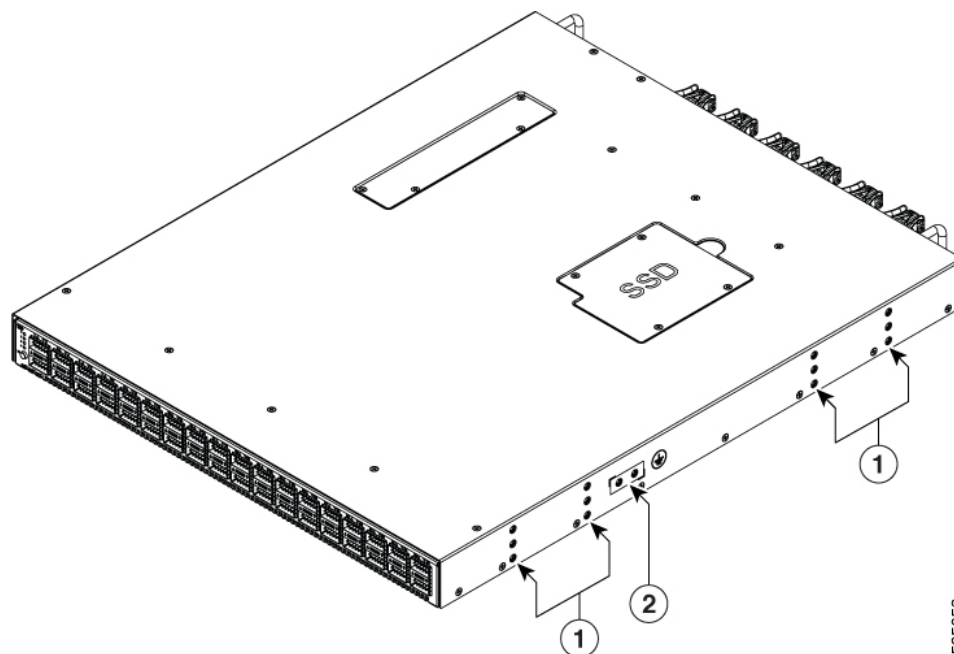

1	Screw holes for mounting brackets	2	Grounding pad
---	-----------------------------------	---	---------------

Depending on whether you plan to position the ports in a hot or cold aisle, you can order the fan and power supply modules with port-side intake or port-side exhaust airflow. For port-side intake airflow, the fan and power supplies have burgundy coloring. For port-side exhaust airflow, the fan and power supplies have blue coloring.

The fan and power supply modules are field replaceable. You can replace one fan module or one power supply module during operations, as long as the other modules are installed and operating. If you have only one power supply installed, you can install the replacement power supply in the open slot before removing the original power supply.



**Note** All fan and power supply modules must have the same direction of airflow. Otherwise, the switch can overheat and shut down.



**Caution** If the switch has port-side intake airflow (burgundy coloring for fan modules), locate the ports in the cold aisle. If the switch has port-side exhaust airflow (blue coloring for fan modules), locate the ports in the hot aisle. If you locate the air intake in a hot aisle, the switch can overheat and shut down.





## CHAPTER 2

# Preparing the Site

---

- [Temperature Requirements, on page 5](#)
- [Humidity Requirements, on page 5](#)
- [Altitude Requirements, on page 6](#)
- [Dust and Particulate Requirements, on page 6](#)
- [Minimizing Electromagnetic and Radio Frequency Interference, on page 6](#)
- [Shock and Vibration Requirements, on page 7](#)
- [Preventing Electrostatic Discharge Damage, on page 7](#)
- [Grounding Requirements, on page 7](#)
- [Planning for Power Requirements, on page 8](#)
- [Airflow Requirements, on page 9](#)
- [Rack and Cabinet Requirements, on page 10](#)
- [Clearance Requirements, on page 10](#)
- [Network Equipment-Building System \(NEBS\) Statements, on page 11](#)

## Temperature Requirements

The operating temperature of the switch is 32 to 104 degrees Fahrenheit (0 to 40 degrees Celsius) at sea level. For every 300 meters (1000 feet) above sea level, the maximum temperature is reduced by 1 degree Celsius. The non-operating temperature of the switch is -40 to 158 degrees Fahrenheit (-40 to 70 degrees Celsius).

## Humidity Requirements

High humidity can cause moisture to enter the switch. Moisture can cause corrosion of internal components and degradation of properties such as electrical resistance, thermal conductivity, physical strength, and size. The switch is rated to withstand from 5- to 95-percent (nonoperating) and 5- to 90-percent (operating) relative humidity.

Climate-controlled buildings usually maintain an acceptable level of humidity for the switch equipment. If the switch is located in an unusually humid location, use a dehumidifier to maintain the humidity within an acceptable range.

## Altitude Requirements

Altitude rating is 10,000 ft (3048 m). For China, it is 6,562 ft (2000 m).

## Dust and Particulate Requirements

Exhaust fans cool power supplies. System fans cool switches by drawing in air and exhausting air out through various openings in the chassis. Fans also introduce dust and other particles, causing contaminant buildup in the switch and increased internal chassis temperature. Dust and particles can act as insulators and interfere with the mechanical components in the switch. Keep a clean operating environment to reduce the negative effects of dust and other particles.

In addition to keeping your environment free of dust and particles, use these precautions to avoid contamination of your switch:

- Do not smoke near the switch.
- Do not eat or drink near the switch.

## Minimizing Electromagnetic and Radio Frequency Interference

Electromagnetic interference (EMI) and radio frequency interference (RFI) from the switch can adversely affect other devices, such as radio and television (TV) receivers. Radio frequencies that emanate from the switch can also interfere with cordless and low-power telephones. Conversely, RFI from high-power telephones can cause spurious characters to appear on the switch monitor.

RFI is defined as any EMI with a frequency above 10 kHz. This type of interference can travel from the switch to other devices through the power cable and power source or through the air as transmitted radio waves. The Federal Communications Commission (FCC) publishes specific regulations to limit the amount of EMI and RFI that are emitted by computing equipment. Each switch meets these FCC regulations.

To reduce the possibility of EMI and RFI, use these guidelines:

- Cover all open expansion slots with a blank filler plate.
- Always use shielded cables with metal connector shells for attaching peripherals to the switch.

When wires are run for any significant distance in an electromagnetic field, interference can occur to the signals on the wires with these implications:

- Bad wiring can result in radio interference emanating from the plant wiring.
- Strong EMI, especially when it is caused by lightning or radio transmitters, can destroy the signal drivers and receivers in the chassis and even create an electrical hazard by conducting power surges through lines into equipment.



---

**Note** To predict and prevent strong EMI, consult experts in radio frequency interference (RFI).

---



The wiring is unlikely to emit radio interference if you use a twisted-pair cable with a good distribution of grounding conductors. Copper cables should not be longer than maximum distances for the media type.

**Caution**

If the wires exceed the recommended distances, or if wires pass between buildings, give special consideration to the effect of a lightning strike in your vicinity. The electromagnetic pulse that is caused by lightning or other high-energy phenomena can easily couple enough energy into unshielded conductors to destroy electronic switches. Consult experts in electrical surge suppression and shielding if you have had similar problems in the past.

## Shock and Vibration Requirements

The switch has been shock- and vibration-tested for operating ranges, handling, and earthquake standards.

## Preventing Electrostatic Discharge Damage

Many switch components can be damaged by static electricity. Not exercising the proper electrostatic discharge (ESD) precautions can result in intermittent or complete component failures. To minimize the potential for ESD damage, always use an ESD-preventive anti-static wrist strap (or ankle strap) and ensure that it makes adequate skin contact.

**Note**

Check the resistance value of the ESD-preventive strap periodically. The measurement should be 1–10 megohms. Before you perform any of the procedures in this guide, attach an ESD-preventive strap to your wrist and connect the leash to the chassis.

## Grounding Requirements

The switch is sensitive to variations in voltage that is supplied by the power sources. Overvoltage, undervoltage, and transients (spikes) can erase data from memory or cause components to fail. To protect against these types of problems, ensure that there is an earth-ground connection for the switch.

Connect the grounding pad on the switch either directly to the earth-ground connection or to a fully bonded and grounded rack.

When the chassis is properly installed in a grounded rack, the switch is grounded because it has a metal-to-metal (no paint, stain, dirt, or anything else on it) contact to the rack. See Note to ensure proper conductivity between rack and switch is maintained.

Alternatively, ground the chassis by using a customer-supplied grounding cable that meets your local and national installation requirements. For U.S. installations, we recommend 6-AWG wire. Connect your grounding cable to the chassis with a grounding lug (provided in the switch accessory kit) and to the facility ground.



**Note** Create an electrical conducting path between the product chassis and the metal surface of the enclosure, or rack in which it is mounted, or to a grounding conductor. Provide electrical continuity by using thread-forming type mounting screws that remove any paint or non-conductive coatings and establish a metal-to-metal contact. Remove any paint or other non-conductive coatings on the surfaces between the mounting hardware and the enclosure or rack. Clean the surfaces and apply an antioxidant before installation.

## Planning for Power Requirements

The switch includes two power supplies (1-to-1 redundancy with current sharing) in one of these combinations:

- Two 750-W AC power supplies
- Two 1100-W AC power supplies
- Two 1100-W DC power supplies
- Two 1100-W HV power supplies



**Note** Note: If you want to run all 36 ports with 5.5W optical transceivers at 40C, you must have an 1100W-AC PSU.



**Note** Both power supplies must be the same type. Do not mix AC and DC power supplies in the same chassis. Preferably use the same wattage, also.



**Note** For  $n+1$  redundancy, you can use one or two power sources for the two power supplies. For  $2n$  redundancy, you must use two power sources and connect each power supply to a separate power source.



**Note** For 1+1 redundancy, you must use two power sources and connect each power supply to a separate power source.

The power supplies are rated to output 750 W or 1100 W, depending on the configuration, but the switch requires less than those amounts of power from the power supply. To operate the switch, provision enough power from the power source to cover the requirements of both the switch and a power supply. Typically, this switch and a power supply require about 367 W of power input from the power source. But, provision as much as 777 W power input from the power source to cover peak demand.



**Note** Some of the power supply modules have rating capabilities that exceed the switch requirements. When calculating your power requirements, use the switch requirements to determine the amount of power that is required for the power supplies.

To minimize the possibility of circuit failure, verify that each power-source circuit that is used by the switch is dedicated to the switch.

This Warning applies to AC input application.



**Warning** **Statement 1005**—Circuit Breaker when using AC power supplies

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective devices are rated not greater than 20A (North America), 16A (Europe), and 13A (UK).



**Note** This Warning applies to DC input application.



**Warning** **Statement 1005**—Circuit Breaker when using DC power supplies

This product relies on the building's installation for short-circuit (overcurrent) protection.

- Ensure that the protective devices are rated not greater than 40A when the switch is powered with Low Voltage DC power supplies.
- Ensure that the protective devices are rated not greater than 10A when the switch is powered with HVDC power supply.

## Airflow Requirements

The switch is positioned with its ports in either the front or the rear of the rack, depending on your cabling and maintenance requirements. To identify the airflow options for your switch, see the user-replaceable components in the *Overview* section of this document. Position the fan and power supply modules to move the coolant air from the cold aisle to the hot aisle in one of these ways:

- Port-side exhaust airflow—Cool air enters the chassis through the fan and power supply modules in the cold aisle and exhausts through the port end of the chassis in the hot aisle.
- Port-side intake airflow—Cool air enters the chassis through the port end in the cold aisle and exhausts through the fan and power supply modules in the hot aisle.
- Single-direction airflow—The direction of the installed fan modules determines the airflow.

Identify the airflow direction of each fan and power supply module by its coloring.

- Blue coloring indicates port-side exhaust airflow.

- Burgundy coloring indicates port-side intake airflow.



---

**Note** To prevent the switch from overheating and shutting down, position the air intake for the switch in a cold aisle. The fan and power supply modules must have the same direction of airflow. To change the airflow direction for the switch, shutdown the switch before changing the modules.

---

## Rack and Cabinet Requirements

Install these types of racks or cabinets for your switch:

- Standard perforated cabinets
- Solid-walled cabinets with a roof fan tray (bottom-to-top cooling)
- Standard open four-post Telco racks

Work with your cabinet vendors to determine which of their cabinets meet these requirements or see the Cisco Technical Assistance Center (TAC) for recommendations:

- Use a standard 19-inch (48.3-cm), four-post Electronic Industries Alliance (EIA) cabinet or rack with mounting rails that conform to English universal hole spacing per section 1 of the ANSI/EIA-310-D-1992 standard.
- The depth of a four-post rack must be 24 to 32 inches (61.0 to 81.3 cm) between the front and rear mounting rails (for proper mounting of the bottom-support brackets or other mounting hardware).

Also, you must have power receptacles that are located within reach of the power cords that are used with the switch.



---


**Warning** **Statement 1048**—Rack Stabilization

The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before installation or servicing. Failure to stabilize the rack can cause bodily injury.

---

## Clearance Requirements

Provide the chassis with adequate clearance between the chassis and any other rack, device, or structure so that you can properly install the switch. Provide the chassis with adequate clearance to route cables, provide airflow, and maintain the switch. For the clearances required for an installation of this chassis in a four-post rack, see the figure.

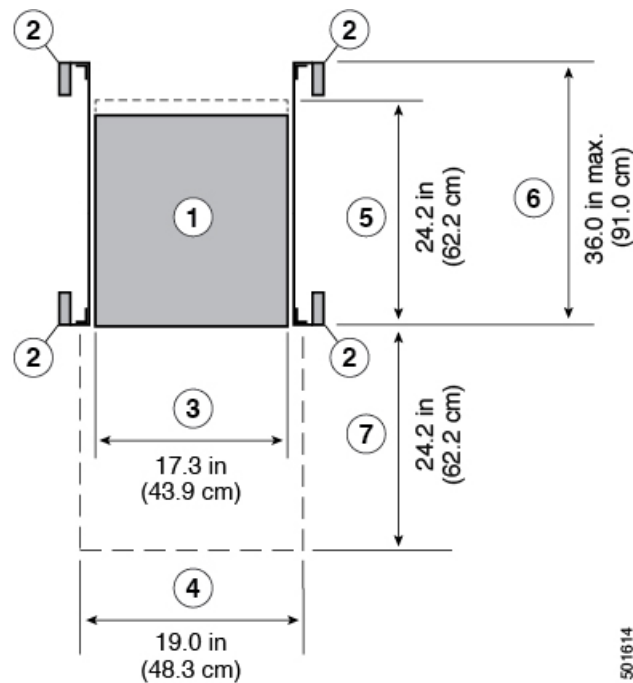

1	Chassis	5	Depth of the chassis 21.09 in (53.57 cm)
2	Vertical rack-mount posts and rails	6	Maximum extension of the bottom-support rails 36.0 in (91.4 cm) 33.0 in (83.8cm)
3	Chassis width 17.3 in (43.9 cm)	7	Depth of the front clearance area (equal to the depth of the chassis). 21.09 in (53.57 cm)
4	Width of the front clearance area (equal to the width of the chassis with two rack-mount brackets that are attached to it). 19.0 in (48.3 cm)		Chassis Height: 1.72 inches (4.4 cm) (1 RU)



**Note** Both the front and rear of the chassis must be open to both aisles for airflow.

## Network Equipment-Building System (NEBS) Statements

NEBS describes the environment of a typical United States Regional Bell Operating Company (RBOC) central office. NEBS is the most common set of safety, spatial, and environmental design standards applied to

telecommunications equipment in the United States. It is not a legal or regulatory requirement, but rather an industry requirement.

These NEBS statements apply to the Cisco N9336C-SE1 switch.:



---

**Note** **Statement 7001**—ESD Mitigation

This equipment may be ESD sensitive. Always use an ESD ankle or wrist strap before handling equipment. Connect the equipment end of the ESD strap to an unfinished surface of the equipment chassis or to the ESD jack on the equipment if provided.

---



---

**Warning** **Statement 7003**—Shielded Cable Shielded Cable Requirements for Intrabuilding Lightning Surge

The intrabuilding port(s) of the equipment or subassembly must use shielded intrabuilding cabling/wiring that is grounded at both ends.

The following port(s) are considered intrabuilding ports on this equipment:

RJ-45 Management Ethernet Port

---



---

**Note** **Statement 7004**—Special Accessories Required to Comply with GR-1089 Emission and Immunity Requirements

To comply with the emission and immunity requirements of GR-1089, shielded cables are required for the following ports:

Copper RJ-45 Ethernet Management port

---



---

**Warning** **Statement 7005**—Intrabuilding Lightning Surge and AC Power Fault

The intrabuilding port(s) of the equipment or subassembly must not be metalically connected to interfaces that connect to the outside plant (OSP) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

This statement applies to the intrabuilding ports listed below:

RJ-45 Ethernet Management port

---



---

**Warning** **Statement 7012**—Equipment Interfacing with AC Power Ports

Connect this equipment to AC mains that are provided with a surge protective device (SPD) at the service equipment that complies with NFPA 70, the National Electrical Code (NEC).

---

**Note** **Statement 7013**—Equipment Grounding Systems—Common Bonding Network (CBN)

This equipment is suitable for installations using the CBN.

**Note** **Statement 7015**—Equipment Bonding and Grounding

When you use thread-forming screws to bond equipment to its mounting metalwork, remove any paint and nonconductive coatings and clean the joining surfaces. Apply an antioxidant compound before joining the surfaces between the equipment and mounting metalwork.

**Note** **Statement 7016**—Battery Return Conductor

Treat the battery return conductor of this equipment as DC-I.

**Note** **Statement 7018**—System Recover Time

The equipment is designed to boot up in less than 30 minutes provided the neighboring devices are fully operational.

**Note** **Statement 8015**—Installation Location Network Telecommunications Facilities

This equipment is suitable for installation in network telecommunications facilities.

**Note** **Statement 8016**—Installation Location Where the National Electric Code (NEC) Applies

This equipment is suitable for installation in locations where the NEC applies.







## CHAPTER 3

# Installing the Switch Chassis

---

- [Safety](#), on page 15
- [Installation Options with Rack-Mount Kits](#), on page 19
- [Airflow Considerations](#), on page 19
- [Installation Guidelines](#), on page 19
- [Unpacking and Inspecting the Switch](#), on page 20
- [Procure Tools and Equipment](#), on page 21
- [Planning How to Position the Chassis in the Rack](#), on page 21
- [Install the Switch in a Two-Post Rack Using the NXK-ACC-KIT-1RU Rack-Mount Kit](#), on page 22
- [Installing the Switch Using the NXK-ACC-KIT-1RU Rack-Mount Kit](#), on page 24
- [Grounding the Chassis](#), on page 28
- [Starting the Switch](#), on page 29

## Safety

Before you install, operate, or service the switch, see the *Regulatory, Compliance, and Safety Information for the Cisco Nexus 9000 Series* content for important Safety Information.



### Warning

#### Statement 1071—Warning Definition

#### IMPORTANT SAFETY INSTRUCTIONS

Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number provided at the end of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS

---

**Warning****Statement 1089—Instructed and Skilled Person Definitions**

An instructed person is someone who has been instructed and trained by a skilled person and takes the necessary precautions when working with equipment.

A skilled person or qualified personnel is someone who has training or experience in the equipment technology and understands potential hazards when working with equipment.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.

**Warning****Statement 1074—Comply with Local and National Electrical Codes**

To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

**Note****Statement 407—Japanese Safety Instruction**

You are strongly advised to read the safety instruction before using the product.

<https://www.cisco.com/web/JP/techdoc/pldoc/pldoc.html>

When installing the product, use the provided or designated connection cables/power cables/AC adapters.

〈製品使用における安全上の注意〉

[www.cisco.com/web/JP/techdoc/index.html](http://www.cisco.com/web/JP/techdoc/index.html)

接続ケーブル、電源コードセット、ACアダプタ、バッテリーなどの部品は、必ず添付品または指定品をご使用ください。添付品・指定品以外をご使用になると故障や動作不良、火災の原因となります。また、電源コードセットは弊社が指定する製品以外の電気機器には使用できないためご注意ください。

**Warning****Statement 1017—Restricted Area**

This unit is intended for installation in restricted access areas. Only skilled, instructed, or qualified personnel can access a restricted access area.


**Warning****Statement 1091—Installation by an Instructed Person**

Only an instructed person or skilled person should be allowed to install, replace, or service this equipment. See statement 1089 for the definition of an instructed or skilled person.

There are no serviceable parts inside. To avoid risk of electric shock, do not open.

**Warning****Statement 1028—More Than One Power Supply**

This unit might have more than one power supply connection. To reduce risk of electric shock, remove all connections to de-energize the unit.

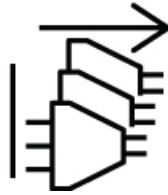**Warning****Statement 1003—Power Disconnection**

To reduce risk of electric shock or personal injury, disconnect power before removing or replacing components or performing upgrades.

**Warning****Statement 1046—Installing or Replacing the Unit**

To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

If your unit has modules, secure them with the provided screws.

**Warning****Statement 1022—Disconnect Device**

To reduce the risk of electric shock and fire, a readily accessible disconnect device must be incorporated in the fixed wiring.

**Warning****Statement 1033—Safety Extra-Low Voltage (SELV)—IEC 60950/ES1—IEC 62368 DC Power Supply**

To reduce the risk of electric shock, connect the unit *only* to a DC power source that complies with the SELV requirements in the IEC 60950-based safety standards or the ES1 requirements in the IEC 62368-based safety standards.

**Warning****Statement 1024—Ground Conductor**

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.

**Warning****Statement 1032—Lifting the Chassis**

To prevent personal injury or damage to the chassis, never attempt to lift or tilt the chassis using the handles on modules, such as power supplies, fans, or cards. These types of handles are not designed to support the weight of the unit.

**Warning****Statement 1006—Chassis Warning for Rack-Mounting and Servicing**

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

**Warning****Statement 1056—Unterminated Fiber Cable**

Invisible laser radiation may be emitted from the end of the unterminated fiber cable or connector. Do not view directly with optical instruments. Viewing the laser output with certain optical instruments, for example, eye loupes, magnifiers, and microscopes, within a distance of 100 mm, may pose an eye hazard.

**Caution**

To prevent loss of input power, ensure the total maximum loads on the circuits supplying power to the switch are within the current ratings for the wiring and breakers.

**Note**

For AC input application, please refer to the statement below:

**Warning****Statement 1005—Circuit Breaker**

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective devices is rated not greater than 20A (North America), 16A (Europe), and 13A (UK).

**Warning****Statement 1005—Circuit Breaker**

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective devices is rated not greater than 40A for the regular DC power supplies (rated 48-60VDC) and 10A for the HVDC power supplies.

## Installation Options with Rack-Mount Kits

The rack-mount kit enables you to install the switch into racks of varying depths. Position the switch with easy access to either the port connections or the fan and power supply modules.

Install the switch using these rack-mount options:

- Rack-mount kit (NXX-ACC-KIT-1RU) which you can order from Cisco. This option offers you easy installation, greater stability, increased weight capacity, added accessibility, and improved removability with front and rear removal.

The rack or cabinet that you use must meet the requirements listed in the section [General Requirements for Cabinets and Racks](#), on page 49.

**Note**

You are responsible for verifying that your rack and rack-mount hardware comply with the guidelines that are described in this document.

## Airflow Considerations

The switch comes with fan and power supply modules that have either port-side intake or port-side exhaust airflow for cooling the switch. If you are positioning the port end of the switch in a cold aisle, verify that the switch has port-side intake fan modules with burgundy coloring. If you are positioning the fan and power supply modules in a cold aisle, verify that the switch has port-side exhaust fan modules with blue colorings. All fan modules must have the same direction of airflow.

## Installation Guidelines

When installing the switch, follow these guidelines:

- Ensure that there is adequate clearance space around the switch to allow for servicing the switch and for adequate airflow.
- Ensure that the chassis can be adequately grounded. If the switch is not mounted in a grounded rack, we recommend connecting the system ground on the chassis directly to an earth ground.
- Ensure that the site power meets the power requirements for the switch. If available, use an uninterruptible power supply (UPS) to protect against power failures.

**Caution**

Avoid UPS types that use ferroresonant technology. These UPS types can become unstable with the switch, which can have substantial current draw fluctuations because of fluctuating data traffic patterns.

- Ensure that circuits are sized according to local and national codes. Typically, this often requires one or both of these:

- AC power supplies typically require at least a 15-A or 20-A AC circuit, 100 to 240 VAC, and a frequency of 50 to 60 Hz.

**Caution**

To prevent loss of input power, ensure the total maximum loads on the circuits supplying power to the switch are within the current ratings for the wiring and breakers.

**Warning****Statement 1005—Circuit Breaker**

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective devices is rated not greater than 20A (North America), 16A (Europe), and 13A (UK).

**Warning****Statement 1005—Circuit Breaker**

This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective devices is rated not greater than 40A for the regular DC power supplies (rated 48-60VDC) and 10A for the HVDC power supplies.

## Unpacking and Inspecting the Switch

Before you install the switch, unpack and inspect the switch for damage or missing components. If anything is missing or damaged, contact your customer service representative immediately.

**Tip**

Keep the shipping container in case the chassis requires shipping at a later time.

### Before you begin

Before you unpack the switch and before you handle any switch components, be sure that you are wearing a grounded electrostatic discharge (ESD) strap. To ground the strap, attach it directly to an earth ground or to a grounded rack or grounded chassis (there must be a metal-to-metal connection to the earth ground).

### Procedure

#### Step 1

Compare the shipment to the equipment list provided by your customer service representative and verify that you have received all items, including:

- Accessory Kit

**Step 2** Check for damage and report any discrepancies or damage to your customer service representative. Have this information ready:

- Invoice number of shipper (see packing slip)
  - Model and serial number of the damaged unit
  - Description of damage
  - Effect of damage on the installation
- 

## Procure Tools and Equipment

Obtain these necessary tools and equipment for installing the chassis:

- Number 1 and number 2 Phillips screwdrivers with torque capability to rack-mount the chassis.
- 3/16-inch flat-blade screwdriver.
- Tape measure and level.
- ESD wrist strap or other grounding device.
- Antistatic mat or antistatic foam.
- Crimping tool for lug.
- Wire-stripping tool.
- M4 screws to fix brackets (16).
- M4 screws to fix a ground lug (2).

## Planning How to Position the Chassis in the Rack

The switch is designed so that you can have coolant air flow through the switch in one of two directions:

- Enter the port side and exhaust out the power supply side (port-side intake airflow).
- Enter the power supply side and exhaust out the port side (port-side exhaust airflow)

For port-side intake airflow, the switch must have port-side intake fan and power supply modules with one or more of these colorings:

- Red coloring on fan modules and AC power supplies
- Red coloring on fan modules and DC power supplies

For port-side exhaust airflow, the switch must have port-side intake fan and power supply modules with one or more of these colorings:

- Blue coloring on fan modules and AC power supplies

- Blue coloring on fan modules and DC power supplies

Plan the positioning of the switch so that its ports are located close to ports on connected devices or so that the fan and power supply modules are conveniently located in a maintenance aisle. Order the modules that move coolant air in the appropriate direction from the cold aisle to the hot aisle.



**Note** All fan and power supply modules in the same switch must operate with the same direction of airflow. The air intake portion of the switch must be located in a cold aisle.

## Install the Switch in a Two-Post Rack Using the NXK-ACC-KIT-1RU Rack-Mount Kit

To install the switch:

- Attach front bracket to the side of the system, and
- Secure the switch to the two-post rack.

### Before you begin

- Inspect the switch shipment to ensure that you have everything ordered.
- Verify the switch rack-mount kit includes these parts for a 2-post configuration:
  - Front rack-mount brackets (2)
  - M4 x 0.7 x 8-mm Phillips pan-head screws (4)
- The rack is installed and secured to its location.



**Note** You supply the eight 10-32 or 12-24 screws required to mount the slider rails and switch to the rack.

### Procedure


#### Step 1

Install two front rack-mount brackets to the switch.

- Secure the front-mount bracket to the chassis using four M4 screws. Tighten each screw to 12 in-lb (1.36 N m) of torque.



**Figure 1: Install Rack-Mount Bracket to Chassis**

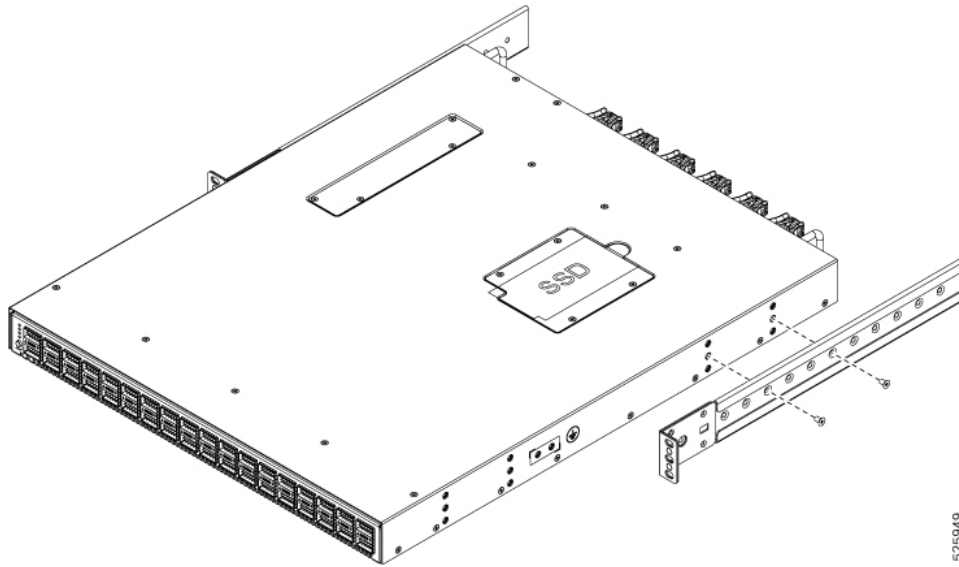

- b) Repeat Step 1a for the other front rack-mount bracket on the other side of the switch. Be sure to position that bracket the same distance from the front of the switch.

**Step 2**


If you are not installing the chassis into a grounded rack, attach a customer-supplied grounding wire to the chassis as explained in the [Grounding the Chassis, on page 28](#) section. If you are installing the chassis into a grounded rack, skip this step.

**Step 3**

Insert the switch into the rack and attach it.

- a) Holding the chassis level, insert screws (12-24 or 10-32, depending on the rack type) in each of the two-front rack-mount brackets (using a total of six screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails (see the figure).

Figure 2: Insert Switch into Two-Post Rack

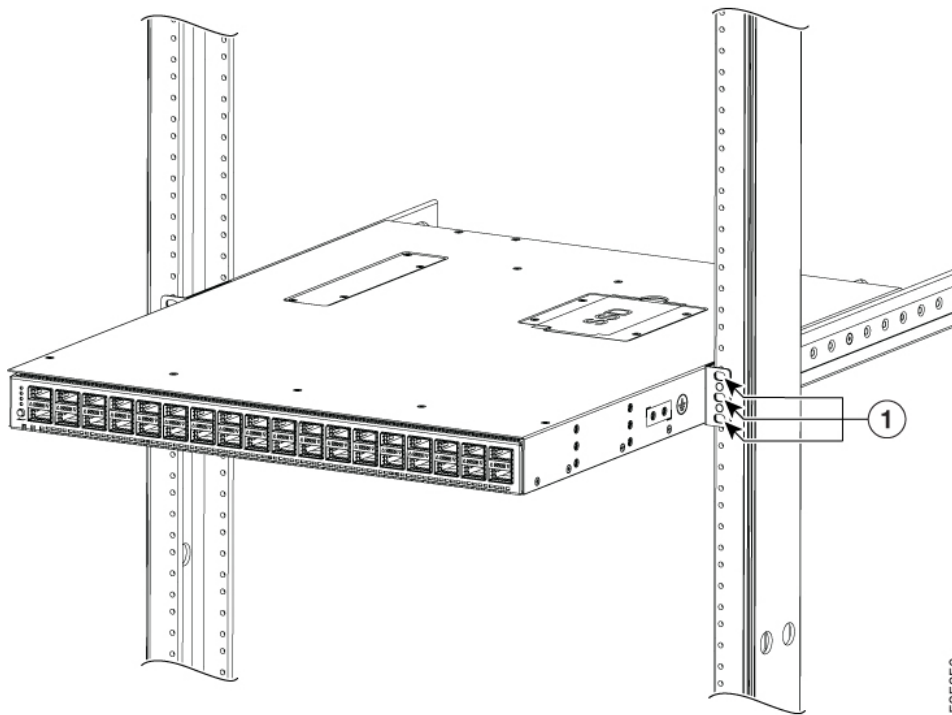

1	12-24 or 10-32 screws (3 on each side)
---	--

b) Tighten the 10-32 screws to 20 in-lb (2.26 N m) or tighten the 12-24 screws to 30 in-lb (3.39 N m) of torque.

**Step 4**

If you attached a grounding wire to the chassis grounding pad, connect the other end of the wire to the facility ground.

## Installing the Switch Using the NXK-ACC-KIT-1RU Rack-Mount Kit

To install the switch:

- attach front and rear mounting brackets to the switch,
- slide the switch onto the slider rails, and
- secure the switch to the front of the rack.

Typically, the front of the rack is the side easiest to access for maintenance.



**Note** You must supply the eight 10-32 or 12-24 screws required to mount the slider rails and switch to the rack.

**Before you begin**

- Inspect the switch shipment to ensure that you have everything ordered.
- Verify that the switch rack-mount kit includes these parts:
  - Front rack-mount brackets (2)
  - Rear rack-mount brackets (2)
  - Slider rails (2)
  - M4 x 0.7 x 8-mm Phillips pan-head screws (10)
- The rack is installed and secured to its location.


**Procedure****Step 1**

Install two front rack-mount brackets and the two rear rack-mount brackets to the switch:

- a) Determine which end of the chassis is to be located in the cold aisle:
  - If the switch has port-side intake modules (fan modules with burgundy coloring), position the switch so that its ports will be in the cold aisle.
  - If the switch has port-side exhaust modules (fan modules with blue coloring), position the switch so that its fan and power supply modules will be in the cold aisle.
- b) Position the front rack-mount bracket and the rear rack-mount bracket so that its screw holes are aligned to the screw holes on the side of the chassis.

**Note**

You can align the holes in the rack-mount bracket to the holes on the side of the chassis (see the two ways to mount these brackets on a typical chassis, in figure 1). The holes that you use depend on the requirements of your rack and the amount of clearance required for interface cables (3 inches [7.62 cm] minimum) and module handles (1 inch [2.54 cm] minimum).

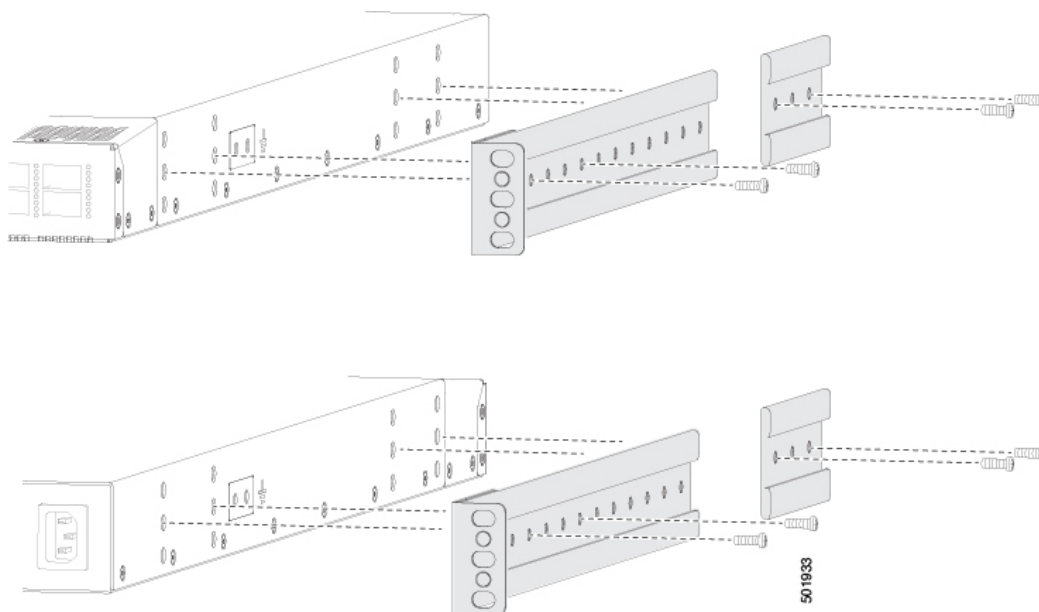**Figure 3: Installing Rack-Mount Bracket to Chassis**

- c) Secure the front-mount bracket and the back-mount bracket to the chassis using four M4 screws and tighten each screw to 12 in-lb (1.36 N·m) of torque.
- d) Repeat Step 1 for the other front rack-mount bracket and the other back-mount bracket on the other side of the switch. Position that bracket the same distance from the front of the switch.


**Note**

Depending on the chassis depth, the back rack-mount bracket may not fit. If it does not fit, the back rack-mount bracket is not needed.

**Step 2** If you are not installing the chassis into a grounded rack, attach a customer-supplied grounding wire to the chassis as explained in the section [Grounding the Chassis, on page 28](#). If you are installing the chassis into a grounded rack, skip this step.

**Step 3** Install the slider rails on the rack or cabinet:

- a) Determine which two posts of the rack or cabinet you should use for the slider rails. Of the four vertical posts in the rack or cabinet, two will be used for the front mount brackets attached to the easiest-accessed end of the chassis. The other two posts will have the slider rails.
- b) Position a slider rail at the desired level on the back side of the rack and use 12-24 screws or 10-32 screws, depending on the rack thread type, to attach the rails to the rack (see figure 2). Tighten 12-24 screws to 30 in-lb (3.39 N·m) of torque and tighten 10-32 screws to 20 in-lb (2.26 N·m) of torque.

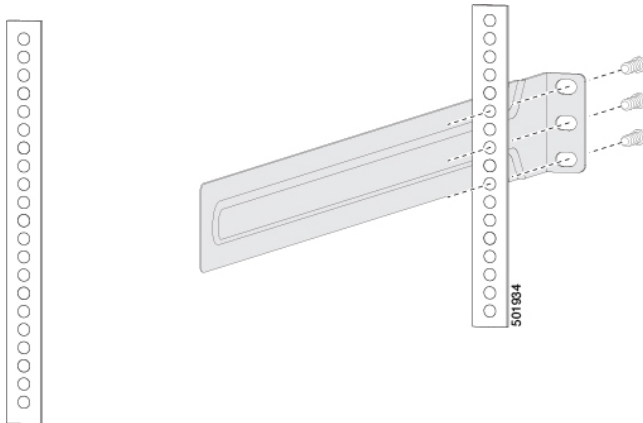**Figure 4: Installing the Slider Rail**


- c) Repeat Step 3 to attach the other slider rail to the other side of the rack.

Ensure that the slider rails are at the same level. Use a level tool, tape measure, or carefully count the screw holes in the vertical mounting rails.

#### Step 4


Insert the switch into the rack and attach it:

- a) Using two hands, position the two, rear, rack-mount brackets on the switch between the rack or cabinet posts that do not have slider rails attached to them (see figure 3).

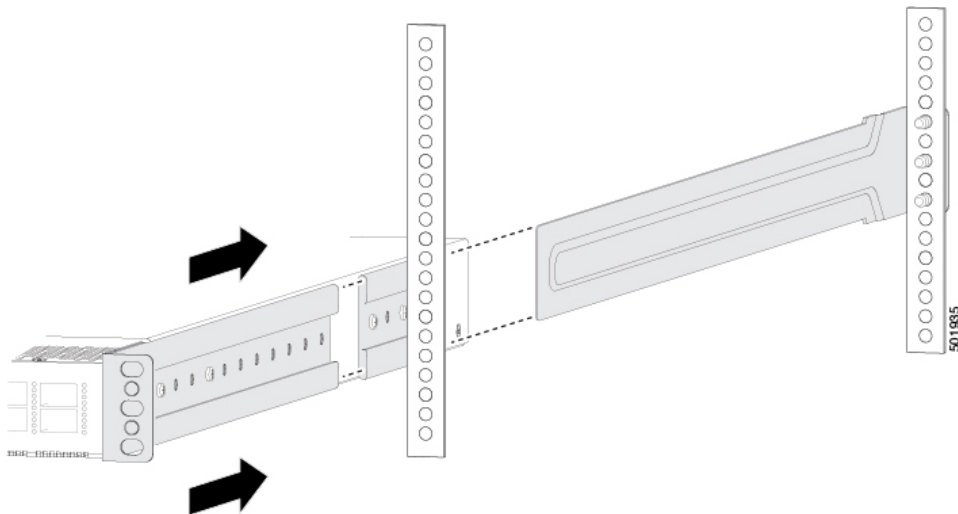**Figure 5: Installing the Switch**

- b) Align the two, rear, rack-mount guides on either side of the switch with the slider rails installed in the rack. Slide the rack-mount guides onto the slider rails, and then gently slide the switch all the way into the rack until the front rack-mount brackets come in contact with two rack or cabinet posts.
- c) Holding the chassis level, insert screws (12-24 or 10-32, depending on the rack type) in each of the two front rack-mount brackets (using a total of six screws) and into the cage nuts or threaded holes in the vertical rack-mounting rails (see figure 4).

Figure 6: Attaching the Switch to the Rack

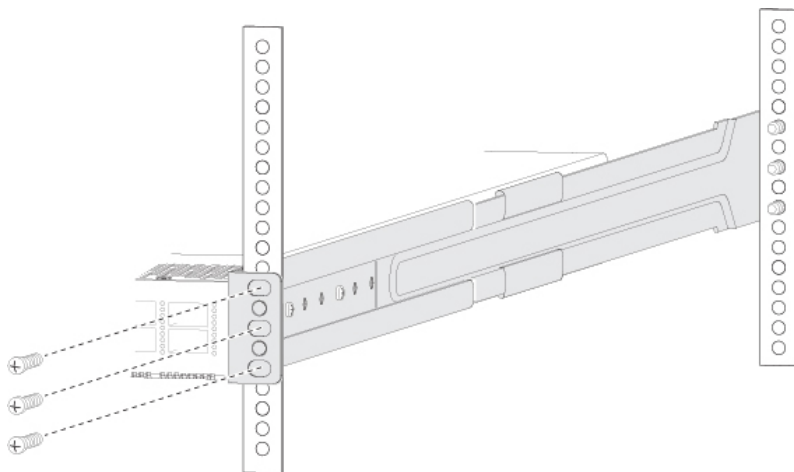

- d) Tighten the 10-32 screws to 20 in-lb (2.26 N·m) or tighten the 12-24 screws to 30 in-lb (3.39 N·m) of torque.

**Step 5** If you attached a grounding wire to the chassis grounding pad, connect the other end of the wire to the facility ground.

## Grounding the Chassis

The switch chassis is automatically grounded when you properly install the switch in a grounded rack with metal-to-metal connections between the switch and rack.



**Note** Provide an electrical conducting path between the product chassis and the metal surface of the enclosure or rack in which it is mounted or to a grounding conductor. To ensure electrical continuity, use thread-forming type mounting screws that remove any paint or non-conductive coatings and establish a metal-to-metal contact. Remove any paint or other non-conductive coatings on the surfaces between the mounting hardware and the enclosure or rack. Clean the surfaces and apply an antioxidant before installation.

Ground the rack if using LVDC power supplies. If using AC or HVDC power supplies, the power cord for the AC power supplies provides grounding for the chassis. For supplemental grounding or bonding, attach a customer-supplied grounding cable to the chassis ground pad.

Ground the chassis. If you are using a 2-post rack, attach a customer-supplied grounding cable. Attach the cable to the chassis grounding pad and the facility ground. If you are using a 4-post rack, ensure that your chassis is grounded through the rack mount system or the power cable (AC or HVDC).



**Warning** **Statement 1024**—Ground Conductor

This equipment must be grounded. To reduce the risk of electric shock, never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.



**Warning Statement 1046**—Installing or Replacing the Unit


To reduce risk of electric shock, when installing or replacing the unit, the ground connection must always be made first and disconnected last.

**Before you begin**

Before you can ground the chassis, verify the earth ground contact has a solid connection to the data center building.

**Procedure**

- Step 1** Use a wire-stripping tool to remove approximately 0.75 inch (19 mm) of the covering from the end of the grounding wire. We recommend 6-AWG wire for the U.S. installations.
- Step 2** Insert the stripped end of the grounding wire into the open end of the grounding lug. Use a crimping tool to crimp the lug to the wire. See the figure. Verify that the ground wire is securely attached to the grounding lug by attempting to pull the wire out of the crimped lug (tug test).

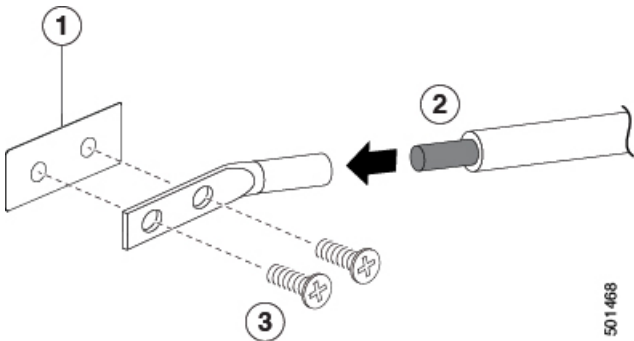

1	Chassis grounding pad	3	2 M4 screws are used to secure the grounding lug to the chassis
2	Grounding cable, with 0.75 in. (19 mm) of insulation that is stripped from one end, which is inserted into the grounding lug and crimped in place		

- Step 3** Secure the grounding lug to the chassis grounding pad with two M4 screws, see figure 1. Tighten the screws to 11 to 15 in-lb (1.24 to 1.69 N m) of torque.
- Step 4** Prepare the other end of the grounding wire and connect it to the facility ground.

# Starting the Switch

Start the switch by connecting it to its dedicated power source. If you need  $n+n$  redundancy, connect each power supply in a switch to a different power source.



**Note** This equipment is designed to boot up in less than 30 minutes, dependent on its neighboring devices being fully up and running.

**Table 1: Electrical Ratings**

AC Power Supply Unit PIDs	Supported Switches	Input Voltage	Input Current (Max)	Input Frequency	Output Power
NXA-PAC-750W-PI	Cisco Nexus 9336C-SE1	100-240 VAC	8.5A	50-60 Hz	750 W
NXA-PAC-750W-PE	Cisco Nexus 9336C-SE1	100-240 VAC	8.5A	50-60 Hz	750 W
NXA-PAC-1100W-PI	Cisco Nexus 9336C-SE1	100-240 VAC	12A	50-60 Hz	1100 W
NXA-PAC-1100W-PE	Cisco Nexus 9336C-SE1	100-240 VAC	12A	50-60 Hz	1100 W
NXA-PDC-1100W-PI	Cisco Nexus 9336C-SE1	-48 VDC to -60 VDC	30A	-	1100W
NXA-PDC-1100W-PE	Cisco Nexus 9336C-SE1	-48 VDC to -60 VDC	30A	-	1100W
NXA-PHV-1100W-PI	Cisco Nexus 9336C-SE1	100-277 VAC 240 - 380 VDC	13A 5.5A	50 - 60HZ (AC only)	1100W
NXA-PHV-1100W-PE	Cisco Nexus 9336C-SE1	100-277 VAC 240 - 380 VDC	13A 5.5A	50 - 60HZ (AC only)	1100W

### Before you begin

- The switch must be installed and secured to a rack or cabinet.
- The switch must be adequately grounded.
- The rack must be close enough to the dedicated power source so that you can connect the switch to the power source by using the designated power cables.
- You have the designated power cables for the power supplies that you are connecting to the dedicated power sources.



**Note** Depending on the outlet receptacle on your AC power distribution unit, you might need an optional jumper power cord to connect the switch to your outlet receptacle.

- The switch is not connected to the network (this includes any management or interface connections).



- The fan and power supply modules are fully secured in their chassis slots.

## Procedure

- Step 1** (Optional) For any AC power supply, do this:
- a) Using the recommended AC power cable for your country or region, connect one end to the AC power supply.
  - b) Connect the other end of the power cable to the AC power source.
- Step 2** (Optional) For any HVAC/HVDC power supply, connect it to a power source like this:
- a) Using the recommended high voltage power cable for your country or region, connect the Anderson Power Saf-D-Grid connector on the power cable to the power receptacle on the power supply. Make sure that the connector clicks when fully pushed into the receptacle.
  - b) Connect the other end of the power cable to a power source.
    - When connecting to an HVAC power source, insert the plug in a receptacle for the HVAC power source.
    - When connecting to an HVDC power source, do this:
      1. Verify that the power is turned off at a circuit breaker for the power source terminals.
      2. Remove the nuts from each of the terminal posts for the power source.
      3. Place the power cable ground-wire terminal ring on the ground terminal for the power source and secure them with a terminal nut.
      4. Place the power cable negative-wire terminal ring on the negative terminal for the power source and secure them with a terminal nut.
      5. Place the power cable positive-wire terminal ring on the positive terminal for the power source and secure them with a terminal nut.
      6. If there is a safety cover for the power source terminals, place and secure it over the terminals.
      7. Turn on the power at the power source circuit breaker.
- Step 3** (Optional) For any DC power supply, do this:
- a) Turn off the circuit breaker for the power source.
  - b) When using an LV DC power supply that does not use a lug, connect the supplied wiring harness to the source. Or connect the user-supplied wires to the LV DC power source.
  - c) When using an LV DC power supply that does not use a lug, connect the attached plug of the supplied wiring harness to the power supply. Or attach the lugs of the user supplied wires to the power supply.
  - d) If there is a safety cover for the power source terminals, place and secure it over the terminals.
  - e) Turn on the power at the circuit breaker for the DC power source.
- Step 4** Verify that the power supply LED is on and green.
- Step 5** Listen for the fans; they should begin operating when the power supply is powered.
- Step 6** After the switch boots, verify that these LEDs are lit:
- On the fan modules, the Status (STA or STS) LED is green.
- If a fan module Status LED is not green, try reinstalling the fan module.

- After initialization, the switch chassis Status (labeled as STA or STS) LED is green.

**Step 7** Verify that the system software has booted and the switch has initialized without error messages.

A setup utility automatically launches the first time that you access the switch and guides you through the basic configuration. For instructions on how to configure the switch and check module connectivity, see the appropriate [Cisco Nexus 9000 Series Configuration Guides](#).

---



## CHAPTER 4

# Connecting the Switch to the Network

- [Overview of Network Connections, on page 33](#)
- [Connecting a Console to the Switch, on page 34](#)
- [Creating the Initial Switch Configuration, on page 35](#)
- [Setting Up the Management Interface, on page 36](#)
- [Connecting Interface Ports to Other Devices, on page 37](#)
- [Maintaining Transceivers and Optical Cables, on page 37](#)

## Overview of Network Connections

After you install the switch in a rack and power it up, make these network connections:

- **Console connection**—This is a direct local management connection that you use to initially configure the switch. Make this connection **first** to initially configure the switch and determine its IP address, which is needed for the other connections.
- **Management connection**—After you complete the initial configuration using a console, make this connection to manage all future switch configurations.
- **Uplink and downlink interface connections**—These are connections to hosts and servers in the network.

Each of these connection types is explained in one of these sections.



**Note** When running cables in overhead or subfloor cable trays, we strongly recommend that you locate power cables and other potential noise sources as far away as practical from network cabling that terminates on Cisco equipment. In situations where long parallel cable runs cannot be separated by at least 3.3 feet (1 meter), we recommend that you shield any potential noise sources by housing them in a grounded metallic conduit.



**Note** When using SFP+ or SFP transceivers in a QSFP+ or QSFP28 uplink port, install a QSFP-to-SFP adapter, such as the CVR-QSFP-SFP10G adapter, in the QSFP port and then install the SFP+ or SFP transceiver. The switch automatically sets the port speed to the speed of the installed transceiver.

# Connecting a Console to the Switch

Before you create a network management connection for the switch or connect the switch to the network, create a local management connection through a console terminal. Then configure an IP address for the switch. Use the console to perform these functions, each of which can be performed through the management interface after you make that connection.

- Configure the switch using the command-line interface (CLI).
- Monitor network statistics and errors.
- Configure Simple Network Management Protocol (SNMP) agent parameters.
- Download software updates.

Make this local management connection between the asynchronous serial port on a supervisor module and a console device capable of asynchronous transmission. Typically, you use a computer terminal as the console device. On the supervisor modules, use the console serial port.



---

**Note** Before you can connect the console port to a computer terminal, make sure that the computer terminal supports VT100 terminal emulation. The terminal emulation software makes communication between the switch and the computer possible during setup and configuration.

---

## Before you begin

- The switch must be fully installed in its rack, connected to a power source, and grounded.
- The necessary cabling for the console, management, and network connections must be available.
  - An RJ-45 rollover cable provided in the switch accessory kit.
  - Network cabling is routed to the location of the installed switch.

## Procedure

---

**Step 1** Configure the console device to match these default port characteristics:

- 115200 baud
- 8 data bits
- 1 stop bit
- No parity

**Step 2** Connect an RJ-45 rollover cable to the console port on the switch.  
Find this cable in the accessory kit.

**Step 3** Route the RJ-45 rollover cable to the console or a modem.

**Step 4** Connect the other end of the RJ-45 rollover cable to the console or to a modem.

---

**What to do next**

Create the initial switch configuration. See [Creating the Initial Switch Configuration, on page 35](#).

## Creating the Initial Switch Configuration

**Before you begin**

- A console device must be connected with the switch.
- The switch must be connected to a power source.
- Determine the IP address and the netmask that is needed for the Management (Mgmt0) interface.

**Procedure**

---

**Step 1** Power up the switch by connecting each installed power supply to an AC circuit.

If you are using the combined or power-supply ( $n+1$ ) power mode, connect all the power supplies to the same AC circuit.

If you are using the input-source ( $n+n$ ) power mode, connect half of the power supplies to one AC circuit. Connect the other half of the power supplies to another AC circuit.

The Input and Output LEDs on each power supply light up (green) when the power supply units are sending power to the switch. The software asks you to specify a password to use with the switch.

**Step 2** Enter a new password for this switch.

The software checks the security strength of your password. It rejects your password if it does not meet these guidelines:

- At least eight characters.
- Minimizes or avoids the use of consecutive characters (such as "abcd").
- Minimizes or avoids repeating characters (such as "aaabbb").
- Does not contain recognizable words from the dictionary.
- Does not contain proper names.
- Contains both uppercase and lowercase characters.
- Contains numbers and letters.

Examples of strong passwords are:

- If2CoM18
- 2004AsdfLkj30
- Cb1955S21

**Note**

Clear text passwords cannot include the dollar sign (\$) special character.

**Tip**

If a password is trivial (such as a short, easy-to-decipher password), the software will reject your password configuration. Configure a strong password as explained in this step. Passwords are case-sensitive.

When you enter a strong password, the software asks you to confirm the password.

- Step 3** Enter the same password again.
- If you enter the same password, the software accepts the password and begins asking a series of configuration questions.
- Step 4** Until you are asked for an IP address, enter the default configuration for each question.
- Repeat this step for each question until you are asked for the Mgmt0 IPv4 address.
- Step 5** Enter the IP address for the management interface.
- The software asks for the Mgmt0 IPv4 netmask.
- Step 6** Enter a network mask for the management interface.
- The software asks if you need to edit the configuration.
- Step 7** Enter **no**, to not edit the configuration.
- The software asks if you need to save the configuration.
- Step 8** Enter **yes** to save the configuration.
- 

**What to do next**

Set up the management interface for each supervisor module on the switch.

## Setting Up the Management Interface

**Before you begin**

- The switch must be powered on.
- The switch must be initially configured using a console.

**Procedure**

- Step 1** **Note**
- Use only one of these management ports—the switch does not support the use of both management ports.
- Step 2** Connect the other end of the cable to a 10/100/1000 or SFP port on a network device.
-

## Connecting Interface Ports to Other Devices

After you perform the initial configuration for the switch and create a management connection, you are ready to connect the interface ports on the switch to other devices. Depending on the types of interface ports on the switch, use interface cables with QSFP28, QSFP+, SFP+, SFP transceivers, or RJ-45 connectors to connect the switch to other devices.



**Note** When using SFP+ or SFP transceivers in a QSFP+ or QSFP28 uplink port, install a QSFP-to-SFP adapter, such as the CVR-QSFP-SFP10G adapter, in the QSFP port and then install the SFP+ or SFP transceiver. The switch automatically sets the port speed to the speed of the installed transceiver.

If the transceivers that you are using can be separated from their optical cables, install the transceivers without their cables before inserting the cables into the transceivers. This helps to prolong the life of both the transceiver and cables. When removing transceivers from the switch, remove the optical cable first and then remove the transceiver.

To determine which transceivers, adapters, and cables are supported by this switch, see the [Cisco Transceiver Modules Compatibility](#) Information document.

## Maintaining Transceivers and Optical Cables

Keep transceivers and fiber-optic cables clean and dust free to maintain high signal accuracy and prevent damage to the connectors. Contamination increases attenuation (loss of light) and should be below 0.35 dB.

Consider these maintenance guidelines:

- Transceivers are static sensitive. To prevent ESD damage, wear an ESD-preventative wrist strap that is connected to the grounded chassis.
- Do not remove and insert a transceiver more often than is necessary. Repeated removals and insertions can shorten its useful life.
- Keep all optical connections covered when not in use. Clean them before using to prevent dust from scratching the fiber-optic cable ends.
- Do not touch the ends of connectors. Touching the ends can leave fingerprints and cause other contamination.
- Clean the connectors regularly; the required frequency of cleaning depends upon the environment. In addition, clean connectors if they are exposed to dust or accidentally touched. Both wet and dry cleaning techniques can be effective; refer to the fiber-optic connection cleaning procedures for your site.
- Inspect routinely for dust and damage. If you suspect damage, clean and then inspect fiber ends under a microscope to determine if damage has occurred.



**Note** When you need to remove a fiber-optic transceiver, first remove the fiber-optic cable from the transceiver **before** you remove the transceiver from the port.







## CHAPTER 5

# Replacing Components

- [Replacing a Fan Module, on page 39](#)
- [Replacing a Power Supply Module, on page 40](#)

## Replacing a Fan Module

You can replace a fan module while the switch is operating, as long as you perform the replacement within one minute. If you cannot perform the replacement within one minute, leave the original fan module in the chassis to maintain the designed airflow until you have the replacement fan module on hand and can perform the replacement.



### Caution

If you are replacing a module during operations, verify the replacement fan module has the correct direction of airflow. This means that it has the **same airflow direction** as the other modules in the chassis. Also, verify that the airflow direction takes in air from a cold aisle and exhausts air to a hot aisle. Otherwise, the switch can overheat and shutdown.

If you are changing the airflow direction of all the modules in the chassis, shutdown the switch before replacing all the fan and power supply modules with modules using the other airflow direction. During operations, all of the modules must have the same direction of airflow.

## Removing a Fan Module



### Caution

The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing.

### Procedure

- Step 1** On the fan module that you are removing, press the two sides of the fan module handle together, and pull on the handles enough to unseat it from its connectors.
- Step 2** Holding the handle, pull the module out of the chassis.

**Caution**

Do not touch the electrical connectors on the back side of the module and prevent anything else from coming into contact with and damaging the connectors.

---

## Installing a Fan Module

**Before you begin**

- A fan slot must be open and ready for the new fan module to be installed.
- If the switch is operating, you must have a new fan module on hand and ready to install within one minute of removing the original fan module.
- The new fan module must have the **same airflow direction** as the other fan and power supply modules installed in the switch.

**Procedure**

- 
- |               |   |
|---------------|---|
| <b>Step 1</b> | Holding the fan module by its handle, align the back of the fan module (the side with the electrical connectors) to the open fan slot in the chassis. |
| <b>Step 2</b> | Slide the fan module into the slot until it clicks in place.  |
| <b>Step 3</b> | Verify that the Status (STS) LED turns on and becomes green.  |
- 

## Replacing a Power Supply Module

The switch requires two power supplies for redundancy. With one power supply providing the necessary power for operations, replace the other power supply during operations as long as the new power supply has the same airflow direction as the other modules in the chassis.

Replace a power supply with another supported power supply that has the same power source type as the other installed power supply. Additionally, the airflow direction of the power supply must match or conform to the airflow direction of the installed fan modules. For the airflow direction used by the switch, see the coloring of the fan modules.

## Removing an AC Power Supply

To remove an AC power supply, disconnect the power cable and remove the module from the chassis.

**Before you begin**

- To replace a power supply during operations, there must be a functioning power supply providing power to the switch while you replace the other power supply. If there is only one power supply installed in the

switch and you need to replace it, install the new power supply in the open slot and power it up before removing the original power supply.

- Ensure that the chassis is grounded. For grounding instructions, see [Grounding the Chassis, on page 28](#).

### Procedure

---

**Step 1** Disconnect the power cord from the power receptacle on the power supply to be removed. Verify that the LED turns off.

**Note**

The LED might be on and amber colored. This indicates that the input power has been disconnected.

**Step 2** Remove the power supply from the chassis by pushing and holding its thumb latch to the left and pulling the power supply part way out of the chassis.

**Step 3** Place your other hand under the power supply to support it while you slide it out of the chassis.

Either place the power supply on an antistatic surface or pack it in its packing materials.

**Step 4** If the power supply slot is to remain empty, install a blank power supply filler panel (part number N2200-P-BLNK).

---

### What to do next

Install the replacement power supply.

## Removing a DC Power Supply

You can remove one power supply while the other one provides power to the switch.

To disconnect the power supply from its power cables, shut off the power from the power source and disconnect the connector for the power cables.

### Procedure

---

**Step 1** Turn off the circuit breaker for the power feed to the power supply that you are replacing.

Verify that the LEDs turn off on the power supply that you are removing.

**Step 2** Remove the power cable from the power supply by pressing the latch on the Cisco-supplied power cord to allow removal from the power supply.

**Step 3** Grasp the power supply handle while pressing the release latch towards the power supply handle.

**Step 4** Pull the power supply out of the bay.

---

### What to do next

Install a DC power supply in the open slot.

## Installing an AC Power Supply

You can replace one power supply while the other one provides power to the switch.

### Before you begin

- The power supply that you are installing must be capable of using the same airflow direction as the fan trays installed in the same switch. It must use the same type of power source as the other power supply installed in the same switch. (Do not mix AC and DC power supplies in the same switch.)



**Note** If the power supply that you are replacing has a different color handle than the replacement power supply, verify that it has or will have the same airflow direction as the other modules in the switch.

- An AC power source must be within reach of the power cable that will be used with the replacement power supply. If you are using  $n+n$  power redundancy, there must be a separate power source for each power supply installed in the chassis. Otherwise, only one power source is required.
- There must be an earth-ground connection to the chassis that you are installing the replacement module. Typically, the chassis is grounded by its metal-to-metal connection with a grounded rack. If you need to ground the chassis, see [Grounding the Chassis, on page 28](#).

### Procedure

**Step 1** Holding the replacement power supply with one hand underneath the module and the other hand holding the handle, turn the power supply so that its release latch is on the side. Align the back end of the power supply (the end with the electrical connections) to the open power supply slot. Carefully slide the power supply all the way into the slot until it clicks into place.

**Note**

If the power supply does not fit into the open slot, turn the module over, before sliding it carefully into the open slot.

**Step 2** Test the installation by trying to pull the power supply out of the slot without using the release latch. If the power supply does not move out of place, it is secured in the slot. If the power supply moves, carefully press it all the way into the slot until it clicks into place.

**Step 3** Attach the power cable to the electrical inlet on the front of the power supply.

**Step 4** Verify that the other end of the power cable is attached to the appropriate power source for the power supply.

**Step 5** Verify that the power supply is operational by making sure that the power supply LED is green.

## Installing a DC Power Supply

You can replace one power supply while the other one provides power to the switch.

**Before you begin**

- The circuit breaker for the DC power source for the power supply must be turned off.
- The power supply that you are installing must be capable of using the same airflow direction as the fan trays installed in the same switch.
- A DC power source must be within reach of the power cable that will be used with the replacement power supply. If you are using  $n+n$  power redundancy, there must be a separate power source for each power supply installed in the chassis. Otherwise, only one power source is required.
- There must be an earth-ground connection to the chassis that you are installing the replacement module. Typically, the chassis is grounded by its metal-to-metal connection to a grounded rack. If you need to ground this chassis by another means, see [Grounding the Chassis, on page 28](#).
- All DC power supplies have reverse polarity protection. When you inadvertently connect the input power (+) to the DC PSU's – terminal and the input power – to the DC PSU's (+) terminal, the PSU will not be damaged and will operate fine after the input power feeds are correctly wired.

**Procedure**

**Step 1** Holding the replacement power supply with one hand underneath the module and the other hand holding the handle, turn the power supply so that its release latch is on the side. Align the back end of the power supply (the end with the electrical connections) to the open power supply slot. Carefully slide the power supply all the way into the slot until it clicks into place.

**Note**

If the power supply does not fit into the open slot, turn the module over. Carefully slide it into the open slot.

**Step 2** Verify the rack is properly grounded, so that when the chassis is installed in the rack, it will be grounded.

**Step 3** Turn on the circuit breaker for the DC power source connected to the power supply.

**Step 4** Verify that the power supply is operational by making sure that the power supply LED is green.

## Installing and Removing Small-Form Pluggable Modules

**Before you begin**

See the Cisco Nexus 9336C-SE1 switch for a list of supported SFP and SFP+ modules. Use only supported SFP/SFP+ modules on the platform.



**Warning** **Statement 1008**—Class 1 Laser Product

This product is a Class 1 laser product.



**Note** We recommend that you wait 30 seconds between removal and insertion of an SFP on an interface module. This allows the transceiver software to initialize and synchronize with the standby RSP. Changing an SFP more quickly could result in transceiver initialization issues that disable the SFP.

- Do not remove the dust plugs from the SFP and SFP+ modules or the rubber caps from the fiber-optic cable until you are ready to connect the cable. The plugs and caps protect the module ports and cables from contamination and ambient light.
- Removing and installing an SFP and SFP+ module can shorten its useful life. Do not remove and insert any SFP/SFP+ module more often than is necessary.
- To prevent ESD damage, follow your normal board and component handling procedures when connecting cables to the switch and other devices.
- When you insert several SFP and SFP+ modules in multiple ports, wait for 5 seconds between inserting each SFP/SFP+. This will prevent the ports from going into error / disabled mode. Similarly, when you remove an SFP and SFP+ from a port, wait for 5 seconds before reinserting it.

## SUMMARY STEPS

1. Attach an ESD-preventive wrist strap to your wrist and to an earth ground surface.
2. Find the send (TX) and receive (RX) markings that identify the top of the SFP/SFP+ module.
3. If the SFP/SFP+ module has a bale-clasp latch, move it to the open, unlocked position.
4. Align the module in front of the slot opening and push until you feel the connector snap into place.
5. If the module has a bale-clasp latch, close it to lock the SFP/SFP+ module in place.
6. Remove the SFP and SFP+ dust plugs and save.
7. Connect the SFP and SFP+ cables.

## DETAILED STEPS

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	Attach an ESD-preventive wrist strap to your wrist and to an earth ground surface.	
<b>Step 2</b>	Find the send (TX) and receive (RX) markings that identify the top of the SFP/SFP+ module.	On some SFP/SFP+ modules, the send and receive (TX and RX) markings might be shown by arrows that show the direction of the connection.
<b>Step 3</b>	If the SFP/SFP+ module has a bale-clasp latch, move it to the open, unlocked position.	
<b>Step 4</b>	Align the module in front of the slot opening and push until you feel the connector snap into place.	
<b>Step 5</b>	If the module has a bale-clasp latch, close it to lock the SFP/SFP+ module in place.	
<b>Step 6</b>	Remove the SFP and SFP+ dust plugs and save.	

	Command or Action	Purpose
Step 7	Connect the SFP and SFP+ cables.	

## Install and Remove QSFP Transceiver Modules

This section provides the installation, cabling, and removal instructions for the Quad Small Form-Factor Pluggable transceiver modules. Refer to the [Cisco Transceiver Modules Compatibility Information](#) for additional details on optical transceivers.

### Installing the Transceiver Module



#### Warning Statement 1079—Hot Surface

This icon is a hot surface warning. To avoid personal injury, do not touch without proper protection.



**Caution** The transceiver module is a static-sensitive device. Always use an ESD wrist strap or similar individual grounding device when handling transceiver modules or coming into contact with system modules.



**Caution** Protect the transceiver ports by inserting clean dust caps (8000-QSFP-DCAP) into any ports not in use or that do not have optical modules plugged in. If optical modules are plugged in but not in use, use the dust caps that were supplied with the optical modules to protect the TX and RX surfaces of the optical module.

Clean the optic surfaces of the fiber cables before you plug them back into the optical ports of another module.

The switch ships with dust caps plugged in. We **highly** recommend you keep the dust caps plugged in until you are ready to plug an optic. The dust caps protect the ports from possible EMI interference and also avoid contamination due to dust collection.



**Caution** To meet the EMI interference requirements, use the metal dust caps when the ports are not in use by optical modules.

### Before you begin


#### Required Tools and Equipment

- Wrist strap or other personal grounding device to prevent ESD occurrences
- Antistatic mat or antistatic foam to set the transceiver on
- Fiber-optic end-face cleaning tools and inspection equipment

## Procedure


- Step 1** Attach an ESD wrist strap to yourself and a properly grounded point on the chassis or the rack.
- Step 2** Remove the transceiver module from its protective packaging.
- Step 3** Check the label on the transceiver module body to verify that you have the correct model for your network. Do not remove the dust plug until you're ready to attach the network interface cable. The dust plug is not shown in the images.
- Step 4** Hold the transceiver by the pull-tab so that the identifier label is on the top.
- Step 5** Align the transceiver module in front of the module's transceiver socket opening and carefully slide the transceiver into the socket until the transceiver contacts the socket electrical connector.

*Figure 7: Installing the QSFP Transceiver Module*

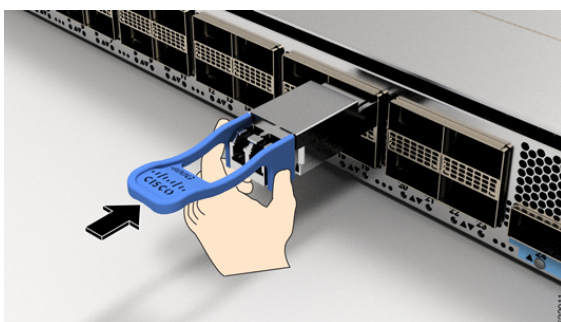

- Step 6** Press firmly on the front of the transceiver module with your thumb to fully seat the transceiver in the module's transceiver socket (see figure Seating the QSFP Transceiver Module).

*Figure 8: Seating the QSFP Transceiver Module*

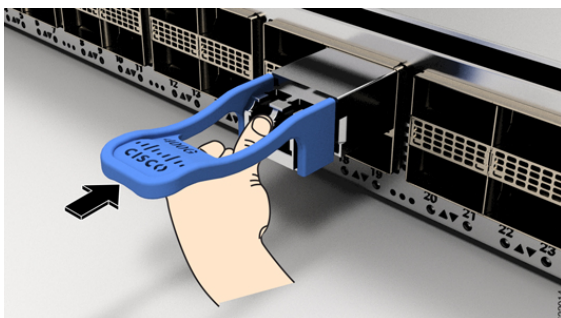

**IMPORTANT:** If the latch isn't fully engaged, you might accidentally disconnect the transceiver module.

## Attaching the Optical Network Cable

### Before you begin

Before you remove the dust plugs and make any optical connections, use these guidelines:




- Keep the protective dust plugs installed in the unplugged fiber-optic cable connectors and in the transceiver optical bores until you are ready to make a connection.
- Inspect and clean the optical connector end faces just before you make any connections.
- Grasp the optical connector only by the housing to plug or unplug a fiber-optic cable.

**Note**

- The transceiver modules and fiber connectors are keyed to prevent incorrect insertion.
- The multiple-fiber push-on (MPO) connectors on the optical transceivers support network interface cables with either physical contact (PC) or ultra-physical contact (UPC) flat polished face types. The MPO connectors on the optical transceivers do not support network interface cables with an angle-polished contact (APC) face type.
- Inspect the MPO connector for the correct cable type, cleanliness, and any damage. For complete information on inspecting and cleaning fiber-optic connections, see the [Inspection and Cleaning Procedures for Fiber-Optic Connections](#) document.

**Procedure**

- Step 1** Remove the dust plugs from the optical network interface cable MPO connectors and from the transceiver module optical bores. Save the dust plugs for future use.
- Step 2** Attach the network interface cable MPO connectors immediately to the transceiver module.

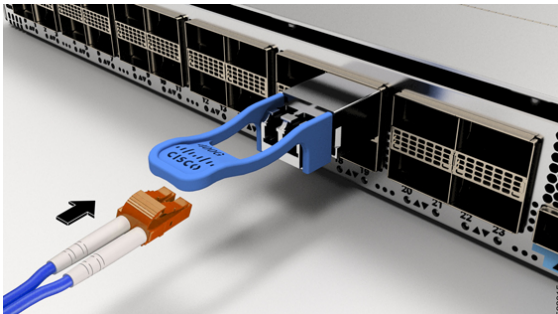**Figure 9: Cabling a Transceiver Module**

## Removing the Transceiver Module

**Caution**

The transceiver module is a static-sensitive device. Always use an ESD wrist strap or similar individual grounding device when handling transceiver modules or coming into contact with modules.


To remove a transceiver module, use these steps:

## Procedure

---

- Step 1** Disconnect the network interface cable from the transceiver connector.
- Step 2** Install the dust plug immediately into the transceiver's optical bore.
- Step 3** Grasp the pull-tab and gently pull to release the transceiver from the socket.

*Figure 10: Removing the QSFP Transceiver Module*

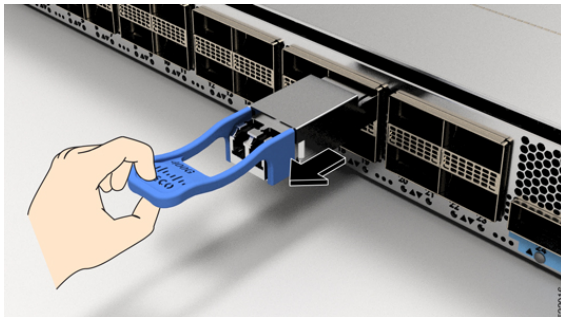

- Step 4** Slide the transceiver out of the socket.
- Step 5** Place the transceiver module into an antistatic bag.
-



## APPENDIX **A**

# Rack Specifications

---

- [Overview of Racks, on page 49](#)
- [General Requirements for Cabinets and Racks, on page 49](#)
- [Requirements Specific to Standard Open Racks, on page 50](#)
- [Requirements Specific to Perforated Cabinets, on page 50](#)
- [Cable Management Guidelines, on page 50](#)

## Overview of Racks

Install the switch in these types of cabinets and racks, assuming an external ambient air temperature range of 0 to 104°F (0 to 40°C):

- Standard perforated cabinets
- Solid-walled cabinets with a roof fan tray (bottom to top cooling)
- Standard open racks



### Note

- If you are using an enclosed cabinet, we recommend one of the thermally validated types, either standard perforated or solid-walled with a fan tray.
- We do not recommend using racks that have obstructions (such as power strips). The obstructions could impair access to field-replaceable units (FRUs).

## General Requirements for Cabinets and Racks

The cabinet or rack must meet these requirements:

- Standard 19-inch (48.3 cm) (two- or four-post EIA cabinet or rack, with mounting rails that conform to English universal hole spacing per section 1 of ANSI/EIA-310-D-1992). For more information, see [Requirements Specific to Perforated Cabinets, on page 50](#).

The spacing between the posts of the rack must be (EIA-310-D-1992 19-inch rack compatible) wide enough to accommodate the width of the chassis.

- The minimum vertical rack space requirement per chassis is:
  - For a one RU (rack unit) switch, 1.75 inches (4.4 cm)
  - For a one and a half RU (rack unit) switch, 2.63 (6.68 cm)
  - For a two RU (rack unit) switch, 3.5 inches (8.8 cm)
  - For a three RU (rack unit) switch, 5.25 inches (13.3 cm)
- The width between the rack-mounting rails must be at least 17.75 inches (45.0 cm) if the rear of the device is not attached to the rack. For four-post EIA racks, this measurement is the distance between the two front rails.

Four-post EIA cabinets (perforated or solid-walled) must meet these requirements:

- The minimum spacing for the bend radius for fiber-optic cables should have the front-mounting rails of the cabinet offset from the front door by a minimum of 3 inches (7.6 cm).
- The distance between the outside face of the front mounting rail and the outside face of the back mounting rail should be 23.0 to 30.0 inches (58.4 to 76.2 cm) to allow for rear-bracket installation.

## Requirements Specific to Standard Open Racks

If you are mounting the chassis in an open rack (no side panels or doors), ensure that the rack meets these requirements:

- The minimum vertical rack space per chassis must be equal to the rack unit (RU) of the chassis. One rack unit is equal to 1.75 inches (4.4 cm).
- The distance between the chassis air vents and any walls should be 2.5 inches (6.4 cm).

## Requirements Specific to Perforated Cabinets

A perforated cabinet has perforations in its front and rear doors and side walls. Perforated cabinets must meet these requirements:

- The front and rear doors must have at least a 60 percent open area perforation pattern, with at least 15 square inches (96.8 square cm) of open area per rack unit of door height.
- The roof should be perforated with at least a 20 percent open area.
- The cabinet floor should be open or perforated to enhance cooling.

The Cisco R Series rack conforms to these requirements.

## Cable Management Guidelines

To help with cable management, allow additional space in the rack above and below the chassis to make it easier to route all of the fiber optic or copper cables through the rack.



## APPENDIX **B**

# System Specifications

- [Environmental Specifications, on page 51](#)
- [Switch Dimensions, on page 51](#)
- [Switch and Module Weights and Quantities, on page 52](#)
- [Transceiver and Cable Specifications, on page 52](#)
- [Switch Power Input Requirements, on page 52](#)
- [Power Specifications, on page 53](#)
- [Power Cable Specifications, on page 55](#)
- [Regulatory Standards Compliance Specifications, on page 56](#)

## Environmental Specifications

Environment		Specification
Temperature	Ambient operating temperature	32 to 104°F (0 to 40°C)
	Ambient nonoperating	–40 to 158°F (–40 to 70°C)
Relative humidity	Nonoperating	5 to 95%
	Operating	5 to 90%
Altitude	Operating	0 to 10,000 ft (3048 m). For China, it is 6,562 ft (2000 m).

## Switch Dimensions

Switch	Width	Depth with Handles	Height
Cisco Nexus 9336C-SE1	17.3 inches (43.9 cm)	22.47 inches (57.08 cm)	1.72 inches (4.4 cm) (1 RU)

## Switch and Module Weights and Quantities

Component	Weight per Unit	Quantity
Cisco Nexus 9336C-SE1 Chassis (N9336C-SE1)	17.4 lb (7.9 kg)	1
Fan Module	—	6
– Port-side exhaust (blue) (NXA-SFAN-35CFM-PE)	0.27 lb (0.12 kg)	
– Port-side intake (red) (NXA-SFAN-35CFM-PI)		
Power Supply Module	—	2 (1 for operations and 1 for redundancy)
– 750-W AC port-side exhaust (blue) (NXA-PAC-750W-PE)	2.1 lb (0.95 kg)	
– 750-W AC port-side intake (red) (NXA-PAC-750W-PI)		
Power Supply Module	2.3 lb (1 kg)	2 (1 for operations and 1 for redundancy)
– 1100-W DC PE port-side exhaust (blue) (NXA-PDC-1100W-PE)		
– 1100-W DC PI port-side intake (red) (NXA-PDC-1100W-PI)		
Power Supply Module	2.3 lb (1 kg)	2 (1 for operations and 1 for redundancy)
– 1100-W AC PE port-side exhaust (blue) (NXA-PAC-1100W-PE2)		
– 1100-W AC PI port-side intake (burgundy) (NXA-PAC-1100W-PI2)		
Power Supply Module	2.3 lb (1 kg)	2 (1 for operations and 1 for redundancy)
– 1100-W port-side exhaust HV (blue) (NXA-PHV-1100W-PE)		
– 1100-W port-side intake HV (burgundy) (NXA-PHV-1100W-PI)		

## Transceiver and Cable Specifications

To see the transceiver specifications and installation information, see <https://www.cisco.com/c/en/us/support/interfaces-modules/transceiver-modules/products-device-support-tables-list.html>.

## Switch Power Input Requirements

This table lists the typical amount of power that the switch consumes. It also lists the maximum amount of power that you must provision for the switch and power supply for peak conditions.



**Note** Some power supplies have capabilities that are greater than the maximum power requirements for a switch. To determine the power consumption characteristics for the switch, use the typical and maximum requirements that are listed here.



**Note** If you want to use optics that consume **5W or more power on all the 36 ports**, you must install 1100W power supplies.

Switch	Typical Power Consumption (AC or DC)	Maximum Power Consumption (AC or DC)	Heat Dissipation Requirement
Cisco Nexus 9336C-SE1	320 W	450 W	1535.46 BTUs per hour

## Power Specifications

Power specifications include the specifications for each type of power supply module.

### 750-W AC Power Supply Specifications

These specifications apply to these power supplies:

- NXA-PAC-750W-PE
- NXA-PAC-750W-PI

Property	Specification
Input Voltage Range	100 to 240 VAC
Input Frequency	50 to 60 Hz
Efficiency	80%
Output Power	750 W at rated input voltage
Redundancy Modes	n + 1, 1 + 1
RoHS Compliance	Yes
Hot Swappable	Yes

### 1100-W AC Power Supply Specifications

These specifications apply to all versions of the NXA-PAC-1100W power supply.

Property	Specification
Input Voltage Range	100 VAC to 240 VAC
Input Frequency	50 to 60 Hz
Efficiency	80 Plus Platinum

Property	Specification
Output Power	1,100 W at rated input voltage
Redundancy Modes	n + 1, 1 + 1
RoHS Compliance	Yes
Hot Swappable	Yes

## 1100-W HVAC/HVDC Power Supply Specifications

These specifications apply to these power supplies:

- NXA-PHV-1100W-PE
- NXA-PHV-1100W-PI

Property	Specification
Input voltage Range	100 VAC – 277 VAC 240 VDC – 380 VDC
Input Frequency	50 to 60 Hz
Efficiency	80 Plus Platinum
Output Power	1100 W at rated input voltage
Redundancy Modes	n + 1, 1 + 1
RoHS Compliance	Yes
Hot Swappable	Yes

## 1100-W DC Power Supply Specifications

These specifications apply to these power supplies:

- NXA-PDC-1100W-PE
- NXA-PDC-1100W-PI

Property	Specification
Input voltage Range	-48 to -60 VDC
Efficiency	94% at 50% load
Output Power	1100 W at rated input voltage
Redundancy Modes	n + 1, 1 + 1



Property	Specification
RoHS Compliance	Yes
Hot Swappable	Yes

## Power Cable Specifications

These sections show the power cables that you can order and use with this switch.

### Power Cable Specifications for AC Power Supplies

Power Type	Power Cord Part Number	Cord Set Description
	CAB-C13-C14-2M	Power Cord Jumper, C13-C14 Connectors, 6.6 feet (2.0 m)
	CAB-C13-CBN	Cabinet jumper power cord, 250 VAC, 10 A, C14-C13 connectors, 2.3 feet (0.7 m)
Argentina	CAB-250V-10A-AR	250 V, 10 A, 8.2 feet (2.5 m)
Australia	CAB-9K10A-AU	250 VAC, 10 A, 3112 plug, 8.2 feet (2.5 m)
Brazil	CAB-250V-10A-BR	250 V, 10 A, 6.9 feet (2.1 m)
European Union	CAB-9K10A-EU	250 VAC, 10 A, CEE 7/7 plug, 8.2 feet (2.5 m)
India	CAB-IND-10A	10 A, 8.2 feet (2.5 m)
India	CAB-C13-C14-2M-IN	Power Cord Jumper, C13-C14 Connectors, 6.6 feet (2.0 m)
India	CAB-C13-C14-3M-IN	Power Cord Jumper, C13-C14 Connectors, 9.8 feet (3.0 m)
Israel	CAB-250V-10A-IS	250 V, 10 A, 8.2 feet (2.5 m)
Italy	CAB-9K10A-IT	250 VAC, 10 A, CEI 23-16/VII plug, 8.2 feet (2.5 m)
Japan	CAB-C13-C14-2M-JP	Power Cord Jumper, C13-C14 Connectors, 6.6 feet (2.0 m)
North America	CAB-9K12A-NA	125 VAC, 13 A, NEMA 5-15 plug, 8.2 feet (2.5 m)
North America	CAB-AC-L620-C13	NEMA L6-20-C13, 6.6 feet (2.0 m)
Peoples Republic of China	CAB-250V-10A-CN	250 V, 10 A, 8.2 feet (2.5 m)
South Africa	CAB-250V-10A-ID	250 V, 10 A, 8.2 feet (2.5 m)
Switzerland	CAB-9K10A-SW	250 VAC, 10 A, MP232 plug, 8.2 feet (2.5 m)

Power Type	Power Cord Part Number	Cord Set Description
United Kingdom	CAB-9K10A-UK	250 VAC, 10 A, BS1363 plug (13 A fuse), 8.2 (2.5 m)
All except Argentina, Brazil, and Japan	NO-POWER-CORD	No power cord included with switch

## Regulatory Standards Compliance Specifications

This table lists the regulatory standards compliance for the switch.

**Table 2: Regulatory Standards Compliance: Safety and EMC**

Specification	Description
Regulatory compliance	Products should comply with CE Markings according to directives 2004/108/EC and 2006/95/EC.
Safety	<ul style="list-style-type: none"> <li>• CAN/CSA-C22.2 No. 60950-1 Second Edition</li> <li>• CAN/CSA-C22.2 No. 62368-1-19 Third Edition</li> <li>• ANSI/UL 60950-1 Second edition</li> <li>• IEC 62368-1</li> <li>• EN 62368-1</li> <li>• AS/NZS 62368-1</li> <li>• GB4943</li> <li>• UL 62368-1</li> </ul>

Specification	Description
EMC: Emissions	<ul style="list-style-type: none"> <li>• 47 CFR Part 15</li> <li>• CISPR32</li> <li>• CNS 15936</li> <li>• EN 55032</li> <li>• EN 61000-3-3</li> <li>• EN IEC 61000-3-2</li> <li>• EN300 386</li> <li>• ICES-003:2020:Iss:7</li> <li>• KS C 9610-3-2</li> <li>• KS C 9610-3-3</li> <li>• KS C 9832</li> <li>• VCCI-CISPR 32</li> </ul>
EMC: Immunity	<ul style="list-style-type: none"> <li>• CISPR24</li> <li>• CISPR35</li> <li>• EN55035</li> <li>• EN IEC61000-6-1</li> <li>• EN300 386</li> <li>• EN61000-6-1</li> <li>• EN61000-6-2</li> <li>• IEC61000-6-1</li> <li>• IEC61000-6-2</li> <li>• KS C 9835</li> </ul>
RoHS	The product is RoH-6 compliant with exceptions for leaded-ball grid-array (BGA) balls and lead press-fit connectors.





## APPENDIX C

### LEDs

- [Switch Chassis LEDs, on page 59](#)
- [Fan Module LEDs, on page 60](#)
- [Power Supply LEDs, on page 60](#)

### Switch Chassis LEDs

The BCN, STS, and ENV, LEDs are located on the left side of the front of the switch. The port LEDs appear as triangles pointing up or down to the nearest port.

LED	Color	Status
BCN	Flashing blue	The operator has activated this LED to identify this switch in the chassis.
	Off	This switch is not being identified.
STS	Green	The switch is operational.
	Flashing amber	The switch is booting up.
	Amber	Temperature exceeds the minor alarm threshold.
	Red	Temperature exceeds the major alarm threshold.
	Off	The switch is not receiving power.
ENV	Green	Fans and power supply modules are operational.
	Amber	At least one fan or power supply module is not operating.
(port)	Green	Port admin state is 'Enabled', SFP is present and the interface is connected (that is, cabled, and the link is up).
	Amber	Port admin state is 'Disabled', or the SFP is absent, or both.
	Off	Port admin state is 'Enabled' and SFP is present, but interface is not connected.

LED	Color	Status
(GPS)	Green	GPS interface provisioned and ports are turned on. ToD, 1PPS, 10MHz are all valid.
	Off	Either the interface is not provisioned, or the ports are not turned on. ToD, 1PPS, 10MHz are not valid.

## Fan Module LEDs

LED	Color	Status
Status	Green	The fan module is operational.
	Red	The fan module is not operational (fan is probably not functional).
	Off	Fan module is not receiving power.

## Power Supply LEDs

The power supply LEDs are located on the right portion of the power supply. Combinations of states indicated by the **OK** and **Fault** LEDs signify the status for the module as shown in this table.

OK LED	FAIL or FAIL/ID LED	Status
Green	Off	Power supply is on and outputting power to the switch.
Flashing green	Off	Power supply is connected to a power source but not outputting power to the switch. The power supply may not be properly installed in the chassis.
Off	Off	Either all the installed power supplies are not receiving power or an uninstalled power supply is not receiving power.
Off	Flashing amber	Power supply is operating but a warning condition has occurred—possibly one of these conditions: <ul style="list-style-type: none"> <li>• High temperature</li> <li>• High power</li> <li>• Slow power supply fan</li> <li>• Low voltage</li> <li>• Power supply is installed in the chassis but was disconnected from the power source.</li> </ul>
Off	Flashing amber (10 seconds) then amber	Power supply is installed without a connection to a power source.

OK LED	FAIL or FAIL/ID LED	Status
Off	Amber	Power supply failure—possibly one of these conditions: <ul style="list-style-type: none"><li>• Over voltage</li><li>• Over current</li><li>• Over temperature</li><li>• Power supply fan failure</li></ul>









## APPENDIX D

### Additional Kits


- [Rack Mount Kit NXK-ACC-KIT-1RU](#), on page 63

### Rack Mount Kit NXK-ACC-KIT-1RU

This table lists and illustrates the contents for the 1-RU rack-mount kit (NXK-ACC-KIT-1RU).

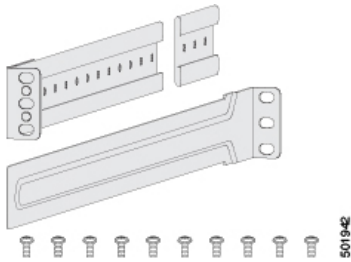Illustration	Description	Quantity
	Rack-mount kit <ul style="list-style-type: none"> <li>• Front brackets (2)</li> <li>• Rear brackets (2)</li> <li>• Slider rails (2)</li> <li>• M4 Phillips pan-head screws (10)</li> </ul>	1
	Ground lug kit <ul style="list-style-type: none"> <li>• Two-hole lug (1)</li> <li>• M4 x 8-mm Phillips pan-head screws (2)</li> </ul>	1
Not applicable	EAC Compliance document	1
Not applicable	Hazardous substances list for customers in China	1

This table lists and illustrates the console cable (CAB-CONSOLE-RJ45) that can be ordered.

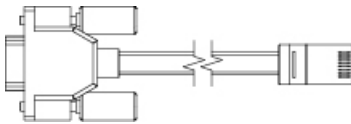Illustration	Description	Quantity
	Console cable with DB-9F and RJ-45F connectors	1

