

# View the Routing Table on the RV Series Router

## Objective

The routing table contains information about the topology of the network immediately around it. Viewing the routing table displays the destination Local Area Network (LAN) Internet Protocol (IP) address, Subnet Mask, Gateway, and Interface of devices using IPv4, and the Destination, Next Hop. If your router supports IPv6, it will display the Interface of devices connected via IPv6. This allows the administrator to verify the validity of the routers when he is setting up a static route.

This article aims to show you how to view the routing table on the RV Series Router.

## Applicable Devices


- RV Series

## Software Version


- 1.0.1.3 — RV130, RV130W
- 1.0.0.17 — RV132W
- 1.0.0.21 — RV134W
- 1.0.5.4 — RV180, RV180W

## View the Routing Table

Step 1. Log in to the web-based utility and choose **Networking > Routing Table**.

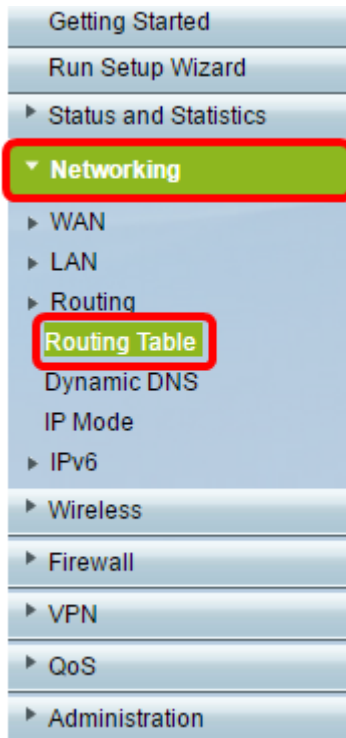


If you are using the RV180 or RV180W, choose **Networking > Routing > RoutingTable**.

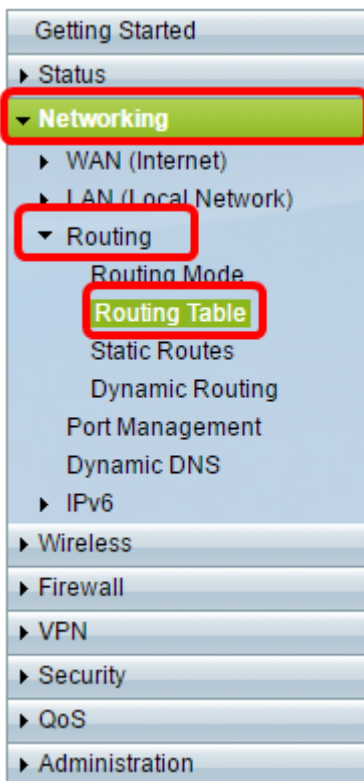


Step 2. Choose the IP routing table you want to view and click the appropriate button to show the routing table.

**Note:** In this example, both the IPv4 and IPv6 routing tables are used.

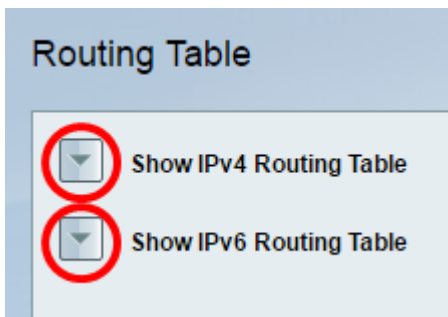

If you are using the RV180 or RV180W, click **Display**.

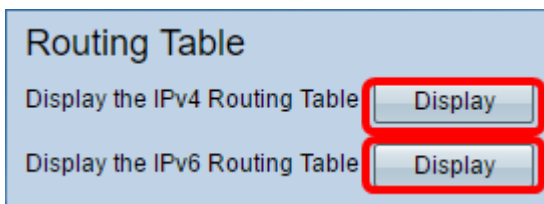

Step 3. It will display the Routing table of the chosen IP version. Check the route that you want.

Routing Table

Hide IPv4 Routing Table


Routing table Entry List			
Destination LAN IP	Subnet Mask	Gateway	Interface
0.0.0.0	0.0.0.0	192.168.100.150	ETH_WAN_R
192.168.1.0	255.255.255.0	192.168.1.1	VLAN1
192.168.2.0	255.255.255.0	192.168.2.1	VLAN10
192.168.3.0	255.255.255.0	192.168.3.1	VLAN20
192.168.4.0	255.255.255.0	192.168.4.1	VLAN30
192.168.100.0	255.255.255.0	192.168.100.101	ETH_WAN_R

Hide IPv6 Routing Table

Routing table Entry List		
Destination	Next Hop	Interface
FE80:0000:0000:0000:0000:0000:0000:0000/64	0000:0000:0000:0000:0000:0000:0000:0000	VLAN1
FE80:0000:0000:0000:0000:0000:0000:0000/64	0000:0000:0000:0000:0000:0000:0000:0000	VLAN10
FE80:0000:0000:0000:0000:0000:0000:0000/64	0000:0000:0000:0000:0000:0000:0000:0000	VLAN20
FE80:0000:0000:0000:0000:0000:0000:0000/64	0000:0000:0000:0000:0000:0000:0000:0000	VLAN30
FE80:0000:0000:0000:0000:0000:0000:0000/64	0000:0000:0000:0000:0000:0000:0000:0000	ETH_WAN_R
FEC0:0000:0000:0000:0000:0000:0000:0000/64	0000:0000:0000:0000:0000:0000:0000:0000	VLAN1

If you are using the RV180 or RV180W, this is how it will appear.

## Command Output

 Route Display...

IPv4 Routing Table								
Destination	Gateway	Genmask	Metric	Ref	Use	Interface	Type	Flags
127.0.0.1	127.0.0.1	255.255.255.255	1	0	0	lo	Static	UP,Gateway,Host
192.168.2.0	0.0.0.0	255.255.255.0	0	0	0	bdg34	Dynamic	UP
192.168.1.0	0.0.0.0	255.255.255.0	0	0	0	bdg1	Dynamic	UP
192.168.1.0	192.168.1.1	255.255.255.0	1	0	0	bdg1	Dynamic	UP,Gateway
172.16.15.0	0.0.0.0	255.255.255.0	0	0	0	eth1	Dynamic	UP
10.10.0.0	0.0.0.0	255.255.0.0	0	0	0	eth1	Static	UP
10.10.0.0	10.10.0.200	255.255.0.0	1	0	0	eth1	Static	UP,Gateway
127.0.0.0	0.0.0.0	255.0.0.0	0	0	0	lo	Dynamic	UP
0.0.0.0	10.10.1.1	0.0.0.0	0	0	0	eth1	Dynamic	UP,Gateway

You should now have successfully viewed the routing table of your RV Series Router.