



## Frame Relay over L2TPv3

---

The Frame Relay over L2TPv3 (FRoL2TPv3) feature enables Frame Relay switching over Layer 2 Tunnel Protocol Version 3 (L2TPv3). The feature works with like interfaces and disparate interfaces (L2VPN interworking).

- [Finding Feature Information, page 1](#)
- [Prerequisites for Configuring Frame Relay over L2TPv3, page 1](#)
- [Restrictions for Configuring Frame Relay over L2TPv3, page 2](#)
- [Information About Configuring Frame Relay over L2TPv3, page 2](#)
- [How to Configure Frame Relay over L2TPv3, page 3](#)
- [Configuration Examples for Frame Relay over L2TPv3, page 16](#)
- [Additional References for Frame Relay over L2TPv3, page 17](#)
- [Feature Information for Frame Relay over L2TPv3, page 18](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

## Prerequisites for Configuring Frame Relay over L2TPv3

Before configuring Frame Relay over L2TPv3, you should understand how to configure Layer 2 VPNs and Frame Relay. See the “Additional References” section in this chapter for pointers to the feature modules that explain how to configure and use Layer 2 VPNs and Frame Relay.

## Restrictions for Configuring Frame Relay over L2TPv3

The following functionalities are not supported:

- Frame Relay to 802.1Q/QinQ VLAN interworking
- Frame Relay-to-Ethernet routed interworking
- Frame Relay port-to-port switching
- L2TPv3 pseudowire redundancy for Frame Relay

## Information About Configuring Frame Relay over L2TPv3


### Frame Relay over L2TPv3 Overview

Frame Relay over L2TPv3 enables provider edge (PE) devices to forward Frame Relay frames to pseudowires based on the receiving interface and the Data-Link Connection Identifier (DLCI) number. PE devices also provide Local Management Interface (LMI)-based signaling to customer edge (CE) devices, emulating Frame Relay switches.

In Frame Relay over L2TPv3, the Frame Relay header is retained at the ingress PE device. The device does not reconstruct the Frame Relay header before forwarding packets to the CE device.

The figure below shows a Frame Relay over L2TPv3 topology.

**Figure 1: Frame Relay over L2TPv3**

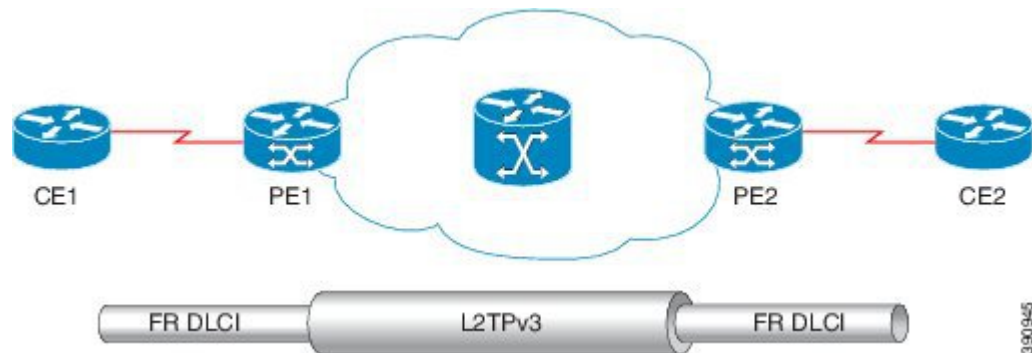

Frame Relay over L2TPv3 supports the following functionalities:

- Frame Relay data-link connection identifier (DLCI)-to-Frame Relay DLCI
- Frame Relay DLCI-to-Ethernet port / 802.1Q / QinQ bridged interworking
- Local Management Interface (LMI)
- L2TPv3 sequencing
- L2TPv3 tunnel marking

# How to Configure Frame Relay over L2TPv3

## Configuring Frame Relay over L2TPv3 without LMI

This section explains how to configure Frame Relay over L2TPv3 without enabling Local Management Interface (LMI).

### On CE1

The CE1 device receives the Frame Relay frames forwarded by the PE1 device over the Frame Relay link. On CE1, configure an interface and a DLCI number based on which the PE1 device forwards traffic to the appropriate pseudowire.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **no ip address** [*ip-address mask*] [**secondary**]
5. **encapsulation frame-relay** [**cisco** | **ietf**]
6. **no keepalive**
7. **frame-relay intf-type dce**
8. **exit**
9. **interface** *type number* **point-to-point**
10. **ip address** *ip-address mask*
11. **frame-relay interface-dlci** *dlci*
12. **end**

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode.  <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>interface</b> <i>type number</i>  <b>Example:</b> Device(config)# interface serial3/1/0	Specifies a serial interface and enters interface configuration mode.
<b>Step 4</b>	<b>no ip address</b> [ <i>ip-address mask</i> ] [ <b>secondary</b> ]  <b>Example:</b> Device(config-if)# no ip address	Disables IP processing.
<b>Step 5</b>	<b>encapsulation frame-relay</b> [ <b>cisco</b>   <b>ietf</b> ]  <b>Example:</b> Device(config-if)# encapsulation frame-relay ietf	Specifies Frame Relay encapsulation for the interface. <ul style="list-style-type: none"> <li>• You can specify different types of encapsulations.</li> <li>• You can set one interface to Cisco encapsulation and the other interface to IETF encapsulation.</li> </ul>
<b>Step 6</b>	<b>no keepalive</b>  <b>Example:</b> Device(config-if)# no keepalive	Disables the keepalive configuration.
<b>Step 7</b>	<b>frame-relay intf-type dce</b>  <b>Example:</b> Device(config-if)# frame-relay intf-type dce	Specifies that the interface is a DCE switch. <ul style="list-style-type: none"> <li>• You can also specify the interface to support Network-to-Network Interface (NNI) and DTE connections.</li> </ul>
<b>Step 8</b>	<b>exit</b>  <b>Example:</b> Device(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 9</b>	<b>interface</b> <i>type number</i> <b>point-to-point</b>  <b>Example:</b> Device(config)# interface serial 3/1/0.1 point-to-point	Specifies a serial interface and enters interface configuration mode.
<b>Step 10</b>	<b>ip address</b> <i>ip-address mask</i>  <b>Example:</b> Device(config-if)# ip address 198.51.100.2 255.255.255.0	Sets a primary or secondary IP address for an interface.

	Command or Action	Purpose
<b>Step 11</b>	<b>frame-relay interface-dlci</b> <i>dlci</i>  <b>Example:</b> Device(config-if)# frame-relay interface-dlci 25	Assigns a data-link connection identifier (DLCI) to the Frame Relay interface.
<b>Step 12</b>	<b>end</b>  <b>Example:</b> Device(config-if)# end	Exits interface configuration mode and returns to privileged EXEC mode.  After configuring CE1, you can configure CE2 in a similar manner.

## On PE1

The PE1 device forwards Frame Relay frames to the appropriate pseudowire, based on the receiving interface and DLCI number configured on the CE1 device.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **no ip address** [*ip-address mask*] [**secondary**]
5. **encapsulation frame-relay** [**cisco** | **ietf**]
6. **no keepalive**
7. **pseudowire-class** [*pw-class-name*]
8. **encapsulation l2tpv3**
9. **ip local interface loopback** *loopback id*
10. **connect** *connection-name interface dlci* **l2transport**
11. **xconnect** *peer-router-id vcid* **encapsulation l2tpv3 pw-class l2tpv3**
12. **end**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>

	Command or Action	Purpose
Step 2	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
Step 3	<b>interface type number</b>  <b>Example:</b> Device(config)# interface serial3/1/0	Specifies a serial interface and enters interface configuration mode.
Step 4	<b>no ip address [ip-address mask] [secondary]</b>  <b>Example:</b> Device(config-if)# no ip address	Disables IP processing.
Step 5	<b>encapsulation frame-relay [cisco   ietf]</b>  <b>Example:</b> Device(config-if)# encapsulation frame-relay ietf	Specifies Frame Relay encapsulation for the interface. <ul style="list-style-type: none"> <li>• You can specify different types of encapsulations.</li> <li>• You can set one interface to Cisco encapsulation and the other interface to IETF encapsulation.</li> </ul>
Step 6	<b>no keepalive</b>  <b>Example:</b> Device(config-if)# no keepalive	Disables the keepalive configuration.
Step 7	<b>pseudowire-class [pw-class-name]</b>  <b>Example:</b> Device(config)# pseudowire-class l2tpv3	Specifies the name of a Layer 2 pseudowire class and enters pseudowire class configuration mode.
Step 8	<b>encapsulation l2tpv3</b>  <b>Example:</b> Device(config-pw)# encapsulation l2tpv3	Specifies the tunneling encapsulation as L2TPv3.
Step 9	<b>ip local interface loopback loopback id</b>  <b>Example:</b> Device(config-pw)# ip local interface Loopback0	Specifies the local loopback interface on PE1 for the L2TPv3 tunnel.
Step 10	<b>connect connection-name interface dlci l2transport</b>	Defines connections between Frame Relay Permanent Virtual Circuits (PVCs) and enters connect configuration mode.

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Device(config)# connect fr1 serial5/0 1000 l2transport</pre>	<ul style="list-style-type: none"> <li>Using the <b>l2transport</b> keyword specifies that the PVC is not a locally switched PVC, but is tunneled over the backbone network.</li> <li>The <i>connection-name</i> argument is a text string that you provide.</li> <li>The <i>interface</i> argument is the interface on which a PVC connection is defined.</li> <li>The <i>dldci</i> argument is the DLCI number of the PVC that is connected.</li> </ul>
<b>Step 11</b>	<p><b>xconnect peer-router-id vcid encapsulation l2tpv3 pw-class l2tpv3</b></p> <p><b>Example:</b></p> <pre>Device (config-xconnect-conn-config) # xconnect 198.51.100.2 123 encapsulation l2tpv3 pw-class l2tpv3</pre>	<p>Creates the VC to transport the Layer 2 packets.</p> <ul style="list-style-type: none"> <li>In a DLCI-to DLCI connection type, Frame Relay over L2TPv3 uses the <b>xconnect</b> command in connect configuration mode.</li> <li>The <i>vcid</i> or identifier of the virtual circuit (VC) between the PE devices should be the same on both devices that are being connected.</li> </ul>
<b>Step 12</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Device (config-xconnect-conn-config) # end</pre>	<p>Exits connect configuration mode and returns to privileged EXEC mode.</p> <p>After configuring PE1, you can configure PE2 in a similar manner.</p>

## Configuring Frame Relay over L2TPv3 with LMI

This section explains how to configure Frame Relay over L2TPv3 with Local Management Interface (LMI) enabled.

### On CE1

The CE1 device receives the Frame Relay frames forwarded by the PE1 device over the Frame Relay link. On CE1, configure an interface and a DLCI number based on which the PE1 device forwards traffic to the appropriate pseudowire. Local Management Interface (LMI) is also tunneled over the pseudowire. Therefore, you need to properly configure the customer edge (CE) device for LMI.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface serial** *slot/subslot /port* [*. subinterface*]
4. **no ip address** [*ip-address mask*] [**secondary**]
5. **encapsulation frame-relay** [**cisco** | **ietf**]
6. **frame-relay intf-type dce**
7. **end**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>interface serial</b> <i>slot/subslot /port</i> [ <i>. subinterface</i> ]  <b>Example:</b> Device(config)# interface serial3/1/0	Specifies a serial interface and enters interface configuration mode.
<b>Step 4</b>	<b>no ip address</b> [ <i>ip-address mask</i> ] [ <b>secondary</b> ]  <b>Example:</b> Device(config-if)# no ip address	Disables IP processing.
<b>Step 5</b>	<b>encapsulation frame-relay</b> [ <b>cisco</b>   <b>ietf</b> ]  <b>Example:</b> Device(config-if)# encapsulation frame-relay ietf	Specifies Frame Relay encapsulation for the interface. <ul style="list-style-type: none"> <li>• You can specify different types of encapsulations.</li> <li>• You can set one interface to Cisco encapsulation and the other interface to IETF encapsulation.</li> </ul>
<b>Step 6</b>	<b>frame-relay intf-type dce</b>  <b>Example:</b> Device(config-if)# frame-relay intf-type dce	Specifies that the interface is a Data Communications Equipment (DCE) switch. <ul style="list-style-type: none"> <li>• You can also specify the interface to support Network-to-Network Interface (NNI) and Data Transmission Equipment (DTE) connections.</li> </ul>



	Command or Action	Purpose
<b>Step 7</b>	<b>end</b>  <b>Example:</b> Device(config-if)# end	Exits interface configuration mode and returns to privileged EXEC mode.  After configuring CE1, you can configure CE2 in a similar manner.

## On PE1

The PE1 device forwards Frame Relay frames to the CE1 device over the Frame Relay link. The PE1 device also provides Local Management Interface (LMI) signaling to the CE1 device.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface serial** *slot/subslot/port* [*. subinterface*]
4. **encapsulation frame-relay** [*cisco* | *ietf*]
5. **pseudowire-class** [*pw-class-name*]
6. **encapsulation l2tpv3**
7. **ip local interface loopback** *loopback id*
8. **connect** *connection-name interface dlc* **l2transport**
9. **xconnect** *peer-router-id vcid* **encapsulation l2tpv3 pw-class l2tpv3**
10. **end**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 3</b>	<b>interface serial</b> <i>slot/subslot/port</i> [ <i>. subinterface</i> ]  <b>Example:</b> Device(config)# interface serial3/1/0	Specifies a serial interface and enters interface configuration mode.
<b>Step 4</b>	<b>encapsulation frame-relay</b> [ <b>cisco</b>   <b>ietf</b> ]  <b>Example:</b> Device(config-if)# encapsulation frame-relay ietf	Specifies Frame Relay encapsulation for the interface. <ul style="list-style-type: none"> <li>• You can specify different types of encapsulations.</li> <li>• You can set one interface to Cisco encapsulation and the other interface to IETF encapsulation.</li> </ul>
<b>Step 5</b>	<b>pseudowire-class</b> [ <i>pw-class-name</i> ]  <b>Example:</b> Device(config)# pseudowire-class l2tpv3	Specifies the name of a Layer 2 pseudowire class and enters pseudowire class configuration mode.
<b>Step 6</b>	<b>encapsulation l2tpv3</b>  <b>Example:</b> Device(config-pw)# encapsulation l2tpv3	Specifies the tunneling encapsulation as L2TPv3.
<b>Step 7</b>	<b>ip local interface loopback</b> <i>loopback id</i>  <b>Example:</b> Device(config-pw)# ip local interface Loopback0	Specifies the local loopback interface.
<b>Step 8</b>	<b>connect</b> <i>connection-name interface dlc</i> <b>l2transport</b>  <b>Example:</b> Device(config)# connect fr1 serial5/0 1000 l2transport	Defines connections between Frame Relay Permanent Virtual Circuits (PVCs) and enters connect configuration mode. <ul style="list-style-type: none"> <li>• Using the <b>l2transport</b> keyword specifies that the PVC is not a locally switched PVC, but is tunneled over the backbone network.</li> <li>• The <i>connection-name</i> argument is a text string that you provide.</li> <li>• The <i>interface</i> argument is the interface on which a PVC connection is defined.</li> <li>• The <i>dlci</i> argument is the DLCI number of the PVC that is connected.</li> </ul>
<b>Step 9</b>	<b>xconnect</b> <i>peer-router-id vcid encapsulation l2tpv3</i> <b>pw-class l2tpv3</b>	Creates the virtual circuit (VC) to transport the Layer 2 packets. <ul style="list-style-type: none"> <li>• In a DLCI-to-DLCI connection type, Frame Relay over L2TPv3 uses the <b>xconnect</b> command in connect configuration mode.</li> </ul>

	Command or Action	Purpose
	<p><b>Example:</b></p> <pre>Device(config-fr-pw-switching)# xconnect 198.51.100.2 123 encapsulation l2tpv3 pw-class l2tpv3</pre>	
<b>Step 10</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Device(config-fr-pw-switching)# end</pre>	<p>Exits connect configuration mode and returns to privileged EXEC mode.</p> <p>After configuring PE1, you can configure PE2 in a similar manner.</p>

## Configuring Frame Relay L2TPv3 Tunnel Marking

L2TPv3 Tunnel Marking introduces the capability to define and control the quality of service (QoS) for incoming customer traffic on the provider edge (PE) device in a service provider network.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **class-map** *class-name*
4. **match fr-dlci** *dlci-number*
5. **policy-map dlci** *dlci-number*
6. **class** *class-name*
7. **set ip precedence tunnel** *precedence-value*
8. **interface serial** *slot/subslot/port* [*. subinterface*]
9. **no ip address** [*ip-address mask*] [**secondary**]
10. **encapsulation frame-relay** [**cisco** | **ietf**]
11. **no keepalive**
12. **service-policy input** *policy-name*
13. **end**
14. **pseudowire-class** [*pw-class-name*]
15. **encapsulation l2tpv3**
16. **ip local interface loopback** *loopback id*
17. **connect** *connection-name interface dlci l2transport*
18. **xconnect** *peer-router-id vcid encapsulation l2tpv3 pw-class l2tpv3*
19. **end**

## DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
<b>Step 3</b>	<b>class-map</b> <i>class-name</i>  <b>Example:</b> Device(config)# class-map class1	Specifies the user-defined name of the traffic class and enters class map configuration mode.
<b>Step 4</b>	<b>match fr-dlci</b> <i>dlci-number</i>  <b>Example:</b> Device(config-cmap)# match fr-dlci 50	Specifies the number of the Data-Link Connection Identifier (DLCI) associated with the packet as a match criterion in the class map.
<b>Step 5</b>	<b>policy-map dlci</b> <i>dlci-number</i>  <b>Example:</b> Device(config-cmap)# policy-map dlci 50	Specifies the type of policy map as DLCI and enters policy map configuration mode.
<b>Step 6</b>	<b>class</b> <i>class-name</i>  <b>Example:</b> Device(config-pmap)# class class1	Specifies the name of a predefined traffic class, which was configured with the <b>class-map</b> command, used to classify traffic to the traffic policy and enters policy-map class configuration mode.
<b>Step 7</b>	<b>set ip precedence tunnel</b> <i>precedence-value</i>  <b>Example:</b> Device(config-pmap-c)# set ip precedence tunnel 2	Sets the precedence value in the header of the L2TPv3 tunneled packet for tunnel marking.
<b>Step 8</b>	<b>interface serial</b> <i>slot/subslot/port</i> [ <i>. subinterface</i> ]  <b>Example:</b> Device(config-pmap-c)# interface serial3/1/0	Specifies a serial interface and enters interface configuration mode.

	Command or Action	Purpose
<b>Step 9</b>	<b>no ip address</b> [ <i>ip-address mask</i> ] [ <b>secondary</b> ]  <b>Example:</b> Device(config-if)# no ip address	Disables IP processing.
<b>Step 10</b>	<b>encapsulation frame-relay</b> [ <b>cisco</b>   <b>ietf</b> ]  <b>Example:</b> Device(config-if)# encapsulation frame-relay ietf	Specifies Frame Relay encapsulation for the interface. <ul style="list-style-type: none"> <li>• You can specify different types of encapsulations.</li> <li>• You can set one interface to Cisco encapsulation and the other interface to IETF encapsulation.</li> </ul>
<b>Step 11</b>	<b>no keepalive</b>  <b>Example:</b> Device(config-if)# no keepalive	Disables the keepalive configuration.
<b>Step 12</b>	<b>service-policy input</b> <i>policy-name</i>  <b>Example:</b> Device(config-if)# service-policy input policy1	Attaches a traffic policy to the interface.
<b>Step 13</b>	<b>end</b>  <b>Example:</b> Device(config-if)# end	Exits connect configuration mode and returns to privileged EXEC mode.
<b>Step 14</b>	<b>pseudowire-class</b> [ <i>pw-class-name</i> ]  <b>Example:</b> Device(config)# pseudowire-class l2tpv3	Specifies the name of a Layer 2 pseudowire class and enters pseudowire class configuration mode.
<b>Step 15</b>	<b>encapsulation l2tpv3</b>  <b>Example:</b> Device(config-pw)# encapsulation l2tpv3	Specifies the tunneling encapsulation as L2TPv3.
<b>Step 16</b>	<b>ip local interface loopback</b> <i>loopback id</i>  <b>Example:</b> Device(config-pw)# ip local interface Loopback0	Specifies the local loopback interface.

	Command or Action	Purpose
<b>Step 17</b>	<p><b>connect</b> <i>connection-name interface dlc</i> <b>l2transport</b></p> <p><b>Example:</b></p> <pre>Device(config-pw)# connect fr1 serial5/0 1000 l2transport</pre>	<p>Defines connections between Frame Relay Permanent Virtual Circuits (PVCs) and enters connect configuration mode.</p> <ul style="list-style-type: none"> <li>Using the <b>l2transport</b> keyword specifies that the PVC is not a locally switched PVC, but is tunneled over the backbone network.</li> <li>The <i>connection-name</i> argument is a text string that you provide.</li> <li>The <i>interface</i> argument is the interface on which a PVC connection is defined.</li> <li>The <i>dlci</i> argument is the DLCI number of the PVC that is connected.</li> </ul>
<b>Step 18</b>	<p><b>xconnect</b> <i>peer-router-id vcid encapsulation l2tpv3 pw-class l2tpv3</i></p> <p><b>Example:</b></p> <pre>Device(config-xconnect-conn-config)# xconnect 198.51.100.2 123 encapsulation l2tpv3 pw-class l2tpv3</pre>	<p>Creates the VC to transport the Layer 2 packets.</p> <ul style="list-style-type: none"> <li>In a DLCI-to-DLCI connection type, Frame Relay over L2TPv3 uses the <b>xconnect</b> command in connect configuration mode.</li> </ul>
<b>Step 19</b>	<p><b>end</b></p> <p><b>Example:</b></p> <pre>Device(config-xconnect-conn-config)# end</pre>	<p>Exits connect configuration mode and returns to privileged EXEC mode.</p>

## Verifying Frame Relay over L2TPv3 Configuration

You can use **show** commands to view information about a Frame Relay over L2TPv3 configuration.

### SUMMARY STEPS

1. **show xconnect all detail**
2. **show frame-relay pvc**
3. **show connection**

### DETAILED STEPS

#### Step 1 **show xconnect all detail**

The following example is sample output of the **show xconnect all detail** command:



```

VCCV CV type 0x12                                0x12
                LSPV [2], BFD/Raw [5]            LSPV [2], BFD/Raw [5]
VCCV CC type 0x07                                0x07
                CW [1], RA [2], TTL [3]          CW [1], RA [2], TTL [3]
Status TLV    enabled                            supported
Dataplane:
  SSM segment/switch IDs: 12309/4115 (used), PWID: 1
Rx Counters
  106563 input transit packets, 9803650 bytes
  0 drops, 0 seq err
Tx Counters
  0 output transit packets, 0 bytes
  0 drops

```

**Step 3****show connection**

The following example is sample output of the **show connection** command:

**Example:**

```
Device# show connection
```

```

ID   Name           Segment 1           Segment 2           State
-----
1   fr_fr          Se0/2/0:0 16      22.2.2.2 100      UP
2   fr_eth        Se0/2/0:0 17      22.2.2.2 101      UP
-----

```

## Configuration Examples for Frame Relay over L2TPv3

### Example: Frame Relay over L2TPv3 with LMI

The following example shows how to configure Frame Relay over L2TPv3 with Local Management Interface (LMI) enabled:

PE1 device	CE1 device
<pre> configure terminal interface Serial 0/2/0:0 no ip address encapsulation frame-relay ! keepalive 15 frame-relay lmi-type cisco </pre>	<pre> configure terminal interface Serial 1/0:0 no ip address encapsulation frame-relay frame-relay intf-type dce ! keepalive 15 frame-relay lmi-type cisco interface Serial 1/0:0.100 point-to-point ip address 198.51.100.33 255.255.255.0 frame-relay interface-dlci 16 </pre>



## Examples: Frame Relay over L2TPv3 without LMI

The following example shows how to configure Frame Relay DLCI-to-Frame Relay DLCI over L2TPv3 without Local Management Interface (LMI) enabled:

PE1 device	CE1 device
<pre>configure terminal  interface Serial 0/1/0    encapsulation frame-relay  !  pseudowire-class fr_l2tpv3  encapsulation l2tpv3  ip local interface Loopback0  !  connect FR Serial 0/1/0 100 l2transport  xconnect 198.51.100.2 100 encapsulation  l2tpv3 pw-class fr_l2tpv3</pre>	<pre>configure terminal  interface Serial 0/0/0    encapsulation frame-relay    exit  !  interface Serial 0/0/0.100 point-to-point  ip address 198.51.100.22 255.255.255.0  frame-relay interface-dlci 100</pre>

The following example shows how to configure Frame Relay DLCI-to-Ethernet Interworking over L2TPv3 without LMI enabled:

PE1 device	CE1 device
<pre>configure terminal  pseudowire-class fr_eth  encapsulation l2tpv3  interworking ethernet  ip local interface Loopback0  !  connect FR-Eth Serial 0/1/0 500 l2transport  xconnect 198.51.100.27 500 encapsulation  l2tpv3 pw-class fr_eth</pre>	<pre>configure terminal  interface Serial 0/0/0.500 point-to-point  frame-relay interface-dlci 500  !  interface BVI 200  ip address 198.51.100.29 255.255.255.0</pre>

## Additional References for Frame Relay over L2TPv3

### Related Documents

Related Topic	Document Title
Cisco IOS commands	<a href="#">Cisco IOS Master Command List, All Releases</a>
MPLS commands	<a href="#">Multiprotocol Label Switching Command Reference</a>
Configuring Frame Relay over MPLS	<i>Configuring Frame Relay over MPLS</i>
MPLS Layer 2 VPNs Configuration Guide	<i>MPLS Layer 2 VPNs Configuration Guide</i>

**Standards and RFCs**

Standard/RFC	Title
RFC 2427	<i>Multiprotocol Interconnect over Frame Relay</i>
RFC 4591	<i>Frame Relay over Layer 2 Tunneling Protocol Version 3 (L2TPv3)</i>

**MIBs**

MIB	MIBs Link
<ul style="list-style-type: none"> <li>• Cisco Frame Relay MIB (CISCO-FRAME-RELAY-MIB.my)</li> <li>• Interfaces MIB (IF-MIB.my)</li> </ul>	<p>To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:</p> <p><a href="http://www.cisco.com/go/mibs">http://www.cisco.com/go/mibs</a></p>

**Technical Assistance**

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies. Access to most tools on the Cisco Support website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a user ID or password, you can register on Cisco.com.	<a href="http://www.cisco.com/support">http://www.cisco.com/support</a>

## Feature Information for Frame Relay over L2TPv3

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 1: Feature Information for Frame Relay over L2TPv3**

<b>Feature Name</b>	<b>Releases</b>	<b>Feature Information</b>
Frame Relay over L2TPv3	Cisco IOS XE Release 3.12S	This feature enables Frame Relay switching over Layer 2 Tunnel Protocol Version 3 (L2TPv3). The feature works with like interfaces and disparate interfaces (L2VPN interworking).

