



Cisco SD-WAN Support

This chapter contains the following sections:

- [Cisco SD-WAN Overview, on page 1](#)
- [SD-WAN Remote Access \(SD-WAN RA\), on page 2](#)
- [Related Documentation, on page 3](#)


Cisco SD-WAN Overview

Cisco SD-WAN is a cloud-first architecture that separates data and control planes, managed through the Cisco vManage console. You can quickly establish an SD-WAN overlay fabric to connect data centers, branches, campuses, and co-location facilities to improve network speed, security, and efficiency.

Cisco SDWAN adopts a cloud based solution, it consists of vOrchestrator, vManage, vSmart and vEdge.

- vOrchestrator is responsible for launching all controllers VMs in the cloud.
- vManage is the management plane for the overall SDWAN solution. It uses netconf/YANG to talk to vEdge devices.
- vSmart is the control plane for the overall SDWAN solution. It talks to the vEdge device, acts as the route reflector, key reflector, and policy engine.
- vEdge is the data plane of the overall SDWAN solution. The IR1101 platform talks to vSmart, vManage, as part of the SDWAN network.

The follow diagram shows the high level architecture of SDWAN:

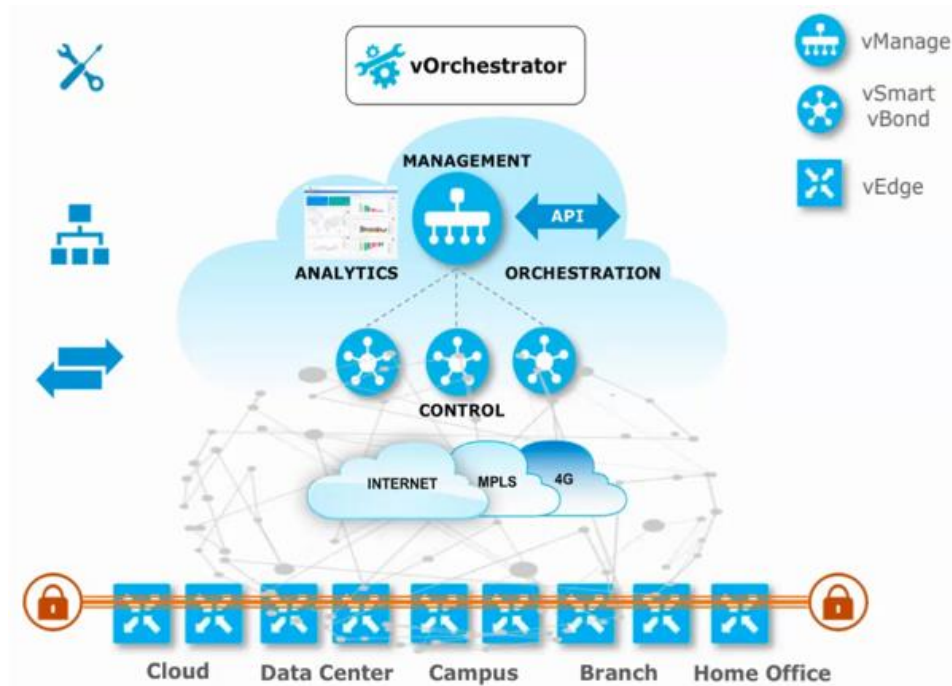

While Cisco SD-WAN is a cloud-first architecture, some of the components can be deployed on-premises. Refer to the [Cisco SD-WAN](#) landing page for further information on the capabilities of SD-WAN.

Starting with IOS XE release 17.3.2, the IOS XE image can be configured as controller mode to run SD-WAN. A single universalk9 image is used to deploy Cisco IOS XE SD-WAN and Cisco IOS XE functionality. This universalk9 image supports two modes - Autonomous mode (for Cisco IOS XE features) and Controller mode (for Cisco SD-WAN features).

Access the Cisco IOS XE and Cisco IOS XE SD-WAN functionality through Autonomous and Controller execution modes, respectively. The Autonomous mode is the default mode for the router and includes the Cisco IOS XE functionality. To access Cisco IOS XE SD-WAN functionality, switch to the Controller mode. You can use the existing Plug and Play Workflow to determine the mode of the device. See the [Cisco SD-WAN Getting Started Guide](#) for further information.



Note The PnP process works on either the Gi0/0/0 or Cellular interface.

SD-WAN Remote Access (SD-WAN RA)

SD-WAN RA is now supported on the IoT routers with IOS XE 17.13.1. SD-WAN RA is a combination of two features:

- IOS-XE SD-WAN
- IOS-XE FlexVPN Remote Access Server



Note All IoT devices only support the SD-WAN RA Client.

Information on SD-WAN Remote Access can be found in the following guide:

[Cisco Catalyst SD-WAN Remote Access](#)

Additional Documentation

Additional documentation for SDWAN/vManage is available at the following links:

- [User Documentation for Cisco IOS XE Catalyst SD-WAN Release 17](#)
- [Cisco Catalyst SD-WAN](#)
- [Cisco SD-WAN Support Information](#)
- [Cisco vManage Monitor Overview](#)
- [Managing the SD-Routing Device Using Cisco SD-WAN Manager](#)

Related Documentation

Cisco SDWAN documentation is available from the following sources:

<https://www.cisco.com/c/en/us/support/routers/sd-wan/tsd-products-support-series-home.html>

https://sdwan-docs.cisco.com/Product_Documentation/Software_Features

All of the technical documentation for Cisco SD-WAN can be found here:

<https://www.cisco.com/c/en/us/support/routers/sd-wan/tsd-products-support-series-home.html>

