




Procedure with the Local Manager


After the [Initial configuration](#), proceed to the steps described in this section.

- [Access the IOx Local Manager, on page 1](#)
- [Install the sensor virtual application, on page 3](#)
- [Configure the sensor virtual application, on page 4](#)
- [Generate the provisioning package, on page 10](#)
- [Import the provisioning package, on page 12](#)


Access the IOx Local Manager

1. Open a browser and navigate to the IP address you configured on the interface you are connected to.
2. Log in using the Cisco IR1101 admin user account and password.

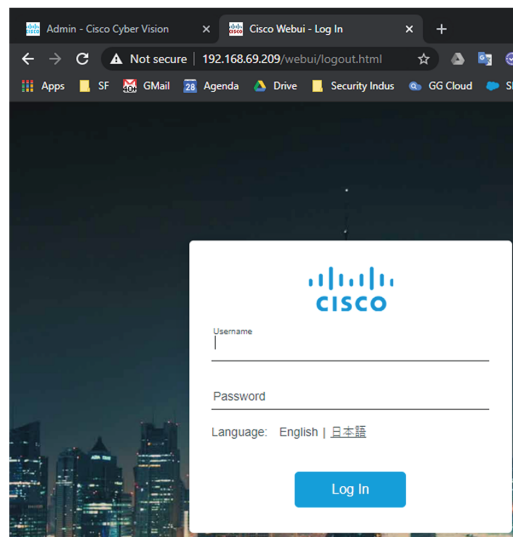

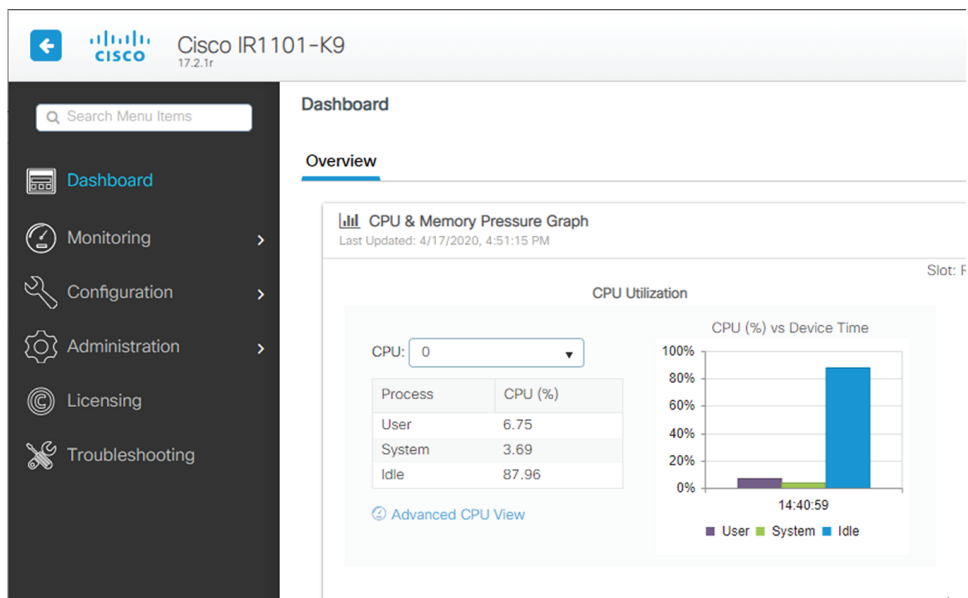

3. Once logged into the Local Manager, navigate to Configuration > Services > IOx.

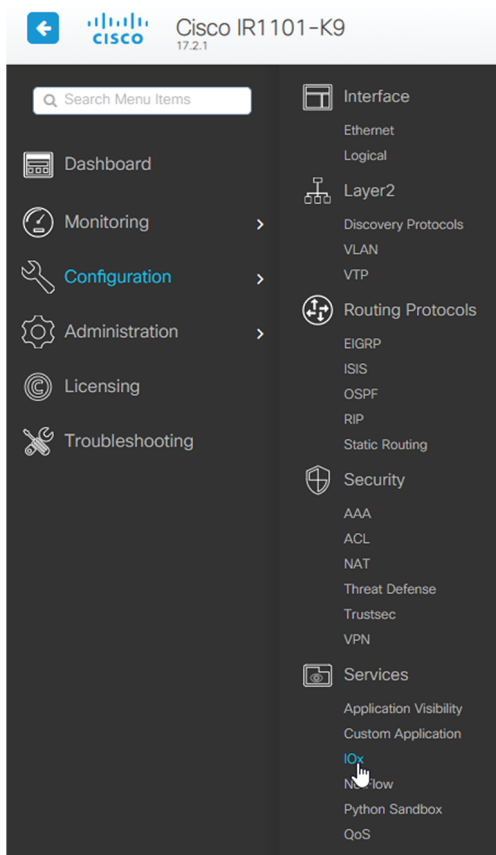


4. Log in using the user account and password.



Install the sensor virtual application

Once logged in, the following menu appears:

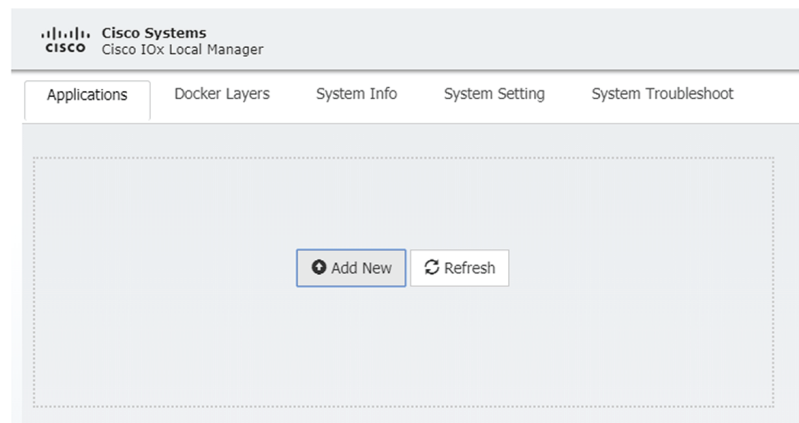


1. Click **Add New**.
2. Add an Application id name (e.g. CCVSensor).
3. Select the application archive file
(i.e. "CiscoCyberVision-IOx-aarch64-<version>.tar").




Note If you aim to install a sensor with **Active Discovery**, select the required application archive file



(i.e. "CiscoCyberVision-IOx-Active-Discovery-aarch64-<version>.tar").

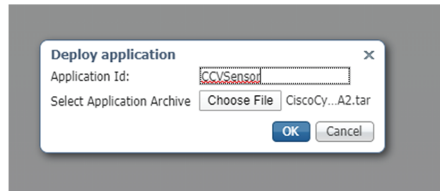

The installation takes a few minutes.

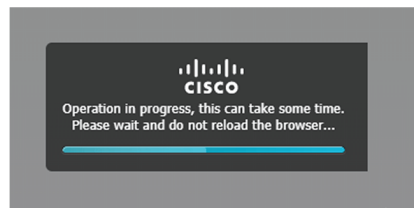


When the application is installed, the following message is displayed and the sensor application appears:

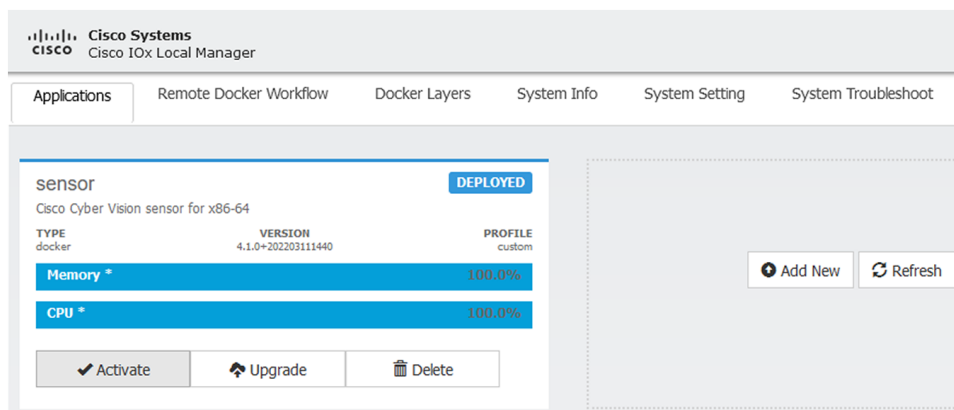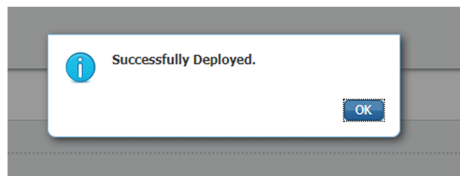

Configure the sensor virtual application


Procedure

Step 1 Click **Activate** to launch the configuration of the sensor application.

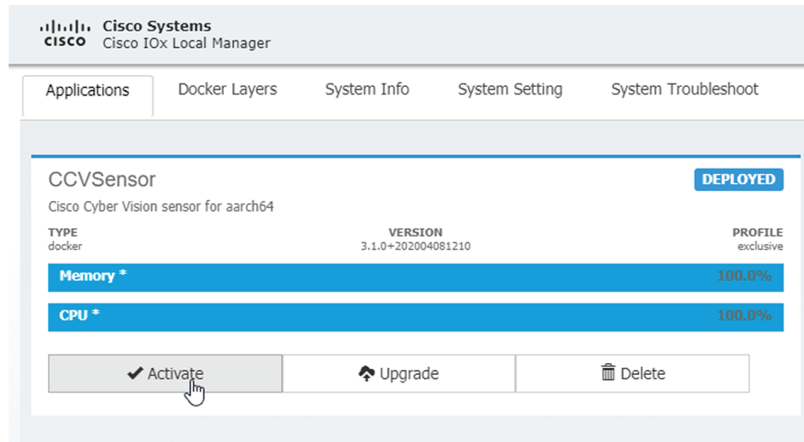

Step 2 Deploy the Resource Profile menu and set the disk size. The procedure differs whether the device has a SSD or not:

- If the device has a SSD, set the necessary disk size. It should be at least 4GB.

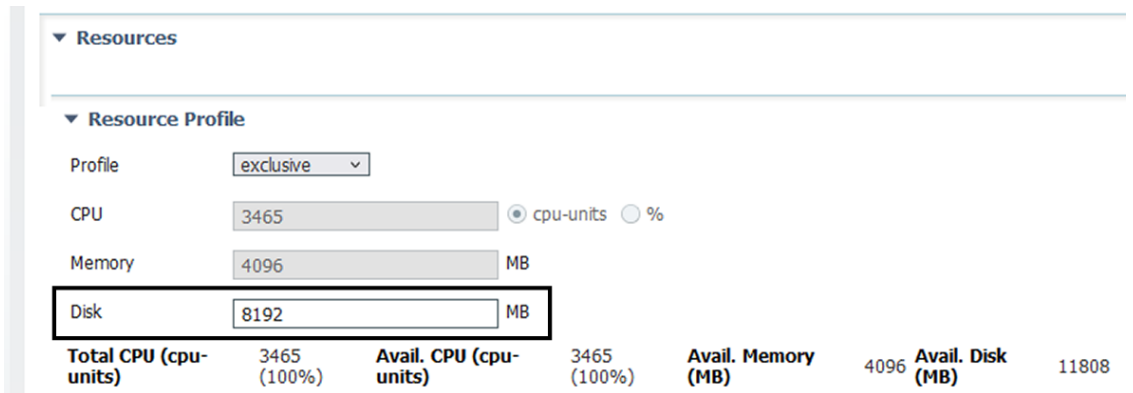

- If the device has no SSD, set the disk size to 128MB, then deploy the Advanced Settings menu and configure tmpfs by filling the docker options text area with:

```
--tmpfs /tmp:rw,size=128m
```

Configure the sensor virtual application

▼ Resource Profile

Profile:

CPU: cpu-units %

Memory: MB

Disk: MB

| | | | | | | | |
|------------------------------|-------------|-------------------------------|-------------|---------------------------|------|-------------------------|------|
| Total CPU (cpu-units) | 3465 (100%) | Avail. CPU (cpu-units) | 3465 (100%) | Avail. Memory (MB) | 4096 | Avail. Disk (MB) | 1372 |
|------------------------------|-------------|-------------------------------|-------------|---------------------------|------|-------------------------|------|

▼ Advanced Settings

Specify "docker run" options to be used while spawning the container. These will override activation settings above.

Docker Options:

Auto delete container instance

Step 3 Bind the eth0 and eth1 interfaces in the container to an interface on the host in the Network Configuration menu.

eth0:

a) Click **edit** in the eth0 line.

▼ Network Configuration

| Name | Network Config | Description | Action |
|------|----------------|-------------|----------------------|
| eth0 | VPG0 | none | edit |
| eth1 | Not Configured | none | edit |

b) Select the **VPG1** interface.

▼ Network Configuration

| Name | Network Config |
|------|----------------|
| eth0 | VPG0 |
| eth1 | Not Configured |

eth0

Description (optional): [Interface Setting](#)

c) Click **Interface setting**.

▼ Network Configuration

| Name | Network Config |
|------|----------------|
| eth0 | VPG0 |
| eth1 | Not Configured |

eth0 VPG1 VirtualPortGroup via ints ▼ [Interface Setting](#)

Description (optional):

The Interface Setting window pops up.

- d) Apply the following configurations:
- Set IPv4 as **Static**.
 - IP/Mask: 169.254.0.2 / 30
 - Default gateway: 169.254.0.1

Interface Setting

IPv4 Setting

Static Dynamic Disable

IP/Mask: /

DNS:

Default Gateway IP:

- e) Check that IPV6 is set to **Disable**.

IPv6 Setting

Static Dynamic Disable

- f) Click **OK** to save the interface settings.
You're back to the Network Configuration menu.

▼ Network Configuration

| Name | Network Config |
|------|----------------|
| eth0 | VPG0 |
| eth1 | Not Configured |

eth0 [Interface Setting](#)

Description (optional):

- g) Click **OK** to save the network configurations.
A popup that confirms changes appears.



- h) Click **OK**.

Step 4

eth1:

- a) Click **edit** in the eth1 line.
b) Select the **VPG0** interface.


▼ Network Configuration

| Name | Network Config |
|------|----------------|
| eth0 | VPG1 |
| eth1 | Not Configured |


eth1 [Interface Setting](#)

Description (optional):

- c) Click **Interface setting**.
d) Apply the following configurations:
- Set IPv4 as **Static**.
 - IP/Mask: 169.254.1.2 / 30

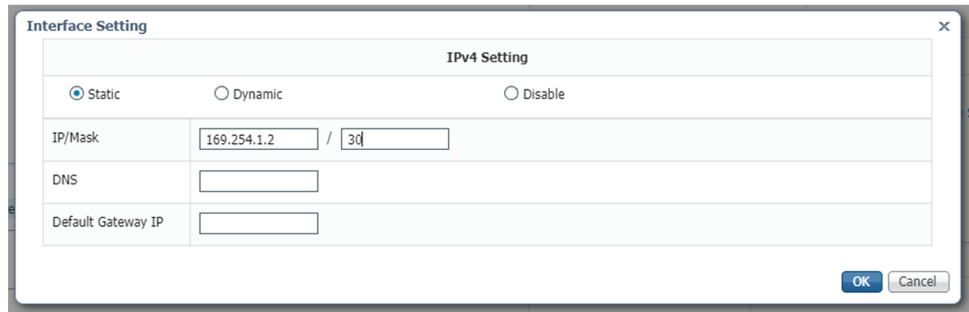


e) **Disable IPv6.**



f) Click **OK**, and click **OK** again when you're back to the Network Configuration menu to save the interface settings.


Step 5 Click the **Activate App** button.

The operation takes several seconds.

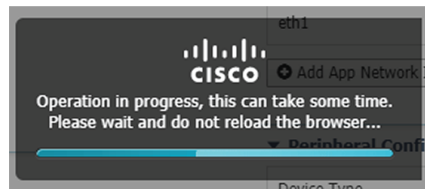


Step 6 Go to the Applications menu to see the application's status.

The application is activated and needs to be started.

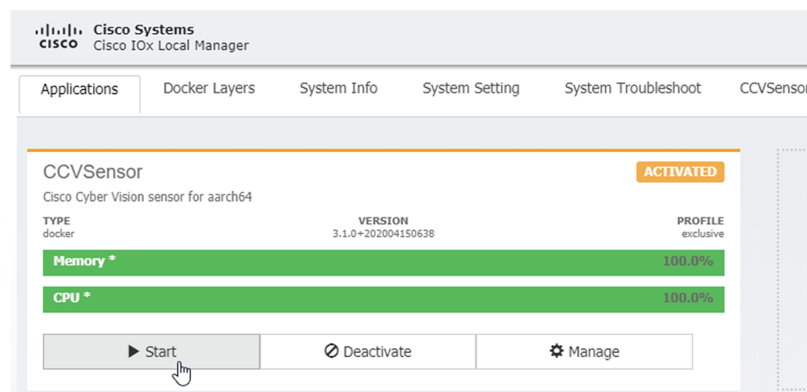


Step 7 Click the **Start** button.

The operation takes several seconds.

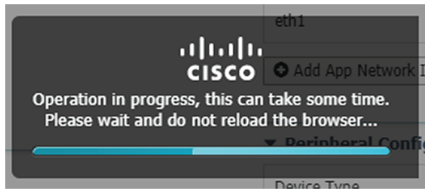


The applications' status changes to RUNNING.

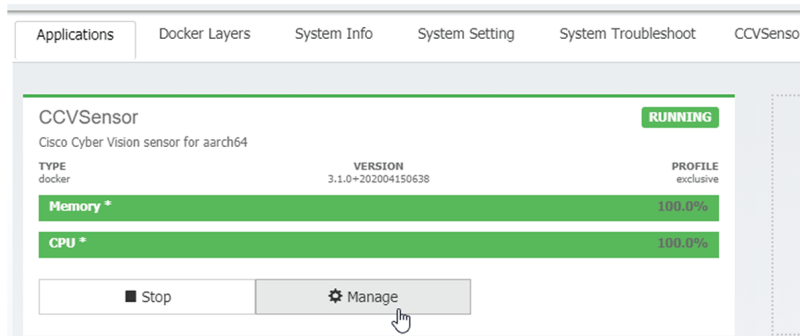

Generate the provisioning package

1. In Cisco Cyber Vision, navigate to Admin > Sensors > Sensor Explorer and click **Install sensor**, then **Manual install**.

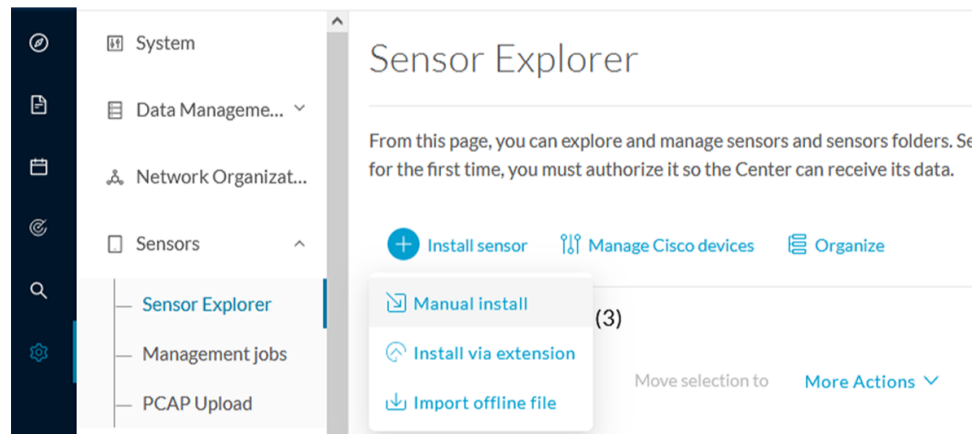

The manual install wizard appears.

2. Select **Cisco IOx Application** and click **Next**.

3. Fill the fields to configure the sensor provisioning package:

- The serial number of the hardware.
- Center IP: leave blank.
- Gateway: add if necessary.
- Optionally, select a capture mode.
- Optionally, select RSPAN (only with Catalyst 9x00 and if using ERSPAN is not possible).

Configure provisioning package

Please fill in the fields below to add configuration to the provisioning package to install.

Sensor Application

Serial number*

Center collection IP

leave blank to use current collection IP

Gateway

Capture mode


- Optimal (default): analyze the most relevant flows
- All: analyze all the flows
- Industrial only: analyze industrial flows
- Custom: set your filter using a packet filter in tcpdump-compatible syntax

Monitor session type

- ERSPAN: recommended choice for all devices
- RSPAN: use it only with Catalyst 9X00 and when using ERSPAN is not possible

4. Click **Create sensor**.

- Click the link to download the provisioning package.

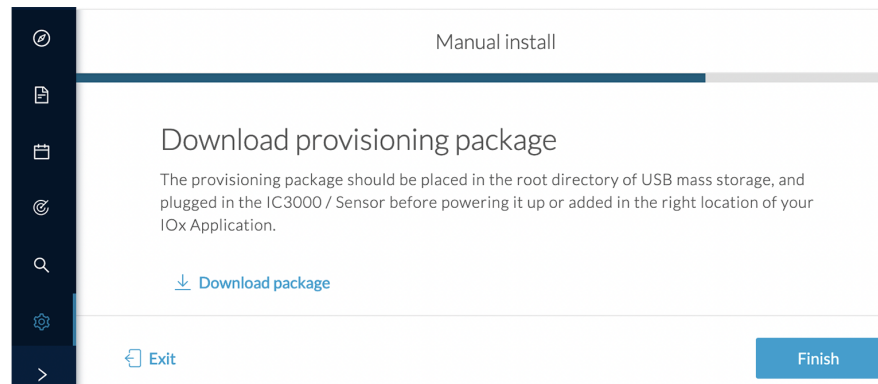

This will download the provisioning package which is a zip archive file with the following name structure: sbs-sensor-config-<serialnumber>.zip (e.g. "sbs-sensor-configFCW23500HDC.zip").


- Click **Finish**.
- A new entry for the sensor appears in the Sensor Explorer list.

The sensor status will switch from Disconnected to Connected.


| <input type="checkbox"/> | Label | IP Address | Version | Location | Health status | Processing status | Active Discovery | Uptime |
|--------------------------|-------------|---------------|--------------------|----------|---------------|-------------------|------------------|--------|
| <input type="checkbox"/> | | | | | Disconnected | Disconnected | | Not |
| <input type="checkbox"/> | | | | | Disconnected | Disconnected | | Not |
| <input type="checkbox"/> | FCW2445P6X5 | 192.168.49.21 | 4.1.0+202202151440 | | Connected | Pending data | Enabled | 4 days |

Import the provisioning package


- In the Local Manager, in the IOx configuration menu, click **Manage**.

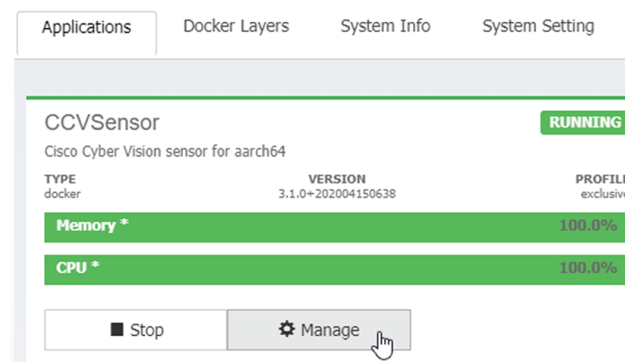

- Navigate to **App-DataDir**.

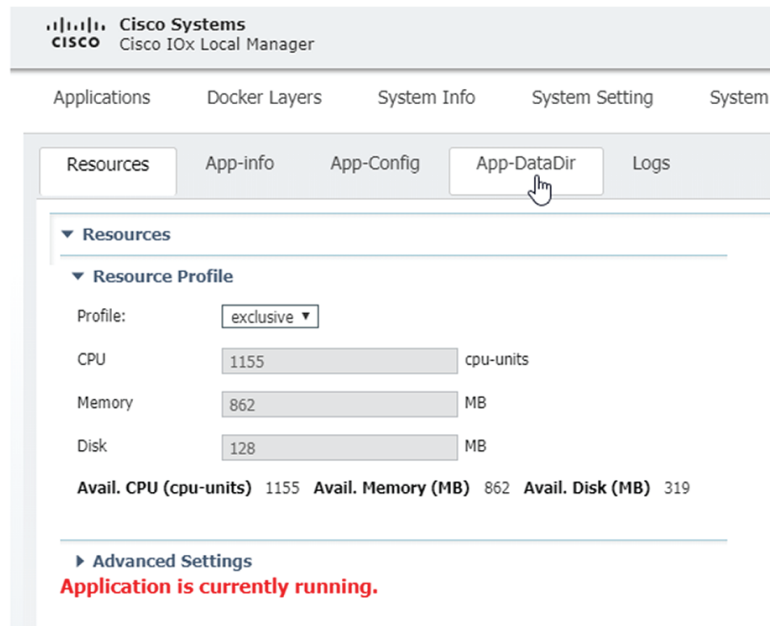


3. Click **Upload**.

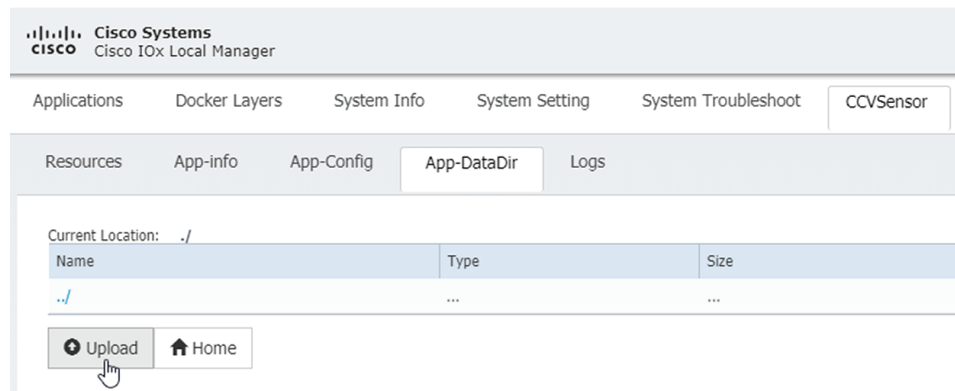

4. Choose the provisioning package downloaded (i.e. "sbs-sensor-config-FCW23500HDC.zip"), and add the exact file name in the path field (i.e. "sbs-sensor-config-FCW23500HDC.zip").

5. Click **OK**.

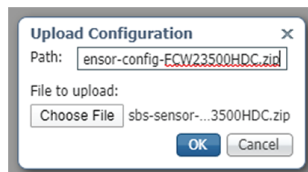

6. After a few seconds, the sensor appears as Connected in Cisco Cyber Vision.

Import the provisioning package

| | | | | | | | |
|--------------------------|-------------|---------------|--------------------|-----------|--------------|---------|--------|
| <input type="checkbox"/> | FCW2445P6X5 | 192.168.49.21 | 4.1.0+202202151440 | Connected | Pending data | Enabled | 4 days |
|--------------------------|-------------|---------------|--------------------|-----------|--------------|---------|--------|