



## Installation

---

- [Procedure with the Cisco Cyber Vision sensor management extension, on page 1](#)
- [Procedure with the Local Manager, on page 11](#)
- [Procedure with the CLI, on page 28](#)

## Procedure with the Cisco Cyber Vision sensor management extension

After the [Initial configuration](#), proceed to the steps described in this section. This section also describes the steps to configure Active Discovery.



---

**Note** To be able to use the Cisco Cyber Vision sensor management extension, an IP address reachable by the Center Collection interface must be set on the Collection VLAN.

---


### Install the sensor management extension

To install the sensor management extension, you must:

#### Procedure

---

- Step 1** Retrieve the extension file (i.e. CiscoCyberVision-sensor-management-<version>.ext) from cisco.com.
- Step 2** Access the Extension administration page in Cisco Cyber Vision.
- Step 3** Import the extension file.

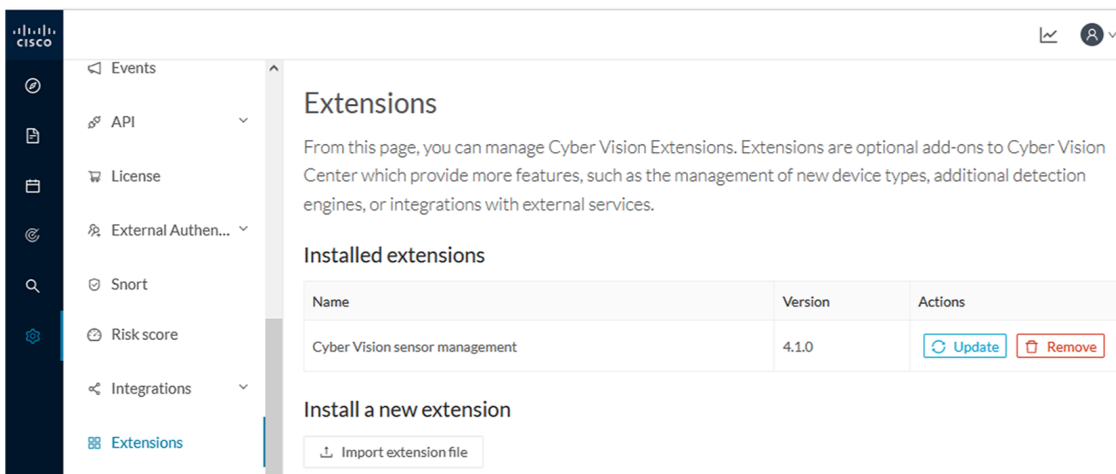


Once the sensor management extension is installed, you will find a new management job under the sensor administration menu ([Management jobs, on page 2](#)), and the **Install via extension** button will be enabled in the Sensor Explorer page.

## Management jobs

As some deployment tasks on sensors can take several minutes, this page shows the jobs execution status and advancement for each sensor deployed with the sensor management extension.

This page is only visible when the sensor management extension is installed in Cisco Cyber Vision.

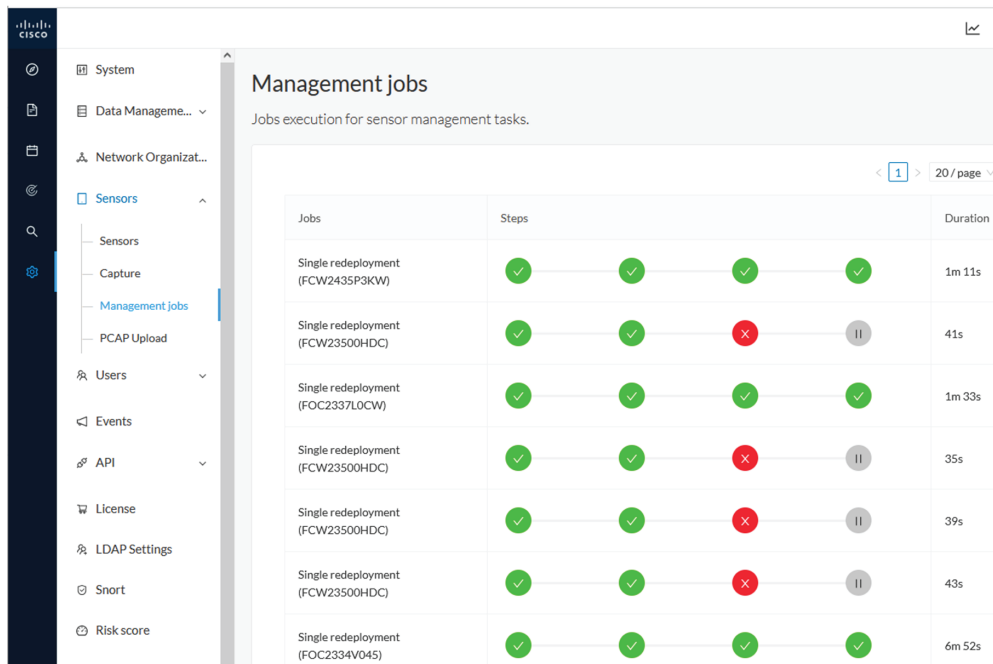

You will find the following jobs:

- Single deployment

This job is launched when clicking the Deploy Cisco device button in the sensor administration page, that is when a new IOx sensor is deployed.

- Single redeployment

This job is launched when clicking the Reconfigure Redeploy button in the sensor administration page, that is when deploying on a sensor that has already been deployed. This option is used for example to change the sensor's parameters like enabling active discovery.

- Single removal

This job is launched when clicking the Remove button from the sensor administration page.

- Update all devices

This job is launched when clicking the Update Cisco devices button from the sensor administration page. A unique job is created for all managed sensors that are being updated.

If a job fails, you can click on the error icon to view detailed logs.

Jobs	Steps
Single redeployment (FCW23500HDC)	
Single redeployment (FCW2435P3KW)	
Single redeployment (FCW23500HDC)	
Single redeployment (FOC2337LOCW)	
Single redeployment (FCW23500HDC)	

Enroll


Error

```
Fatal error: cannot upload provisioning package: UploadAppData failed: Fog Director API Error Code 0: {"message": "File upload failed. App data upload is not allowed since this app was installed with --rm option and currently app container is cleaned after stopping the app. Consider starting the app and retry."}
```

## Create a sensor in the sensor management extension

### Procedure

- Step 1** In Cisco Cyber Vision, navigate to Admin > Sensors > Sensor Explorer and click **Install sensor**, then **Install via extension**.

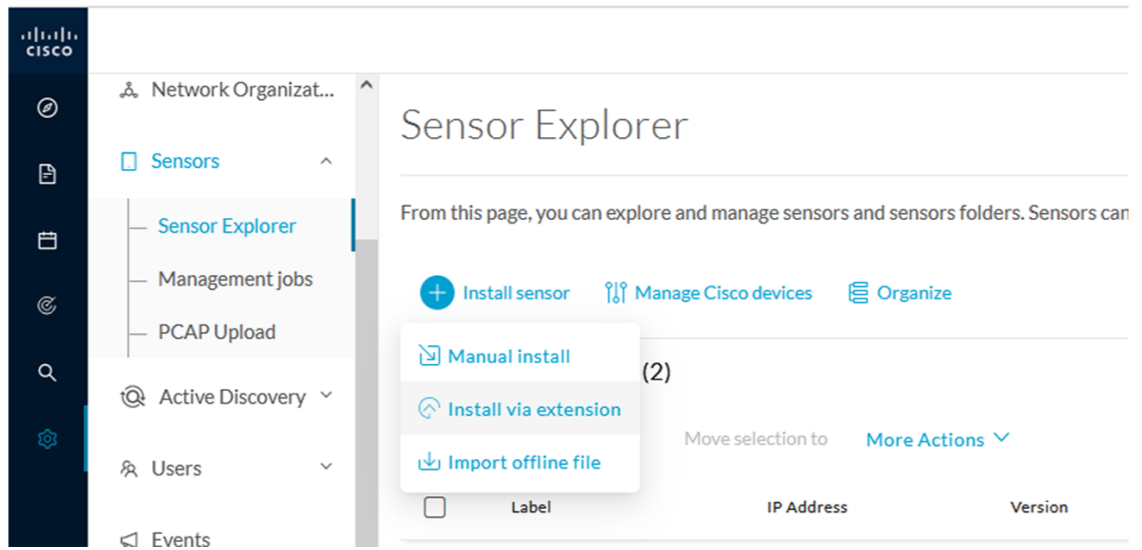

**Step 2** Fill the requested fields so Cisco Cyber Vision can reach the device:

- IP address: admin address of the device.
- Port: management port (443).
- Login: user with the admin rights of the device.
- Password: password of the admin user.
- Capture Mode: Optionally, select a capture mode.

Install via extension

---

### Reach Cisco device

Please fill the fields below to enable Cisco Cyber Vision to reach your device.

<p>IP address*</p> <input type="text" value="192.168.49.20"/>	<p>Port*</p> <input type="text" value="443"/> <small>For example 443 or 8443</small>
<p>Center collection IP</p> <input type="text"/> <small>leave blank to use current collection IP</small>	

---

Credentials

Login\*

Password\*

**Step 3** Click **Connect**.

The Center will join the device and the second parameter list will be displayed. For this step to succeed, the device needs to be reachable by the Center on its eth1 connection.

## Configure a sensor in the sensor management extension

If the Center can join the switch, the following form appears:

**Form for the Cisco IE3x00 and the Cisco IE9x00:**

Install via extension

## Configure Cyber Vision IOx sensor app

The device requires additional parameters. Some parameters have been pre-filled. Please complete the remaining fields.

Cisco device: IE-3400-8T2S

Capture IP address\*

169.254.1.2

Capture prefix length\*

30

Like 24, 16 or 8

Capture VLAN number\*

2508

Collection IP address\*

192.168.49.21

Collection prefix length\*

24

Like 24, 16 or 8

Collection gateway

Collection VLAN number\*

507

Exit

Next

**Form for the Cisco Catalyst 9x00 with RSPAN configuration available:**

Cisco device: C9300L-48T-4X

Monitor session type:

- ERSPAN: recommended choice
- RSPAN: use it only when using ERSPAN is not possible

Capture IP address\*

169.254.1.2

Capture prefix length\*

30

Like 24, 16 or 8

Capture VLAN number\*

2508

Collection IP address\*

192.168.0.248

Collection prefix length\*

24

Like 24, 16 or 8

Collection gateway

Collection VLAN number\*

4

Exit

Next

While some parameters are filled automatically, you can still change them if necessary.

## Procedure

**Step 1** Fill the following parameters for the Collection interface:

- Capture IP address: IP address destination of the monitor session in the sensor
- Capture prefix length: mask of the capture IP address
- Capture VLAN number: VLAN of the monitor session in the sensor
- Collection IP address: IP address of the sensor in the device
- Collection prefix length: mask of the Collection IP address
- Collection gateway: gateway of the Collection IP address
- Collection VLAN number: VLAN of the sensor

**Step 2** Click **Next**.

**Step 3** **Active Discovery:**

If you want to enable Active Discovery on the sensor, select **Passive and Active Discovery**.

You can:

- use the sensor Collection interface by selecting it:

Install via extension

---

### Configure Active Discovery

Please select an application type. If you want to enable Active Discovery on the application, select "Passive and Active Discovery". You will have to add some network interfaces parameters.

**Passive only**  
 **Passive and Active Discovery**

---

Add Active Discovery configuration	Network interfaces
<input checked="" type="checkbox"/> Use collection interface <a href="#">+ New network interface</a>	<ul style="list-style-type: none"> <li>• 192.168.49.21/24 VLAN#1 (collection interface)</li> </ul>

- add new network interfaces filling the following parameters to set dedicated network interfaces and clicking Add:

- IP address
- Prefix length
- VLAN number

Add Active Discovery configuration

Use collection interface

+ New network interface

IP address\*

IP address interface used to do Active Discovery

Prefix length\*

Like 24, 16 or 8

VLAN number\*

Use 1 by default

Add
Cancel

Network interfaces

- 192.168.50.21/24 VLAN#50

delete

Back
Deploy

#### Step 4 Click **Deploy**.

The Center starts deploying the sensor application on the target equipment. This can take a few minutes. You can go to the Management jobs page to check the deployment advancements.

Once the deployment is finished, a new sensor appears in the sensors list.

The sensor's status will eventually turn to connected.

<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440	Connected	Pending data	Enabled	4 days
--------------------------	-------------	---------------	--------------------	-----------	--------------	---------	--------

If the Active Discovery has been enabled and set -that is if the option **Passive and Active Discovery** was selected when configuring the sensor in the sensor management extension- the sensor is displayed as below with Active Discovery's status as Enabled.



<input type="checkbox"/>	Label	IP Address	Version	Location	Health status	Processing status	Active Discovery	Uptime
<input type="checkbox"/>	FCW2445P6X5			192.168.49.21	Disconnected	Disconnected		Not
<input type="checkbox"/>	FCW2445P6X5			192.168.49.21	Disconnected	Disconnected		Not
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data	Enabled	4 days

## Configure Active Discovery

Once the sensor is connected, you can change the Active Discovery's network interface so it uses the Collection network interface instead, and add several network interfaces for the sensor to perform Active Discovery on several subnetworks at the same time.

### Procedure

**Step 1** Click the sensor to configure and click the **Active Discovery** button on its right side panel.

The screenshot shows the 'Sensor Explorer' interface for sensor FCW2445P6X5. The main panel displays a table of folders and sensors, with the selected sensor FCW2445P6X5 highlighted. The right-hand configuration panel shows various settings for the sensor, including its label, serial number, IP address, version, system date, deployment, and active discovery status. The 'Active Discovery' button is highlighted with a red box.

The Active Discovery configuration appears with the interface currently set.

**Step 2** Select **Use collection interface** for the Active Discovery to use the Collection network interface.

ACTIVE DISCOVERY CONFIGURATION

From here you can configure Active Discovery

Add Active Discovery configuration

- Use collection interface
- + New network interface

Network interfaces

- 192.168.49.21/24 VLAN#1 (collection interface)

Configure Cancel

To add a network interface to Active Discovery for the sensor to perform active monitoring on another subnetwork:

**Step 3** Add a new network interface by clicking the corresponding button.

**Step 4** Fill the following parameters to set dedicated network interfaces:

- IP address
- Prefix length
- VLAN number

**Step 5** Click **Add**.

ACTIVE DISCOVERY CONFIGURATION

From here you can configure Active Discovery

+ New network interface

IP address\*

192.168.52.24

Prefix length\*

24

VLAN number\*

52

Add Cancel

Configure Cancel

You can add as many network interfaces as needed.

**Step 6** When you are done, click **Configure**.

A message saying that the configuration has been applied successfully appears.


---

## Procedure with the Local Manager


After the [Initial configuration](#), proceed to the steps described in this section.

### Access the Local manager


1. Open a browser and navigate to the IP address you configured on the interface you are connected to.
2. Log in using the Local Manager user account and password.

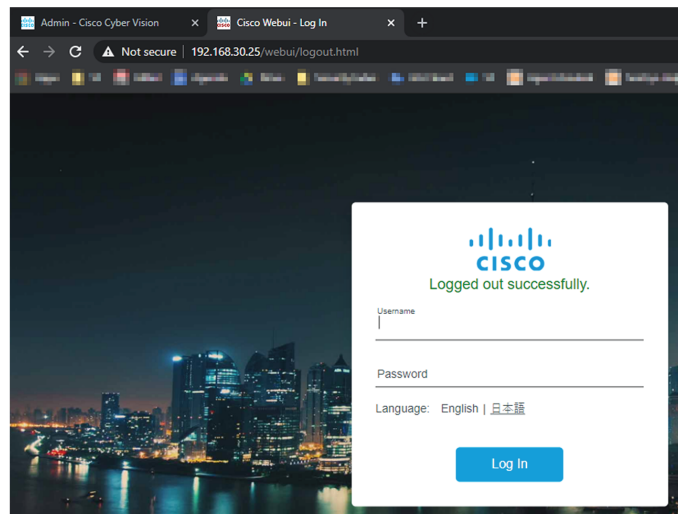

For example: Cisco IE3300 10G/IE3400

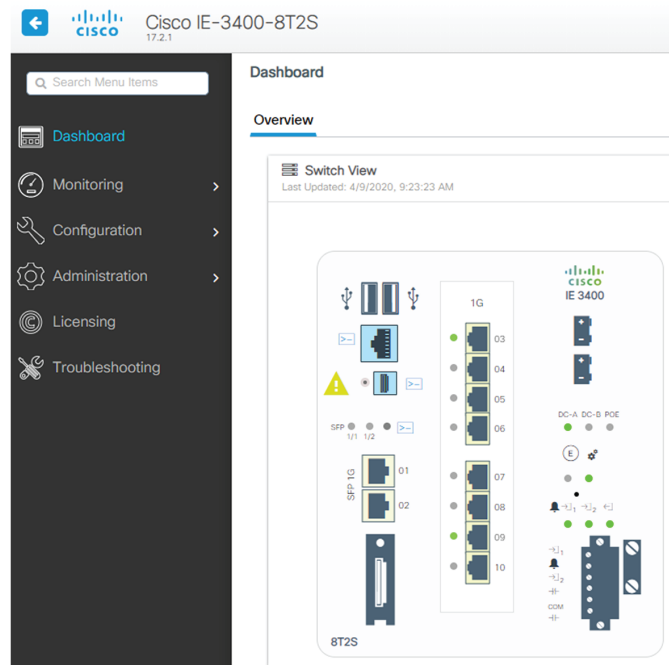

- Once logged into the Local Manager, navigate to Configuration > Services > IOx.  
For example: Cisco IE3300 10G/IE3400

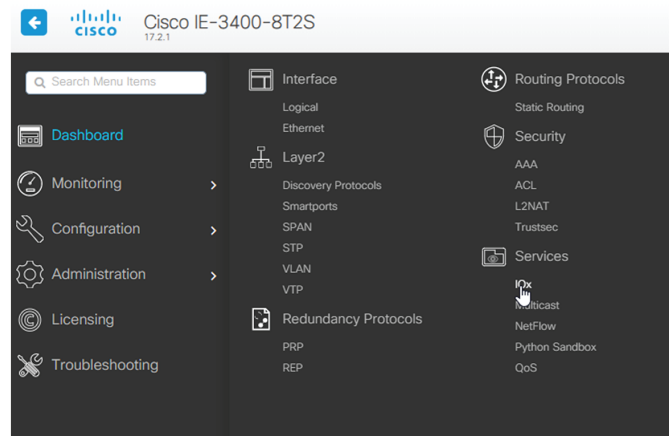


- Log in using the user account and password.




## Install the sensor virtual application


Once logged in, the following menu appears:

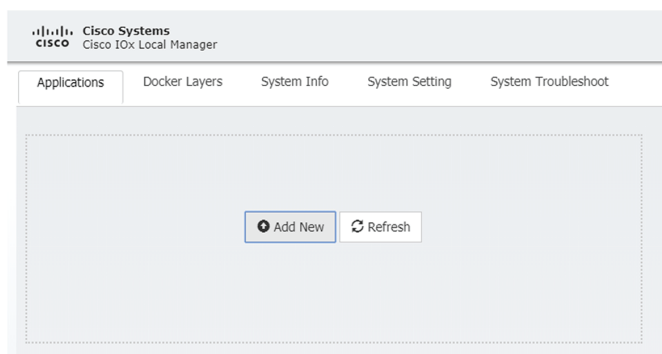


1. Click **Add New**.
2. Add an Application id name (e.g. CCVSensor).
3. Select the application archive file
  - "CiscoCyberVision-IOx-aarch64-xxx.tar" for the Cisco IE3300/IE3400/IE9300
  - "CiscoCyberVision-IOx-Active-Discovery-aarch64.tar" for the Cisco IE3300/IE3400/IE9300 with Active Discovery
  - "CiscoCyberVision-IOx-x86-64-xxx.tar" for the Cisco Catalyst 9300
  - "CiscoCyberVision-IOx-Active-Discovery-x86-64.tar" for the Cisco Catalyst 9300

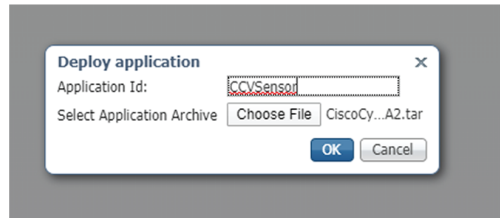

The installation takes a few minutes.

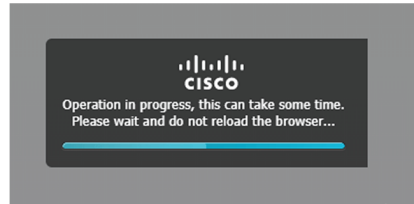


When the application is installed, the following message is displayed:

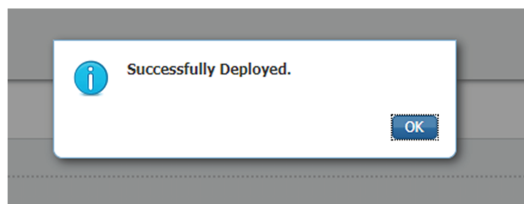


## Configure the sensor virtual application (IE3x00/IE9x00)


1. Click **Activate** to launch the configuration of the sensor application.

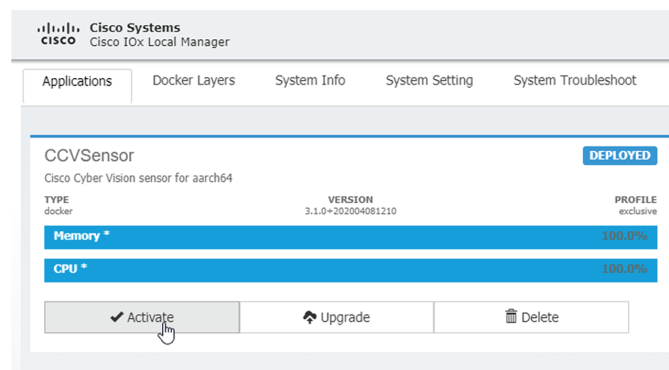


2. Change the disk size from the default size to 2048 MB. The disk size must not be larger than this.

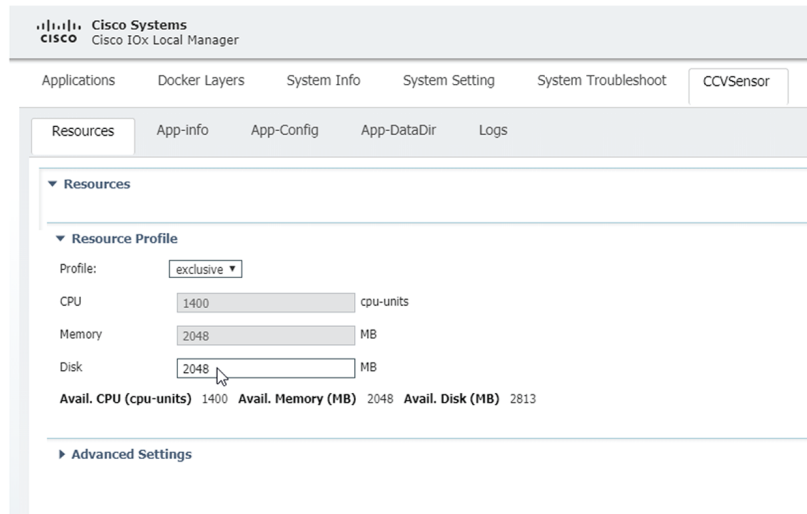

- Bind the interfaces in the container to an interface on the host in Network Configuration. Start with eth0 by clicking **edit** in the eth0 line.

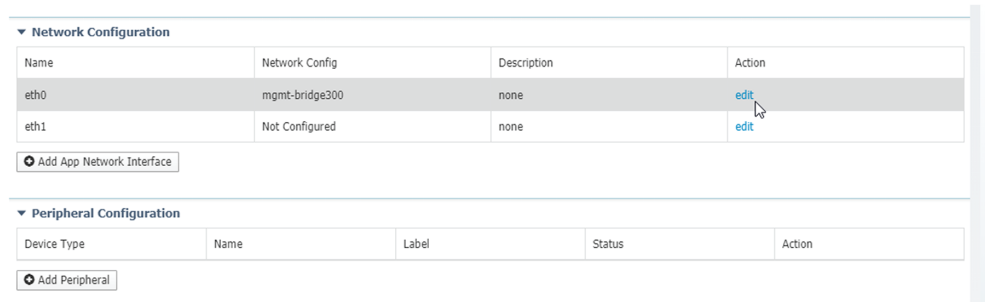

- Click **Interface Setting**.

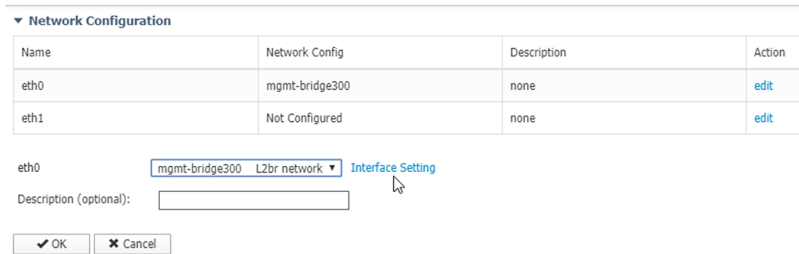

- Apply the following configurations:
  - Select **Static**
  - IP/Mask: IP and mask of the sensor
  - Default gateway: IP address of the Center


- Vlan ID, which is defined below, is the VLAN in the Cisco IE3300 10G/IE3400 dedicated to the Collection network interface (link between the Center and the sensors), e.g. 507.

6. IPV6 must be set to Disable.

7. Click **OK** twice.

Name	Network Config
eth0	mgmt-bridge300
eth1	Not Configured

8. Click **OK** again on the popup.

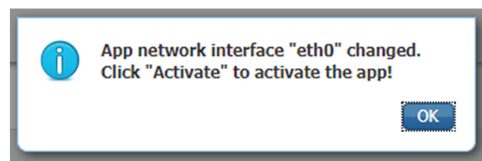

9. Then, apply the following parameters to eth1:
  - Select **Static**.
  - IP/Mask: the IP and mask of the sensor for the mirrored traffic.



- Vlan ID, which is defined below, is the VLAN in the Cisco IE3300 10G/IE3400/IE9300 dedicated to traffic mirroring.


10. IPV6 must be set to **Disable**.

11. If configuring a sensor with **Active Discovery**, you must set an additional interface (eth2 without IP address) dedicated to this feature.


Name	Network Config	Description	Action
eth0	mgmt-bridge300	none	<a href="#">edit</a>
eth1	Not Configured	none	<a href="#">edit</a>
eth2	Not Configured	none	<a href="#">edit</a>

12. Click the **Activate App** button.

The operation takes several minutes.

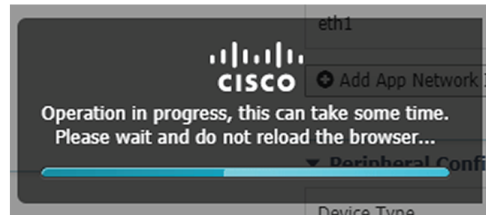


The application status changes to "RUNNING":

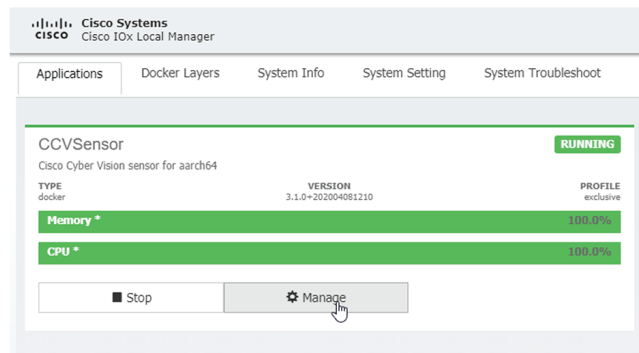

## Configure the sensor virtual application (Catalyst 9x00)

1. Click **Activate** to launch the configuration of the sensor application.

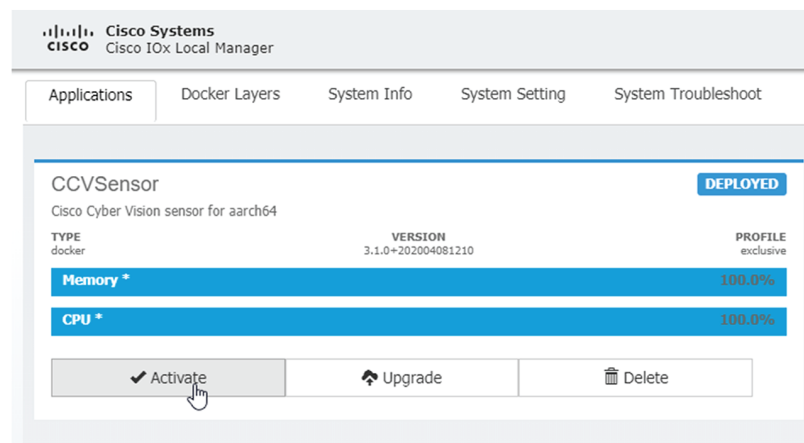

2. Change the disk size from the default size to 80,000 MB. The disk size must not be smaller than this.

▼ Resource Profile

Profile:

CPU:  cpu-units

Memory:  MB

Disk:  MB

Avail. CPU (cpu-units) 7400    Avail. Memory (MB) 2048    Avail. Disk (MB) 101289

▶ Advanced Settings

- Bind the interfaces in the container to an interface on the host in Network Configuration. Start with eth0 by clicking **edit** in the eth0 line.

▼ Network Configuration

Name	Network Config	Description	Action
eth0	mgmt-bridge100	none	<a href="#">edit</a>
eth1	Not Configured	none	<a href="#">edit</a>

- Select the mgmt-bridge300 entry in the interface list.

▼ Network Configuration

Name	Network Config	Description	Action
eth0	mgmt-bridge100	none	<a href="#">edit</a>
eth1	Not Configured	none	<a href="#">edit</a>

eth0

Management

Management network - bridge

L2br network - bridge

Description (optional):

- Click **Interface Setting**.

▼ Network Configuration

Name	Network Config	Description	Action
eth0	mgmt-bridge300	none	<a href="#">edit</a>
eth1	Not Configured	none	<a href="#">edit</a>

eth0  L2br network [Interface Setting](#)

Description (optional):

6. Apply the following configurations:

- Select **Static**
- IP/Mask: the IP and mask of the sensor
- Default gateway: the IP address of the Center
- Vlan ID, which is defined below, is the VLAN in the Cisco Catalyst 9300 dedicated to the Collection network interface (link between the Center and the sensors), e.g. 507.

Interface Setting

IPv4 Setting

Static  Dynamic  Disable

IP/Mask  /

DNS

Default Gateway IP

Vlan ID

Vlan ID

7. IPV6 must be set to **Disable**.

IPv6 Setting

Static  Dynamic  Disable

8. Click **OK** twice.


▼ Network Configuration

Name	Network Config
eth0	mgmt-bridge300
eth1	Not Configured

eth0  L2br network ▼ [Interface Setting](#)

Description (optional):

9. Click **OK** again on the following popup.

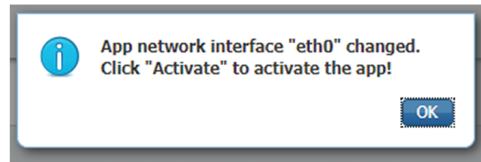

10. Apply the following configurations to eth1:

- Set IPv4 as **Static** and the IP and mask of the sensor for mirrored traffic.
- Disable IPv6.
- Set the VLAN id.
- **Set the mirror mode as enabled.**

**Interface Setting**

**IPv4 Setting**

Static     Dynamic     Disable

IP/Mask:  /

DNS:

Default Gateway IP:


**Vlan ID**

Vlan ID:

**Mirror Mode**

Mirror Mode:  Enabled

11. Click **OK** until you come back to the screen below.
12. Click the **Activate App** button.

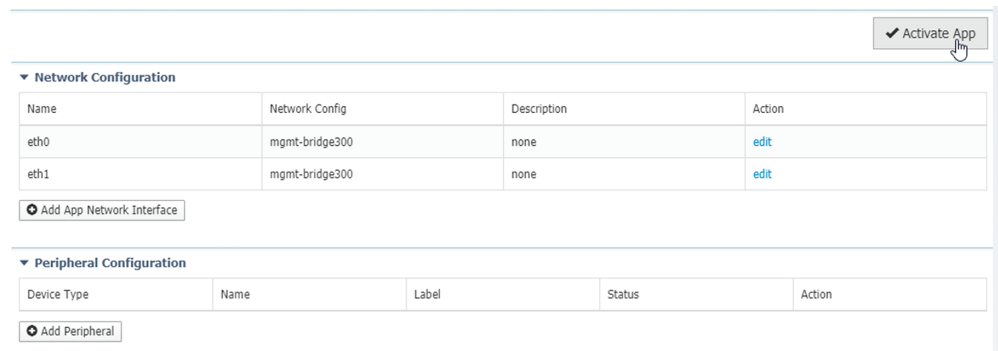

The screenshot shows a configuration page with an "Activate App" button in the top right corner. Below the button are two sections: "Network Configuration" and "Peripheral Configuration".

**Network Configuration**

Name	Network Config	Description	Action
eth0	mgmt-bridge300	none	<a href="#">edit</a>
eth1	mgmt-bridge300	none	<a href="#">edit</a>


Below the table is a button: "Add App Network Interface".

**Peripheral Configuration**


Device Type	Name	Label	Status	Action
-------------	------	-------	--------	--------

Below the table is a button: "Add Peripheral".

The operation takes several seconds.

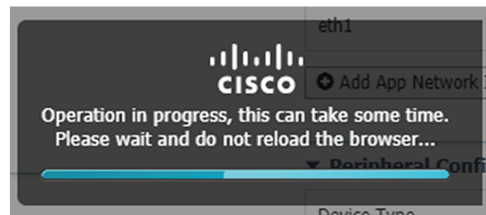

13. Click **Applications** to display the application status:

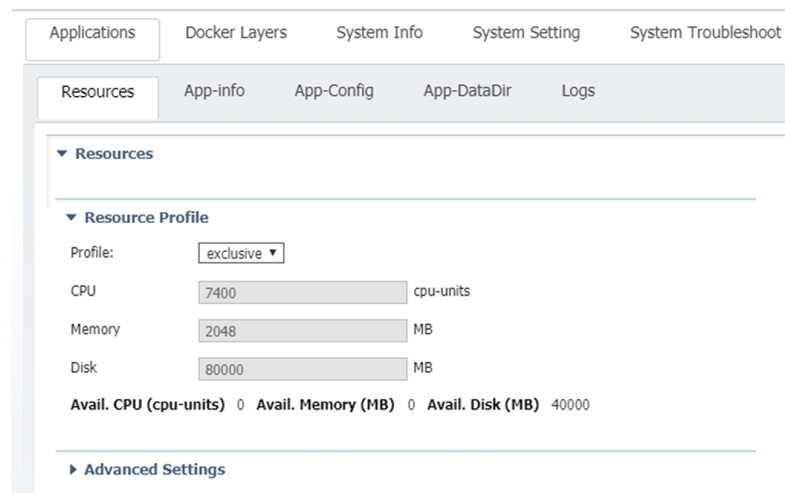

The screenshot shows the "Applications" page with several tabs: "Applications", "Docker Layers", "System Info", "System Setting", and "System Troubleshoot". The "Applications" tab is selected.

Below the tabs are sub-tabs: "Resources", "App-info", "App-Config", "App-DataDir", and "Logs". The "Resources" sub-tab is selected.

**Resources**

**Resource Profile**

Profile:

CPU:  cpu-units


Memory:  MB

Disk:  MB


Avail. CPU (cpu-units) 0 Avail. Memory (MB) 0 Avail. Disk (MB) 40000

Advanced Settings


14. The application is activated and needs to be started. To do so, click the **Start** button.

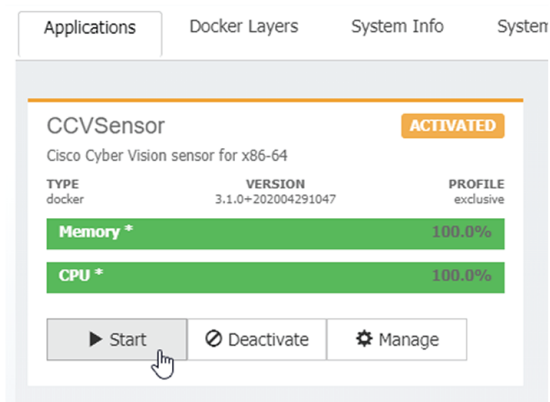

The operation takes several seconds.

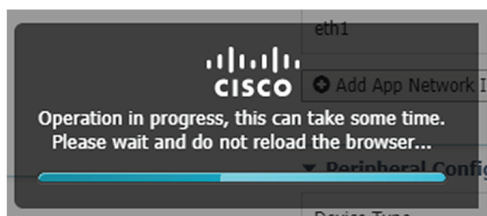


The application status changes to "RUNNING".

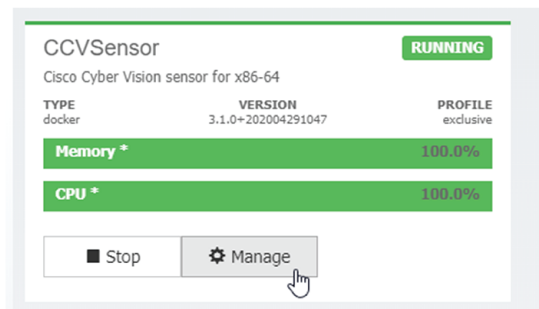


## Generate the provisioning package

1. In Cisco Cyber Vision, navigate to Admin > Sensors > Sensor Explorer and click **Install sensor**, then **Manual install**.

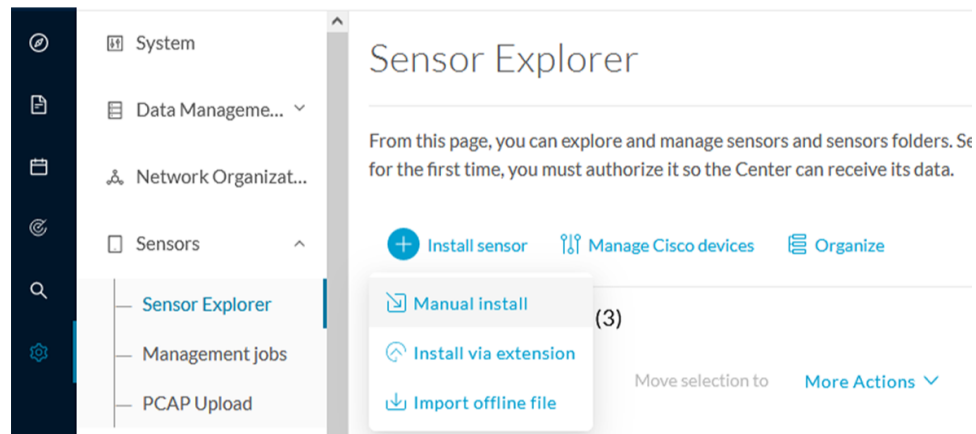

The manual install wizard appears.

2. Select **Cisco IOx Application** and click **Next**.

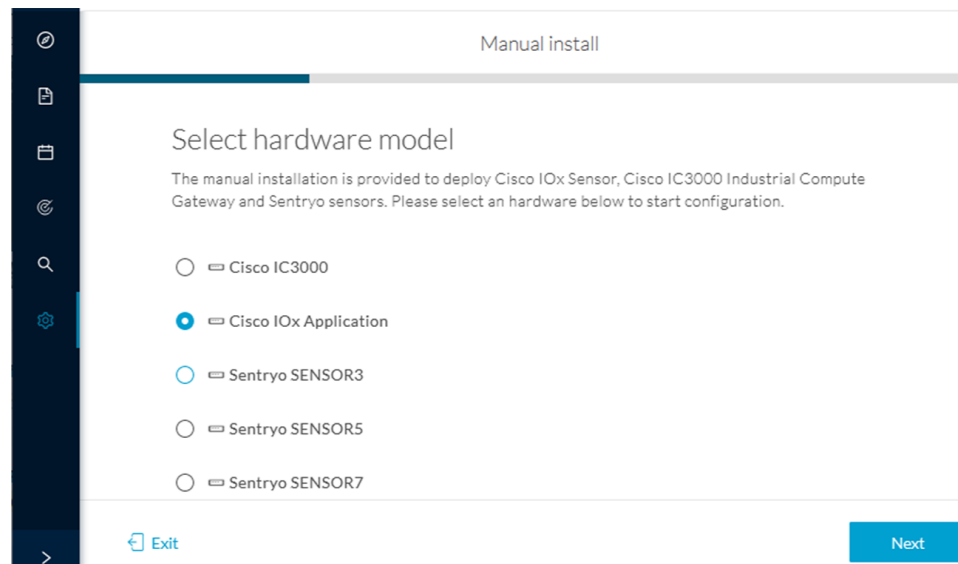

3. Fill the fields to configure the sensor provisioning package:
  - The serial number of the hardware.
  - Center IP: leave blank.
  - Gateway: add if necessary.
  - Optionally, select a capture mode.
  - Optionally, select RSPAN (only with Catalyst 9x00 and if using ERSPAN is not possible).



## Configure provisioning package

Please fill in the fields below to add configuration to the provisioning package to install.

### Sensor Application

Serial number\*

Center collection IP

leave blank to use current collection IP

Gateway


### Capture mode

- Optimal (default): analyze the most relevant flows
- All: analyze all the flows
- Industrial only: analyze industrial flows
- Custom: set your filter using a packet filter in tcpdump-compatible syntax

### Monitor session type

- ERSPAN: recommended choice for all devices
- RSPAN: use it only with Catalyst 9X00 and when using ERSPAN is not possible

4. Click **Create sensor**.
5. Click the link to download the provisioning package.

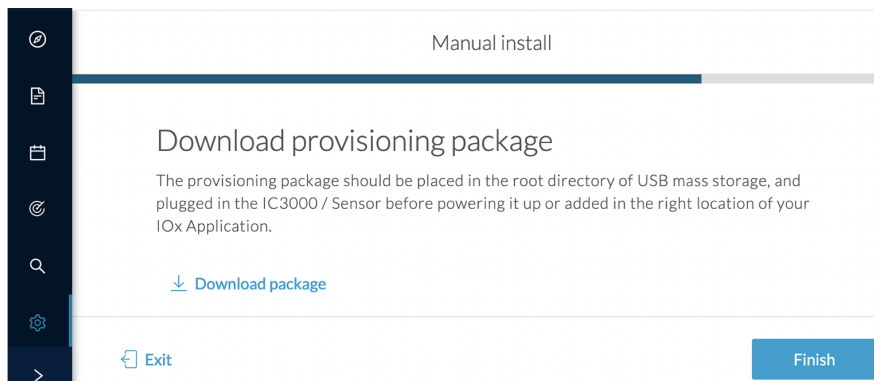

This will download the provisioning package which is a zip archive file with the following name structure: sbs-sensor-config-<serialnumber>.zip (e.g. "sbs-sensor-configFCW23500HDC.zip").

6. Click **Finish**.
7. A new entry for the sensor appears in the Sensor Explorer list.


The sensor status will switch from Disconnected to Connected.

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status	Processing status	Active Discovery	Uptime
<input type="checkbox"/>				192.168.49.21	Disconnected	Disconnected	Enabled	5h
<input type="checkbox"/>				192.168.49.21	Disconnected	Disconnected	Enabled	5h
<input type="checkbox"/>				192.168.49.21	Disconnected	Disconnected	Enabled	5h
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data	Enabled	4 days


## Import the provisioning package

1. In the Local manager, in the IOx configuration menu, click **Manage**.

Cisco IE3400:

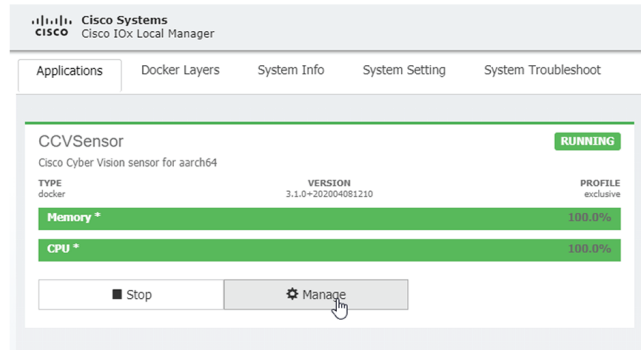


Cisco Catalyst 9300:

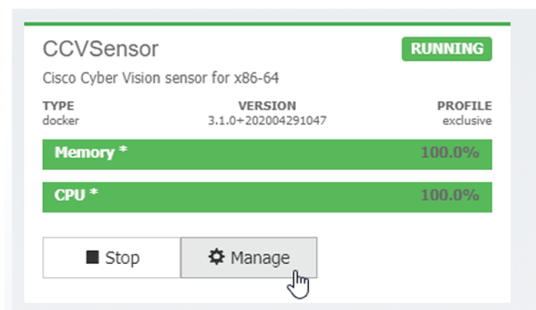


2. Navigate to **App\_DataDir**.

For example Cisco IE3400:

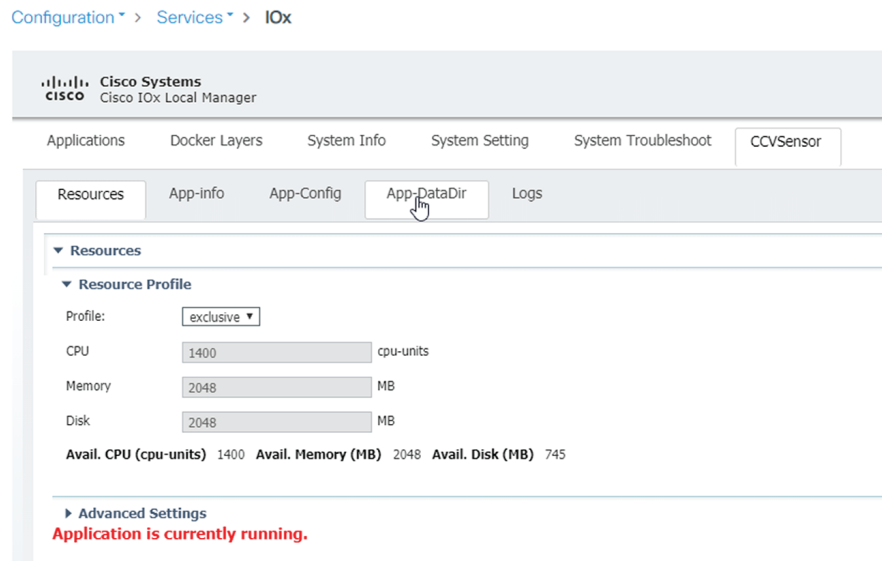


3. Click **Upload**.

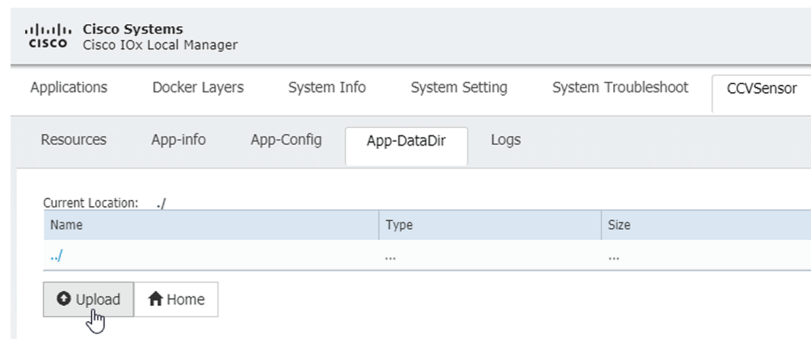

4. Choose the provisioning package downloaded (i.e. "sbs-sensor-config-FOC2334V01X.zip") and add the exact file name in the path field (i.e. "sbs-sensor-config-FOC2334V01X.zip").

5. Click **OK**.

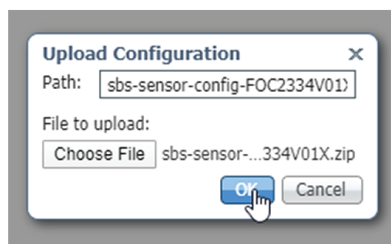

A popup indicating that Cisco Cyber Vision has been deployed successfully appears.

6. Click **OK**.

# Procedure with the CLI

After the [Initial configuration](#), proceed to the steps described in this section.

## Configure the sensor application



**Note** In this section, "CCVSensor" is used as the appid.

1. Connect to the device through SSH or a console.
2. Configure the application payload by typing the following commands:

Cisco IE3300 10G/IE3400:

```
enable
configure terminal
app-hosting appid CCVSensor
app-vnic AppGigabitEthernet trunk
vlan 507 guest-interface 0
guest-ipaddress 192.168.69.208 netmask 255.255.255.0
vlan 2508 guest-interface 1
guest-ipaddress 169.254.1.2 netmask 255.255.255.0
app-default-gateway 192.168.69.1 guest-interface 0
app-resource profile custom
persist-disk 2048
cpu 1400
memory 2048
vcpu 2
end
```

```
IE340CCV#enable
IE340CCV#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
IE340CCV(config)#app-hosting appid CCVSensor
IE340CCV(config-app-hosting)#app-vnic AppGigabitEthernet trunk
IE340CCV(config-config-app-hosting-trunk)#vlan 507 guest-interface 0
IE340CCV(config-config-app-hosting-vlan-access-ip)#guest-ipaddress 192.168.69.208 netmask 255.255.255.0
IE340CCV(config-config-app-hosting-vlan-access-ip)#vlan 2508 guest-interface 1
IE340CCV(config-config-app-hosting-vlan-access-ip)#guest-ipaddress 169.254.1.2 netmask 255.255.255.0
IE340CCV(config-config-app-hosting-vlan-access-ip)#app-default-gateway 192.168.69.1 guest-interface 0
IE340CCV(config-app-hosting)#app-resource profile custom
IE340CCV(config-app-resource-profile-custom)#persist-disk 2048
IE340CCV(config-app-resource-profile-custom)#cpu 1400
IE340CCV(config-app-resource-profile-custom)#memory 2048
IE340CCV(config-app-resource-profile-custom)#vcpu 2
IE340CCV(config-app-resource-profile-custom)#end
IE340CCV#
```

Cisco IE9300:

```
enable
configure terminal
app-hosting appid CCVSensor
app-vnic AppGigabitEthernet trunk
  vlan 507 guest-interface 0
    guest-ipaddress 192.168.69.90 netmask 255.255.255.0
  vlan 2508 guest-interface 1
    guest-ipaddress 169.254.1.2 netmask 255.255.255.252
app-default-gateway 192.168.69.190 guest-interface 0
app-resource docker
run-opts 1 --rm
```

```

app-resource profile custom
  cpu 1000
  memory 862
  persist-disk 4000
end

```

```

IE9300_1#
IE9300_1#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
IE9300_1(config)#app-hosting appid CCVSensor
IE9300_1(config-app-hosting)#app-vnic AppGigabitEthernet trunk
IE9300_1(config-config-app-hosting-trunk)#vlan 507 guest-interface 0
IE9300_1(config-config-app-hosting-vlan-access-ip)#guest-ipaddress 192.168.69.90 netmask 255.255.255.0
IE9300_1(config-config-app-hosting-vlan-access-ip)#vlan 2508 guest-interface 1
IE9300_1(config-config-app-hosting-vlan-access-ip)#guest-ipaddress 169.254.1.2 netmask 255.255.255.252
IE9300_1(config-config-app-hosting-vlan-access-ip)#app-default-gateway 192.168.69.190 guest-interface 0
IE9300_1(config-app-hosting)#app-resource docker
IE9300_1(config-app-hosting-docker)#run-opts 1 "--rm"
IE9300_1(config-app-hosting-docker)#app-resource profile custom
IE9300_1(config-app-resource-profile-custom)#cpu 1000
IE9300_1(config-app-resource-profile-custom)#memory 862
IE9300_1(config-app-resource-profile-custom)#persist-disk 4000
IE9300_1(config-app-resource-profile-custom)#end
IE9300_1#

```

### Cisco Catalyst 9300:

```

enable
configure terminal
app-hosting appid CCVSensor
app-vnic AppGigabitEthernet trunk
vlan 507 guest-interface 0
guest-ipaddress 192.168.69.210 netmask 255.255.255.0
vlan 2508 guest-interface 1
mirroring
guest-ipaddress 169.254.1.2 netmask 255.255.255.0
app-default-gateway 192.168.69.1 guest-interface 0
app-resource profile custom
persist-disk 8192
cpu 7400
memory 2048
vcpu 2
end

```

```

CAT9KCCV#
CAT9KCCV#enable
CAT9KCCV#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
CAT9KCCV(config)#app-hosting appid CCVSensor
CAT9KCCV(config-app-hosting)#app-vnic AppGigabitEthernet trunk
CAT9KCCV(config-config-app-hosting-trunk)#vlan 507 guest-interface 0
CAT9KCCV(config-config-app-hosting-vlan-access-ip)#guest-ipaddress 192.168.69.210 netmask 255.255.255.0
CAT9KCCV(config-config-app-hosting-vlan-access-ip)#vlan 2508 guest-interface 1
CAT9KCCV(config-config-app-hosting-vlan-access-ip)#guest-ipaddress 169.254.1.2 netmask 255.255.255.0
CAT9KCCV(config-config-app-hosting-vlan-access-ip)#app-default-gateway 192.168.69.1 guest-interface 0
CAT9KCCV(config-app-hosting)#app-resource profile custom
CAT9KCCV(config-app-resource-profile-custom)#persist-disk 8192
CAT9KCCV(config-app-resource-profile-custom)#cpu 7400
CAT9KCCV(config-app-resource-profile-custom)#memory 2048
CAT9KCCV(config-app-resource-profile-custom)#vcpu 2
CAT9KCCV(config-app-resource-profile-custom)#end
CAT9KCCV#

```

For the app-resource profile's custom values, refer to the result of the show app-hosting resource command.

In this example, all maximum values are used for:

- the CPU (CPU available units, here 1400 for the Cisco IE3300 10G/IE3400, 1000 for the Cisco IE9300, and 7400 for the Cisco Catalyst 9300)
- the VCPU (here 2), the memory (Memory available, here 2048)

- the disk (only 2048 MB and 8192 MB respectively are used to let space for application updates)

## Install the sensor application

The sensor package is to be retrieved on cisco.com. The file has the following name structure:

- CiscoCyberVision-IOx-aarch64-<VERSION>.tar (Cisco IE3300 10G/IE3400/IE9300).
- CiscoCyberVision-IOx-x86-64-<VERSION>.tar (Cisco Catalyst 9300).

1. Copy the package to a USB key or in the flash memory.
2. Type the following commands on the CLI:

```
enable
app-hosting install appid CCVSensor package usbflash0:<FILENAME>.tar
```

Cisco IE3300 10G/IE3400/IE9300:

```
IE340CCV#app-hosting install appid CCVSensor package usbflash0:CiscoCyberVision-IOx-aarch64-3.1.0-RC4.tar
Installing package 'usbflash0:CiscoCyberVision-IOx-aarch64-3.1.0-RC4.tar' for 'CCVSensor'. Use 'show app-hosting list' f
or progress.
IE340CCV#
```

Cisco Catalyst 9300:

```
CAT9KCCV#
CAT9KCCV#enable
CAT9KCCV#app-hosting install appid CCVSensor package usbflash0:CiscoCyberVision-IOx-x86-64-3.1.0-RC4.tar
Installing package 'usbflash0:CiscoCyberVision-IOx-x86-64-3.1.0-RC4.tar' for 'CCVSensor'. Use 'show app-hosting list' fo
r progress.
CAT9KCCV#
```




---

**Note** Adjust "usbflash0:" in accordance with the sensor package's localization (USB port or flash memory).

---




---

**Note** Replace "CiscoCyberVision-IOx-aarch64-<VERSION>.tar" with the right filename.

---

3. Check that the application is in "DEPLOYED" state:

```
show app-hosting list
```

For example: Cisco IE3400

```
IE340CCV#
IE340CCV#show app-hosting list
App id                               State
-----
CCVSensor                             DEPLOYED
IE340CCV#
```

4. Activate the application using the following command:

```
app-hosting activate appid CCVSensor
```

For example: Cisco IE3400

```
IE340CCV#app-hosting activate appid CCVSensor
CCVSensor activated successfully
Current state is: ACTIVATED
IE340CCV#
```

5. Start the application using the following command:


```
app-hosting start appid CCVSensor
```

For example: Cisco IE3400:

```
IE340CCV#
IE340CCV#app-hosting start appid CCVSensor
CCVSensor started successfully
Current state is: RUNNING
IE340CCV#
```

## Generate the provisioning package

1. In Cisco Cyber Vision, navigate to Admin > Sensors > Sensor Explorer and click **Install sensor**, then **Manual install**.

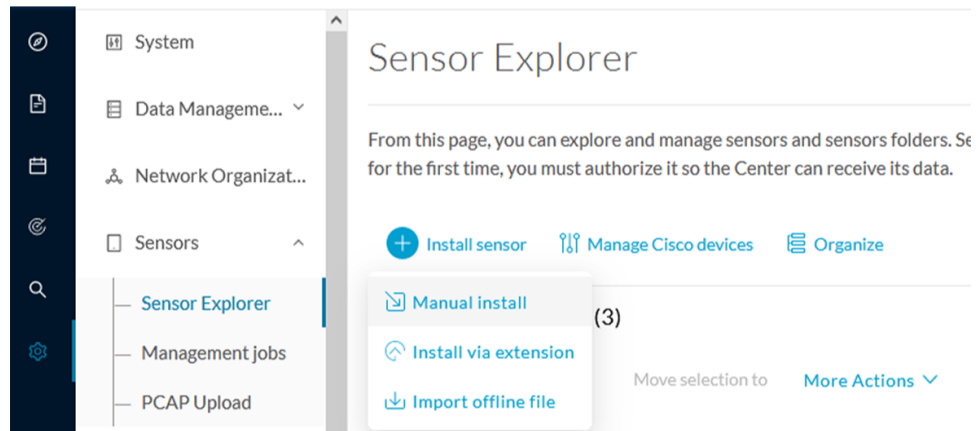

The manual install wizard appears.

2. Select **Cisco IOx Application** and click **Next**.

The screenshot shows a web interface titled "Manual install". On the left is a dark sidebar with navigation icons. The main content area has the heading "Select hardware model". Below the heading is a paragraph: "The manual installation is provided to deploy Cisco IOx Sensor, Cisco IC3000 Industrial Compute Gateway and Sentryo sensors. Please select an hardware below to start configuration." There are five radio button options: "Cisco IC3000", "Cisco IOx Application" (which is selected), "Sentryo SENSOR3", "Sentryo SENSOR5", and "Sentryo SENSOR7". At the bottom left is an "Exit" button with a back arrow, and at the bottom right is a "Next" button.

3. Fill the fields to configure the sensor provisioning package:

- The serial number of the hardware.
- Center IP: leave blank.
- Gateway: add if necessary.
- Optionally, select a capture mode.
- Optionally, select RSPAN (only with Catalyst 9x00 and if using ERSPAN is not possible).

### Configure provisioning package

Please fill in the fields below to add configuration to the provisioning package to install.

#### Sensor Application

Serial number\*

Center collection IP

leave blank to use current collection IP

Gateway

Capture mode

- Optimal (default): analyze the most relevant flows
- All: analyze all the flows
- Industrial only: analyze industrial flows
- Custom: set your filter using a packet filter in tcpdump-compatible syntax


Monitor session type

- ERSPAN: recommended choice for all devices
- RSPAN: use it only with Catalyst 9X00 and when using ERSPAN is not possible

4. Click **Create sensor**.



- Click the link to download the provisioning package.

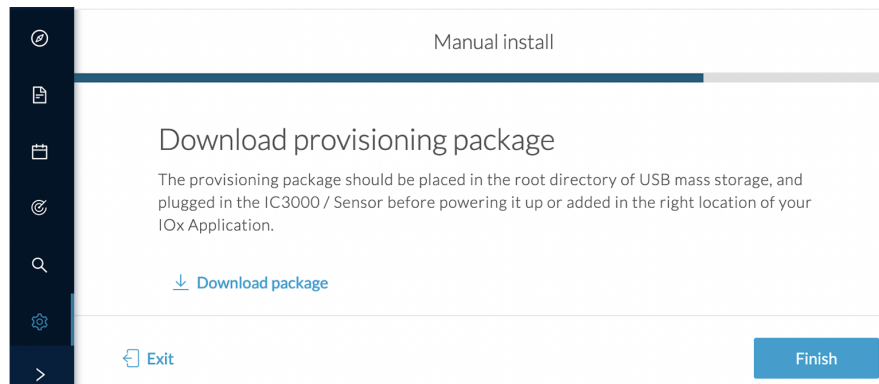

This will download the provisioning package which is a zip archive file with the following name structure: sbs-sensor-config-<serialnumber>.zip (e.g. "sbs-sensor-configFCW23500HDC.zip").

- Click **Finish**.
- A new entry for the sensor appears in the Sensor Explorer list.

The sensor status will switch from Disconnected to Connected.

<input type="checkbox"/>	Label	IP Address	Version	Location	Health status	Processing status	Active Discovery	Uptime
<input type="checkbox"/>	FCW23500			FCW23500	Disconnected	Disconnected		5h
<input type="checkbox"/>	FCW23500			FCW23500	Disconnected	Disconnected		5h
<input type="checkbox"/>	FCW2445P6X5	192.168.49.21	4.1.0+202202151440		Connected	Pending data	Enabled	4 days

## Copy the sensor application provisioning package

- Copy the provisioning package from the USB key to the application using the following command:

```
app-hosting data appid CCVSensor copy usbflash0:sbs-sensor-config-<SERIAL-NUMBER>.zip
sbs-sensor-config-<SERIAL-NUMBER>.zip
```

For example: Cisco IE3400

```
IE340CCV#
IE340CCV#$ data appid CCVSensor copy usbflash0:sbs-sensor-config-FOC2334V01X.zip sbs-sensor-config-FOC2334V01X.zip
Successfully copied file /usbflash0/sbs-sensor-config-FOC2334V01X.zip to CCVSensor as sbs-sensor-config-FOC2334V01X.zip
IE340CCV#
```

## Final step

In the sensor's CLI save the product's configuration by typing the following command:

```
write mem
```

