



## Post Installation Configuration

---

- [CCEDataProtect Tool, on page 1](#)
- [Packaged CCE 2000 Agents Deployment, on page 2](#)
- [Packaged CCE 4000 Agents Deployment, on page 63](#)
- [Packaged CCE 12000 Agents Deployment, on page 104](#)
- [Packaged CCE Lab Only Deployments, on page 108](#)

## CCEDataProtect Tool

CCEDataProtect Tool is used to encrypt and decrypt sensitive information that the Windows registry stores in it.



---

**Note** Only the administrator, domain user with administrator rights, or a local administrator can run the CCE DataProtect Tool, using `<Install Directory>\icm\bin\CCEDataProtectTool.exe`.

---

Following are the features supported with the CCEDataProtect Tool:

- **DBLookUp** - view and edit External DBLookUp SQLLogin registry value.

DBLookUp supports the following options:

- **Decrypt and View** - to view the encrypted password stored in the SQLLogin registry as clear text.
  - **Edit and Encrypt** - to configure the registry with encrypted value for first time or edit the existing encrypted value stored in the registry.
  - **Help** - information about the DBLookUp options.
  - **Exit** - to return to the initial menu.
- 
- **Rekey** - use this functionality with the Common Ground upgrade to re-encrypt the encrypted values based on upgraded software version. For Technology Refresh upgrade, you must reconfigure the value in the destination machine using the **Edit and Encrypt** option. It is recommended to use the **Rekey** option to secure the sensitive information.




---

**Important** Rekey option will be supported in the future releases only.

---

- **Help** - information about the CCEDDataProtect Tool options.
- **Exit** - to exit the CCEDDataProtect Tool.

## Configure External DBLookUp Registry Value using CCEDDataProtect Tool

Perform this procedure to configure the External DBLookUp registry value using the CCEDDataProtect Tool. For more information about CCEDDataProtect Tool, see [CCEDDataProtect Tool, on page 1](#).

---

**Step 1** Run **CCEDDataProtect Tool** from `<Install Directory>:\icm\bin\CCEDDataProtectTool.exe`.

**Step 2** In the Main menu, press **1** to select **DBLookUp**, and press **Enter**.

**Step 3** Enter a valid Instance Name for which this option is configured.

**Note** You can run only one instance of CCEDDataProtect Tool at a time.

**Step 4** Press **2** to select **Edit and Encrypt**, and press **Enter**.

The tool displays the current encrypted value stored in the registry as clear text, if it is already configured.

a) Enter a new Registry Value at the system prompt, and press **Enter**.

**Note** The maximum limit for the External DBLookUp registry entry is 2048 characters.

If you press **Enter** without entering any value, the system removes the encrypted value stored in the registry. You can use this option to remove the encrypted entry.

b) When the system displays the message: Are you sure you want to Edit the Registry Details [Y/N], press **Y** and then press **Enter**.

The system updates the Registry with an encrypted value and the system prompts the message: Registry Updated with Encrypted Data Successfully.

**Step 5** Press **1** to select **Decrypt and View**, to verify the encrypted password.

**Note** CCEDDataProtect Tool generates the following logs in the `C:\temp` folder.

- `CCEDDataProtectTool.log` - captures the tool usage by the administrator.
  - `CCEDDataProtectTool_audit.log` - captures the audit details of the tool usage.
- 

## Packaged CCE 2000 Agents Deployment

Follow this sequence to configure components for Packaged CCE 2000 Agents deployment.

Sequence	Task
1	Generate CSR and upload <a href="#">CA Certificates</a> Or Generate and import <a href="#">Self-signed Certificates</a>
2	<a href="#">Configure CCE Component, on page 3</a>
3	<a href="#">Configure Cisco Unified Customer Voice Portal, on page 27</a>
4	If Media Server is external, <a href="#">Configure Media Server</a>
5	<a href="#">Configure Cisco Unified Communications Manager, on page 31</a>
6	<a href="#">Configure Cisco Unified Intelligence Center, on page 38</a>
7	<a href="#">Configure Cisco Finesse, on page 42</a>
8	<a href="#">Configure Cisco Identity Service</a>
9	<a href="#">Configure Cisco Unified Customer Voice Portal Reporting Server, on page 45 (optional)</a>
10	<a href="#">Configure VVB, on page 48 (optional)</a>
11	<a href="#">Configure Cisco IOS Enterprise Voice Gateway, on page 49</a>
12	<a href="#">Configure IPv6, on page 56</a>
13	<a href="#">Configure Enterprise Chat and Email (ECE) (optional) Email and Chat</a>

## Configure CCE Component

Follow this sequence to configure the core CCE components.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components, on page 3</a>
2	<a href="#">Set up Organizational Units, on page 4</a>
3	<a href="#">Initialize the Packaged CCE 2000 Agents Deployment Type, on page 6</a>
4	<a href="#">Add PIMs to the Media Routing Peripheral Gateway (optional)</a>
5	<a href="#">Cisco SNMP Setup, on page 25 (optional)</a>

## Configure SQL Server for CCE Components

The following procedure must be done in Logger, Rogger, and AW Machines.

- 
- Step 1** Open **Microsoft SQL Server Management Studio**.
- Step 2** Log in.
- Step 3** Expand **Security** and then **Logins**.
- Step 4** If the BUILTIN\Administrators group is not listed:
- Right-click **Logins** and select **New Login**.
  - Click **Search** and then **Locations** to locate BUILTIN in the domain tree.
  - Type **Administrators** and click **Check Name** and then **OK**.
  - Double-click **BUILTIN\Administrators**.
  - Choose **Server Roles**.
  - Ensure that **public** and **sysadmin** are both checked.
- 

## Set up Organizational Units

### Add a Domain

Use the Domain Manager tool to add a domain. Perform the following steps only once on the AW server.

---

- Step 1** Log in with a Domain Administrator privilege.
- Step 2** Open the **Domain Manager** Tool from Unified CCE Tools shortcut on your desktop.
- Step 3** Click **Select**. under **Domains**.
- Step 4** You can add domains through the **Select Domains** dialog box, or you can add a domain manually if the target domain cannot be detected automatically.
- To add domains by using the controls in the Select Domains dialog box:
- In the left pane under Choose domains, select one or more domains.
  - Click **Add** to add the selected domains, or click **Add All** to add all the domains.
- To add a domain manually:
- In the field under Enter domain name, enter the fully qualified domain name to add.
  - Click **Add**.
  - Click **OK**.
- 

### Add Organizational Units

Use the Domain Manager tool to create the Cisco root Organizational Unit (OU) for a domain, and then create the facility and instance OUs.

The system software always uses the root OU named Cisco\_ICM. You can place the Cisco\_ICM OU at any level within the domain where the Unified ICM Central Controller is installed. The system software components locate the root OU by searching for this name.

The user who creates the Cisco Root OU automatically becomes a member of the Setup Security Group for the Cisco Root OU. In effect, this user is granted privileges to all Unified CCE tasks in the domain.

- 
- Step 1** Log in with a domain administrator privilege and open the **Domain Manager** Tool from Unified CCE Tools shortcut on the desktop.
- Step 2** Choose the domain.
- Step 3** If this OU is the first instance, then perform the following steps to add the Cisco\_ICM root:
- Under Cisco root, click **Add**.
  - Select the OU under which you want to create the Cisco root OU, then click **OK**.
- When you return to the Domain Manager dialog box, the Cisco root OU appears either at the domain root or under the OU you selected. You can now add the facility.
- Step 4** Add the facility OU:
- Select the Cisco Root OU under which you want to create the facility OU.
  - In the right pane, under Facility, click **Add**.
  - Enter the name for the Facility, and click **OK**.
- Step 5** Add the instance OU:
- Navigate to and select the facility OU under which you want to create the instance OU.
  - In the right pane, under Instance, click **Add**.
  - Enter the instance name and click **OK**.
- Step 6** Click **Close**.
- 

### Add Users to Security Groups

To add a domain user to a security group, use this procedure. The user is then granted the user privileges to the functions that are controlled by that security group.

---

- Step 1** Open the Domain Manager tool and select the Security Group (**Config** or **Setup**) you want to add a user to.
- Step 2** Under Security group, click **Members**.
- Step 3** Under Users, click **Add**.
- Step 4** Select the domain of the user you want to add.
- Step 5** (Optional) In the **Optional Filter** field, choose to further filter by the Name or User Logon Name, apply the search condition, and enter the search value.
- Step 6** Click **Search**.
- Step 7** Select the member you want to add to the Security Group from the search results.
- Step 8** Click **OK**.
- 

### Add Users to Local Administrators Group

Repeat the following steps for all the Unified CCE servers, to add the domain user or domain group to the local Administrators group.




---

**Note** You can add a domain group to local Administrators group of the server to provide users in domain group administrative permission on the server, provided the users are immediate members of the domain group.

---

- 
- Step 1** Click **Server Manager** > **Tools** > **Computer Management**.
  - Step 2** Select **Local Users and Groups**.
  - Step 3** Double-click **Groups**.
  - Step 4** Right-click **Administrators**. Select **Properties**.
  - Step 5** Click **Add** and enter the user name or domain group name in the **Edit the Object names to select** check box.
  - Step 6** Select **Check Names** to validate the names.
  - Step 7** After the name is successfully validated, click **OK**.
  - Step 8** Click **Apply** and **OK** in the **Properties** dialog box.
  - Step 9** Close the **Computer Management** and **Server Manager** windows.
- 

## Initialize the Packaged CCE 2000 Agents Deployment Type

Initialize the Packaged CCE deployment using Unified CCE Administration.

When you sign into Unified CCE Administration for the first time, you are prompted to enter information and credentials for the components in your deployment. Packaged CCE uses this information to configure the components and build the System Inventory.

If you are in the process of upgrading from an earlier release, Packaged CCE prompts you only for missing information and credentials; you may not need to perform each step.




---

**Note** After a Packaged CCE deployment is initialized, you cannot switch to another Packaged CCE deployment type. However, you can switch to a Unified CCE deployment type.

---

- 
- Step 1** Sign into **Unified CCE Administration** using the Active Directory username (*user@domain*) and password (<https://<IP Address>/cceadmin>, where <IP Address> is the address of the Side A Unified CCE AW-HDS-DDS).  
The **Configure your deployment** popup window opens automatically.
  - Step 2** On the **Deployment Type** page, select a **Deployment Type** and an **Instance** from the respective drop-down lists. You must be a member of the Setup security group for the instance you select. Click **Next**.
  - Step 3** On the **VM Host** page, enter the IP address, Username, and Password for the VMware hosts for Side A and Side B.  
The VMware hosts are the two servers on which ESXi is installed. The username and password fields are the host login names and passwords configured in ESXi.
    - If you do not want to use the "root" user credentials. You can create user with the following permissions:

Users must have *Read* and *Reboot* permissions on the hosts. To enable these permissions in the VMware Host Client, set the following in **Manage Permissions**:

- *Anonymous*, *View*, and *Read* in **Root > System** (enabled by default).
- *Reset* in **Root > VirtualMachine > Interact**.

**Note** If you update the ESXi root password in Packaged CCE 2000 agent deployment, be sure to reinitialize the deployment in the Inventory page.

**Step 4** Select the hardware layout type as **M3/M4 Tested Reference Configuration** or **M5 Tested Reference Configuration / Specification Based Configuration** and click **Next**.

Packaged CCE validates the hosts in your deployment.

- If you select **M3/M4 Tested Reference Configuration**, the system checks if the hardware is supported UCS hardware and verifies if the VMs are configured as per the reference design. If the validation is successful, the **Credentials** page opens.
- If you select **M5 Tested Reference Configuration / Specification Based Configuration**, the system validates the hardware specifications of the VMware host and verifies if the VMs are configured as per the reference design. If the validation is successful, click **Next** to open the **Credentials** page. See the *Virtualization for Cisco Packaged CCE* at [https://www.cisco.com/c/en/us/td/docs/voice\\_ip\\_comm/uc\\_system/virtualization/pcce\\_virt\\_index.html](https://www.cisco.com/c/en/us/td/docs/voice_ip_comm/uc_system/virtualization/pcce_virt_index.html) for hardware specifications.

**Note** • Datastores used by Cisco VMs should not be shared or used by other third-party VMs.

• Packaged CCE core components include:

- Unified CCE Rogger
- Unified CCE AW/HDS/DDS
- Unified CCE PG
- Unified CVP Server
- Unified Intelligence Center Publisher (with coresident Live Data and IdS)
- Finesse

VM annotations are used to identify Packaged CCE core component VMs. Do not change the default annotations of any of the core component VMs. The following terms are reserved for core component annotations: Cisco, Finesse, CUIC, and CVP. Do not use these reserved terms in the annotations of any of the non-core component VMs.

- Core components must be on-box, all other components have to be added as external machines. For more information, see the *Add External Machines* topic in the *Cisco Packaged Contact Center Enterprise Administration and Configuration Guide, Release 11.6(1)* at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-maintenance-guides-list.html>
  - All other non-core components are required to be added as an external machine in the Packaged CCE Inventory.
- If the validation fails, click **Update Hosts** to go back to the **VM Hosts** page and edit the values. Click **Retry** to run the validation with existing values.

**Step 5** On the **Credentials** page, enter the specified information for each component in your deployment. After entering information for a component, click **Next**.

The system validates the credentials you entered before prompting you for the next component's information.

Component	Information Required
Unified CM	<p>Either:</p> <ul style="list-style-type: none"> <li>The Unified CM Publisher for an on-box Unified Communications Manager deployment.</li> <li>The Unified CM Publisher Name and IP address for an external Unified Communications Manager deployment.</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Only a single Unified CM cluster can be integrated to a single site of Packaged CCE deployment.</li> <li>For <b>M3/M4 Tested Reference Configuration</b>, Unified CM 12.5 installation must be off-box.</li> </ul> <p>AXL username and password.</p>
Unified CVP	<p>Unified CVP Server (Side A) Windows Administration Username and Password.</p> <p>Unified CVP Server (Side B) Windows Administration Username and Password.</p>
Unified CCE AW-HDS-DDS	<p>Unified CCE Diagnostic Framework Portico domain, username, and password.</p> <p>These credentials must be of a domain user who is a local administrator on all the CCE servers and valid on all Unified CCE components in your deployment (the Side A and Side B Unified CCE Roggers, PGs, and AW-HDS-DDSs).</p> <p><b>Note</b> Every time the Active Directory credentials are updated, the credentials configured here must be updated as well.</p>
Unified Intelligence Center	<p>Unified Intelligence Center Administration application username and password.</p> <p>Identity Service Administration username and password.</p>
Finesse	<p>Finesse Administration username and password.</p>
CVP Reporting	<p><b>Note</b> This tab is available only if Unified CVP Reporting server is on-box for <b>M3/M4 Tested Reference Configuration</b>.</p> <p>Unified CVP Reporting Server Windows Administration Username and Password used during server installation.</p>

**Step 6** On the **Settings** page, select the following:

- Select the codec used for Mobile Agent calls from the **Mobile Agent Codec** drop-down menu. The codec you select must match the codec specified on the voice gateways.
- If you have an external Unified Communications Manager, select the Unified CM Subscribers to which the Side A and Side B Unified CCE PGs connect from the **Side A Connection** and **Side B Connection** drop-down menus.



- Enter the username and password for an existing Active Directory user in the same domain as the Packaged CCE servers. This account will be added to the Service group.

Click **Next**.

The deployment is initialized. The **Details** dialog box displays the status of the automated initialization tasks.

See [Automated Initialization Tasks for Components, on page 9](#) for more information.

**Step 7** After the automated initialization tasks complete, click **Done**.

If one of the automated initialization tasks fails, correct the errors and then click **Retry**.

If the retry is successful, the automated initialization continues.

For some task failures, all completed tasks must be reverted before the task can be retried. You see a message informing you that the system needs to be reverted to a clean state.

Click **OK**, and then after the system is in a clean state, click **Start Over**.



**Note** The System Inventory displays alerts for some machines when it opens after initialization completes and you click **Done**. These alerts will be cleared after you configure Unified Communications Manager.

#### What to do next

After you have configured the deployment, you can specify system-level settings. For example, you can enter labels for Unified Communications Manager, Unified CVP, and outbound calls. See [Miscellaneous](#).

### Automated Initialization Tasks for Components

Packaged CCE performs the following tasks during initialization.

Component	Automated Initialization Tasks
Unified CCE Rogger	<ul style="list-style-type: none"> <li>• Creates the Logger.</li> <li>• Creates the Logger database, data size of 130GB and the log size of 3GB.</li> <li>• Creates the Router.</li> </ul>
Unified CCE PG	<ul style="list-style-type: none"> <li>• Downloads JTAPI from the Unified Communications Manager, and installs it on the Unified CCE PG.</li> <li>• Creates the CUCM Peripheral Gateway (PG) with the CUCM PIM.</li> <li>• Creates the Media Routing PG (MR PG).</li> <li>• Creates the VRU PG with two VRU PIMs.</li> <li>• Creates the CTI Server.</li> </ul>

Component	Automated Initialization Tasks
Unified CCE AW-HDS-DDS	<ul style="list-style-type: none"> <li>• Creates the AW-HDS-DDS.</li> <li>• Creates the AW database, data size of 1.4GB and log size of 100MB.</li> <li>• Creates the historical database, data size of 450GB and log size of 3GB</li> <li>• Creates the Cisco Unified Intelligence Center SQL user account that is used for Unified Intelligence Center data sources.</li> <li>• Creates the Cisco Finesse SQL user account that is used for Cisco Finesse data sources.</li> </ul>
Outbound	<ul style="list-style-type: none"> <li>• Creates the Outbound database, data size of 1.4GB and log size of 100MB.</li> </ul>
Unified Communications Manager	<ul style="list-style-type: none"> <li>• Creates the Application User that is used to configure the Unified CCE PG.</li> </ul>
Unified Customer Voice Portal	<ul style="list-style-type: none"> <li>• Configures the Unified CVP Call Server.</li> <li>• Configures the Unified CVP VXML Server.</li> <li>• Configures the Unified CVP Media Server.</li> </ul>
Unified CVP Reporting Server	<ul style="list-style-type: none"> <li>• Initializes the Unified CVP Reporting Server.</li> </ul>
Unified Intelligence Center	<ul style="list-style-type: none"> <li>• Updates the historical and real-time data sources.</li> <li>• Disables the AW database synchronization</li> </ul>
Cisco Finesse	<ul style="list-style-type: none"> <li>• Configures the CTI Server settings.</li> <li>• Configures the connection to the AW database.</li> <li>• Disables the <b>Reasons</b> gadget in Finesse Administration.</li> </ul>

## System Inventory for Packaged CCE 2000 Agents Deployment

The System Inventory is a visual display of the machines in your deployment, including: Virtual Machine Hosts (ESXi servers), Virtual Machines (VMs) on Side A, VMs on Side B, External Machines, Gateways, and Cisco Virtualized Voice Browsers (VVB). You can access the System Inventory after you have completed the change to a Packaged CCE deployment.

Access the System Inventory by navigating to **Unified CCE Administration > Infrastructure > Inventory**.

System Inventory contents are updated when you select or change the deployment type and after regular system scans. If a system scan detects VMs that don't conform to Packaged CCE requirements, the **Configure your deployment** pop-up window opens automatically, detailing the errors. You can access the System Inventory again after you have corrected the errors and completed the **Configure your deployment** pop-up window.

For more details about the Packaged CCE requirements, see the **Server Status** pop-up window, see [Monitor Server Status Rules for Packaged CCE 2000 Agents Deployment, on page 22](#).

*Table 1: System Inventory Layout and Actions*

<b>Item</b>	<b>Notes</b>	<b>Actions</b>
Validate	If a system scan detects an error or warning for validation rules, correct the error, and then click <b>Validate</b> to run an immediate scan and verify that you corrected the problem.	Click <b>Validate</b> .
Location	This column indicates that the VMs are either on <b>OnBox Side A</b> , <b>OnBox Side B</b> , or <b>OffBox (External Machine)</b> .	

Item	Notes	Actions
Side A	All VMs on Side A are indicated as <b>OnBox Side A</b> in the <b>Location</b> column.	

Item	Notes	Actions
		<p>The System Inventory displays read-only information for the following VMs:</p> <ul style="list-style-type: none"> <li>• <b>Unified CCE Rogger</b></li> <li>• <b>Unified CCE PG</b></li> <li>• <b>Unified CM Subscriber 1</b>(if on-box)</li> </ul> <p>To edit the following VMs, click on the respective rows:</p> <p><b>Note</b> If you change the password of any of the Packaged CCE components, you must update the password in the respective VM in the system inventory.</p> <ul style="list-style-type: none"> <li>• <b>Unified CCE AW-HDS-DDS</b>—Diagnostic Framework Service Domain, Username, and Password.</li> <li>• <b>Unified CM Publisher</b>(if on-box)—AXL Username and Password. These are the credentials for connecting to the Unified CM Publisher.</li> <li>• <b>CUIC-LD-IdS Publisher</b>—Username and Password for Unified Intelligence Center Administration. Username and Password for Identity Service Administration.</li> <li>• <b>Unified CVP Server</b>— Unified CVP Server Windows credentials. Enable Media Server and configure FTP.  For more information on the FTP attributes, see FTP Section in the <a href="#">Add Media Server as External Machine</a>.</li> <li>• <b>Finesse Primary</b>—Username and Password for Cisco Finesse Administration.</li> </ul> <p>You can launch the administration tool for these VMs by clicking the VM <b>arrow</b> icon:</p> <ul style="list-style-type: none"> <li>• <b>CUIC-LD-IdS Publisher</b></li> <li>• <b>Unified CM Publisher</b></li> </ul> <p>You can perform the full synchronization or differential synchronization of the configurations of various components. For more information on the machines that support data synchronization, see <a href="#">Device Out of Sync Alerts</a>.</p> <p>Click on the <b>Statistics</b> icon to launch statistics for the following VMs:</p>

Item	Notes	Actions
		<ul style="list-style-type: none"><li>• <b>Unified CVP</b></li><li>• <b>Unified CVP Reporting</b></li></ul> <p>For more information, see <a href="#">Unified CVP Statistics</a> and <a href="#">Unified CVP Reporting Statistics</a>.</p>

Item	Notes	Actions
Side B	All VMs on Side B are indicated as <b>OnBox Side B</b> in the <b>Location</b> column.	

Item	Notes	Actions
		<p>The System Inventory displays read-only information for the following VMs:</p> <ul style="list-style-type: none"> <li>• <b>Unified CCE Rogger</b></li> <li>• <b>Unified CCE PG</b></li> <li>• <b>Unified CCE AW-HDS-DDS</b></li> <li>• <b>Unified CM Subscriber 2</b>(if on-box)</li> <li>• <b>CUIC-LD-IdS Subscriber</b></li> <li>• <b>Finesse Secondary</b></li> <li>• ECE Data Server</li> </ul> <p>To edit the following VMs, click on the respective rows:</p> <p><b>Note</b> If you change the password of any of the Packaged CCE components, you must update the password in the respective VM in the system inventory.</p> <ul style="list-style-type: none"> <li>• <b>Unified CVP Server</b>— Unified CVP Server Windows credentials. Enable Media Server and configure FTP.  For more information on the FTP attributes, see FTP Section in the <a href="#">Add Media Server as External Machine</a>.</li> <li>• <b>Unified CVP Reporting - Cisco Unified CVP Reporting Server</b> Windows credentials.</li> </ul> <p>If the CVP Reporting server VM is re-imaged or re-installed, you need to initialize the CVP Reporting server.</p> <p>To initialize the CVP Reporting Server , click the Initialize icon and then click <b>Yes</b> to confirm.</p> <p><b>Note</b> Initialization removes existing call server association and Courtesy Callback configuration.</p> <p>To re-associate call servers with the CVP Reporting server, navigate to <b>Overview &gt; Infrastructure Settings &gt; Device Configuration &gt; Device Configuration</b>.</p> <p>To reconfigure Courtesy Callback, navigate to <b>Overview &gt; Features &gt; Courtesy Callback</b>.</p> <p>You can perform the full synchronization or differential synchronization of the configurations of various</p>



Item	Notes	Actions
		<p>components. For more information on the machines that support data synchronization, see <a href="#">Device Out of Sync Alerts</a>.</p> <p>Click on the <b>Statistics</b> icon to launch statistics for the following VMs:</p> <ul style="list-style-type: none"><li>• <b>Unified CVP</b></li><li>• <b>Unified CVP Reporting</b></li></ul> <p>For more information, see <a href="#">Unified CVP Statistics</a> and <a href="#">Unified CVP Reporting Statistics</a>.</p>

Item	Notes	Actions
External Machines		<p>The external HDS and external Unified CM Subscribers are auto detected. You do not need to add or delete them.</p> <p>To add or update the external machines, see <a href="#">Add External Machines</a>.</p> <p>You can perform the full synchronization or differential synchronization of the configurations of various components. For more information on the machines that support data synchronization, see <a href="#">Device Out of Sync Alerts</a>.</p> <p><b>Note</b> If you change the password of any of the Packaged CCE components, you must update the password in the respective VM in the system inventory.</p> <p><b>Note</b> If you edit the Unified CM Publisher, the Unified CM Subscribers associated with the publisher are updated automatically. You cannot edit Unified CM Subscribers from the System Inventory.</p> <p><b>Note</b> If you edit the Cloud Connect Publisher, the Cloud Connect Subscribers associated with the publisher are updated automatically. You cannot edit Cloud Connect Subscribers from the System Inventory.</p> <p><b>To associate the external HDS with a default Cisco Identity Service (IdS) for single sign-on:</b></p> <ol style="list-style-type: none"> <li>1. Click the pencil icon on the external HDS.</li> <li>2. Click the Search icon next to <b>Default Identity Service</b>.</li> <li>3. Enter the machine name for the Cisco IdS in the Search field or choose the Cisco IdS from the list.</li> <li>4. Click <b>Save</b>.</li> </ol> <p><b>To delete</b>, click the <b>x</b> on the machine. Confirm the deletion.</p> <p>You can open the administration tool for these external machines by clicking the <b>arrow</b> icon in the machine box:</p> <ul style="list-style-type: none"> <li>• <b>Unified CM Publisher</b></li> <li>• <b>Customer Collaboration Platform</b></li> </ul> <p><b>Note</b> To navigate to the Cisco Webex login page, click the <b>Register</b> link.</p>

Item	Notes	Actions
		<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Principal VVB is used to configure the Customer Virtual Assistant feature.</li> <li>• Only one of the VVB machines across sites can be set as a Principal VVB and you cannot delete this machine.</li> <li>• First added the VVB machine into the Inventory is set as the Principal VVB by default. In the Upgrade scenario, one of the configured VVBs is set as a Principal VVB.</li> <li>• A VVB can be set as a Principal VVB provided its Sync Status is "In Sync" and it supports the Customer Virtual Assistant feature. To set a VVB as a Principal VVB, see <a href="#">Edit Credentials</a>.</li> </ul>

Item	Notes	Actions
	<p>The <b>Location</b> column for every <b>External Machine</b> in the deployment is displayed as <b>OffBox</b>, and can include any of the following:</p> <ul style="list-style-type: none"> <li>• HDS</li> <li>• Unified CM Publisher</li> <li>• Unified CM Subscriber</li> <li>• Customer Collaboration Platform</li> <li>• ECE Data Server (refers to ECE Data Server VM for 400 agents and Services Server VM for ECE 1500 agents)</li> </ul> <p><b>Note</b> If ECE is installed in an HA deployment mode, add only one ECE Data Server in the Unified CCE Administration for 2000 agent deployment model.</p> <ul style="list-style-type: none"> <li>• ECE Web Server</li> <li>• 3rd Party Multichannel</li> <li>• Unified CVP Reporting</li> <li>• Unified SIP Proxy</li> <li>• Virtualized Voice Browser</li> <li>• Gateway</li> <li>• Cloud Connect Publisher</li> </ul> <p><b>Note</b> When you add or delete the Cloud Connect</p>	

Item	Notes	Actions
	<p data-bbox="760 279 889 495">Publisher, for the change to take effect logout and login to the machine.</p> <ul data-bbox="613 533 776 562" style="list-style-type: none"> <li>• Media Server</li> </ul>	

Item	Notes	Actions
	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Unified CM Subscriber machines are dedicated to the contact center. When you configure an external Unified CM Publisher, its Unified CM Subscribers are added to the System Inventory automatically.</li> <li>• Version information displayed for ECE Data Server is fetched from ECE Web Server.</li> <li>• When you configure Cloud Connect Publisher, its Cloud Connect Subscribers are added to the System Inventory automatically.</li> </ul>	

### *Monitor Server Status Rules for Packaged CCE 2000 Agents Deployment*

In Packaged CCE 2000 Agents deployment, the Inventory displays the total number of alerts for machines with validation rules. Click the alert count to open the **Server Status** popup window, which lists all of the rules for that machine and indicates which have warnings and errors. Rules are grouped by these categories:

Server Status Category	Description	Example Rules
Configuration	<p>Rules for installation and configuration of a component.</p> <p>These rules identify problems with mismatched configuration between components, missing services, and incorrectly configured services.</p>	<p><b>Unified CCE Rogger:</b> The trace level must be set to normal to ensure performance.</p> <p><b>Unified CVP:</b> The names of the SIP Server Groups on CVP containing Communications Manager addresses must match the Communications Manager Cluster Fully Qualified Domain Name.</p> <p><b>Cloud Connect:</b>The Cloud Connect Publisher must be configured with the supported cloud services.</p> <p>Call Type must be configured with the survey in the supported channels.</p> <p>Call Type associated with Multi-Channel dialed number must be configured with the Inline survey.</p>
Operations	<p>Rules for the runtime status of a component.</p> <p>These rules identify services and processes that cannot be reached, are not running, or are not in the expected state.</p>	<p><b>Unified CCE Rogger:</b> The central controller agent process (ccagent.exe) must be in service for both PGs.</p> <p><b>Cloud Connect:</b>Type is either Publisher or Subscriber.</p>
System Health	<p>Metrics to monitor the CPU, memory, and disk usage of a component's Virtual Machine (VM) as reported by ESXi over the last 10 minutes. The memory and CPU usage may differ slightly from system tools reported by the VM itself. For VM Hosts, these metrics also include datastore performance information.</p> <p>For VM Hosts under M5 Tested Reference Configuration / Specification Based Configuration, these metrics include CPU reservation, CPU oversubscription, memory reservation and datastore utilization information.</p>	<p><b>All:</b> Memory usage as reported by ESXi - 17%</p> <p>For VM Hosts under M5 Tested Reference Configuration / Specification Based Configuration:</p> <ul style="list-style-type: none"> <li>• Maximum CPU Reservation - 65%</li> <li>• Maximum CPU Oversubscription - 200%</li> <li>• Maximum Memory Reservation - 80%</li> <li>• Maximum Storage Usage per Datastore - 80%</li> </ul>
VM	VM requirements for a component.	<b>All:</b> VMware Tools must be up to date

Server Status Category	Description	Example Rules
System Validation	<p>Rules for Unified CCE database and configuration settings.</p> <p>These rules identify whether the configuration of objects in your deployment match the requirements and limits for Packaged Contact Center Enterprise.</p> <p><b>Note</b> The System Validation category is available only for the Side A Unified CCE AW-HDS-DDS.</p>	<p><b>Side A Unified CCE AW-HDS-DDS:</b> Agent Desk Settings: Ring No Answer Times must not be set.</p> <p><b>Side A Unified CCE AW-HDS-DDS:</b> Application Gateway</p> <p><b>Side A Unified CCE AW-HDS-DDS:</b> Application Instance: Up to 12 Application Instances can be defined.</p>

### VM Validation

The validation for the Packaged CCE: 2000 Agents deployment type makes the following checks to ensure hardware compliance and conformance with the Cisco-provided OVA files.

- For Hosts:
  - BIOS
  - Minimum number of CPU cores
  - Minimum memory
  - Data store size
- For VMs:
  - Number of virtual CPU cores
  - Number of configured networks
  - Virtual network card driver (except for Unified CM)
  - VM is powered on
  - CPU reservation
  - Exact memory
  - Exact disk size
  - Exact number of disks
  - VMware tools

## Configure Cisco Unified Contact Center Enterprise PG

The following table outlines the configuration task for Media Routing Peripheral Gateway for the Packaged CCE 2000 Agents deployment.



**Configuration Task**

[Add PIMs to the Media Routing Peripheral Gateway](#) (optional)

## Cisco SNMP Setup

Complete the following procedures to configure Cisco SNMP:

- [Add Cisco SNMP Agent Management Snap-In](#), on page 25
- [Save Cisco SNMP Agent Management Snap-In View](#), on page 25
- [Set Up Community Names for SNMP V1 and V2c](#), on page 26
- [Set Up SNMP User Names for SNMP V3](#), on page 26
- [Set Up SNMP Trap Destinations](#), on page 26
- [Set Up SNMP Syslog Destinations](#), on page 27

### Add Cisco SNMP Agent Management Snap-In

You can configure Cisco SNMP Agent Management settings using a Windows Management Console snap-in.

Complete the following procedure to add the snap-in and change Cisco SNMP Management settings.

- 
- Step 1** From the Start menu, enter **mmc.exe /32**.
- Step 2** From the Console, choose **File > Add or Remove Snap-ins**.
- Step 3** In the Add or Remove Snap-ins dialog box, choose **Cisco SNMP Agent Management** from the list of available snap-ins. Click **Add**.
- Step 4** In the Selected snap-ins pane, double-click **Cisco SNMP Agent Management**.
- Step 5** In the Extentions for Cisco SNMP Agent Management dialog box, select **Always enable all available extentions**. Click **OK**.
- Step 6** In the Add/Remove Snap-in window, click **OK**. The Cisco SNMP Agent Management Snap-in is now loaded into the console.
- 

### Save Cisco SNMP Agent Management Snap-In View

After you load the Cisco SNMP Agent Management MMC snap-in, you can save the console view to a file with a .MSC file extension. You can launch the file directly from Administrative Tools.

Complete the following procedure to save the Cisco SNMP Agent Management snap-in view.

- 
- Step 1** Choose **File > Save**.
- Step 2** In the Filename field, enter **Cisco SNMP Agent Management**.
- Step 3** In the Save As type field, choose a file name to map to the administrative tools such as **Microsoft Management Console Files (\*.msc)**.
- Step 4** Click **Save**.
-

## Set Up Community Names for SNMP V1 and V2c

If you use SNMP v1 or v2c you must configure a community name so that Network Management Systems (NMSs) can access the data your server provides. Use SNMP community names to authenticate data exchange of SNMP information. An NMS can exchange SNMP information only with servers that use the same community name.

Complete the following procedure to configure the community name for SNMP v1 and v2c.

### Before you begin

Ensure Cisco SNMP is added and saved using the procedures [Add Cisco SNMP Agent Management Snap-In, on page 25](#) and [Save Cisco SNMP Agent Management Snap-In View, on page 25](#).

- 
- Step 1** Choose **Start > All Programs > Administrative tools > Cisco SNMP Agent Management**.
  - Step 2** Right-click **Cisco SNMP Agent Management** and choose **Run as administrator**.
  - Step 3** The Cisco SNMP Agent Management screen lists some of the configurations that require SNMP for traps and system logs.
  - Step 4** Right-click **Community Names (SNMP v1/v2c)** and choose **Properties**.
  - Step 5** In the Community Names (SNMP v1/v2c) Properties dialog box, click **Add New Community**.
  - Step 6** In the Community Name field, enter a community name.
  - Step 7** In the Host Address List, enter the host IP address.
  - Step 8** Click **Apply** and click **OK**.
- 

## Set Up SNMP User Names for SNMP V3

If you use SNMP v3 you must configure a user name so that NMSs can access the data your server provides.

Complete the following procedure to configure a user name for SNMP v3.

### Before you begin

Ensure Cisco SNMP is added and saved using the procedures [Add Cisco SNMP Agent Management Snap-In, on page 25](#) and [Save Cisco SNMP Agent Management Snap-In View, on page 25](#).

- 
- Step 1** From the Console Root, choose **Cisco SNMP Agent Management > User Names (SNMP v3) > Properties**.
  - Step 2** Click **Add New User**.
  - Step 3** In the User Name field, enter a username.
  - Step 4** Click **Save**.
  - Step 5** The username appears in the Configured Users pane at the top of the dialog box.
  - Step 6** Click **Apply** and click **OK**.
- 

## Set Up SNMP Trap Destinations

You can configure SNMP Trap Destinations for SNMP v1, SNMP v2c, and SNMP v3. A Trap is a notification that the SNMP agent uses to inform the NMS of a certain event.

Complete the following procedure to configure the trap destinations.

### Before you begin

Ensure Cisco SNMP is added and saved using the procedures [Add Cisco SNMP Agent Management Snap-In, on page 25](#) and [Save Cisco SNMP Agent Management Snap-In View, on page 25](#).

- 
- Step 1** From the Console Root, choose **Cisco SNMP Agent Management > Trap Destinations > Properties**.
  - Step 2** Click **Add Trap Entity**.
  - Step 3** Click the SNMP version that your NMS uses.
  - Step 4** In the Trap Entity Name field, enter a name for the trap entity.
  - Step 5** Choose the User Name/Community Name that you want to associate with this trap. This list is auto-populated with existing configured users/community names.
  - Step 6** Enter one or more IP addresses in the IP Address entry field. Click **Insert** to define the destinations for the traps.
  - Step 7** Click **Apply** and click **Save** to save the new trap destination.  
The trap entity name appears in the Trap Entities section at the top of the dialog box.
  - Step 8** Click **OK**.
- 

### Set Up SNMP Syslog Destinations

You can configure Syslog destinations for SNMP from the Cisco SNMP Agent Management Snap-in. Complete the following procedure to configure Syslog destinations.

- 
- Step 1** From the Console Root, choose **Cisco SNMP Agent Management > Syslog Destinations > Properties**.
  - Step 2** Choose an Instance from the list box.
  - Step 3** Check **Enable Feed**.
  - Step 4** Enter an IP address or host name in the Collector Address field.
  - Step 5** Click **Save**.
  - Step 6** Click **OK** and restart the logger.
- 

## Configure Cisco Unified Customer Voice Portal

The following table outlines the Cisco Unified Customer Voice Portal (CVP) configuration tasks for Packaged 2000 Agents deployment.



---

**Note** The CVP configurations are site specific. Side A and Side B configurations per site must be the same.

---

**Configuration Tasks**

To secure communication between Call Server and ICM, see [Secure Flow Communication, on page 28](#).

For more information about securing CVP communication, see *Configuration Guide for Cisco Unified Customer Voice Portal* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-customer-voice-portal/products-installation-and-configuration-guides-list.html>.

To change the default settings, see [CVP Server Services Setup](#)

[Configure Media Server](#)

[Configure SNMP, on page 85](#)

## Secure Flow Communication

### CA-signed Certificates

#### Generate CA Certificate on CVP Call Server

Log in to the Call Server. Retrieve the keystore password from the *security.properties* file.



**Note** At the command prompt, enter **more %CVP\_HOME%\conf\security.properties**.

Security.keystorePW = <Returns the keystore password>

Enter the keystore password when prompted.

**Step 1** Remove the existing certificate by running the following command:

```
%CVP_HOME%\jre\bin\keytool.exe -storetype JCEKS -keystore %CVP_HOME%\conf\security\keystore -delete -alias callserver_certificate
```

**Step 2** Enter the keystore password when prompted.

**Step 3** Generate a new key pair for the alias with the selected key size by running **%CVP\_HOME%\jre\bin\keytool.exe -storetype JCEKS -keystore %CVP\_HOME%\conf\security\keystore -genkeypair -alias callserver\_certificate -v -keysize 2048 -keyalg RSA**.

```
Enter keystore password: <enter the keystore password>
What is your first and last name?
[Unknown]: <Specify the FQDN of the CVP server. Example: cisco-cvp-211@example.com >
What is the name of your organizational unit?
[Unknown]: <specify OU> E.g. CCBU
What is the name of your organization?
[Unknown]: <specify the name of the org> E.g. CISCO
What is the name of your City or Locality?
[Unknown]: <specify the name of the city/locality> E.g. BLR
What is the name of your State or Province?
[Unknown]: <specify the name of the state/province> E.g. KAR
What is the two-letter country code for this unit?
[Unknown]: <specify two-letter Country code> E.g. IN
```

Specify 'yes' for the inputs.

- Step 4** Generate the CSR certificate for the alias by running `%CVP_HOME%\jre\bin\keytool.exe -storetype JCEKS -keystore %CVP_HOME%\conf\security\keystore -certreq -alias callserver_certificate -file %CVP_HOME%\conf\security\callserver.csr` and save it to a file (for example, callserver.csr).
- Step 5** Enter the keystore password when prompted.
- Step 6** Download the callserver.csr from `%CVP_HOME%\conf\security\` and sign it from CA.
- Step 7** Copy the root CA certificate and the CA-signed certificate to `%CVP_HOME%\conf\security\`.
- Step 8** Install the root CA certificate by running `%CVP_HOME%\jre\bin\keytool.exe -storetype JCEKS -keystore %CVP_HOME%\conf\security\keystore -import -v -trustcacerts -alias root -file %CVP_HOME%\conf\security\<filename_of_root_cert>`.
- Step 9** Enter the keystore password when prompted.
- Step 10** Install the signed certificate by running `%CVP_HOME%\jre\bin\keytool.exe -storetype JCEKS -keystore %CVP_HOME%\conf\security\keystore -import -v -trustcacerts -alias callserver_certificate -file %CVP_HOME%\conf\security\<filename_of_CA_signed_cert>`.

---

### Import Root CA Certificate into ICM

- Step 1** Copy the root CA certificate to the ICM (PG) box.
- Step 2** Open the command prompt and go to `c:\cisco\icm\bin`.
- Step 3** Type `CiscoCertUtil.exe /install rootCA.pem`.  
This imports the certificate to the Trusted Root Certification Authorities.

---

### Generate CA Certificate on ICM

- Step 1** Navigate to `C:\icm\ssl\keys` and remove the old 'host.key'(if available).
- Step 2** Log into the ICM (PG) box. Go to the command prompt and type `CiscoCertUtil.exe /generateCSR`.

```
C:\icm\bin>CiscoCertUtil.exe /generateCSR
SSL config path = C:\icm\ssl\cfg\openssl.cfg
SYSTEM command is C:\icm\ssl\bin\openssl.exe req -new -key C:\icm\ssl\keys\host.key -out
C:\icm\ssl\certs\host.csr
```

```
Generating a 2048 bit RSA private key
.....
writing new private key to 'C:\icm\ssl\keys\host.key'
-----
```

```
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
```

```
Country Name (2 letter code) [AU]:IN
State or Province Name (full name) [Some-State]:KA
Locality Name (eg, city) []:BLR
```

## Self-Signed Certificates

```
Organization Name (eg, company) [Internet Widgits Pty Ltd]:cisco
Organizational Unit Name (eg, section) []:ccbu
Common Name (e.g. server FQDN or YOUR name) []:abc.com
Email Address []:radmohan@cisco.com
```

Please enter the following 'extra' attributes to be sent with your certificate request  
 A challenge password []:\*\*\*\*\*  
 An optional company name []:cisco

The client certificate and key are generated and stored as host.csr and host.key in C:\icm\ssl\certs and C:\icm\ssl\keys folders respectively.

**Note** To generate ECDSA CSR with default P384 curve, use `ciscocertutil.exe /generateCSR /curve` command. For more details refer to the topic *CiscoCertUtil Utility* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-enterprise/products-installation-and-configuration-guides-list.html>

**Step 3** Sign it from a CA. Follow the procedure [Import Root CA Certificate into ICM, on page 29](#).

**Note**

- Remove the existing host.pem (if any) from C:\icm\ssl\certs.
- Save host.cer (CA-signed) as host.pem in C:\icm\ssl\certs.

**Step 4** From the command prompt, run `C:\icm\bin>CiscoCertUtil.exe /install c:\icm\ssl\certs\host.pem`.

**Step 5** Cycle VRU PG.

## Self-Signed Certificates

### Generate Certificate on CVP Call Server

**Step 1** <http://acrsrv-app-prd-01:8080/>Export the Call Server certificate by running `%CVP_HOME%\jre\bin\keytool.exe -export -v -keystore %CVP_HOME%\conf\security\keystore -storetype JCEKS -alias callserver_certificate -file %CVP_HOME%\conf\security\callserver_certificate>`

**Step 2** Enter the keystore password when prompted.

**Step 3** Restart the Call Server service to load the new certificates.

### Import Certificate into ICM

**Step 1** Copy the self-signed CVP Call Server certificate downloaded from CVP to the ICM box (PG).

**Step 2** Open the command prompt and go to `c:\icm\bin`.

**Step 3** Type `CiscoCertUtil.exe /install <callserver_certificate>`.  
 This imports the certificate to the Trusted Root Certification Authorities.

**Note** Repeat the procedure for multiple PIMs and for Side A and Side B.

*Generate Certificate on ICM Server*

**Before you begin**

If there is an existing host.pem certificate in c:\icm\ssl\certs, then skip the following procedure and go to the Section, On Call Server.

**Step 1** Log into the ICM (PG) box. Go to the command prompt and type **CiscoCertUtil.exe /generatecert**.

```
C:\icm\bin>ciscocertutil.exe /generatecert
SSL config path = C:\icm\ssl\cfg\openssl.cfg
SYSTEM command is C:\icm\ssl\bin\openssl.exe req -x509 -newkey rsa:2048 -days 7300 -nodes -subj
/CN=PG-SIDEA.pcce.com -out
C:\icm\ssl\certs\host.pem -keyout C:\icm\ssl\keys\host.key
Generating a RSA private key
.....
....
writing new private key to 'C:\icm\ssl\keys\host.key'
```

The client certificate and key are generated and stored as host.csr and host.key in C:\icm\ssl\certs folder.

**Step 2** Cycle VRU PG.

*Import ICM Certificate into CVP Call Server*

**Step 1** Log into the CVP Call Server box. Create a folder and copy host.pem to c:\IcmCertificate.

**Step 2** From the command prompt, run **%CVP\_HOME%\jre\bin\keytool.exe -import -v -alias icm\_certificate -storetype JCEKS -trustcacerts -keystore %CVP\_HOME%\conf\security\keystore -file c:\IcmCertificate\host.pem**.

**Step 3** Enter the keystore password when prompted. Click **Yes**.

**Step 4** Restart the Callserver service to load the new certificates.

**Note** Repeat the procedure if you have multiple Call Servers.

## Configure Cisco Unified Communications Manager

The following table outlines the Cisco Unified Communications Manager configuration tasks for Packaged CCE 2000 Agents deployment.

Configuration Tasks
<a href="#">Configure Fully Qualified Domain Name, on page 32</a>
<a href="#">Configure Cisco Unified Communications Manager Groups, on page 32</a>
<a href="#">Configure Conference Bridges, on page 33</a>
<a href="#">Configure Media Termination Points, on page 33</a>
<a href="#">Transcoder Configuration in Unified CM and IOS Gateway, on page 33</a>

**Configuration Tasks**

[Configure Media Resource Groups, on page 34](#)

[Configure and Associate Media Resource Group List, on page 35](#)

[Configure CTI Route Point, on page 35](#)

[Configure Ingress Gateways for Locations-based Call Admission Control, on page 36](#)

[Add a SIP Profile in Unified CM, on page 36](#)

[Configure Trunk, on page 36](#)

[Configure Route Group, on page 37](#)

[Configure Route List, on page 37](#)

[Configure Route Pattern, on page 37](#)

**Configure Fully Qualified Domain Name**

- 
- Step 1** Open Cisco Unified Communications Manager and log in.
- Step 2** Navigate to **System > Enterprise Parameters**.
- Step 3** Fill in **Clusterwide Domain Configuration > Cluster Fully Qualified Domain Name** with the Fully Qualified Domain Name of your cluster.
- Note** The Cluster Fully Qualified Domain Name is the name of the Unified Communications Manager Server Group defined in Unified CVP.
- Step 4** Click **Save**.
- 

**Configure Cisco Unified Communications Manager Groups**

Complete the following procedure to add a Cisco Unified Communications Manager to the Unified Communications Manager Group.

- 
- Step 1** Select Cisco Unified CM Administrator from the **Navigation** menu and click **Go**.
- Step 2** Select **System > Cisco Unified CM Group**.
- Step 3** Click **Find**. Then click **Default**.
- Step 4** Move the two subscribers from the Available panel to the Selected panel.
- Step 5** Click **Save**.
- Step 6** Click **Reset**.
- Step 7** On the **Device Reset** popup, click **Reset**.
- Step 8** Click **Close**.
-



## Configure Conference Bridges

Perform this procedure for each gateway in the deployment.

**Step 1** Select **Media Resources > Conference bridge**.

**Step 2** Click **Add New**.

**Step 3** Select Conference Bridge Type of **Cisco IOS Conference Bridge**.

**Step 4** In the **Conference Bridge name** field, enter a unique identifier for the conference bridge name that matches the configuration on the gateway.

In the example, this is gw70conf.

```
# Add a SCCP group for each of the hardware resource types
sccp ccm group 1
associate ccm 1 priority 1
associate profile 2 register gw70mtp
associate profile 1 register gw70conf
associate profile 3 register gw70xcode
```

**Step 5** Select a Device Pool.

**Step 6** Click **Save**.

**Step 7** Click **Apply Config**.

## Configure Media Termination Points

Complete this procedure for each gateway in the deployment.

**Step 1** Select **Media Resources > Media Termination Point**.

**Step 2** Click **Add New**.

**Step 3** In the Media Termination Point Name field, enter a unique identifier for the media termination that coincides with the configuration on the gateway.

In the example, this is gw70mtp.

```
# Add a SCCP group for each of the hardware resource types
sccp ccm group 1
associate ccm 1 priority 1
associate profile 2 register gw70mtp
associate profile 1 register gw70conf
associate profile 3 register gw70xcode
```

**Step 4** Select a Device Pool.

**Step 5** Click **Save**.

**Step 6** Click **Apply Config**.

## Transcoder Configuration in Unified CM and IOS Gateway

A transcoder is required for multicodec scenarios to convert a stream from a G.711 codec to a G.729 codec.

For more information about transcoder configuration in Unified Communications Manager and gateway, see the section "Configure Transcoders and Media Termination Points" in the *System Configuration Guide for*

Cisco Unified Communications Manager at <https://www.cisco.com/c/en/us/support/unified-communications/unified-communications-manager-callmanager/products-installation-and-configuration-guides-list.html>.

## Configure Transcoders

Perform this procedure for each gateway in the deployment.

- 
- Step 1** In Unified Communications Manager Administration, select **Media Resources > Transcoder**.
- Step 2** Click **Add New**.
- Step 3** For Transcoder Type, select **Cisco IOS enhanced media termination point**.
- Step 4** In the **Device Name** field, enter a unique identifier for the transcoder name that coincides with the configuration on the gateway.
- In the following example, this is gw70xcode.
- ```
# Add a SCCP group for each of the hardware resource types
sccp ccm group 1
associate ccm 1 priority 1
associate profile 2 register gw70mtp
associate profile 1 register gw70conf
associate profile 3 register gw70xcode
```
- Step 5** In the **Device Pool** field, select the appropriate device pool.
- Step 6** Click **Save**.
- Step 7** Click **Apply Config**.
- 

## Configure the CVP Call Server Dial Peers in Ingress Gateway

The Ingress Gateway to Unified CVP outbound dial peer configuration uses the IPv4 address of Unified CVP as the session target.

## Configure Media Resource Groups

- 
- Step 1** Select **Media Resources > Media Resource Group**.
- Step 2** Add a Media Resource Group for Conference Bridges.
- Click **Add New**.
  - Enter a Name.
  - From the Available list, select all the Cisco IOS conference bridge resources configured for each ingress/VXML combination gateway in the deployment and add them to the group.
  - Click **Save**.
- Step 3** Add a Media Resource Group for Media Termination Point.
- Click **Add New**.
  - Enter a Name.
  - From the Available list, select all the hardware media termination points configured and add them to the group.
  - Click **Save**.
- Step 4** Add a Media Resource Group for Transcoder.
- Click **Add New**.

- b) Enter a Name.
- c) From the Available list, select all the transcoders configured and add them to the group.
- d) Click **Save**.

**Step 5** Click **Save**.

---

## Configure and Associate Media Resource Group List

---

**Step 1** Select **Media Resources > Media Resource Group List**.

**Step 2** Click **Add New** and enter a Name.

**Step 3** Add a Media Resource Group list and associate all of the media resource groups. Click **Save**.

**Step 4** Select **System > Device Pool**. Click **Find**. Select the appropriate device pool.

**Step 5** From the Media Resource Group List drop-down list, choose the media resource group list added in Step 2.

**Step 6** Click **Save**. Click **Reset**.

---

## Configure CTI Route Point

Complete the following procedure to add a computer telephony integration (CTI) route point for agents to use for transfers and conferences.

---

**Step 1** In Cisco Unified CM Administration, select **Device > CTI Route Point**.

**Step 2** Click **Add New**.

**Step 3** Set a device name; for example, **PCCEInternalDNs**.

**Step 4** For Device Pool, select **Default**.

**Step 5** Select a Media Resource Group List from the list.

**Step 6** Click **Save**.

**Step 7** Click on Line [1] to configure the directory number associated with this route point.

This directory number will be a pattern that is intended to match any of the internal Dialed Numbers you configure in Packaged CCE for internally routed calls. (For instance, for Transfers and Conferences).

**Important** Define a pattern that is flexible enough to match all your internal dialed numbers yet restrictive enough not to inadvertently intercept calls intended for other Route Patterns you may have defined for other parts of your dial plan. Use a unique prefix for internal calls. For example, if you have internal dialed numbers 1230000 and 1231111, then an appropriate line number to enter for the cti route point would be 123XXXX.

**Step 8** Select **User Management > Application User**.

**Step 9** Select *pguser* created during Packaged CCE automated initialization.

**Step 10** Select the CTI Route Point from the list of **Available Devices**, and add it to the list of **Controlled Devices**.

**Step 11** Click **Save**.

---

## Configure Ingress Gateways for Locations-based Call Admission Control

Locations-based call admission control (CAC) is used in the Unified CCE branch-office call flow model (also known as the Centralized Model). This means that all servers (Unified CVP, Unified CCE, Unified Communications Manager, and SIP Proxy server) are centralized in one or two data centers, and each branch office.

Configure Unified Communications Manager to use the Ingress gateway instead of Unified CVP as the originating location of the call. This configuration ensures that CAC can be properly adjusted based on the locations of the calling endpoint and the phone.




---

**Important** Do not define Unified CVP as a gateway device in Unified Communications Manager.

---



---

In Cisco Unified CM Administration, define the Ingress gateways as gateway devices. Assign the correct location to the devices.

---

## Add a SIP Profile in Unified CM

This option allows a dual-stack SIP trunk to offer both IPv4 and IPv6 media. Perform this procedure for IPv6-enabled deployments only.

- 
- Step 1** From **Cisco Unified CM Administration**, choose **Device > Device Settings > SIP Profile**.
  - Step 2** Click **Add New** and enter the name of the SIP profile.
  - Step 3** Check the **Enable ANAT** check box on the SIP Profile.
  - Step 4** Save your changes.
- 

## Configure Trunk

There are two Unified CVP Servers and each must be associated with a SIP trunk in Unified Communications Manager. The following procedure explains how to configure the SIP trunks, each targeting a different Unified CVP Server.

Actual site topology may necessitate the use of alternate SIP trunk plans, which are supported as long as both Unified CVP Servers are targeted by the configured SIP trunks.

- 
- Step 1** In Unified Cisco CM Administration, select **Device > Trunk**.
  - Step 2** Click **Add New**.
  - Step 3** From the Trunk Type drop-down list, choose **SIP Trunk**, and then click **Next**.
  - Step 4** Enter the following in the **Device Information** section:
    - a) In the **Device Name** field, enter a name for the SIP trunk, for example, **sipTrunkCVPA**.
    - b) In the **Device Pool** drop-down list, select the device pool that the customer has defined.
    - c) Select a Media Resource Group List from the list.

- d) Make sure that the **Media Termination Point Required** check box is not checked.

**Step 5** Scroll down to the **SIP Information** section:

- a) In Row 1 of the **Destination** table, enter the IP address of a CVP server. Accept the default destination port of 5060.  
b) In the **SIP Trunk Security Profile** drop-down list, select **Non Secure SIP Trunk Profile**.  
c) In the **SIP Profile** drop-down list, select **Standard SIP Profile**.

**Note** If you are using an IPv6-enabled deployment, use the SIP Profile created in [Add a SIP Profile in Unified CM, on page 36](#).

- d) In the **DTMF Signaling Method** drop-down list, select **RFC 2833**.

**Step 6** Click **Save**.

**Step 7** Click **Reset**.

**Step 8** Repeat for all the remaining Unified CVP servers in the deployment.

---

## Configure Route Group

Complete the following procedure to create a route group.

---

**Step 1** In Unified Communications Manager, select **Call Routing > Route Hunt > Route Group**.

**Step 2** Click **Add New**.

**Step 3** Enter a name for the route group; for example, **CVP Route Group**.

**Step 4** Using the Add to Route Group button, add all CVP Trunks as Selected Devices.

**Step 5** Click **Save**.

---

## Configure Route List

Complete the following procedure to add a route list to the route group.

---

**Step 1** In Unified Communications Manager, select **Call Routing > Route Hunt > Route List**.

**Step 2** Click **Add New**.

**Step 3** Enter a name for the route list; for example, **CVP Route List**.

**Step 4** Select a Cisco Unified Communications Manager Group.

**Step 5** Add the route group you created.

**Step 6** Click **Save**.

---

## Configure Route Pattern

Complete the following procedure to add a route pattern to the route list.

---

**Step 1** In Unified Communications Manager, select **Call Routing > Route Hunt > Route Pattern**.

- Step 2** Click **Add New**.
- Step 3** Enter a route pattern of **8881111000xxxx**.
- Step 4** Select the route list that you created.
- Step 5** Keep all defaults in all panels
- Step 6** Click **Save**.
- Step 7** Click **OK** at the message about the Forced Authorization Code. You do not want a Forced Authorization Code.

## Configure Cisco Unified Intelligence Center

Follow this sequence to configure the Cisco Unified Intelligence Center for Packaged CCE 2000 Agentsdeployment

| Sequence | Task                                                                             |
|----------|----------------------------------------------------------------------------------|
| 1        | <a href="#">Download Report Bundles, on page 39</a>                              |
| 2        | <a href="#">Import Reports, on page 40</a>                                       |
| 3        | <a href="#">Configure Unified Intelligence Center Administration, on page 41</a> |

## Configure Unified Intelligence Center Data Sources for External HDS

Perform this procedure only if your deployment includes an external HDS and you wish to have a longer retention period.

### Before you begin

Configure the Unified Intelligence Center SQL user for the External HDS databases before configuring the data sources (applicable for 4000 Agents and 12000 Agents). For more information, refer the Configure Unified Intelligence Center SQL User Account on the External HDS section in the Cisco Packaged Contact Center Enterprise Installation and Upgrade Guide at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-installation-guides-list.html>

- Step 1** Sign in to Unified Intelligence Center with your Cisco Intelligence Center administrator account (<https://<hostname/> IP address of CUIC Publisher>:8444/cuicui>).
- Step 2** Select **Configure > Data Sources**.
- Step 3** Click **Data Sources** in the left panel.
- Step 4** Select the **UCCE Historical** data source. Click **Edit**.
- In the **Datasource Host** field, enter the IP Address of the external HDS server.
  - In the **Port** field, enter the AW SQL server port number. The default is **1433**.
  - In the **Database Name** field, enter **{instance}\_awdb**.
  - Leave the **Instance** field blank.
  - Select the **Timezone**.
  - In the **Database User ID**, enter the user name that you configured for the Cisco Unified Intelligence Center SQL Server user account.
  - Enter and confirm the SQL Server User **password**.

- h) Select the **Charset** based on the collation of SQL Server installation.
- i) Click **Test Connection**.
- j) Click **Save**.

**Step 5** Click the **Secondary** tab to configure Unified CCE Historical Data Source.

- a) Check the **Failover Enabled** checkbox.
- b) In the **Datasource Host** field, enter the IP address of the second external HDS server.
- c) In the **Port** field, enter **1433**.
- d) In the **Database Name** field, enter **{instance}\_awdb**.
- e) Complete other fields as in the Primary tab.
- f) Click **Test Connection**.
- g) Click **Save**.

**Step 6** Repeat this procedure for the **UCCE Realtime** datasource for 4000 or 12000 Agents deployment.

The **Database Name** for the Realtime Data Source is **{instance}\_awdb**.

---

## Download Report Bundles

The following Cisco Unified Intelligence Center report bundles are available as downloads from Cisco.com <https://software.cisco.com/download/type.html?mdfid=282163829&catid=null>. Click the **Intelligence Center Reports** link to view all available report bundles:

- Realtime and Historical Transitional templates - Introductory templates designed for new users. These templates are simplified versions of the All Fields templates, and are similar to templates available in other contact center solutions.
- Realtime and Historical All Fields templates - Templates that provide data from all fields in a database. These templates are most useful as a basis for creating custom report templates.
- Live Data templates - Templates that provide up to the moment data for contact center activity.
- Realtime and Historical Outbound templates - Templates for reporting on Outbound Option activity. Import these templates if your deployment includes Outbound Option.
- Realtime and Historical Customer Collaboration Platform templates - Templates for reporting on Customer Collaboration Platform activity. Import these templates if your deployment includes Customer Collaboration Platform.
- Cisco Unified Intelligence Center Admin Security templates - Templates to report on Cisco Unified Intelligence Server audit trails, permissions, and template ownership.

Some of the templates in these bundles are not applicable in Cisco Packaged CCE deployment. See the *Cisco Packaged Contact Center Enterprise Reporting User Guide* at [https://www.cisco.com/en/US/products/ps12586/tsd\\_products\\_support\\_series\\_home.html](https://www.cisco.com/en/US/products/ps12586/tsd_products_support_series_home.html) for more information about the templates used in Packaged CCE deployments.

Additionally, sample custom report templates are available from Cisco DevNet (<https://developer.cisco.com/site/reporting/documentation/>) and include templates for:

- Enterprise Chat and Email
- Cisco Unified Customer Voice Portal (Unified CVP)

When downloading report template bundles, select bundles for the version of software deployed in your contact center.

## Import Reports

You can import the Unified Intelligence Center report, which is in either .xml or .zip file format.

The imported report retrieves data for the following entities:

- Report
- Report Definition
- Value Lists
- Views
- Thresholds
- Drilldowns
- Template Help




---

**Note** Each report template help folder has a size limit of 3 MB. If the folder size exceeds this limit, the system does not load the help content.

---




---

**Note** You cannot import Report Filters and Collections.

---

To import reports, perform the following steps:

---

**Step 1** In the left navigation pane, choose **Reports**.

**Step 2** In the **Reports** listing page, click **Import**.

**Step 3** Click **Browse** to select the file (.xml or .zip format) to be imported.

**Note** Maximum file size for .zip file format is 60 MB and for .xml file format is 3 MB.

**Step 4** Select the required file and click **Open**.

**Step 5** Select the file location from the **Save to Folder** list to save the file.

**Step 6** Click **Upload**.

Once the file is successfully uploaded, the table gets populated with the corresponding report template, current available version, and incoming version of the files being imported.

**Step 7** Select a Data Source for the Report Definition only if the Report Definition for the report being imported is not defined in Unified Intelligence Center.

**Step 8** Select a Data Source for the Value List that is defined in the Report Definition.



**Note** Selection of a Data Source for the Value List is mandatory:

- If the Value List does not use the same Data Source as the Report Definition.
- For Real Time Streaming Report Definitions.

**Step 9** Select the files to import or overwrite.

- Overwrite—If the report being imported exists in the Unified Intelligence Center.
- Import—If the report being imported is the new set of report files.

**Step 10** Click **Import**.

- Note**
- If the system does not have report definitions, new report definitions are created in **Report Definitions > Imported Report Definitions** folder.
  - Importing a report to a different version of Unified Intelligence Center is not supported. However, when you upgrade Unified Intelligence Center, report templates continue to work in the upgraded version.
  - Importing manually edited XMLs is not supported.

---

## Configure Unified Intelligence Center Administration

Complete the following procedure to configure Unified Intelligence Center Administration.

**Step 1** Sign in to the **Cisco Unified Intelligence Center Administration Console** (<https://<hostname>:8443/oamp>).

**Step 2** Configure the Active Directory card under **Cluster Configuration**.

- Enter the For Host Address for the Primary Active Directory Server, enter the IP address of the domain controller.
- For Port, enter the port number for the domain controller. Leave the default value for Port.
- Complete the **Manager Distinguished Name** fields that are required for the customer.
- Enter and confirm the password with which the Manager accesses the domain controller.
- For User Search Base, specify users and the domain name and any sub-domain names the Distinguished Name or Organization Unit of the domain you want to search.
- For Attribute for User ID, select the required option.

**Note** If the Windows domain name and the NETBIOS names are different, do the following: in the **Cisco Unified Intelligence Center Administration Console**, under **Active Directory Settings**, in the field **Attribute for User ID**, ensure to select *sAMAccountName*, and add the *NETBIOS* value to set it as default value.

- Add at least one domain for the UserName Identifier. Do not type the @ sign before the domain name.
- Set a domain as the default.
- Click **Test Connection**.
- Click **Save**.

**Note** For more details, see the online help.

- Step 3** Configure syslog for all devices.
- a) Choose **Logs and Traces**.
  - b) For each host address:
    - Select the associated servers and click the arrow to expand.
    - Select the server name.
    - In the **Syslog Settings** pane, configure the Primary and Backup Host. Click **Save**.

- Step 4** Configure SNMP for all devices, if used.
- a) Select **Tools > Network SNMP**.
  - b) Navigate to SNMP and for each server add the following:
    - V1/V2c Community Strings.
    - Notification Destination.

## Configure Cisco Finesse

Follow this sequence to configure the Cisco Finesse for Packaged CCE 2000 Agents deployment

| Sequence | Task                                                                                          |
|----------|-----------------------------------------------------------------------------------------------|
| 1        | <a href="#">Configure Contact Center Agents and Routing for Live Data Reports, on page 42</a> |
| 2        | <a href="#">Live Data Reports, on page 43</a>                                                 |
| 3        | <a href="#">Securing connection between CTI Server and Finesse</a>                            |

### Configure Contact Center Agents and Routing for Live Data Reports

In order to test the Live Data reports in the Finesse desktops, configure the following in Unified CCE Administration (`https://<Side A/B Unified CCE AW-HDS-DDS IP address>/cceadmin`):

- Agents
- Skill groups or precision queues
- Call types
- Dialed numbers
- Network VRU scripts
- Routing scripts



**Note** Routing scripts are configured in Script Editor, which you can open from Unified CCE Administration Tools.

## Live Data Reports

Cisco Unified Intelligence Center provides Live Data real-time reports that you can add to the Finesse desktop.

### Add Live Data Reports to Finesse

The following sections describe how to add the Live Data reports to the Finesse desktop. The procedure that you follow depends on several factors, described in the following table.

| Procedure                                       | When to use                                                                                                                                                                          |
|-------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add Live Data reports to default desktop layout | Use this procedure if you want to add Live Data reports to the Finesse desktop after a fresh installation or after an upgrade if you have not customized the default desktop layout. |
| Add Live Data reports to custom desktop layout  | Use this procedure if you have customized the Finesse desktop layout.                                                                                                                |
| Add Live Data reports to team layout            | Use this procedure if you want to add Live Data reports to the desktop layout for specific teams only.                                                                               |

#### Add Live Data Reports to Default Desktop Layout

The Finesse default layout XML contains commented XML code for the Live Data report gadgets available for the Finesse desktop. The gadgets are divided into two categories: HTTPS version of Live Data gadgets and HTTP version of Live Data gadgets.

This procedure explains how to add the Live Data report gadgets to the default desktop layout. Use this procedure after a fresh installation of Finesse. If you upgraded Finesse but do not have a custom desktop layout, click **Restore Default Layout** on the Manage Desktop Layout gadget and then follow the steps in this procedure. Note that line breaks and spaces that appear in the example text are provided only for readability and must not be included in the actual code.

**Step 1** In **Unified CCE Administration**, navigate to **Desktop > Resources**.

**Step 2** Click the **Desktop Layout** tab.

**Step 3** Remove the comment characters (<!-- and -->) from each report that you want to add to the desktop layout. Make sure you choose the reports that match the method your agents use to access the Finesse desktop (HTTP or HTTPS).

**Step 4** Replace my-cuic-server with the fully qualified domain name of your Cisco Unified Intelligence Center Server.

**Step 5** Optionally, change the gadget height.

#### Example:

The height specified in the Live Data gadget URLs is 310 pixels. If you want to change the height, change the gadgetHeight parameter in the URL to the desired value. For example, if you want the gadget height to be 400 pixels, change the code as follows, replacing 310 with 400:

```
<gadget>https://my-cuic-server:8444/cuic/gadget/LiveData/LiveDataGadget.jsp?
  gadgetHeight=400&viewId_1=99E6C8E210000141000000D80A0006C4&
  filterId_1=agent.id=CL%20teamName&viewId_2=9AB7848B10000141000001C50A0006C4&
  filterId_2=agent.id=CL%20teamName
</gadget>
```

To maintain the optimal display of the gadget with scroll bars, set the value for the gadget height to a minimum of 200 pixels. If the report does not require scroll bars, for example a one-row report, you can set a smaller gadget height (for example, 100 pixels). If you do not specify anything for the gadget height (if you remove the 310 from the URL), it defaults to 170 pixels.

**Step 6** Click **Save**.

### *Add Live Data Reports to Custom Desktop Layout*

The Finesse default layout XML contains commented XML code for the Live Data report gadgets available for the Finesse desktop. The gadgets are divided into two categories: HTTPS version of Live Data gadgets and HTTP version of Live Data gadgets.

This procedure explains how to add the Live Data report gadgets to a custom desktop layout. Note that line breaks and spaces that appear in the example text are provided only for readability and must not be included in the actual code.

**Step 1** In **Unified CCE Administration**, navigate to **Desktop > Resources**.

**Step 2** Click the **Desktop Layout** tab.

**Step 3** Click **Finesse Default Layout XML** to show the default layout XML.

**Step 4** Copy the XML code for the report you want to add from the Finesse default layout XML. If your agents use HTTP to access Finesse, copy the XML code for the HTTP report. If they use HTTPS, copy the XML code for the HTTPS report.

**Example:**

To add the Agent Report for HTTPS, copy the following:

```
<gadget>https://my-cuic-server:8444/cuic/gadget/LiveData/LiveDataGadget.jsp?
  gadgetHeight=310&viewId_1=99E6C8E210000141000000D80A0006C4&
  filterId_1=agent.id=CL%20teamName&
  viewId_2=9AB7848B10000141000001C50A0006C4&
  filterId_2=agent.id=CL%20teamName
</gadget>
```

**Step 5** Copy the XML code for the report you want to add from the Finesse default layout XML.

**Example:**

To add the Agent Report for HTTPS, copy the following:

```
<gadget>https://my-cuic-server:8444/cuic/gadget/LiveData/LiveDataGadget.jsp?
  gadgetHeight=310&viewId_1=99E6C8E210000141000000D80A0006C4&
  filterId_1=agent.id=CL%20teamName&
  viewId_2=9AB7848B10000141000001C50A0006C4&
  filterId_2=agent.id=CL%20teamName
</gadget>
```

**Step 6** Paste the XML within the tab tags where you want it to appear.

**Example:**

To add the report to the home tab of the agent desktop:

```
<layout>
  <role>Agent</role>
  <page>
    <gadget>/desktop/gadgets/CallControl.jsp</gadget>
  </page>
```

```

<tabs>
  <tab>
    <id>home</id>
    <label>finesse.container.tabs.agent.homeLabel</label>
    <gadget>https://my-cuic-server:8444/cuic/gadget/LiveData/LiveDataGadget.jsp?
      gadgetHeight=310&viewId_1=99E6C8E210000141000000D80A0006C4&
      filterId_1=agent.id=CL%20teamName&
      viewId_2=9AB7848B10000141000001C50A0006C4&
      filterId_2=agent.id=CL%20teamName
    </gadget>
  </tab>
  <tab>
    <id>manageCall</id>
    <label>finesse.container.tabs.agent.manageCallLabel</label>
  </tab>
</tabs>
</layout>

```

**Step 7** Replace my-cuic-server with the fully qualified domain name of your Cisco Unified Intelligence Center Server.

**Step 8** Optionally, change the gadget height.

**Example:**

The height specified in the Live Data gadget URLs is 310 pixels. If you want to change the height, change the gadgetHeight parameter in the URL to the desired value. For example, if you want the gadget height to be 400 pixels, change the code as follows:

```

<gadget>https://my-cuic-server:8444/cuic/gadget/LiveData/LiveDataGadget.jsp?
  gadgetHeight=400&viewId_1=99E6C8E210000141000000D80A0006C4&
  filterId_1=agent.id=CL%20teamName&viewId_2=9AB7848B10000141000001C50A0006C4&
  filterId_2=agent.id=CL%20teamName
</gadget>

```

To maintain the optimal display of the gadget with scroll bars, set the value for the gadget height to a minimum of 200 pixels. If the report does not require scroll bars, for example a one-row report, you can set a smaller gadget height (for example, 100 pixels). If you do not specify anything for the gadget height (if you remove the 310 from the URL), it defaults to 170 pixels.

**Step 9** Click **Save**.

**Note** After you add a gadget, sign in to the Finesse desktop and make sure it appears the way you want. If you use a report with a large number of rows, you may want to adjust the gadget height or the screen resolution on the computer used to access the desktop to make the report easier to read or make more rows appear on the screen without needing to scroll down.

Agents who are signed in when you change the desktop layout must sign out and sign back in to see the change on their desktops.

## Configure Cisco Unified Customer Voice Portal Reporting Server

Follow this sequence to configure the Cisco Unified Customer Voice Portal Reporting Server for Packaged CCE deployment



**Note** The Unified CVP Reporting VM is required for customers who use Courtesy Callback and who want to run Unified CVP call and application reports.

## Obtain Cisco Unified Customer Voice Portal Report Templates

To import Unified CVP report templates complete the following:

- Step 1** On the Unified CVP Reporting Server, click **Start**.
- Step 2** In the search box, type `%CVP_HOME%\CVP_Reporting_Templates` and press **Enter**.
- Step 3** Compress the reports into a zip folder and copy it to the system from which you will run Unified Intelligence Center Administration.

## Create Data Source for Cisco Unified CVP Report Data

- Step 1** Log in to the Unified Intelligence Center at `https://<hostname/ IP address of CUIC Publisher>:8444/cuicui`.
- Step 2** Select the **Data Sources** drawer to open the **Data Sources** page.
- Step 3** Click **New** to open **New Data Source** page.
- Step 4** Complete fields on this page as follows:

Field	Value
<b>Name</b>	Enter the name of this data source.  Report Designers and Report Definition Designers do not have access to the Data Sources page but can see the list of Data Sources when they create custom reports. To benefit those users, give a new Data Source a meaningful name.
<b>Description</b>	Enter a description for this data source.
<b>Data Source Type</b>	Choose <b>Informix</b> .  <b>Note</b> Type is disabled in Edit mode.
<b>Host Settings</b>	
<b>Database Host</b>	Enter the IP address or hostname for the Unified CVP Reporting server.
<b>Port</b>	Enter the port number. Typically, the port is 1526.  You may have to open this port in the CVP Reporting Server firewall (Windows Firewall > Advanced Settings > Inbound rules > new rule).

Field	Value
<b>Database Name</b>	Enter the name of the reporting database on the Unified CVP reporting server. The database name can be <code>cvp_data</code> or <code>callback</code> .
<b>Instance</b>	Specify the instance name of the desired database. By default, this is <code>cvp</code> .
<b>Timezone</b>	Choose the correct time zone for the data stored in the database. In locations that change from Standard Time to Daylight Savings Time, this time zone is updated automatically.  <b>Note</b> Set CVP datasource timezone configuration to UTC on CUIC.
<b>Authentication Settings</b>	
<b>Database User ID</b>	Enter the user ID of the Reporting User to access the Unified CVP reporting database.  (The <code>cvp_dbuser</code> account is created automatically during Unified CVP Reporting server installation.)
<b>Password and Confirm Password</b>	Enter and confirm the password for the database user.
<b>Charset</b>	Choose UTF-8.
<b>Default Permissions</b>	View or edit the permissions for this datasource for My Group and for the All Users group.
<b>Max Pool Size</b>	Select the maximum pool size.  Value ranges from 5-200. The default Max Pool Size value is 100 and is common for both the primary and secondary data source tabs.

**Step 5** Click **Test Connection**.

If the status is not Online, review the error message to determine the cause and edit the data source accordingly.

**Step 6** Click **Save** to close the Add Data Source window.

The new data source appears on the Data Sources list.

## Import Unified CVP Report Templates in Unified Intelligence Center

You can import a report (XML) and the associated template help file (ZIP format) into Cisco Unified Intelligence Center.

- Step 1** Launch the Unified Intelligence Center web application at `https://<Hostname/IP Address of CUIC Publisher>:8444/cuic`
- Step 2** From the left navigation pane, click **Reports**.
- Step 3** On the Reports toolbar, click **New > Import**.

You will be redirected to the legacy interface.

**Step 4** Navigate to the folder where you want to import the report.

**Note** If you are importing a stock report bundle from Cisco.com, it must be placed at the Reports folder level.

**Step 5** Click **Import Report**.

**Step 6** In the **File Name (XML or ZIP file)** field, click **Choose File**.

**Step 7** Browse to and select the XML or the compressed report file, and click **Open**.

**Step 8** From the **Data source for ReportDefinition** drop-down list, select a data source used by the report definition.

**Note** This field appears only if the Report Definition for the report being imported is not currently defined in Unified Intelligence Center.

**Step 9** From the **Data Source for ValueList** drop-down list, select the data source used by the value lists defined in the report definition.

**Note** You have to select a data source for the value list only if it does not use the same data source as the Report Definition. For Report Definitions of Real Time Streaming, it is mandatory to select a data source for the Value Lists.

**Step 10** In the **Save To** field, browse to the folder where you want to place the imported report. Use the arrow keys to expand the folders.

**Step 11** Click **Import**.



**Note** Importing a report to a different version of Unified Intelligence Center is not supported. However, when you upgrade Unified Intelligence Center, report templates continue to work in the upgraded version.

---

## Configure VVB



**Note**

- If you have configured VXML Gateway, it is not mandatory to configure Virtualized Voice Browser (VVB). You may configure either VVB or VXML Gateway, or configure both.
- The Cisco VVB configurations are site specific. All the VVBs in a site must have the same configurations.

---

To configure Cisco VVB for all deployments:

- Add VVB as an external machine. For more information, see [Add External Machines](#).
- Change the default configuration (Optional). For more information, see [Cisco Virtualized Voice Browser \(VVB\) Setup](#).
- Configure SNMP (Optional). For more information, see [Configure SNMP, on page 89](#).



# Configure Cisco IOS Enterprise Voice Gateway

Tasks to configure the Cisco IOS Enterprise Voice Gateway for Packaged CCE deployment

Task
<a href="#">Common Configuration for the Ingress Gateway and VXML Gateway, on page 49</a>
<a href="#">Configure Ingress Gateway, on page 49</a>
<a href="#">Configure VXML Gateway, on page 52 (optional)</a>
<a href="#">Configure Codec for Ingress and VXML Gateways, on page 54</a>

## Related Topics

[Configure VXML Gateway, on page 52](#)

## About Ingress and VXML Gateway Configuration

Complete the following procedures to configure the Ingress Gateway and VXML Gateway. Instructions are applicable to both TDM and Cisco Unified Border Element (CUBE) Voice gateways, unless otherwise noted.

You can add all Gateways as an external machine. For more information, see [Add External Machines](#).




---

**Note** Complete all configuration steps in **enable > configuration terminal** mode.

---

## Common Configuration for the Ingress Gateway and VXML Gateway

```
logging buffered 2000000 debugging
no logging console
service timestamps debug datetime msec localtime
ip routing
ip cef
ip source-route
interface GigabitEthernet0/0
    ip route-cache same-interface
    duplex auto
    speed auto
    no keepalive
    no cdp enable

voice service voip
    ip address trusted list
    ipv4 0.0.0.0 0.0.0.0 # OR an explicit Source IP Address Trust List
    allow-connections sip to sip
    signaling forward unconditional
```

## Configure Ingress Gateway

**Step 1** Configure global settings.

```
voice service voip
    allow-connections sip to sip
```

```

signaling forward unconditional
# If this gateway is being licensed as a Cisco UBE the following lines are also required
mode border-element
ip address trusted list
  ipv4 0.0.0.0 0.0.0.0          # Or an explicit Source IP Address Trust List
sip
  rellxx disable
  header-passing
  options-ping 60
  midcall-signaling passthru

```

**Step 2** Configure voice codec preference:

```

voice class codec 1
  codec preference 1 g711ulaw
  codec preference 2 g711alaw
  codec preference 3 g729r8

```

**Step 3** Configure default services:

To download and transfer the `survivability.tcl` file to the Ingress Gateway, see [File Transfer to Gateway, on page 54](#).

```

#Default Services
application
  service survivability flash:survivability.tcl

```

**Step 4** Configure gateway and sip-ua timers:

```

gateway
  media-inactivity-criteria all
  timer receive-rtp 1200

sip-ua
  retry invite 2
  retry bye 1
  timers expires 60000
  timers connect 1000
  reason-header override

```

**Step 5** Configure POTS dial-peers:

```

# Configure Unified CVP survivability
dial-peer voice 1 pots
  description CVP TDM dial-peer
  service survivability
  incoming called-number .T
  direct-inward-dial

```

**Note** This is required for TDM gateways only.

**Step 6** Configure the switch leg:

```

#Configure the Switch leg where
# preference is used to distinguish between sides.
# max-conn is used prevent overloading of Unified CVP
# options-keepalive is used to handle failover
# Note: the example below is for gateways located on the A-side of a geographically
#distributed deployment
# Note: Ensure that you configure switch dial-peers for each Unified CVP server.

dial-peer voice 70021 voip
  description Used for Switch leg SIP Direct
  preference 1
  max-conn 225

```

```

destination-pattern xxxx..... #Customer specific destination pattern
session protocol sipv2
session target ipv4:###.###.###.### #IP Address for Unified CVP, SideA
session transport tcp
voice-class codec 1
voice-class sip options-keepalive up-interval 12 down-interval 65 retry 2
dtmf-relay rtp-nte
no vad

dial-peer voice 70022 voip
description Used for Switch leg SIP Direct
preference 2
max-conn 225
destination-pattern xxxx..... #Customer specific destination pattern
session protocol sipv2
session target ipv4:###.###.###.### #IP Address for Unified CVP, SideB
session transport tcp
voice-class codec 1
voice-class sip options-keepalive up-interval 12 down-interval 65 retry 2
dtmf-relay rtp-nte
no vad

```

### Step 7 Configure the hardware resources (transcoder, conference bridge, and MTP):

**Note** This configuration section is unnecessary for virtual CUBE or CSR 1000v Gateways. They do not have physical DSP resources.

```

#For gateways with physical DSP resources, configure Hardware resources using
#Unified Communications Domain Manager.

# Configure the voice-cards share the DSP resources located in Slot0
voice-card 0
  dspfarm
  dsp services dspfarm
voice-card 1
  dspfarm
  dsp services dspfarm
voice-card 2
  dspfarm
  dsp services dspfarm
voice-card 3
  dspfarm
  dsp services dspfarm
voice-card 4
  dspfarm
  dsp services dspfarm

# Point to the contact center call manager
sccp local GigabitEthernet0/0
  sccp ccm ###.###.###.### identifier 1 priority 1 version 7.0 # Cisco Unified CM sub 1
  sccp ccm ###.###.###.### identifier 2 priority 2 version 7.0 # Cisco Unified CM sub 2

# Add a SCCP group for each of the hardware resource types
sccp ccm group 1
  associate ccm 1 priority 1
  associate profile 2 register <gatewaynamemtp>
  associate profile 1 register <gatewaynameconf>
  associate profile 3 register <gatewaynamexcode>

# Configure DSPFarms for Conference, MTP and Transcoder

dspfarm profile 1 conference
  codec g711ulaw
  codec g711alaw

```

```

        codec g729r8
        maximum sessions 24
        associate application SCCP

dspfarm profile 2 mtp
    codec g711ulaw
    codec g711alaw
    codec g729r8
    maximum sessions software 500
    associate application SCCP

dspfarm profile 3 transcode universal
    codec g711ulaw
    codec g711alaw
    codec g729r8
    maximum sessions 52
    associate application SCCP

```

**Step 8** Optional, configure the SIP Trunking:

```

# Configure the resources to be monitored
voice class resource-group 1
    resource cpu 1-min-avg threshold high 80 low 60
    resource ds0
    resource dsp
    resource mem total-mem
    periodic-report interval 30

# Configure one rai target for each CVP Server
sip-ua
    rai target ipv4:###.###.###.### resource-group1 # CVPA
    rai target ipv4:###.###.###.### resource-group1 # CVPB
    permit hostname dns:%Requires manual replacement - ServerGroup Name defined in CVP.System.SIP
Server Groups%

```

**Step 9** Configure incoming PSTN SIP trunk dial peer:

```

dial-peer voice 70000 voip
    description Incoming Call From PSTN SIP Trunk
    service survivability
    incoming called-number xxxx..... # Customer specific incoming called-number pattern
    voice-class sip rellxx disable
    dtmf-relay rtp-nte
    session protocol sipv2
    voice-class codec 1
    no vad

```

**Note** This is required for CUBE only.

## Configure VXML Gateway

**Before you begin**

**Note** If you have configured VVB, it is not mandatory to configure VXML Gateway. You may configure either VVB or VXML Gateway, or configure both.

**Step 1** Configure global settings:

```
voice service voip
  allow-connections sip to sip
  signaling forward unconditional
  # If this gateway is being licensed as a Cisco UBE the following lines are also required
  mode border-element
  ip address trusted list
  ipv4 0.0.0.0 0.0.0.0          # Or an explicit Source IP Address Trust List
sip
  rellxx disable
  header-passing
  options-ping 60
  midcall-signaling passthru
```

**Step 2** Configure default Unified CVP services:

To download and transfer the following files to VXML Gateway, see [File Transfer to Gateway, on page 54](#).

```
#Default Unified CVP Services
application
  service new-call flash:bootstrap.vxml
  service CVPSelfService flash:CVPSelfServiceBootstrap.vxml
  service ringtone flash:ringtone.tcl
  service cvperror flash:cvperror.tcl
  service bootstrap flash:bootstrap.tcl
  service handoff flash:handoff.tcl
```

**Step 3** Configure dial-peers:

**Note** While configuring VXML gateway voice class codec must not be used. G711ulaw may be used in general for the dial-peers, but still depending on the implementation the other codec may be used.

```
# Configure Unified CVP Ringtone
dial-peer voice 919191 voip
  description CVP SIP ringtone dial-peer
  service ringtone
  incoming called-number 9191T
  voice-class sip rellxx disable
  dtmf-relay rtp-nte
  codec g711ulaw
  no vad

# Configure Unified CVP Error
dial-peer voice 929292 voip
  description CVP SIP error dial-peer
  service cvperror
  incoming called-number 9292T
  voice-class sip rellxx disable
  dtmf-relay rtp-nte
  codec g711ulaw
  no vad
```

**Step 4** Configure default Unified CVP HTTP, ivr, rtsp, mrpc and vxml settings:

```
http client cache memory pool 15000
http client cache memory file 1000
http client cache refresh 864000
no http client connection persistent
http client connection timeout 60
http client connection idle timeout 10
http client response timeout 30
```

```
ivr prompt memory 15000

vxml tree memory 500
vxml audioerror
vxml version 2.0
```

**Step 5** Configure VXML leg where the incoming called-number matches the Network VRU Label:

```
dial-peer voice 7777 voip
  description Used for VRU leg
  service bootstrap
  incoming called-number 777T
  dtmf-relay rtp-nte
  codec g711ulaw
  no vad
```

**Step 6** Exit configuration mode and use the Cisco IOS CLI command **call application voice load <service\_Name>** to load the transferred Unified CVP files into the Cisco IOS memory for each Unified CVP service:

- call application voice load new-call
- call application voice load CVPSelfService
- call application voice load ringtone
- call application voice load cvperror
- call application voice load bootstrap
- call application voice load handoff

## File Transfer to Gateway

This procedure explains how to download and transfer files to the Gateway.

**Step 1** Download the required .tcl files from %CVP\_HOME%\GWDownloads folder.

**Step 2** Transfer the .tcl files to the flash memory of the Gateway using FTP.

## Configure Codec for Ingress and VXML Gateways

### Configure Ingress Gateway

**Step 1** Add the voice class codec 1 to set the codec preference in dial-peer:

**Example:**

```
voice class codec 1
  codec preference 1 g729r8
  codec preference 2 g711alaw
  codec preference 3 g711ulaw

dial-peer voice 70021 voip
  description Used for Switch leg SIP Direct
  preference 1
  max-conn 225
```

```

destination-pattern xxxx..... # Customer specific destination
session protocol sipv2
session target ipv4:###.###.###.### # IP Address for Unified CVP
session transport tcp
voice class codec 1
voice-class sip options-keepalive up-interval 12 down-interval 65 retry 2
dtmf-relay rtp-nte
no vad

```

## Step 2 Modify the dial-peer to specify the codec explicitly for a dial-peer:

```

dial-peer voice 9 voip
description For Outbound Call for Customer
destination-pattern <Customer Phone Number Pattern>
session protocol sipv2
session target ipv4:<Customer SIP Cloud IP Address>
session transport tcp
voice-class sip rel1xx supported "100rel"
voice-class sip options-keepalive up-interval 12 down-interval 65 retry 2
dtmf-relay rtp-nte
codec g711alaw
no vad

dial-peer voice 10 voip
description ***To CUCM Agent Extension For Outbound***
destination-pattern <Agent Extension Pattern to CUCM>
session protocol sipv2
session target ipv4:<CUCM IP Address>
voice-class sip rel1xx supported "100rel"
dtmf-relay rtp-nte
codec g711alaw

```

## Configure VXML Gateway

Modify the following dial-peer to specify the codec explicitly for a dial-peer:

```

dial-peer voice 919191 voip
description Unified CVP SIP ringtone dial-peer
service ringtone
incoming called-number 9191T
voice-class sip rel1xx disable
dtmf-relay rtp-nte
codec g711alaw
no vad

dial-peer voice 929292 voip
description CVP SIP error dial-peer
service cvperror
incoming called-number 9292T
voice-class sip rel1xx disable
dtmf-relay rtp-nte
codec g711alaw
no vad

dial-peer voice 7777 voip
description Used for VRU leg #Configure VXML leg where the incoming called
service bootstrap
incoming called-number 7777T
dtmf-relay rtp-nte
codec g711alaw

```

```
no vad
```

---

## Configure IPv6

Tasks to configure IPv6 for Packaged CCE deployment

Task
<a href="#">Set Up IPv6 for VOS-Based Contact Center Applications, on page 56</a>
<a href="#">Configure NAT64 for IPv6-Enabled Deployment, on page 57</a>
<a href="#">Configure IPv6 on Unified CVP Call Server, on page 59</a>
<a href="#">Configure Gateways to Support IPv6, on page 60</a>
<a href="#">Configure IPv6 on Unified Communications Manager, on page 61</a>

## IPv6 Configuration

Packaged CCE can support IPv6 connections for agent and supervisor Finesse desktops and phones. An IPv6-enabled deployment can use either all IPv6 endpoints or a mix of IPv4 and IPv6 endpoints. Servers that communicate with these endpoints can accept both IPv4 and IPv6 connections. Communication between servers continues to use IPv4 connections.

This chapter contains the configuration procedures that you perform for IPv6-enabled deployments.

## Set Up IPv6 for VOS-Based Contact Center Applications

By default, only IPv4 is enabled for Unified Communications Manager, Cisco Finesse, and Unified Intelligence Center.

If you choose to enable IPv6 on these applications, you must enable it on both the publisher/primary nodes and subscriber/secondary nodes for those applications.

You can use Cisco Unified Operating System Administration or the CLI to enable IPv6.

See the *Solution Design Guide for Cisco Packaged Contact Center Enterprise* at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-technical-reference-list.html> for more information about IPv6 support in Packaged CCE deployments.

See the *Solution Design Guide for Cisco Unified Contact Center Enterprise* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-enterprise/products-implementation-design-guides-list.html> for more information about IPv6 support in Unified CCE.

### Set Up IPv6 Using Cisco Unified Operating System Administration

To set up IPv6 using Cisco Unified Operating System Administration, perform the following procedure on the primary and secondary VOS servers.

---

**Step 1** Sign into Cisco Unified Operating System Administration on the Publisher/Primary node:.



- Unified Communications Manager and Unified Intelligence Center: `https://<host or IP address of the Publisher or Primary node>/cmplatform`
- Finesse: `https://FQDN of the Primary node:8443/cmplatform`

- Step 2** Navigate to **Settings > IP > Ethernet IPv6**.
- Step 3** Check the **Enable IPv6** check box.
- Step 4** Enter values for **IPv6Address**, **Prefix Length**, and **Default Gateway**.
- Step 5** Check the **Update with Reboot** check box.
- Step 6** Click **Save**.  
The server restarts.
- Step 7** Repeat this procedure on the subscriber/secondary node.

---

### Set Up IPv6 for VOS-Based Applications Using the CLI

To set up IPv6 using the CLI, perform the following procedure on both the primary and secondary VOS servers.

- Step 1** Access the CLI on the VOS server.
- Step 2** To enable or disable IPv6, enter:  
**set network ipv6 service {enable | disable}**
- Step 3** Set the IPv6 address and prefix length:  
**set network ipv6 static\_address *addr mask***  
**Example:**  
`set network ipv6 static_address 2001:db8:2::a 64`
- Step 4** Set the default gateway:  
**set network ipv6 gateway *addr***
- Step 5** Restart the system for the changes to take effect.  
**utils system restart**
- Step 6** To display the IPv6 settings, enter:  
**show network ipv6 settings**

---

### Configure NAT64 for IPv6-Enabled Deployment

NAT64 allows communication between IPv6 and IPv4 networks. For IPv6-enabled deployments, you must set up NAT64 so that supervisors on an IPv6 network can access Unified CCE Administration web tools on an IPv4 network. You can use either Stateful and Stateless NAT64.




**Note** NAT64 is NOT supported on M train IOS. T train is required.

For more information on *Contact Center Enterprise Compatibility Matrix*, see <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-enterprise/products-device-support-tables-list.html>.

For more information, see the Compatibility Matrix for Packaged Contact Center Enterprise at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-device-support-tables-list.html>.

The following example network diagram and interface configuration demonstrates Stateful NAT64 translation between an IPv6 network and an IPv4 network.

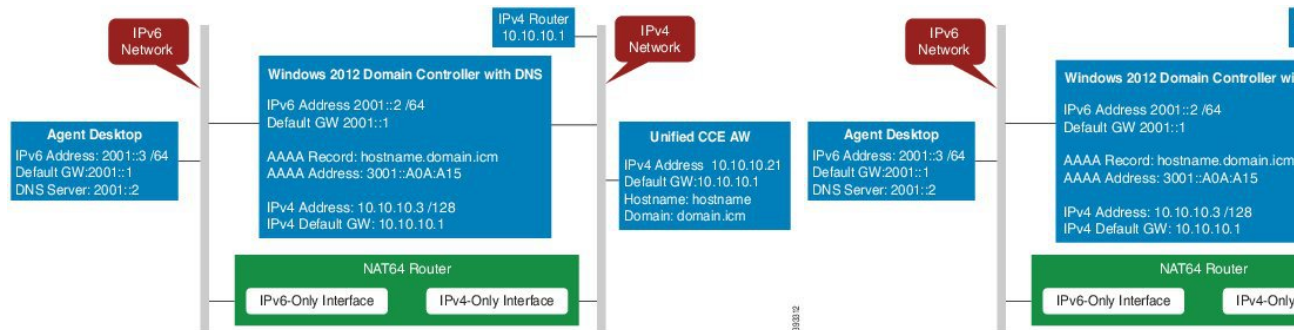

```
interface GigabitEthernet0/0
description ipv4-only interface
ip address 10.10.10.81 255.255.255.128
duplex auto
speed auto
nat64 enable
no mop enabled

interface GigabitEthernet0/1
description ipv6-only interface
no ip address
duplex auto
speed auto
nat64 enable
ipv6 address 2001::1/64
ipv6 enable

ipv6 unicast-routing
ipv6 cef
!
nat64 prefix stateful 3001::/96
nat64 v4 pool POOL1 10.10.10.129 10.10.10.250
nat64 v6v4 list V6ACL1 pool POOL1 overload
ipv6 router rip RIPv6
!
ipv6 router rip RIP

!
ipv6 access-list V6ACL1
permit ipv6 2001::/64 any
```

## Configure DNS for IPv6

To meet the requirement that Unified CCE Administration be accessed by FQDN, a Forward lookup AAAA record for the Unified CCE AW-HDS-DDS servers and any External HDS servers must be created in DNS.


To meet the requirement that Unified CCE Administration be accessed by FQDN, a Forward lookup AAAA record for the AW must be created in DNS.

The steps in this procedure are for a Windows DNS server.

- 
- Step 1** In Windows, navigate to **Administrative Tools > DNS**. This opens the DNS Manager.
  - Step 2** In the Forward lookup zone, navigate to your deployment's domain name.
  - Step 3** Right-click the domain name and select **New Host (A or AAAA)**.
  - Step 4** In the New Host dialog box, enter the computer name and IP address of the Unified CCE AW-HDS-DDS servers and any External HDS servers. Click **Add Host**.
  - Step 5** In the New Host dialog box, enter the computer name and IP address of the AW. Click **Add Host**.
- 

### Determine IPv6 Translation of IPv4 Address for DNS Entry

You can determine the IPv6 address needed for the AAAA DNS record by running a ping command on any Windows machine using mixed notation. Type “ping -6” followed by your IPv6 Nat64 Prefix, two colons, and then the IPv4 address.

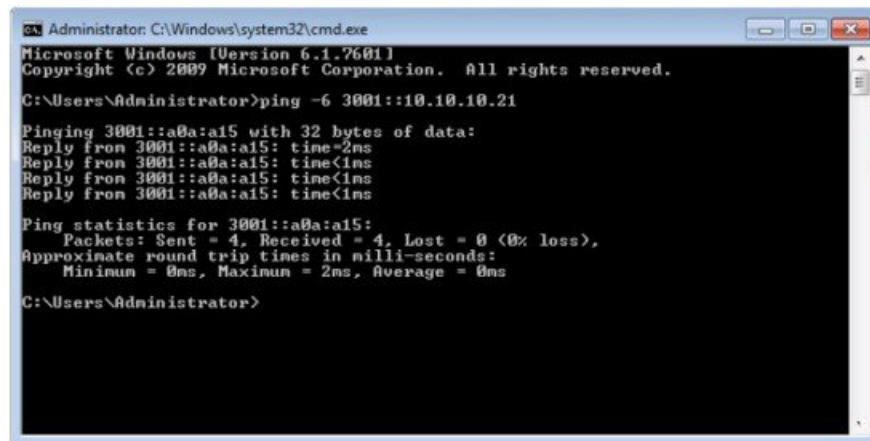

```

Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping -6 3001::10.10.10.21

Pinging 3001::a0a:a15 with 32 bytes of data:
Reply from 3001::a0a:a15: time=2ms
Reply from 3001::a0a:a15: time<1ms
Reply from 3001::a0a:a15: time<1ms
Reply from 3001::a0a:a15: time<1ms

Ping statistics for 3001::a0a:a15:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 2ms, Average = 0ms

C:\Users\Administrator>
  
```

In the ping response, the IPv4 address is converted to the hexadecimal equivalent. Use this address in your static AAAA record.




---

**Note** Optionally, DNS64 can be used in place of static DNS entries. Use of DNS64 helps facilitate translation between IPv6 and IPv4 networks by synthesizing AAAA resource records from A resource records.

---

## Configure IPv6 on Unified CVP Call Server

For IPv6-enabled deployments, you must add an IPv6 address to your Unified CVP Call Server's existing network interface.

Perform this procedure only if you have an IPv6-enabled environment.

- 
- Step 1** On the Unified CVP Call Server, navigate to **Control Panel > Network and Sharing**.
  - Step 2** Click **Ethernet**.
  - Step 3** From the **Ethernet Status** window, select **Properties**.
  - Step 4** Check the **Internet Protocol Version 6 (TCP/IPv6)** check box, and choose **Properties**.
  - Step 5** Choose **Use the following IPv6 address** radio button.
  - Step 6** Enter values in the **IPv6 address**, **Subnet prefix length**, and **Default gateway** fields.
  - Step 7** Click **OK** and restart Windows when prompted.
- 

## Configure Gateways to Support IPv6

For IPv6-enabled deployments, you must configure your Ingress and VXML gateways to enable IPv6 addressing.

### Configure an Interface to Support IPv6 Protocol Stack

This procedure applies to both the Ingress and the VXML gateway.

---

Configure the following on the Gateway:

```
>Enable
>configure terminal
>interface type number
>ipv6 address{ ipv6-address / prefix-length | prefix-name sub-bits / prefix-length}
>ipv6 enable
```

---

### Enable ANAT in Ingress Gateway

---

Configure the following on the Gateway:

```
>conf t
>voice service voip
>SIP
>ANAT
>bind control source-interface GigabitEthernet0/2
>bind media source-interface GigabitEthernet0/2
```

---

### Enable Dual Stack in the Ingress Gateway

---

Configure the following on the Gateway:

```
>conf t
```

```
>sip-ua
>protocol mode dual-stack preference ipv6
```

---

## Configure IPv6 on Unified Communications Manager

In an IPv6-enabled environment, you must perform the procedures in this section to configure IPv6 on Unified Communications Manager.

### Cluster-Wide Configuration in Unified CM Administration

Perform the following procedure to set IPv6 as the addressing mode preference for media and signaling cluster-wide.

- 
- Step 1** From **Cisco Unified CM Administration**, choose **System > Enterprise Parameters > IPv6 Configuration Modes** to configure the cluster-wide IPv6 settings for each Unified Communications Manager server.
  - Step 2** From the **Enable IPv6** drop-down list, choose **True**.
  - Step 3** From the **IP Addressing Mode Preference for Media** drop-down list, choose **IPv6**.
  - Step 4** From the **IP Addressing Mode Preference for Signaling** drop-down list, choose **IPv6**.
  - Step 5** From the **Allow Auto-configuration for Phones** drop-down list, choose **Off**.
  - Step 6** Save your changes.
- 

### Transcoding

In an IPv6-enabled environment, a transcoder is required for the following scenarios:

- An agent logged in to an IPv6 endpoint needs to send or receive transfers from an agent logged in to an IPv4 endpoint.
- An agent logged in to an IPv6 endpoint needs to connect to a VXML Gateway for self service.

### Add a Common Device Configuration Profile in Unified Communications Manager

In an IPv6-enabled environment, you may have both IPv4 and IPv6 devices.

Perform the following procedure to add an IPv4, IPv6, or dual stack common device configuration profile in Unified Communications Manager.

- 
- Step 1** From **Cisco Unified CM Administration**, choose **Device > Device Settings > Common Device Configuration**.
  - Step 2** Click **Add New** and enter the name of the new common device configuration profile.
  - Step 3** From the **IP Addressing Mode** drop-down list:
    - To add an IPv6 common device configuration profile in Unified Communications Manager, choose **IPv6 only**.
    - To add an IPv4 common device configuration profile in Unified Communications Manager, choose **IPv4 only**.
    - To add a dual stack common device configuration profile in Unified Communications Manager, choose **IPv4 and IPv6**. Then choose **IPv4** from the **IP Addressing Mode Preference for Signaling** drop-down list.

**Step 4** Save your changes.

---

### Associate the Common Device Configuration Profile with Gateway Trunk

Perform the following procedure to associate the common device configuration profile with the Gateway trunk. This procedure applies to the Ingress Gateway.

---

**Step 1** From **Cisco Unified CM Administration**, choose **Device > Trunk**.

**Step 2** Click **Find**.

Choose the trunk profile that you want to view.

**Step 3** From the **Common Device Configuration** drop-down list:

- To associate the IPv6 common device configuration profile with the Gateway trunk, choose the IPv6 common device configuration profile.
- To associate the IPv4 common device configuration profile with the Gateway trunk, choose the IPv4 common device configuration profile.

**Note** Unified CM gateway trunk supports only an IPv4 or IPv6 trunk. You cannot associate a dual stack common device configuration profile to a Unified CM gateway trunk.

**Step 4** Enter the IPv6 address in the **Destination Address IPv6** field.

**Note** Unified CM to Gateway trunk supports only standard SIP Profile and does not support ANAT enabled dual-stack SIP trunk.

**Step 5** Save your changes.

---

### Associate the Common Device Configuration Profile with an IPv4 or IPv6 Phone

**Step 1** From **Cisco Unified CM Administration**, choose **Device > Phone**.

**Step 2** Click **Find**.

Choose the trunk profile that you want to view.

**Step 3** From the **Common Device Configuration** drop-down list: choose the IPv6 common device configuration profile.

- To associate the IPv6 common device configuration profile to an IPv6 phone, choose the IPv6 common device configuration profile.
- To associate the IPv4 common device configuration profile to an IPv4 phone, choose the IPv4 common device configuration profile.

**Step 4** Save your changes.

---

### Associate a SIP Profile in Unified CM

In an IPv6-enabled deployment, you must associate a SIP profile with the trunk you configured for Unified CVP.

**Step 1** From **Cisco Unified CM Administration**, choose **Device > Trunk**.

**Step 2** Click **Find**. Choose the trunk profile that you want to view.

**Step 3** From the **SIP Profile** drop-down list, choose the SIP Profile you created.

**Note** For more information on how to create a SIP Profile, see

Add a SIP Profile in Unified CM section in the Cisco Packaged Contact Center Enterprise Administration and Configuration Guide at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-maintenance-guides-list.html>.

**Step 4** Save your change.

### Associate the Dual Stack Common Device Configuration Profile with SIP Trunk

**Step 1** From **Cisco Unified CM Administration**, choose **Device > Trunk**.

**Step 2** Click **Find**. Choose the trunk profile that you want to view.

**Step 3** From the **Common Device Configuration** drop-down list, choose the Dual Stack Common Device Configuration Profile.

**Note** For more information on how to add a Dual Stack Common Device Configuration Profile, see [Add a Common Device Configuration Profile in Unified Communications Manager, on page 61](#).

**Step 4** Save your change.

## Packaged CCE 4000 Agents Deployment

Follow this sequence to configure components for Packaged CCE 4000 Agents deployment.

Sequence	Task
1	Generate CSR and upload <a href="#">CA Certificates</a> Or Generate and import <a href="#">Self-signed Certificates</a>
2	<a href="#">Configure CCE Component, on page 64</a>
3	<a href="#">Configure Cisco Unified Customer Voice Portal, on page 84</a>
4	If Media Server is external, <a href="#">Configure Media Server</a>
5	<a href="#">Configure Cisco Unified Communications Manager, on page 87</a>
6	<a href="#">Configure Cisco Unified Intelligence Center, on page 91</a>
7	<a href="#">Configure Cisco Finesse, on page 92</a>
8	<a href="#">Configure Live Data, on page 98</a>

Sequence	Task
9	<a href="#">Configure Cisco Identity Service</a>
10	<a href="#">Configure Cisco Unified Customer Voice Portal Reporting Server, on page 45 (optional)</a>
11	<a href="#">Configure VVB, on page 48 (optional)</a>
12	<a href="#">Configure Cisco IOS Enterprise Voice Gateway, on page 49</a>
13	<a href="#">Configure IPv6, on page 56</a>
14	<a href="#">Configure Enterprise Chat and Email (ECE) (optional)</a> <a href="#">Email and Chat</a>

## Configure CCE Component

Follow this sequence to configure components for Packaged CCE 4000 Agents deployment.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components, on page 3</a>
2	<a href="#">Set up Organizational Units, on page 4</a>
3	<a href="#">Configure Rogger, on page 64</a>
4	<a href="#">Configure AW-HDS-DDS, on page 69</a>
5	<a href="#">Start Unified CCE Services, on page 68</a>
6	If you have PG VMs installed, <a href="#">Add Unified CCE Instance, on page 79</a> on all PG VMs
7	<a href="#">Configure Packaged CCE Deployment Type, on page 72</a>
8	<a href="#">Configure Cisco Unified Contact Center Enterprise PG, on page 80</a>
9	For configuration using Configuration Manager, see <a href="#">Packaged CCE 4000 and 12000 Agent Supported Tools</a>

## Configure Rogger

Follow this sequence to configure Rogger for Packaged CCE 4000 Agents deployment.

Sequence	Task
1	<a href="#">Add Unified CCE Instance, on page 79</a>
2	<a href="#">Create Logger Database, on page 65</a>



Sequence	Task
3	To use Outbound Option, see <a href="#">Create Outbound Option Database, on page 66</a>
4	<a href="#">Add Logger Component to Instance, on page 66</a>
5	<a href="#">Add Router Component to Instance, on page 67</a>
6	<a href="#">Cisco SNMP Setup, on page 25</a> (optional)

## Create Logger Database

Perform this procedure on the Side A and Side B Logger/Rogger VM.

- 
- Step 1** From Unified CCE Tools, open the ICMDDBA tool, and click **Yes** at any warnings that display.
- Step 2** Navigate to **Server > Instances**.
- Step 3** Right-click the instance name and choose **Create** to create the logger database.
- Step 4** In the Select Component dialog box, choose the logger you are working on (Logger A or Logger B). Click **OK**.
- Step 5** At the prompt, “SQL Server is not configured properly. Do you want to configure it now?”, click **Yes**.
- Step 6** On the Configure page, in the SQL Server Configurations pane check **Memory (MB) and Recovery Interval**. Click **OK**.
- Step 7** On the Stop Server page, click **Yes** to stop the services.
- Step 8** In the Select Logger Type dialog box, choose **Enterprise**. Click **OK** to open the Create Database dialog box.
- Step 9** Create the Logger database and log as follows:
- In the DB Type field, choose the Side (A or B).
  - In the region field, choose your region.
  - In the Create Database dialog box, click **Add** to open the Add Device dialog box.
  - Click **Data**.
  - Choose the drive on which you want to create the database, for example, the E drive.
  - For the **Size** field, consider whether to choose the default (which is 1.4GB, a fairly minimal size) or calculate a value appropriate for your deployment by using the Database Size Estimator Tool. If you calculate the value, enter it here.
- Note** You can use the Database Size Estimator Tool only after the database is created.
- Click **OK** to return to the Create Database dialog box.
  - Click **Add** again.
  - In the Add Device dialog box, click **Log**.
  - Choose the drive where you created the database.
  - In the **Size** field, choose the default setting or, if you have calculated an appropriate size for your deployment, enter that value.
  - Click **OK** to return to the Create Database dialog box.
- Step 10** In the Create Database dialog box, click **Create**, then click **Start**.
- Step 11** When you see the successful creation message, click **OK** and then **Close**.
-

## Create Outbound Option Database

Outbound Option uses its own SQL database on the Logger. Perform the following procedure on the Side A Logger only.

- 
- Step 1** Open the ICMDDBA tool and click **Yes** to any warnings.
  - Step 2** Navigate to **Servers > <Logger Server> > Instances > <Unified CCE instance> > LoggerA**. Right-click the instance name and select **Database > Create**.
  - Step 3** On the Stop Server message, click **Yes** to stop the services.
  - Step 4** In the Create Database dialog box, click **Add** to open the Add Device dialog box.
  - Step 5** Click **Data**, and choose the drive on which you want to create the database, for example, the E drive. In the database size field, you can choose to retain the default value or enter a required value.
  - Step 6** Click **OK** to return to the Create Database dialog box.
  - Step 7** In the Add Device dialog box, click **Log**. Choose the desired drive. Retain the default value in the log size field and click **OK** to return to the Create Database dialog box.
  - Step 8** In the Create Database dialog box, click **Create**, and then click **Start**. When you see the successful creation message, click **OK** and then click **Close**.

For more information about configuring Outbound Options, see the *Outbound Option Guide for Unified Contact Center Enterprise* guide at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-enterprise/products-user-guide-list.html>

---

## Add Logger Component to Instance

Perform this procedure on the Side A and Side B Loggers.

- 
- Step 1** Open the Web Setup tool.
  - Step 2** Choose **Component Management > Loggers**. Click **Add**, and then choose the instance.
  - Step 3** On the Deployment page, select the Logger (A or B). Click **Duplexed**, and then click **Next**.
  - Step 4** On the Central Controller Connectivity page, enter the host names for Sides A and B for the **Router Private Interface** and **Logger Private Interface**. Then, click **Next**.
  - Step 5** Check **Enable Historical/Detail Data Replication**.
  - Step 6** On the Additional Options page, click **Display Database Purge Configuration Steps**.
  - Step 7** Click the **Enable Outbound Option** check box.

**Note** If this Logger is being added for a Rogger server, where there are two IP addresses that are configured on the public Network Interface Card (for IP-based prioritization), uncheck "Register this connection's addresses in DNS" for the public ethernet card. In addition, ensure that there is only one A-record entry in the DNS server corresponding to the host name of the server, which maps to the general priority IP address. This is necessary for processes like the campaign manager and replication running as part of the Logger service, to listen on the right interface IP address for client connections.

- Step 8** If you enable High Availability, enter the **Active Directory Account Name** that the opposite side logger runs under or a security group that includes that account. For example, if you are running Websetup on the logger on Side A, enter the name of the Active Directory account (or security group) that is run on Side B logger.

**Step 9** Select the **Syslog** box to enable the Syslog event feed process (cw2kfeed.exe).

**Note** The event feed is processed and sent to the Syslog collector only if the Syslog collector is configured. For more information about the Syslog event feed process, see the *Serviceability Guide for Cisco Unified ICM/Contact Center Enterprise* at <http://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-enterprise/products-installation-and-configuration-guides-list.html>.

**Step 10** Click **Next**.

**Step 11** On the Data Retention page, modify the Database Retention Configuration table:

a) For these tables, set the retention period to 40 days:

- Application\_Event
- Event
- Network\_Event
- Route\_Call\_Detail
- Route\_Call\_Variable
- Termination\_Call\_Detail
- Termination\_Call\_Variable

b) Accept the default settings for all other tables. If your contact center requires access to any of that data for a longer period, enter an appropriate value.

**Step 12** Click **Next**.

**Step 13** On the Data Purge page, configure purges for a day of the week and a time when there is low demand on the system.

**Step 14** Accept the default **Automatic Purge at Percent Full**.

**Step 15** Click **Next**.

**Step 16** In the **Summary** window select the **Create Service Account** option, complete the following steps:

a) Enter the domain user.

Verify that the user is created in the specified domain.

b) Enter the valid password.

c) Review the Summary and click **Finish**.

**Caution** Use the same domain user account for all the distributor and logger services. If you want to use different domain accounts for the logger and the distributor, ensure that the distributor service user account is added to the local logger `UcceService` groups on Side A and Side B.

---

## Add Router Component to Instance

Perform this procedure for Side A and Side B Routers.




---

**Note** To fulfill the virtual memory requirement for Router in 48000 deployment, you must configure the Router service on both Side A and Side B to launch the Router process (router.exe) as a 64-bit application. To change your Router process build architecture from 32-bit to 64-bit, install 12.6(2) ES4 and perform the steps mentioned in the Readme file on the Software Downloads page. You must deploy 12.6(2) ES25 for logger.

---

- Step 1** In the Web Setup tool, select **Component Management > Routers**.
- Step 2** Click **Add** .
- Step 3** On the **Deployment** page, choose the current instance.
- Step 4** In the **Deployment** dialog, select the appropriate side.
- Step 5** Click **Duplexed**, and then click **Next**.
- Step 6** In the **Router Connectivity** dialog, configure the Private Interface and Public Interfaces. Click **Next**.

**Note** For the address input fields, use Fully Qualified Domain Names instead of IP addresses.

When there are two IP addresses configured on the public Network Interface Card (for IP-based prioritization), manually add two A-records on the DNS server. One A-record is for the high priority IP address and the other one is for the general priority IP address. The host part of the two DNS entries should be different from the hostname of Windows server. Use the new DNS entries to configure the interfaces. This note applies to the Router and to all PG machines.

- Step 7** Leave the **Enable Peripheral Gateways** field blank, and click **Next**.
- Step 8** In the **Router Options** dialog, the **Enable Quality of Service (QoS)** is enabled by default. Click **Next**.  
On the Router Quality of Service page, you see preconfigured values for the Router QoS for the Private Network. These values only appear if you selected a Side A Router. You can change the values in the DSCP fields if necessary. Keep QoS enabled for all Unified CCE Private network traffic. For most deployments, disable QoS for the public network traffic. For more details, refer to the appropriate section in the *Solution Design Guide for Cisco Packaged Contact Center Enterprise*, at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-technical-reference-list.html>.
- Step 9** In the **Router Quality of Service** dialog, click **Next**.
- Step 10** In the **Summary** dialog, make sure that the Router summary is correct, then click **Finish**.
- 

## Start Unified CCE Services

The Unified CCE components run as a Windows service on the host computer. You can start, stop, or cycle these services from the **Unified CCE Service Control tool** on the desktop.




---

**Note** This procedure is required for activating Unified CCE services. However, you must postpone this task until you install Unified CCE components in all virtual machines given in the deployment model.

---

- Step 1** On each Unified CCE Server machine, open **Unified CCE Service Control**.

**Step 2** Start the **Unified CCE component** services.

## Configure AW-HDS-DDS

Follow this sequence to configure AW-HDS-DDS for Packaged CCE 4000 Agents deployment.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components, on page 3</a>
2	<a href="#">Add Unified CCE Instance, on page 79</a>
3	<a href="#">Create HDS Database, on page 69</a>
4	<a href="#">Add Administration and Data Server Component to Instance, on page 70</a>
5	<a href="#">Configure ICM Database Lookup, on page 106 (optional)</a>
6	<a href="#">Cisco SNMP Setup, on page 25 (optional)</a>

### Create HDS Database

Perform this procedure on the Administration & Data Server on which you want to create the HDS database.

**Step 1** Open the ICMDDBA tool, and click **Yes** at any warnings that display.

**Step 2** Navigate to **Servers > Instances**.

**Step 3** Right-click the instance name and choose **Create**.

**Step 4** In the Select Component dialog box, choose **Administration & Data Server**. Click **OK**.

**Step 5** At the prompt “SQL Server is not configured properly. Do you want to configure it now?”, click **Yes**.

**Step 6** On the Configure dialog box, click **OK**.

**Step 7** On the Select AW Type dialog box, choose **Enterprise**. Click **OK** to open the Create Database dialog box.

**Step 8** Create the HDS database as follows:

- a) From the DB Type drop-down list, choose **HDS**.
- b) Click **Add**.
- c) On the Add Device dialog box, select **Data**.
- d) From the Available Drives list, choose the drive on which you want to install the database.
- e) In the Size field, you can leave the default value or enter an appropriate size for your deployment.

**Note** You can use the Database Size Estimator Tool to calculate the appropriate size for your deployment.

- f) Click **OK** to return to the Create Database dialog box.
- g) Click **Add**.
- h) On the Add Device dialog box, select **Log**.
- i) From the Available Drives list, choose the drive on which you created the database.
- j) In the Size field, you can leave the default value or enter an appropriate size for your deployment.
- k) Click **OK** to return to the Create Database dialog box.

- Step 9** On the Create Database dialog box, click **Create** and then click **Start**.
- Step 10** When you see the successful creation message, click **OK** and then click **Close**.

---

## Add Administration and Data Server Component to Instance

---

- Step 1** Open the Web Setup tool.
- Step 2** Select **Component Management > Administration & Data Servers**. Click **Add**.
- Step 3** On the **Deployment** page, choose the current instance.
- Step 4** On the **Add Administration & Data Servers** page, configure as follows:
- Click **Enterprise**.
  - Select the deployment size:
  - Click **Next**.
- Step 5** Select the radio button for your deployment size (either Small to Medium or Large).
- Note** For deployment size definitions and guidelines, see the *Solution Design Guide for Cisco Unified Contact Center Enterprise*.
- Step 6** Click **Next**.
- Step 7** In a Small to Medium Deployment page, select the radio button for your preferred option.
- The three options from which to select are:
- Administration Server, Real-time and Historical Data Server and Detail Data Server (AW-HDS-DDS)
  - Administration Server and Real-time Data Server (AW)
  - Configuration-Only Administration Server
- Note** If you select AW-HDS-DDS, you must also specify Enable Historical Detail Data Replication during Logger setup.
- Note** Before you select a role that includes Historical Database Server (HDS), you must deploy an HDS database on this instance by running the Cisco Unified Intelligent Contact Management Database Administration Tool (ICMDBA) on the local machine.
- Step 8** Click **Next**.
- Step 9** On the Server Role in a Large Deployment page, select the radio button for your preferred option.
- The four options from which to select are:
- Administration Server and Real-time and Historical Data Server (AW-HDS)
  - Historical Data Server and Detail Data Server (HDS-DDS)
  - Administration Server and Real-time Data Server (AW)
  - Configuration-Only Administration Server
- Note** If you select AW-HDS or HDS-DDS, you must also specify Enable Historical Detail Data Replication during Logger setup.
- Note** Before you select a role that includes Historical Database Server (HDS), you must deploy an HDS database on this instance by running ICMDBA on the local machine.

**Step 10** Click **Next**.

**Step 11** On the next page of the wizard, enter connectivity information between Primary and Secondary Administration and Data servers.

**Note** Each site has at least one and usually two Administration & Data Servers that serve as real-time data Administration & Data Servers for the site. The primary Administration & Data Server maintains an active connection to the real-time server through which it receives real-time data. If the site has two Administration & Data Servers, Administration Clients are configured to automatically switch to a secondary Administration & Data Server if the first Administration & Data Server becomes non-functional for any reason. The secondary Administration & Data Server also maintains connections to the real-time server; however, these connections remain idle until needed. The secondary Administration & Data Server uses the primary Administration & Data Server, as their source for the real-time feed.

Indicate whether the server being setup is the Primary or Secondary Administration & Data Server at the site, by clicking on the radio button.

Next enter the host name or IP address of the Primary and Secondary Administration and Data Server at the site. The Secondary Administration and Data Server field is mandatory. If there is no secondary Administration and Data Server being deployed at the site, then the same host name as that of the primary needs to be provided in this field.

Each primary and secondary pair must have its own Site Name, and the Site Name must be exactly the same on both Administration & Data Servers for them to be logically viewed as one.

**Step 12** On the Database and Options page, configure as follows:

- a) In the **Create Database(s) on Drive** field, choose C.
- b) Uncheck the **Configuration Management Service (CMS) Node** check box.
- c) Check the **Internet Script Editor (ISE) Server** (optional) check box.
- d) Click **Next**.

**Step 13** On the Central Controller Connectivity page, configure as follows:

**Note** For Packaged CCE 4000 Agents deployment, the IP address of Router and Logger is same.

- a) For **Router Side A**, enter the Router Side A IP address.
- b) For **Router Side B**, enter the Router Side B IP address.
- c) For **Logger Side A**, enter the Logger Side A IP address.
- d) For **Logger Side B**, enter the Logger Side B IP address.
- e) Enter the **Central Controller Domain Name**.
- f) Based on the Reference Design of your deployment type, distribute your AW-HDS and HDS-DDS VMs on Side A or Side B by selecting **Central Controller Side A Preferred** or **Central Controller Side B Preferred**. For details on the Reference Designs, see the *Solution Design Guide for Cisco Packaged Contact Center Enterprise* at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-technical-reference-list.html>.
- g) Click **Next**.

**Step 14** In the **Summary** window select the Create Service Account option, and complete the following steps:

- a) Create a domain user account. Enter the created domain user.
- b) Enter the valid password.
- c) Review the Summary and click **Finish**.

**Caution** Use the same domain user account for all the distributor and logger services. If you want to use different domain accounts for the logger and the distributor, ensure that the distributor service user account is added to the local logger `UcceService` groups on Side A and Side B.

## Configure Packaged CCE Deployment Type

When you configure the Packaged CCE 4000 Agents and 12000 Agents deployment types, you must add a main site. A main or remote site can have zero or more peripheral sets associated with it. Peripheral set is a collection of all components (like Finesse, CVP, and so on) that are dependent on peripheral gateway (including the peripheral gateway itself). For information on how to add peripheral sets, see [Add and Maintain Peripheral Set](#).

You can add a remote site even with a single VVB. This is helpful in getting control over the traffic, and keeping it local to the same data center.

For example, PSTN delivers SIP trunk to both the Data Centers (DCs). You must retain the traffic local to each DC. If the traffic is delivered to DC1, select the VVB and Nuance Speech Server (NSS) from DC1. If the traffic is delivered to DC2, select the VVB and NSS from DC2. This is achieved by adding a remote site only with VVB. From the VVB, NSS points to the SPOG.

### Add and Maintain Main Site in 4000 Agents or 12000 Agents Deployment Type

- Step 1** Navigate to the **Unified CCE Administration > Overview > Infrastructure Settings > Deployment Settings**.
- Step 2** Click the gear icon in the **Deployment Type**.  
The **Configure your deployment** wizard opens.
- Step 3** Select the deployment type as *Packaged CCE: 4000 Agents* or *Packaged CCE: 12000 Agents* from the drop-down list.
- Step 4** Use the **Download Template** to get the CSV template for the selected deployment type.
- Step 5** Fill the particulars in the file and save it.

**Table 2: CSV Template Details**

Column	Description	Required?	Permissible Values
name	Unique identifier for the machine	Yes	Name must start with an alphabet. Maximum length is limited to 128 characters. Valid characters are a-z, A-Z, 0-9, dot (.), underscore (_), or hyphen (-).



Column	Description	Required?	Permissible Values
machineType	MachineType Enum name	Yes	

Column	Description	Required?	Permissible Values
			<p>Mandatory machines are:</p> <ul style="list-style-type: none"> <li>• CCE_ROGGER (applicable for 4000 Agents deployment)</li> <li>• CCE_ROUTER (applicable for 12000 Agents deployment)</li> <li>• CCE_LOGGER (applicable for 12000 Agents deployment)</li> <li>• CCE_AW</li> <li>• CUIC_PUBLISHER</li> <li>• CUIC_SUBSCRIBER</li> <li>• LIVE_DATA</li> <li>• IDS_PUBLISHER</li> <li>• IDS_SUBSCRIBER</li> </ul> <p>Optional machines:</p> <ul style="list-style-type: none"> <li>• CCE_PG</li> <li>• CVP</li> <li>• FINESSE_PRIMARY</li> <li>• FINESSE_SECONDARY</li> <li>• CM_PUBLISHER</li> <li>• CM_SUBSCRIBER</li> <li>• HDS</li> <li>• ECE (refers to ECE Data Server VM for ECE 400 agents and Services Server VM for ECE 1500 agents)</li> <li>• ECE_WEB_SERVER</li> <li>• CVP_REPORTING</li> <li>• GATEWAYS</li> <li>• CVVB</li> <li>• CUSP</li> <li>• CUSTOMER_COLLABORATION_PLATFORM</li> <li>• THIRD_PARTY_MULTICHANNEL</li> </ul>

Column	Description	Required?	Permissible Values
			<ul style="list-style-type: none"> <li>MEDIA_SERVER</li> <li>THIRD_PARTY_GATEWAY</li> </ul>
publicAddress	Public address	Yes	Valid IP address or hostname
connectionInfo	Connection information of the machine	Required for CM_PUBLISHER, FINESSE_PRIMARY, ECE_WEB_SERVER, CVP, CVP_REPORTING, CUSP, GATEWAY and LIVE_DATA	<p>Enter the username and password in the following format:  <code>userName=&lt;user&gt;&amp;password=&lt;password&gt;</code></p> <p>For more information on the credentials of each component, see <a href="#">Table 1</a>.</p> <p>Enabling CVP as a Media Server and configuring FTP is optional.</p> <p>Append the Media Server and FTP attributes to the username and password in the following format:</p> <pre>userName=&lt;user&gt;&amp;password=&lt;password&gt;; mediaServer=&lt;true or false&gt;&amp;ftpUserName=&lt;ftp_username&gt; &amp;ftpPassword=&lt;ftp_password&gt; &amp;ftpPort=&lt;ftp_portnumber&gt;</pre> <p>For more information on the FTP attributes, see FTP Section in the <a href="#">Add Media Server as External Machine</a>.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Replace Ampersand (&amp;) or equal sign (=) in usernames or passwords with their respective URL encoded values "%26" or "%3D".</li> <li>Semicolon (;) delimits the Windows Administration credentials from FTP credentials.</li> <li>You can configure FTP only if CVP is enabled as a Media Server.</li> </ul>
privateAddress	Private address	Required for ROgger, ROUTER, LOGGER, and PG	Valid IP address or hostname
peripheralSetName	Peripheral set name	Required for PG, CUCM, Finesse, CVP	Name can start with an alphabet. Maximum length is limited to 10 characters. Valid characters are a-z, A-Z, 0-9, dot (.), or an underscore (_).
side	Side information	Yes	sideA sideB

**Step 6** Upload the file and click **Next**.

**Step 7** Wait for validation to be completed.

During the validation, tasks are performed depending on the components defined in the CSV template. For more information about the tasks, see [Automated Initialization Tasks for 4000 and 12000 Agent Deployments, on page 76](#).

**Note** • If any of the performed tasks fails, then all the tasks are reverted.

If validation fails, then click **Back** to fix the issues in the file and upload the file again, else click **Done**.

The main site that is thus created is added to the Inventory page.

### Related Topics

[Automated Initialization Tasks for 4000 and 12000 Agent Deployments, on page 76](#)

#### Automated Initialization Tasks for 4000 and 12000 Agent Deployments

Packaged CCE performs the following tasks during initialization.

Component	Automated Initialization Tasks	Other Dependent Components
Unified CCE PG	Creates the Agent Peripheral Gateway (PG) and PIMs	Cisco Unified Communications Manager (CUCM) and Cisco Finesse
	Creates the Media Routing PG (MR PG), without PIMs	None
	Creates the VRU PG and PIMs	Unified Customer Voice Portal
	Creates the routing client for each peripheral <b>Note</b> <ul style="list-style-type: none"> <li>• Depending on your call flow requirements, create Network VRU labels in the Label list option using the <i>Configuration Manager Tool</i>.</li> <li>• Network VRU Type 10 and Type 2 must be created in the Network VRU Explorer using the Configuration Manager Tool. For more information, <i>see the online help in Configuration Manager Tool</i>.</li> </ul>	None
Unified Customer Voice Portal	<ul style="list-style-type: none"> <li>• Configures the Unified CVP Call Server components</li> <li>• Configures the Unified CVP VXML Server components</li> <li>• Configures the Unified CVP Media Server components</li> </ul>	None
Unified CVP Reporting Server	Configures the Unified CVP Reporting Server components (not applicable for peripheral set)	None
Live Data	Redeploys Lives data	CUCM and Cisco Finesse

## System Inventory for Packaged CCE 4000 Agents and 12000 Agents Deployment

You can access the Inventory after you have completed the change to a Packaged CCE deployment.

Access the Inventory by navigating to the **Unified CCE Administration > Infrastructure > Inventory**.

System Inventory contents are updated when you select or change the deployment type and after regular system scans. If a system scan detects VMs that do not conform to Packaged CCE requirements, the **Configure your deployment** pop-up window opens automatically, detailing the errors. You can access the Inventory again after you have corrected the errors and completed the **Configure your deployment** popup window.

For more details on **Server Status** rules, see the [Monitor Server Status Rules for Packaged CCE 4000 and 12000 Agents Deployments](#), on page 80.



---

**Note** After a Packaged CCE deployment is initialized, you cannot switch to another Packaged CCE deployment type. However, you can switch to a Unified CCE deployment type.

---

Table 3: System Inventory Layout and Actions

Item	Notes	Actions
Set the Principal AW	Only one AW machine can be Principal AW at a time.	<p>Specifying the Principal AW is required. The first SideA AW machine in the CSV file is the principal AW.</p> <p>The Principal AW (Admin Workstation) is responsible for managing background tasks that are run periodically to sync configuration with other solution components, such as SSO management, Smart Licensing, etc.</p> <p>The Principal AW is used by the following features:</p> <ul style="list-style-type: none"> <li>• File Transfer</li> <li>• Context Service Registration</li> <li>• SSO Registration and Enablement</li> <li>• Differential Sync</li> </ul> <p>You can change the Principal AW by selecting a different AW in the Inventory. Set the AW on which you make most of your configuration changes as the Principal AW.</p> <p><b>To set the Principal AW:</b></p> <ol style="list-style-type: none"> <li>1. Click the AW to open the Edit CCE AW window.</li> <li>2. Check the <b>PrincipalAW</b> check box.</li> <li>3. Unified CCE Diagnostic Framework Portico domain, username, and password.</li> </ol> <p>These credentials must be of a domain user who is a local administrator on all the CCE servers and valid on all Unified CCE components in your deployment (the Side A and Side B Unified CCE Roggers, PGs, and AW-HDS-DDSs).</p> <p><b>Note</b> Every time the Active Directory credentials are updated, the credentials configured here must be updated as well.</p> <ol style="list-style-type: none"> <li>4. Click <b>Save</b>.</li> </ol>

Item	Notes	Actions
Set the Principal VVB	Only one of the VVB machines can be a Principal VVB.	<p>Principal VVB is used to configure the Customer Virtual Assistant feature.</p> <p>First added VVB machine into the Inventory is set as the Principal VVB by default. In Upgrade scenario, one of the configured VVBs is set as a Principal VVB.</p> <p>A VVB can be set as a Principal VVB provided its Sync Status is "In Sync" and it supports Customer Virtual Assistant feature.</p> <p>To set a VVB as a Principal VVB, do the following:</p> <ol style="list-style-type: none"> <li>1. Click the VVB to open the <b>Edit VVB</b> window.</li> <li>2. Check the <b>Principal</b> check box.</li> <li>3. Click <b>Save</b>.</li> </ol>
View Statistics	Unified CVP and CVP Reporting Server	<p>You can launch statistics by hovering over the following VMs and clicking the <b>Statistics</b> icon:</p> <ul style="list-style-type: none"> <li>• <b>Unified CVP</b></li> <li>• <b>Unified CVP Reporting</b></li> </ul> <p>For more information, see <a href="#">Unified CVP Statistics</a> and <a href="#">Unified CVP Reporting Statistics</a>.</p>



**Note** If you change the password of any of the Packaged CCE components, you must update the password in the respective VM in the system inventory.

## Add Unified CCE Instance

**Step 1** Open the Unified CCE Web Setup tool from shortcut on your desktop.

**Step 2** Sign in as a domain user with local administrator rights.

**Step 3** Click **Instance Management**, and then click **Add**.

**Step 4** On the **Add Instance** page, from the drop-down list, choose the customer **Facility and Instance**.

**Step 5** Enter an instance number.

The same instance name can occur more than once in a domain, so the instance number provides the uniqueness. The instance number must be between 0 and 24. The instance number must match for the same instance across your entire deployment. For an Enterprise (single instance) deployment, select 0 unless there are reasons to select another value.

**Step 6** Click **Save**.

**Note** These steps of adding instance must be repeated on each Windows Server VM that hosts the Unified ICM component(s).

## Monitor Server Status Rules for Packaged CCE 4000 and 12000 Agents Deployments

In Packaged CCE 4000 and 12000 Agent deployments, the Inventory table displays a status icon right next to the Principal AW and Principal VVB devices. The status icon is:

- Green, if the machine is reachable.
- Red, if the machine is not reachable.



**Note** If any machine in the Inventory is updated, it can take approximately three minutes for the status to appear.

## Configure Cisco Unified Contact Center Enterprise PG



**Note** Repeat the following tasks each time you add the Peripheral Set to the Main Site or Remote Site. See the section "Add and Maintain Peripheral Set" for information on Peripheral Set.

### Configuration Tasks

If the Peripheral Set contains CUCM PG:

[Install Cisco JTAPI Client on PG, on page 80](#)

[Install Cisco JTAPI Client on PG, on page 81](#)

[Set up CTI Server, on page 82](#)

If the peripheral set contains VRU PG, manually restart the CVP Servers.

If the peripheral set contains MR PG, [Add PIMs to the Media Routing Peripheral Gateway](#)

## Install Cisco JTAPI Client on PG

After setting up the Cisco Unified Communications Manager (CUCM) PG, you must install the Cisco JTAPI client. PG uses Cisco JTAPI to communicate with CUCM. Install the Cisco JTAPI client from CUCM Administration.



**Note** Continue with the steps provided in this section if you are installing the JTAPI client for CUCM version earlier than Release 12.5.

To install the JTAPI client for CUCM, Release 12.5 and above, see [Install Cisco JTAPI Client on PG, on page 81](#).



**Before you begin**

Before you install the JTAPI client, ensure that the previous version is uninstalled.

- 
- Step 1** Open a browser window on the PG machine.
- Step 2** Enter the URL for the Unified Communications Manager Administration utility: `http://<Unified Communications Manager machine name>/ccmadmin`.
- Step 3** Enter the username and password that you created while installing and configuring the Unified Communications Manager.
- Step 4** Choose **Application > Plugins**. Click **Find**.
- Step 5** Click the link next to **Download Cisco JTAPI for Windows**. We recommend you to download the 64 bit version. However, if you have already downloaded the 32 bit version, you can proceed to step 7.
- Download the JTAPI plugin file.
- Step 6** Choose **Save** and save the plugin file to a location of your choice.
- Step 7** Open the installer.
- Step 8** In the Security Warning box, click **Yes** to install.
- Step 9** Choose **Next** or **Continue** through the remaining Setup screens. Accept the default installation path.
- Step 10** When prompted for the TFTP Server IP address, enter the CUCM IP address.
- Step 11** Click **Finish**.
- Step 12** Reboot the machine.
- 

*Install Cisco JTAPI Client on PG*

Complete the following procedure only if you are installing JTAPI client to connect to Cisco Unified Communications Manager, Release 12.5 and above.

**Before you begin**

Before you install the JTAPI client, ensure that the previous version is uninstalled.

- 
- Step 1** Open a browser window on the PG machine.
- Step 2** Enter the URL for the Unified Communications Manager Administration utility: `http://<Unified Communications Manager machine name>/ccmadmin`.
- Step 3** Enter the username and password that you created while installing and configuring the Unified Communications Manager.
- Step 4** Choose **Application > Plugins**. Click **Find**.
- Step 5** Click the link next to **Download Cisco JTAPI Client for Windows 64 bit** or **Download Cisco JTAPI Client for Windows 32 bit**.
- Download the JTAPI plugin file.
- Step 6** Choose **Save** and save the plugin file to a location of your choice.
- Step 7** Unzip the JTAPI plugin zip file to the default location or a location of your choice.
- There are two folders in the unzipped folder `CiscoJTAPIx64` and `CiscoJTAPIx32`.

**Step 8** Run the `install64.bat` file in the `CiscoJTAPIx64` folder or run the `install32.bat` file in the `CiscoJTAPIx32` folder.

The default install path for JTAPI client is `C:\Program Files\JTAPITools`.

**Step 9** To accept the default installation path, click Enter and proceed.

Follow the instructions. Click Enter whenever necessary as per the instructions.

The JTAPI client installation completes at the default location. The following message is displayed:

```
Installation Complete.
```

**Step 10** Reboot the machine.

### What to do next



**Note** The default location, where the JTAPI client is installed, also contains the `uninstall64.bat` and `uninstall32.bat` file. Use this file to uninstall this version of the client, if necessary.

### Set up CTI Server

Use the PG Setup tool to set up a CTI Server.



**Note** Only users who are part of the local Administrators group can run Peripheral Gateway setup.

### Add CTI Server Component

**Step 1** Open Peripheral Gateway Setup tool from **Unified CCE Tools** on the desktop.

**Step 2** Click **Add** in the Instance Components section.

The ICM Component Selection dialog box opens.

**Step 3** Click **CTI Server**, and click **OK**.

The CTI Server Properties dialog box opens.

### Set CTI Server Properties

**Step 1** In the CTI Server Properties dialog box, check **Production mode** and **Auto start at system startup** unless your Unified CCE support provider tells you otherwise. These settings set the CTI Server Service startup type to Automatic, so the CTI Server starts automatically when the machine starts up.

**Step 2** Check the **Duplexed CTI Server** option if you are configuring redundant CTI Server machines.

- Step 3** In the CG Node Properties section, the numeric portion of the CG node **ID** must match the PG node ID (for example, CG 1 and PG 1).
- Step 4** The **ICM system ID** is the Device Management Protocol (DMP) number of the PG associated with the CTI Gateway. Generally this number is the number associated with the CG ID in step 3.
- Step 5** If the CTI Server you add is duplexed, specify which **Side** you are setting up: Side A or Side B. If the CTI Server is simplex, choose Side A.
- Step 6** Click **Next**.  
The CTI Server Component Properties dialog box opens.

### Set CTI Server Component Properties

The CTI Server Component Properties dialog box supports the following modes of connections:

- **Secured and Non-Secured Connection (Mixed-mode):** Allows secured and non-secured connection between the CTI Server and the CTI clients.
- **Secured-Only Connection:** Allows secured connection between the CTI Server and the CTI clients.



**Important** Non-Secured only mode is not supported.



**Note** To enable secured connection between the components, ensure to complete the security certificate management process.

For more information, see the chapter *Certificate Management for Secured Connections* in *Security Guide for Cisco Unified ICM/Contact Center Enterprise* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-contact-center-enterprise/products-installation-and-configuration-guides-list.html>.

In the CTI Server Component Properties dialog box, setup automatically displays the default **Secured Connection Port** and the **Non-Secured Connection Port** values. Use these values or change them to the required port numbers. CTI clients use these ports to connect to the CTI Server.

If you have multiple CTI servers running on a single machine, each CTI server must use a different port number set for *Secured connection* and *Mixed-mode connection*.

- Step 1** Select the appropriate connection type.
- For *Secured Connection*, check the **Enable Secure-Only Mode** check box.  
This option disables the **Non-Secured Connection Port** field.
  - For *Mixed-mode connection*, ensure that the **Enable Secure-Only Mode** check box is unchecked.  
This is the default connection mode.

- Step 2** To ensure that an agent is logged in to the client before the client receives events from the CTI Server, check the **Agent Login Required for Client Events** check box. This ensures that the clients are prevented from accessing data for other agents.
- Step 3** Click **Next**.
- The CTI Server Network Interface Properties dialog box opens.

---

### Set CTI Server Network Interface Properties

- Step 1** In the CTI Server Network Interface Properties dialog box, in the **PG public interfaces** section, enter the public network addresses for the PGs associated with the CTI Server.
- Step 2** In the **CG private interfaces** section, enter the private network addresses of the CTI Server.
- Step 3** In the **CG visible interfaces** section, enter the public network addresses of the CTI Server.
- Step 4** Click **Next**.
- The Check Setup Information window opens.

---

### Complete CTI Server Setup

- Step 1** In the Check Setup Information window, ensure that the settings displayed are as you intended. If you want to modify any settings before proceeding, use the **Back** button.
- Step 2** When the settings are correct, click **Next**.
- Step 3** The final screen displays and asks whether you want to start the Node Manager now.
- Step 4** Click **Finish** to exit setup (and optionally start the Node Manager).
- If you choose to start it, the Node Manager automatically starts the other Unified CCE processes on the CTI Server.

## Configure Cisco Unified Customer Voice Portal

The following table outlines the Cisco Unified Customer Voice Portal (CVP) configuration tasks for Packaged 4000 Agents deployment or 12000 Agents deployment.



**Note** The CVP configurations are site specific. Side A and Side B configurations per site must be the same.

### Configuration Tasks

To secure communication between Call Server and ICM, see [Secure Flow Communication, on page 28](#).

For more information about securing CVP communication, see *Configuration Guide for Cisco Unified Customer Voice Portal* at <https://www.cisco.com/c/en/us/support/customer-collaboration/unified-customer-voice-portal/products-installation-and-configuration-guides-list.html>.

<b>Configuration Tasks</b>
<a href="#">CVP Server Services Setup</a>
<a href="#">Configure Media Server</a>
<a href="#">Configure SNMP, on page 85</a>

## Configure SNMP

Use the Simple Network Management Protocol (SNMP) configuration to receive SNMP traps from the Cisco Customer Voice Portal (CVP) server. You can do this configuration in the CVP server using a configuration file.

**Step 1** Log in to the CVP server using Administrator credentials.

**Step 2** Navigate to C:\Cisco\CVP\conf\SNMPD.CNF.

**Step 3** Complete the following parameters to do the SNMP configuration:

**Note** Ensure to enter the parameter values in a single line, without a break.

*Table 4: SNMP configuration parameters*

Parameter	Description	Format
snmpCommunityEntry	Configure the SNMP agent that runs on the Unified CVP device to use the V1/V2 SNMP protocol to communicate with an SNMP management station; add and delete SNMP V1/V2c community strings and associate community strings with the device.	<pre>snmpCommunityEntry &lt;snmpCommunityIndex&gt; &lt;snmpCommunityName&gt; &lt;snmpCommunitySecurityName&gt; &lt;snmpCommunityContextEngineID&gt; &lt;snmpCommunityContextName&gt; &lt;snmpCommunityTransportTag&gt; &lt;snmpCommunityStorageType&gt;</pre> <p>Example:</p> <pre>v2ccvp cvp cvp localSnmpID - - readOnly</pre>
vacmSecurityToGroupEntry	Configure authentication group for V1/V2C SNMP protocol.	<pre>vacmSecurityToGroupEntry &lt;vacmSecurityModel&gt; &lt;vacmSecurityName&gt; &lt;vacmGroupName&gt; &lt;vacmSecurityToGroupStorageType&gt;</pre> <p>Example:</p> <pre>vacmSecurityToGroupEntry snmpv2c cvp v2cNoAuthNoPrivGroup nonVolatile</pre>
snmpNotifyEntry	Configure the SNMP agent that runs on the Unified CVP device to use the V1/V2 SNMP protocol to communicate with an SNMP management station; configure a destination to receive SNMP notifications from an SNMP management station.	<pre>snmpNotifyEntry &lt;snmpNotifyName&gt; &lt;snmpNotifyTag&gt; &lt;snmpNotifyType&gt; &lt;snmpNotifyStorageType&gt;</pre> <p>Example:</p> <pre>snmpNotifyEntry Descvp Descvp-TrapTag trap readOnly</pre>

Parameter	Description	Format
usmUserEntry	Configure the SNMP agent that runs on the Unified CVP device to use the V3 SNMP protocol to communicate with an SNMP management station; add and delete SNMP users and set their access privileges and associate SNMP users with devices.	<pre>usmUserEntry &lt;usmUserEngineID&gt; &lt;usmUserName&gt; &lt;usmUserAuthProtocol&gt; &lt;usmUserPrivProtocol&gt; &lt;usmUserStorageType&gt; &lt;usmTargetTag&gt; &lt;AuthKey&gt; &lt;PrivKey&gt;</pre> <p><b>Example:</b></p> <pre>usmUserEntry localSnmpID cvp usmNoAuthProtocol usmNoPrivProtocol readOnly</pre>
snmpNotifyEntry	Configure the SNMP agent that runs on the Unified CVP device to use the V3 SNMP protocol to communicate with an SNMP management station; configure a destination to receive SNMP notifications from an SNMP management station.	<pre>snmpNotifyEntry &lt;snmpNotifyName&gt; &lt;snmpNotifyTag&gt; &lt;snmpNotifyType&gt; &lt;snmpNotifyStorageType&gt;</pre> <p><b>Example:</b></p> <pre>snmpNotifyEntry Descvp Descvp-TrapTag trap readOnly</pre>
sysLocation	Configure the MIB2 System Group system location settings, and associate the MIB2 System Group with devices.	<pre>&lt;octetString&gt;</pre> <p><b>Example:</b></p> <pre>MIBLoc</pre>
sysContact	Configure the MIB2 System Group system contact and associate the MIB2 System Group with devices.	<pre>&lt;octetString&gt;</pre> <p><b>For example:</b></p> <pre>MIBContact</pre>
snmpTargetAddrEntry	Configure SNMP trap receiver target IP.	<pre>snmpTargetAddrEntry &lt;snmpTargetAddrName&gt; &lt;snmpTargetAddrTDomain&gt; &lt;snmpTargetAddrTAddress&gt; &lt;snmpTargetAddrTimeout&gt; &lt;snmpTargetAddrRetryCount&gt; &lt;snmpTargetAddrTagList&gt; &lt;snmpTargetAddrParams&gt; &lt;snmpTargetAddrStorageType&gt; &lt;snmpTargetAddrTMask&gt; &lt;snmpTargetAddrMMS&gt;</pre> <p><b>Example:</b></p> <pre>snmpTargetAddrEntry targetDesV2-Addr1 snmpUDPDomain 10.100.10.100:0 0 0 \ targetDesV2-TrapTag targetDesV2-TrapParams readOnly 255.255.255.255:0 2048</pre>

Parameter	Description	Format
snmpTargetParamsEntry	Configure the parameters to be used while sending notifications.	<pre>snmpTargetParamsEntry &lt;snmpTargetParamsName&gt; &lt;snmpTargetParamsMPModel&gt; &lt;snmpTargetParamsSecurityModel&gt; &lt;snmpTargetParamsSecurityName&gt; &lt;snmpTargetParamsSecurityLevel&gt; &lt;snmpTargetParamsStorageType&gt;  Example: snmpTargetParamsEntry params1 0 snmpv1 principal noAuthNoPriv nonVolatile</pre>

**Step 4** Save the changes.

**Step 5** Go to *Services* and restart *Cisco CVP SNMP Management*.

## Configure Cisco Unified Communications Manager

The following table outlines the Cisco Unified Communications Manager configuration tasks for Packaged CCE 4000 Agents deployment or 12000 Agents deployment.

Task
<a href="#">Set Up Application User</a>
<a href="#">Configure Fully Qualified Domain Name, on page 32</a>
<a href="#">Configure Cisco Unified Communications Manager Groups, on page 32</a>
<a href="#">Set Up Device Pool</a>
<a href="#">Configure Conference Bridges, on page 33</a>
<a href="#">Configure Media Termination Points, on page 33</a>
<a href="#">Transcoder Configuration in Unified CM and IOS Gateway, on page 33</a>
<a href="#">Configure Media Resource Groups, on page 34</a>
<a href="#">Configure and Associate Media Resource Group List, on page 35</a>
<a href="#">Configure CTI Route Point, on page 35</a>
<a href="#">Configure Ingress Gateways for Locations-based Call Admission Control, on page 36</a>
<a href="#">Add a SIP Profile in Unified CM, on page 36</a>
<a href="#">Configure Trunk, on page 36</a>
<a href="#">Configure Route Group, on page 37</a>

Task
<a href="#">Configure Route List, on page 37</a>
<a href="#">Configure Route Pattern, on page 37</a>
<a href="#">Configure A-Law Codec</a>
<a href="#">Configure SNMP, on page 89</a>
<a href="#">Configure Agent Desk Settings, on page 90</a>

## Set Up Device Pool

Complete the following procedure to configure a device pool.

- 
- Step 1** Choose **System > device pool**.
- Step 2** Click **Add new**.
- Step 3** Provide an appropriate device pool name in **Device Pool Name**.
- Step 4** Select a corresponding Call manager group in **Cisco Unified Communications Manager group**.
- Step 5** Select appropriate **Date/Time Group** and **Region**.
- Step 6** Select an appropriate Media resource group list in **Media Resource Group List**.
- Step 7** Click **Save**.
- 

## Set Up Application User

- 
- Step 1** In Unified Communications Manager, Choose **User Management > Application User**.
- Step 2** In the Application User Configuration window, click **Add New**.
- Step 3** Enter the User ID that is set in the Peripheral Gateway Setup.
- Note** The <site>\_<peripheralsetname>\_pguser is set on the PIM when the Peripheral Set is created.
- Step 4** Enter a password of your choice.
- Note** To change the JTAPI password on the CUCM configuration page:
- Open the peripheral Gateway Setup in PG Machine.
  - Edit the CUCM PG.
  - Set the same password for the user as previously set in Step 4.
- Step 5** Add the application user to the Standard CTI Enabled Group and Role:
- Click **Add to Access Control Group**.
  - Select the **Standard CTI Enabled** group.
  - Select the **Standard CTI Allow Control of Phones supporting Connected Xfer and conf** group.



- d) Select the **Standard CTI Allow Control of Phones supporting Rollover Mode** group.
- e) Click **Add Selected**.
- f) Click **Save**.

**Step 6** Associate the CTI route points and the phones with the application user.

**Step 7** Click **Save**.

---

## Configure A-Law Codec

Complete the following procedure to configure Unified Communications Manager.

---

**Step 1** Click the **System**.

**Step 2** Select **Service Parameters**.

**Step 3** Select a Server.

**Step 4** Select the service as **Cisco Call Manager(Active)**.

**Step 5** Under Clusterwide Parameters (system-location and region), ensure the following:

- **G.711 A-law Codec Enabled** is **Enabled**.
- **G7.11 mu-law Codec Enabled** to **Disabled**.

**Step 6** Click **Save**.

---

## Configure SNMP

**Step 1** Log in to the Cisco Unified Serviceability (<https://hostname of primary server:8443/ccmservice>) using administrator credentials.

**Step 2** Select **SNMP > V1/V2c > Community String**.

**Step 3** From **Server** drop-down list, select the server for which you want to configure a community string and click **Find**.

**Step 4** Click **Add New** to add new community string.

- a) Enter **Community String**.

**Example:**

public.

- b) In **Host IP Addresses Information** field, choose **Accept SNMP Packets from any host**.
- c) From **Access Privileges** drop-down list, select **ReadWriteNotify** option.
- d) Check **Apply to All Nodes** check box to apply community string to all nodes in the cluster.  
Information message will be displayed.
- e) Click **OK**.
- f) Click **Save**.

A message is displayed, that indicates that changes will not take effect until you restart the SNMP primary agent. To continue the configuration without restarting the SNMP primary agent, click **Cancel**. To restart the SNMP primary agent service, click **OK**.

g) Click **OK**.

**Step 5** Select **SNMP > V1/V2c > Notification Destination**.

**Step 6** From **Server** drop-down list, select the server for which you want to configure a notification destination and click **Find**.

**Step 7** Click **Add New** button to add new notification destination.

- a) From **Host IP Addresses** drop-down list, select **Add New**.
- b) In **Host IP Address** field, enter the Prime Collaboration server IP address .
- c) In the **Port Number** field, enter the notification receiving port number.

**Note** Default port number is 162.

- d) In **SNMP Version Information** field, select the SNMP Version V2C.
- e) In **Notification Type Information** field; from **Notification Type** drop-down list, select **Trap**.
- f) In **Community String Information** field; from **Community String** drop-down list, select Community String created in Step 4 from the drop-down list.
- g) Check the **Apply to All Nodes** check box to apply community string to all nodes.  
Information message will be displayed.
- h) Click **OK**.
- i) Click **Insert**.  
A message is displayed, that indicates that changes will not take effect until you restart the SNMP primary agent. To continue the configuration without restarting the SNMP primary agent, click **Cancel**. To restart the SNMP primary agent service, click **OK**.
- j) Click **OK**.

## Configure Agent Desk Settings

**Step 1** From the AW server, open Configuration Manager, choose **Configure ICM > Enterprise > Agent Desk Settings > Agent Desk Settings List**. The Agent Desk Settings List dialog box opens.

**Step 2** Click **Retrieve** and then Click **Add**.

**Step 3** Fill in the Attributes tab information:

**Name.** Enter a name for the agent desk settings that is unique within the enterprise.

**Ring No Answer Time.** Enter the number of seconds (between 1 and 120) that a call may ring at the agent's station. If you are deploying the Unified CVP, make sure this number is less than the number set for the No Answer Timeout for Router Requery that you set in the Unified CVP.

If you configure this timer, you do not need to configure the Unified Communications Manager Call Forward on No Answer for agent extensions in the Unified Communications Manager, unless you want them to be used when the agent is not logged in. If you set the Unified Communications Manager Call Forward No Answer time, enter a value at least 3 seconds higher than the Ring No Answer Time on each Unified Communications Manager node.

**Ring no answer dialed number.** Enter the Unified CCE DN associated with the routing script that you want to use to reroute a call that an agent has not answered. If you are deploying the Unified CVP, leave this field blank.

**Logout non-activity Time.** Enter the number of seconds (between 10 and 7200) in which the agent can remain in Not Ready state before Unified CCE automatically logs out the agent.

**Work Mode on Incoming.** Select whether wrap-up is required following an incoming call. Select an option from the drop-down list.

**Work Mode on Outgoing.** Select whether wrap-up is required following an outgoing call. Select an option from the drop-down list.

**Wrap Up Time.** Enter the amount of time, in seconds, allocated to an agent to wrap up a call.

**Assist Call Method.** Select whether Unified CCE creates a consultative call or a blind conference call for a supervisor assistance request.

**Emergency Alert Method.** Select whether the Unified CCE creates a consultative call or a blind conference call for an emergency call request.

Blind conference is not supported if the call may queue on a VRU.

**Description.** Enter additional optional information about the agent desk settings.

**Step 4** Use the following boxes to select or de-select miscellaneous settings:

**Auto-answer.** Indicates whether calls to the agent are automatically answered. The agent is not required to take any action to answer the call. If a second call comes in while a call is in progress, the call is not automatically answered. This is the same behavior as with Unified Communications Manager.

If you enable auto-answer, you must also configure the agent phone in Unified Communications Manager to turn the speakerphone or headset (or both) to ON. If you turn *only* the headset to ON, the agent must also turn the phone headset button to ON.

In a multi-line enabled environment with auto-answer selected, if you are on a call on your non-ACD line, the call will *not* auto-answer. However, if you turn on Unified Communications Manager Auto Answer, the call *will* answer.

**Idle Reason Required.** Indicates whether an agent is required to enter a reason before entering the Idle state.

**Logout Reason Required.** Indicates whether an agent is required to enter a reason before logging out.

**Auto Record on Emergency.** Indicates in a record request is automatically sent when an emergency call request starts.

**Cisco Unified Mobile Agent** (check box). Enables the Unified Mobile Agent feature so that the agent can log in remotely and take calls from any phone. For more information about the Unified Mobile Agent, see the *Cisco Unified Contact Center Enterprise Features Guide* at [https://www.cisco.com/en/US/products/sw/custcosw/ps1844/products\\_feature\\_guides\\_list.html](https://www.cisco.com/en/US/products/sw/custcosw/ps1844/products_feature_guides_list.html).

**Step 5** Click **Save** and then click **Close**.

**Note** For any change, you perform in the **Agent Desk Settings** to take effect, log out and then log in to the Finesse Agent Desktop.

## Configure Cisco Unified Intelligence Center

Follow this sequence to configure the Cisco Unified Intelligence Center for Packaged CCE 4000 and 12000 Agents deployment

Sequence	Task
2	<a href="#">Configure Unified Intelligence Center Data Sources for External HDS, on page 38</a>

Sequence	Task
3	<a href="#">Download Report Bundles, on page 39</a>
4	<a href="#">Import Reports, on page 40</a>
5	<a href="#">Configure Unified Intelligence Center Administration, on page 41</a>

## Configure Cisco Finesse

Follow this sequence to configure the Cisco Finesse for Packaged CCE 4000 Agents deployment or 12000 Agents deployment

Sequence	Task
1	Navigate to <b>Infrastructure Settings &gt; Device Configuration &gt; Finesse</b> to configure, and then select the <b>Site</b> and <b>Peripheral Set</b> of the Finesse server. <a href="#">Configure Contact Center Enterprise Administration and Data Server Settings</a> <a href="#">Configure Contact Center Enterprise CTI Server Settings</a>
2	<a href="#">Configure Contact Center Agents and Routing for Live Data Reports, on page 42</a>
3	<a href="#">Restart the Cisco Tomcat Service, on page 92</a>
4	<a href="#">Live Data Reports, on page 43</a>
5	<a href="#">Configure SNMP, on page 89</a>

## Restart the Cisco Tomcat Service

After you change and save any value on Unified CCE Administration server settings, you must restart the Cisco Tomcat Service on the primary Cisco Finesse server.

---

**Step 1** Enter `utils service stop Cisco Tomcat` command, to stop the Cisco Tomcat service.

**Step 2** Enter `utils service start Cisco Tomcat` command, to start the Cisco Tomcat service.

---

## Configure Cisco Finesse Administration

- [Obtain and Upload a CA Certificate, on page 93](#)
- [Deploy Certificate in Browsers, on page 94](#)
- [Accept security certificates, on page 95](#)

## Obtain and Upload a CA Certificate



**Note** This procedure applies only if you are using HTTPS.

This procedure is optional. If you are using HTTPS, you can choose to obtain and upload a CA certificate or you can choose to use the self-signed certificate provided with Cisco Finesse.

To open Cisco Unified Operating System Administration, enter the following URL in your browser:  
`https://FQDN of primary Finesse server:8443/cmplatform.`

Sign in using the username and password for the application user account created during Cisco Finesse installation.

- 
- Step 1** Generate a CSR as follows.
- Select **Security > Certificate Management > Generate CSR**.
  - From the certificate name drop-down list, select **tomcat**.
  - Click **Generate CSR**.
- Step 2** Download the CSR.
- Select **Security > Certificate Management > Download CSR**.
  - From the certificate name drop-down list, select **tomcat**.
  - Click **Download CSR**.
- Step 3** Use the CSR to obtain the signed application certificate and the CA root certificate from the Certificate Authority.
- Step 4** When you receive the certificates, select **Security > Certificate Management > Upload Certificate**.
- Step 5** Upload the root certificate.
- Choose **tomcat-trust** from **Certificate Name** drop-down list.
  - Click **Browse** and open the root certificate file, in **Upload File** field.
  - Click **Upload File**.
- Step 6** Upload the application certificate.
- Choose **tomcat** from **Certificate Name** drop-down list.
  - Enter the name of the CA root certificate in the **Root Certificate** field.
  - Click **Browse** and open the root certificate file, in **Upload File** field.
  - Click **Upload File**.
- Step 7** After the upload is complete, sign out from Cisco Finesse.
- Step 8** Access the CLI on the primary Cisco Finesse server.
- Step 9** Enter **utils service restart Cisco Finesse Notification Service** command to restart the Cisco Finesse Notification service.
- Step 10** Enter **utils service restart Cisco Tomcat** command to restart the Cisco Tomcat service.
- Step 11** Upload the root certificate and application certificate to the secondary Cisco Finesse server.
- Note** Enter the following URL in browser: `https://FQDN of secondary Finesse server:8433/cmplatform`, to open **Cisco Unified Operating System Administration** for the secondary server.

- Step 12** Access the CLI on the secondary Cisco Finesse server and restart the Cisco Finesse Notification Service and the Cisco Tomcat Service.
- 

## Deploy Certificate in Browsers

### Download CA certificate

This procedure assumes that you are using the Windows Certificate Services. Perform the following steps to retrieve the root CA certificate from the certificate authority. After you retrieve the root certificate, each user must install it in the browser used to access Finesse.

---

- Step 1** On the Windows domain controller, run the CLI command `certutil -ca.cert ca_name.cer`, in which *ca\_name* is the name of your certificate.
- Step 2** Save the file. Note where you saved the file so you can retrieve it later.
- 

### Set Up CA Certificate for Firefox Browser

Every Firefox user in the system must perform the following steps once to accept the certificate.



**Note** To avoid certificate warnings, each user must use the fully-qualified domain name (FQDN) of the Finesse server to access the desktop.

---

- Step 1** From the Firefox browser menu, select **Options**.
- Step 2** Click **Advanced**.
- Step 3** Click the **Certificates** tab.
- Step 4** Click **View Certificates**.
- Step 5** Click **Authorities**.
- Step 6** Click **Import** and browse to the *ca\_name.cer* file (in which *ca\_name* is the name of your certificate).
- Step 7** Check the **Validate Identical Certificates** check box.
- Step 8** Restart the browser for certificate installation to take effect.
- 

### Deploy Root Certificate for Browsers

In environments where group policies are enforced via the Active Directory domain, the root certificate can be added automatically to each user's browser. Adding the certificate automatically simplifies user requirements for configuration.



**Note** To avoid certificate warnings, each user must use the fully-qualified domain name (FQDN) of the Finesse server to access the desktop.

---

- 
- Step 1** On the Windows domain controller, navigate to **Administrative Tools > Group Policy Management**.
- Note** Users who have strict Group Policy defined on the Finesse Agent Desktop are required to disable **Cross Document Messaging** from **Group Policy Management** to ensure proper functioning of Finesse on browser.
- Step 2** Right-click Default Domain Policy and select **Edit**.
- Step 3** In the Group Policy Management Console, go to **Computer Configuration > Policies > Window Settings > Security Settings > Public Key Policies**.
- Step 4** Right-click Trusted Root Certification Authorities and select **Import**.
- Step 5** Import the *ca\_name.cer* file.
- Step 6** Go to **Computer Configuration > Policies > Windows Settings > Security Settings > Public Key Policies > Certificate Services Client - Auto-Enrollment**.
- Step 7** From the Configuration Model list, select **Enabled**.
- Step 8** Sign in as a user on a computer that is part of the domain and open browser.
- Step 9** If the user does not have the certificate, run the command **gpupdate.exe /target:computer /force** on the user's computer.
- 

### Set Up CA Certificate for Chrome and Edge Chromium (Microsoft Edge) Browsers

---

- Step 1** In the browser, go to **Settings**.
- Step 2** In the Chrome browser, select **Advanced Settings > Privacy and Security**, click **Manage Certificates**.
- Step 3** In the Microsoft Edge browser, select **Privacy, search, and services**. Under **Security**, click **Manage Certificates**.
- Step 4** Click **Trusted Root Certification Authorities** tab.
- Step 5** Click **Import** and browse to the *ca\_name.cer* file.  
In the **Trusted Root Certification Authorities** tab, ensure that the new certificate appears in the list.
- Step 6** Restart the browser for the certificate to install.
- 

### Accept security certificates

Ensure that the pop-ups are enabled for the Finesse desktop.

If you receive a certificate expiry notification, it means that the validity of your CA certificate is about to expire. You can delete the certificate after expiry. If you use any CA to sign your certificates, you must upload the new certificates to ensure that your system remains operational. It isn't required to upload certain CA certificates that come with the platform and can be deleted when they expire. For the complete list of CAs that can be safely deleted after expiry, refer to the *Manage Expired CA Certificates* section in the [Cisco Unified Contact Center Express Administration and Operations Guide](#). This update is available from release 12.5(1) SU1 onwards.

After you enter the Finesse desktop URL in your browser, the procedure to add a certificate is as follows:

#### Install certificates on Windows operating system:

The procedure to add a certificate varies for each browser. The procedure for each browser is as follows:

#### Firefox

1. On the **Your connection is not secure** page, click **Advanced** > **Add Exception**.




---

**Note** Ensure that the **Permanently store this exception** box is checked.

---

2. Click **Confirm Security Exception**.
3. On the Finesse sign in page, enter your agent ID or username, password, and extension, and click **Sign In**.
4. In the **SSL Certificate Not Accepted** dialog box, click the certificate link. A browser tab opens for the certificate that you must accept.
5. On the browser tab, click **I Understand the Risks** > **Add Exception**. Ensure that the **Permanently store this exception** box is checked.
6. Click **Confirm Security Exception**. The browser tab closes after you accept the certificate and the accepted certificate link is removed from the **SSL Certificate Not Accepted** dialog box. Close the browser tab if it doesn't automatically close.

Repeat the preceding steps for all the certificate links. After you accept all the certificates, the sign-in process is complete.

#### Chrome and Edge Chromium (Microsoft Edge)

1. A page appears that states your connection isn't private. To open the Finesse sign in page,
  - In Chrome, click **Advanced** > **Proceed to <Hostname> (unsafe)**.
  - In Microsoft Edge, click **Advanced** > **Continue to <Hostname> (unsafe)**.
2. Enter your agent ID or username, password, and extension, and then click **Sign In**.
3. In the **SSL Certificate Not Accepted** dialog box, click the certificate link. A browser tab opens for the certificate that you must accept.
4. On the browser tab,
  - In Chrome, click **Advanced** > **Proceed to <Hostname> (unsafe)**.
  - In Microsoft Edge, click **Advanced** > **Continue to <Hostname> (unsafe)**.

The browser tab closes after you accept the certificate and the accepted certificate link is removed from the **SSL Certificate Not Accepted** dialog box. Close the browser tab if it doesn't automatically close.




---

**Note** If you click the certificate link and don't accept it, the certificate link stays enabled in the **SSL Certificate Not Accepted** dialog box. The certificate error appears every time you sign in. The procedure to permanently accept the certificate is as follows.

---

5. Click on the certificate error that appears in the address bar and then,
  - In Chrome, select **Certificate (Invalid)**.
  - In Microsoft Edge, select **Certificate (not valid)**.

The **Certificate** dialog box appears.



6. In the **Details** tab, click **Copy to File**. The **Certificate Export Wizard** appears.
7. Click **Next**.
8. Keep the default selection **DER encoded binary X.509 (.CER)** and click **Next**.
9. Click **Browse** and select the folder in which you want to save the certificate, enter a recognizable filename and click **Save**.
10. Browse to the folder where you've saved the certificate (**.cer** file), right-click on the file, and click **Install Certificate**. The **Certificate Import Wizard** appears.
11. Keep the default selection **Current User** and click **Next**.
12. Select **Place all certificates in the following store** and click **Browse**. The **Select Certificate Store** dialog box appears.
13. Select **Trusted Root Certification Authorities** and click **OK**.
14. Click **Next** and then click **Finish**. A **Security Warning** dialog box appears that asks if you want to install the certificate.
15. Click **Yes**. A **Certificate Import** dialog box that states the import was successful appears.

Close the browser and sign in to Finesse. The security error doesn't appear in the address bar.

#### Install certificates on macOS:

The procedure to download a certificate varies for each browser. The procedure for each browser is as follows:

##### Chrome and Edge Chromium (Microsoft Edge)

1. A warning page appears which states that your connection isn't private. To open the Finesse Console sign in page.
  - In Chrome, click **Advanced > Proceed to <Hostname> (unsafe)**.
  - In Microsoft Edge, click **Advanced > Continue to <Hostname> (unsafe)**.
2. Click on the certificate error that appears in the address bar and then,
  - In Chrome, select **Certificate (Invalid)**.
  - In Microsoft Edge, select **Certificate (Not Valid)**.A certificate dialog box appears with the certificate details.
3. Drag the **Certificate** icon to the desktop.
4. Double-click the certificate. The **Keychain Access** application opens.
5. In the right pane of the Keychains dialog, browse to the certificate, right-click on the certificate, and select **Get Info** from the options that are listed. A dialog appears with more information about the certificate.
6. Expand **Trust**. From the **When using this certificate** drop-down, select **Always Trust**.
7. Close the dialog box that has more information about the certificate. A confirmation dialog box appears.
8. Authenticate the modification of Keychains by providing a password.
9. The certificate is now trusted, and the certificate error doesn't appear on the address bar.

**Firefox**

1. In your Firefox browser enter the Finesse desktop URL. A warning page appears which states that there’s a security risk.
2. Click **Advanced** and then click the **View Certificate** link. The **Certificate Viewer** dialog box appears.
3. Click **Details** and then click **Export**. Save the certificate (.**cert** file) in a local folder.




---

**Note** If the **.cert** file option isn’t available, select the **.der** option to save the certificate.

---

4. From the menu, select **Firefox > Preferences**. The **Preferences** page is displayed.
5. In the left pane, select **Privacy & Security**.
6. Scroll to the **Certificates** section and click **View Certificates ...**. The **Certificate Manager** window is displayed.
7. Click **Import** and select the certificate.
8. The certificate is now authorized, and the certificate error doesn’t appear on the address bar.

## Configure Live Data

Sequence	Task
1	<a href="#">Initial Setup for Live Data, on page 98</a>
2	<a href="#">Configure Live Data with AW, on page 99</a>
3	<a href="#">Configure Live Data Machine Services, on page 101</a>
4	<a href="#">Configure Live Data for Unified Intelligence Center Data Sources, on page 101</a>
5	<a href="#">Configure Cross Origin Resource Sharing (CORS) for Live Data, on page 102</a>
6	<a href="#">Restart Live Data, on page 102</a>
7	<a href="#">Set Up Certificates for Live Data, on page 102</a>
8	<a href="#">Configure SNMP, on page 89</a>

### Initial Setup for Live Data

For Live Data to work on Packaged CCE 4000 and 12000 Agents deployment, do the following on both Side A and Side B Logger:

- 
- Step 1** Launch **Microsoft SQL Server Management Studio** and select the Logger database (Side A or Side B appropriately).
  - Step 2** Run the queries in the file `C:\icm\install\LiveDataMachineServiceCorrection.sql`.

**Note** From AW Machine, run the Initialize Local Database tool.

## Configure Live Data with AW

Configure Live Data with AW to access the primary AW DB and the secondary AW DB. The command also automatically tests the connection from Live Data to the primary or secondary AW, checks to see if you (as the configured user) have appropriate AW DB access, and reports the results.

You can use the optional `skip-test` parameter if you do not want to perform the test. When you include the `skip-test` parameter, the command does not check if you (as the configured user) have appropriate AW DB access and does not report results.



**Note** You do not need to configure the AW DB on both the Publisher and the Subscriber. The configuration is replicated between the Publisher and Subscriber.

### Before you begin

Before you can configure Live Data, you must first configure a SQL user (with special permissions) to work with Live Data.

The SQL administrative user "sa" or a user with sysadmin privileges must then run the following SQL queries on the primary system database for the SQL user who is configured to work with Live Data:

```
USE master
GO
GRANT CONTROL ON CERTIFICATE :: UCCESymmetricKeyCertificate TO "<user>"
GRANT VIEW DEFINITION ON SYMMETRIC KEY :: UCCESymmetricKey TO "<user>"
```

**Step 1** Log in to your Live Data server.

**Step 2** Run the following command to configure Live Data with the primary AW DB. The command automatically tests the connection from Live Data, checks the user permission, and displays results.

The `skip-test` parameter is optional. Include it only if you do not want to perform the test.

```
set live-data aw-access primary addr port db user [skip-test]
```

**Step 3** Run the following command to configure Live Data with the secondary AW DB. The command automatically tests the connection from Live Data, checks the user permission, and displays results.

The `skip-test` parameter is optional. Include it only if you do not want to perform the test.

```
set live-data aw-access secondary addr port db user [skip-test]
```

You can also optionally run the following command at any time to show and test the AW configuration that you set from Live Data to the primary and secondary AW DBs.

The `skip-test` parameter is optional. Include it only if you do not want to perform the test.

```
show live-data aw-access [skip-test]
```

## Configure SQL User Account

---

**Step 1** Launch Microsoft SQL Server Management Studio on the Administration and Data Server.

**Step 2** Navigate to **Security > Logins**, right-click **Logins** and select **New Logins**.

Use these steps to create login accounts for the **Cisco Unified Intelligence Center** reporting data sources and for Finesse connectivity to the AW Database on the **Cisco Finesse Administration** page.

**Step 3** On the General Screen:

- a) Enter the Login Name.
- b) Select **SQL Server authentication**.
- c) Enter and confirm the password.
- d) Uncheck **Enforce password policy**.

**Step 4** In the Server Roles page, check the following check boxes:

- public
- securityadmin
- serveradmin
- setupadmin
- sysadmin

**Step 5** On the User Mapping page, do the following:

**a.** Check the **Real-time database** and **Historical database** check boxes.

**b.** In Database role memberships pane, check the following check boxes:

- db\_datareader
- db\_datawriter
- db\_ddladmin
- db\_owner
- db\_securityadmin
- public

**Note** For an SQL user configured to work with Live Data, check the master database check box and the db\_datareader and db\_datawriter check boxes (in Database role memberships pane).

**Step 6** Click **OK**.

---

### What to do next



**Note** Ensure that you configure SQL User Account on both the primary and secondary AW databases.

## Configure Live Data Machine Services

This command tells the AW where your Live Data machine services are located.



- Note**
- Whenever you run `set live-data machine-services`, be sure to also run `set live-data cuic-datasource` to reconfigure the Live Data data sources for the Unified Intelligence Center. See [Configure Live Data for Unified Intelligence Center Data Sources, on page 101](#).
  - If you are using any certificates that are unapproved by Cisco or self-signed certificate, ensure to import the AWDB certificate into the Live Data server before you run `set live-data machine-services`.

**Step 1** Log in to your Live Data server.

**Step 2** Run the following command to configure the Live Data machine services:

```
set live-data machine-services awdb-user
```

Use the `user@domain` format to specify the AW database domain user with write-access permission. The domain is a fully qualified domain name (FQDN), and the username is a user principal name. You must be authorized to change Unified CCE configuration.

- Note**
- The Router and Peripheral Gateway (PG) TIP and TOS connection information is automatically populated for Unified CCE deployments that support Live Data.
  - Cisco Unified Communications Manager (CUCM) PG and Avaya PGs are supported for Live Data.

**Note** Once you have updated the host name of Live Data Server, you need to re-run the below set of commands, otherwise new host name will not be accepted.

```
set live-data machine-services awdb-user
```

```
set live-data cuic-datasource cuic-addr cuic-port cuic-user
```

Verify that the `show machine-services` display changed hostname.

It is necessary for you to re-run the set of commands, otherwise Live data machine services will not be updated with the new host name.

## Configure Live Data for Unified Intelligence Center Data Sources

This command tells Unified Intelligence Center how to access Live Data.




---

**Note** If you are using any certificates that are unapproved by Cisco, ensure to import the CUIC certificate into the Live Data server before you run `set live-data machine-services`.

---

**Step 1** Log in to your Live Data server.

**Step 2** Run the following command to configure your Live Data Unified Intelligence Center data sources:

```
set live-data cuic-datasource cuic-addr cuic-port cuic-user
```

---

## Configure Cross Origin Resource Sharing (CORS) for Live Data

Live Data CORS commands allow you to configure CORS and hence allow web applications running on different origins to communicate with Live Data and CUIC.

For Unified Intelligence Centre gadgets (Live Data) to load in Cisco Finesse, ensure to:

- Enable CORS using `utils cuic cors enable` and `utils live-data cors enable` commands.
- Set the Finesse host URL in `utils cuic cors allowed_origin add URLs` and `utils live-data cors allowed_origin add URLs` commands.

### Examples:

- `https://<finesse-FQDN>`
- `https://<finesse-FQDN>:port`

## Restart Live Data

After you complete the configuration procedures for the AW, the Live Data Machine Services, and the Unified Intelligence Center data source, restart the Live Data system to enable the changes.

---

Access the Live Data CLI and run the following command:

```
utils system restart
```

**Note** Whenever a new peripheral gateway that supports Live Data gets deployed and started, its feed will not be available to Live Data server automatically. Restart the Live Data server to start the feed from the newly deployed Peripheral Gateway.

---

## Set Up Certificates for Live Data

For secure Cisco Finesse, Cisco Unified Intelligence Center, AWDB, and Live Data server-to-server communication, perform any of the following:

- Use the self-signed certificates provided with Live Data.



---

**Note** When using self-signed certificates, agents must accept the Live Data certificates in the Finesse desktop when they sign in before they can use the Live Data gadget.

---

- Produce a Certification Authority (CA) certificate internally.
- Obtain and install a Certification Authority (CA) certificate from a third-party vendor.

For complete information

#### Related Topics

[Certificates for Live Data](#)

## Configure SNMP

---

- Step 1** Log in to the Cisco Unified Serviceability (*https://hostname of primary server:8443/ccmservice*) using administrator credentials.
- Step 2** Select **SNMP > V1/V2c > Community String**.
- Step 3** From **Server** drop-down list, select the server for which you want to configure a community string and click **Find**.
- Step 4** Click **Add New** to add new community string.
- Enter **Community String**.
- Example:**
- public.
- In **Host IP Addresses Information** field, choose **Accept SNMP Packets from any host**.
  - From **Access Privileges** drop-down list, select **ReadWriteNotify** option.
  - Check **Apply to All Nodes** check box to apply community string to all nodes in the cluster.  
Information message will be displayed.
  - Click **OK**.
  - Click **Save**.
- A message is displayed, that indicates that changes will not take effect until you restart the SNMP primary agent. To continue the configuration without restarting the SNMP primary agent, click **Cancel**. To restart the SNMP primary agent service, click **OK**.
- Click **OK**.
- Step 5** Select **SNMP > V1/V2c > Notification Destination**.
- Step 6** From **Server** drop-down list, select the server for which you want to configure a notification destination and click **Find**.
- Step 7** Click **Add New** button to add new notification destination.
- From **Host IP Addresses** drop-down list, select **Add New**.
  - In **Host IP Address** field, enter the Prime Collaboration server IP address .
  - In the **Port Number** field, enter the notification receiving port number.
- Note** Default port number is 162.
- In **SNMP Version Information** field, select the SNMP Version V2C.
  - In **Notification Type Information** field; from **Notification Type** drop-down list, select **Trap**.

- f) In **Community String Information** field; from **Community String** drop-down list, select Community String created in Step 4 from the drop-down list.
- g) Check the **Apply to All Nodes** check box to apply community string to all nodes.  
Information message will be displayed.
- h) Click **OK**.
- i) Click **Insert**.  
A message is displayed, that indicates that changes will not take effect until you restart the SNMP primary agent. To continue the configuration without restarting the SNMP primary agent, click **Cancel**. To restart the SNMP primary agent service, click **OK**.
- j) Click **OK**.

## Packaged CCE 12000 Agents Deployment

Follow this sequence to configure components for Packaged CCE 12000 Agents deployment.

Sequence	Task
1	Generate CSR and upload <a href="#">CA Certificates</a> Or Generate and import <a href="#">Self-signed Certificates</a>
2	<a href="#">Configure CCE Component, on page 105</a>
3	<a href="#">Configure Cisco Unified Customer Voice Portal, on page 84</a>
4	If Media Server is external, <a href="#">Configure Media Server</a>
5	<a href="#">Configure Cisco Unified Communications Manager, on page 87</a>
6	<a href="#">Configure Cisco Unified Intelligence Center, on page 91</a>
7	<a href="#">Configure Cisco Finesse, on page 92</a>
8	<a href="#">Configure Live Data, on page 98</a>
9	<a href="#">Configure Cisco Identity Service</a>
10	<a href="#">Configure Cisco Unified Customer Voice Portal Reporting Server, on page 45 (optional)</a>
11	<a href="#">Configure VVB, on page 48 (optional)</a>
12	<a href="#">Configure Cisco IOS Enterprise Voice Gateway, on page 49</a>
13	<a href="#">Configure IPv6, on page 56</a>
14	<a href="#">Configure Enterprise Chat and Email (ECE) (optional)</a> <a href="#">Email and Chat</a>



## Configure CCE Component

Follow this sequence to configure components for Packaged CCE 12000 Agents deployment.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components, on page 3</a>
2	<a href="#">Set up Organizational Units, on page 4</a>
3	<a href="#">Configure Logger, on page 105</a>
4	<a href="#">Configure Router, on page 105</a>
5	<a href="#">Configure AW-HDS, on page 106</a>
6	<a href="#">Configure HDS-DDS, on page 106</a>
7	<a href="#">Start Unified CCE Services, on page 68</a>
8	If you have PG VMs installed , <a href="#">Add Unified CCE Instance, on page 79</a> on all PG VMs
9	<a href="#">Configure Packaged CCE Deployment Type, on page 72</a>
10	<a href="#">Configure Cisco Unified Contact Center Enterprise PG, on page 80</a>
11	For configuration using Configuration Manager, see <a href="#">Packaged CCE 4000 and 12000 Agent Supported Tools</a>

## Configure Logger

Follow this sequence to configure Logger for Packaged CCE 12000 Agents deployment.

Sequence	Task
1	<a href="#">Add Unified CCE Instance, on page 79</a>
2	<a href="#">Create Logger Database, on page 65</a>
3	To use Outbound Option, see <a href="#">Create Outbound Option Database, on page 66</a>
4	<a href="#">Add Logger Component to Instance, on page 66</a>
5	<a href="#">Cisco SNMP Setup, on page 25</a> (optional)

## Configure Router

Follow this sequence to configure Router for Packaged CCE 12000 Agents deployment.

Sequence	Task
1	<a href="#">Add Unified CCE Instance, on page 79</a>

Sequence	Task
2	<a href="#">Add Router Component to Instance, on page 67</a>
3	<a href="#">Cisco SNMP Setup, on page 25 (optional)</a>

## Configure HDS-DDS

Follow this sequence to configure HDS-DDS for Packaged CCE 12000 Agents deployment.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components, on page 3</a>
2	<a href="#">Add Unified CCE Instance, on page 79</a>
3	<a href="#">Create HDS Database, on page 69</a>
4	<a href="#">Add Administration and Data Server Component to Instance, on page 70</a>
5	<a href="#">Cisco SNMP Setup, on page 25 (optional)</a>

## Configure AW-HDS

Follow this sequence to configure AW-HDS for Packaged CCE 12000 Agents deployment.

Sequence	Task
1	<a href="#">Configure SQL Server for CCE Components, on page 3</a>
2	<a href="#">Add Unified CCE Instance, on page 79</a>
3	<a href="#">Create HDS Database, on page 69</a>
4	<a href="#">Add Administration and Data Server Component to Instance, on page 70</a>
5	<a href="#">Configure ICM Database Lookup, on page 106 (optional)</a>
6	<a href="#">Cisco SNMP Setup, on page 25 (optional)</a>

### Configure ICM Database Lookup

You can use Database Lookup Explorer tool in Configuration Manager to view, define, delete, or edit script table from an external database.

Complete the following procedure to configure ICM Database Lookup.

- 
- Step 1** Launch the Unified CCE Web Setup tool.
  - Step 2** In the Router Options window, select **Enable Database Routing**.
  - Step 3** Configure Database Lookup explorer:

- a) Click **Start > All programs > Cisco Unified CCE Tools > Administration Tools > Configuration Manager**.
- b) Open **Tools > Explorer Tools > Database Lookup Explorer**.
- c) Configure Script Table and Script Table Column as shown in the following example:

Script Table:

Name: AccountInfo

Side A: \\dblookup1\DBLookup.AccountInfo

Side B: <Update Side B of database here>

Description: <Provide description here>

dblookup1 is external database server name, DBLookup is external database name, and AccountInfo is the table name.


Script Table Column:

Column name: AccountNo

Description: <Provide description here>

- Step 4** Use the CCEDDataProtect Tool to configure the registry settings in Unified CCE. For more information, see [Configure External DBLookUp Registry Value using CCEDDataProtect Tool, on page 2](#)
- Step 5** Create the ICM script with the database lookup node with the respective table and lookup value.
- The following figure shows AccountInfo as the table name and Call.CallingLineID as the lookup value.

Figure 1: Example ICM Database Look Up

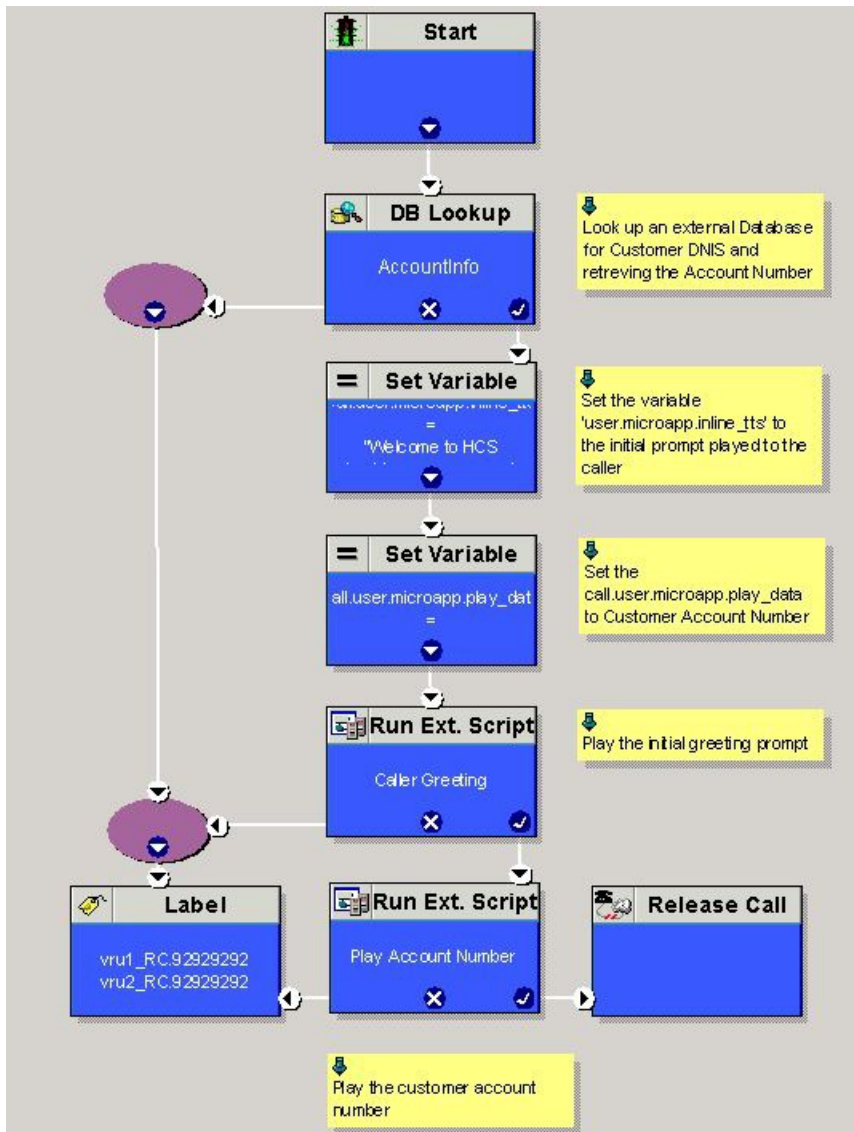

## Packaged CCE Lab Only Deployments

Packaged CCE Lab Mode allows you to install Packaged CCE for demonstration and lab use. You can use all the features in a limited capacity without the need to install a full Packaged CCE deployment on supported hardware. If you exceed the capacity limit of an attribute, you are alerted with error messages that are displayed in **Unified CCE Administration**.

For procedures to configure and manage contact center operations using the Unified CCE Administration web-based tool, see [Packaged CCE Administration](#).

The following Unified CCE Administration features are not initially available when you change into the Packaged CCE Lab deployment:

- System Inventory, available on the **Inventory** page
- Log Collection
- Live Data
- Single sign-on

## Packaged CCE Lab Only Deployment Components

Packaged CCE Lab Mode allows you to install Packaged CCE for demonstration and lab use. You can use all the features in a limited capacity without the need to install a full Packaged CCE deployment on supported hardware. If you exceed the capacity limit of an attribute, you are alerted with error messages that are displayed in the **Unified CCE Administration** interface.

**Before you begin:** If you do not have a CA certificate, import self-signed certificates for the external machines. For more information, see [Self-signed Certificates](#).

Packaged CCE Lab Only deployments can be configured as simplex systems or duplex systems only in 2000 Agents deployment. In a simplex system, all components are installed on Side A and there is no Side B. In a duplex system, components are installed on Side A and Side B.

### Simplex Mode

The Lab Only simplex deployment must consist of the following components:

- 1 Unified CCE Rogger
- 1 Unified CCE AW-HDS-DDS
- Unified CCE PG
- Cisco Unified CVP Server
- Cisco Unified CM, functioning as a combined Publisher and Subscriber
- 1 Cisco Unified Intelligence Center, functioning as a combined Publisher and Subscriber
- Cisco Finesse, functioning as both a Publisher and Subscriber
- Gateways
- 1 Customer Collaboration Platform
- Cisco Enterprise Chat and Email
- Third-Party Multichannel



---

**Note** In the System Inventory, the status rules that apply to machines outside of the Packaged Contact Center Enterprise Simplex Lab Only deployment returns a blocked status. Status rules which require ESXi host return a blocked status.

---

- Cisco Virtualized Voice Browser
- Cisco Unified video address Proxy
- Gateways
- Cisco Unified CVP Reporting




---

**Note** Adding a Cisco Unified Customer Voice Portal Reporting Server with Inventory CSV is not supported. You can also add it as an external server after a successful initialization of inventory.

---

- Cisco Enterprise Chat and Email
- Third-Party Multichannel
- Media Server




---

**Note** You can add the Customer Collaboration Platform as an external machine only in the main site.

---

For more information about the configuration limits for external machines, see the *Solution Design Guide for Cisco Packaged Contact Center Enterprise* at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-technical-reference-list.html>.

## Duplex Mode

The Lab Only duplex mode consists of the following components.




---

**Note** In Lab Mode, Packaged CCE does not validate the ESXi host.

---

### Side A

Side A must have the following:

- 1 Unified CCE Rogger
- 1 Unified CCE AW-HDS-DDS
- 1 Unified CCE PG
- 1 Cisco Unified CVP Server
- 1 Unified Communications Manager Publisher
- 1 Unified Communications Manager Subscriber
- 1 Unified Intelligence Center Publisher
- 1 Finesse Primary

**Side B**

Side B must have the following:

- 1 Unified CCE Rogger
- 1 Unified CCE AW-HDS-DDS
- 1 Unified CCE PG
- 1 Cisco Unified CVP Server
- 1 Unified Communications Manager Subscriber
- 1 Unified Intelligence Center Subscriber
- 1 Finesse Secondary

**External**

The Lab Only duplex mode can have the following external machines:

- Gateways
- Cisco Virtualized Voice Browsers
- Cisco Unified SIP Proxy
- Customer Collaboration Platform
- Enterprise Chat and Email
- Unified CVP Reporting
- Third-Party Multichannel
- Media Server



---

**Note** Status rules which require ESXi host returns a status of blocked.

---

For remote site, you can add the following external machines:

- Cisco Unified CVP Reporting
- Cisco Enterprise Chat and Email
- Third-Party Multichannel
- Media Server



---

**Note** Customer Collaboration Platform can be added as an external machine only in the main site.

---

For more information on the configuration limits for external machines, see the *Solution Design Guide for Cisco Packaged Contact Center Enterprise* at <https://www.cisco.com/c/en/us/support/customer-collaboration/packaged-contact-center-enterprise/products-technical-reference-list.html>.

## Initialize the Packaged CCE Lab Mode Deployment

When you sign into Unified CCE Administration for the first time, you are prompted to supply information and credentials for the components in your deployment. Packaged CCE uses this information to configure the components and build the System Inventory.

**Step 1** On the **Inventory** page, select **Packaged CCE: Lab Mode** from the **Deployment Type** drop-down list, then select an instance from the **Instance** drop-down list that has been created using Domain Manager. Click **Next**.

**Step 2** Select one of the following options from the **Template** drop-down list:

- Simplex Inventory for Simplex Lab Mode deployment
- Duplex Inventory for Duplex Lab Mode deployment

Click **Download** to download the Inventory Content File Template. Fill out and save the template to your computer. In the required **Content File** field, browse to the content file you have completed. The content file is validated before the inventory is created. Click **Next**.

For more information on completing the Inventory Content File Template, see [Inventory Content File](#), on page 114.

**Step 3** On the **Settings** page do the following:

- Select the codec used for Mobile Agent calls from the **Mobile Agent Codec** drop-down list. The **Side A Connection** and **Side B Connection** drop-down lists are disabled in Lab Only deployment.
- For the **Automatically create service accounts** check box, either:
  - Uncheck the check box if you want to use an existing Active Directory account. Enter the username and password for an existing Active Directory user in the same domain as the Packaged CCE servers.

This account will be added to the Service group.

Click **Next**.

The deployment is initialized. The **Details** dialog box displays the status of the automated initialization tasks.

**Step 4** After the automated initialization tasks complete, click **Done**.

If one of the automated initialization tasks fails, correct the errors and then click **Retry**.

If the retry is successful, the automated initialization continues.

For some task failures, all completed tasks must be reverted before the task can be retried. You see a message informing you that the system needs to be reverted to a clean state.

Click **OK**, and then after the system is in a clean state, click **Start Over**.

**Note** You should restart the Unified CVP Server.

After you initiate Simplex or Duplex Lab Mode deployment, you can also add the following external machines for the main site on the **Inventory** page:

- Unified CM Publisher



- Unified CVP Reporting Server
- Unified SIP Proxy
- Virtualized Voice Browser
- Gateway
- Customer Collaboration Platform
- Enterprise Chat and Email
- Third-party Multichannel
- Media Server
- Cloud Connect Publisher

To add, edit or delete the external machines on the main site, see [System Inventory for Packaged CCE 2000 Agents Deployment, on page 10](#).

---

## Enable System Inventory, Log Collection, and Live Data Using the Inventory Content File

To use the following Unified CCE Administration features for demonstration purposes, you must provide Packaged CCE with information and credentials for the machines in your deployment:

- System Inventory (available under **Inventory** page)
- Log Collection
- Live Data
- Single Sign-on

You provide this information using the Inventory Content File.

If you are configuring the Packaged CCE Lab Only deployment in Unified CCE Administration as part of the installation process, you are prompted to complete and upload the Inventory Content File.

If you switch into Packaged CCE Lab Only deployment from a different deployment, you complete and upload the Content Inventory file in Unified CCE Administration from the Bulk Import tool.

To complete and upload the Content Inventory file in Bulk Import:

- 
- Step 1** In the Unified CCE Web Administration, click the **Bulk Import** card on the **Overview** page. Download the Inventory content file template.
  - Step 2** Open the file in Microsoft Excel and populate the content file fields as described in Inventory Content File.
  - Step 3** Save your changes.
  - Step 4** Create a new bulk job in **Bulk Jobs**. In the **Content File** field, select the Inventory content file you created and click **Save**.
-

**Related Topics**[Manage Bulk Jobs](#)**Inventory Content File**

The Inventory content file template contains the following fields:




---

**Note** If a username and/or password contains the "=" or "&" characters, use the encoded value of "%3D" or "%26" respectively.

---

Field	Description
operation	The default is CREATE; do not change the operation.
name	Do not change the machine name. <b>Note</b> This field applies only to duplex mode.
machineType	Do not change the machine type.
publicAddress	Enter the public IP address or hostname for each machine.

Field	Description
publicAddressServices	<p><b>CCE_ROGGER</b> - Do not change this field.</p> <p><b>CCE_PG</b> - This field specifies services that are required for the Unified CCE PG. If the Logical Controller ID for the UCM PG is not the default of 5000, change the pairing value for the TIP_PG and TIP_PG_TOS services to match the Logical Controller ID. (The Logical Controller ID can be found on the Peripheral Gateways tab of System &gt; Information.)</p> <p><b>CCE_AW</b> - Unified CCE Diagnostic Framework Portico domain, username, and password.</p> <p>These credentials must be of a domain user who is a local administrator on all the CCE servers and valid on all Unified CCE components in your deployment (the Side A and Side B Unified CCE Roggers, PGs, and AW-HDS-DDSs).</p> <p><b>Note</b>           Every time the Active Directory credentials are updated, the credentials configured here must be updated as well.</p> <p><b>CVP</b> - Unified CVP Server Windows credentials</p> <p><b>CM_PUBLISHER</b> - This field specifies AXL credentials. Replace user and password with the correct credentials.</p> <p><b>CUIC_PUBLISHER</b> - This field specifies the services for Unified Intelligence Center. For the Administration credentials and Cisco Identity Service credentials, replace user and password with the correct credentials. For all other services, do not change the default values.</p> <p><b>FINESSE</b> - This field specifies Finesse Administration credentials. Replace user and password with the correct credentials.</p>
privateAddress	Enter the private IP address or hostname for the <b>CCE_PG</b> and <b>CCE_ROGGER</b> . Leave this field blank for all other machines.
side	Enter sideA or sideB.

