

# Automatic Protection Switching of Packet-over-SONET Circuits

---

## Feature Summary

The automatic protection switching (APS) feature is supported on Cisco 7500 series routers. This feature allows switchover of packet-over-SONET (POS) circuits and is often required when connecting SONET equipment to telco equipment. APS refers to the mechanism of bringing a “protect” POS interface into the SONET network as the “working” POS interface on a circuit from the intervening SONET equipment.

The protection mechanism used for this feature is “1+1, Bidirectional, nonrevertive” as described in the Bellcore publication TR-TSY-000253, SONET Transport Systems; Common Generic Criteria, Section 5.3. In the 1+1 architecture, there is one working interface (circuit) and one protect interface, and the same payload from the transmitting end is sent to both the receiving ends. The receiving end decides which interface to use. The line overhead (LOH) bytes (K1 and K2) in the SONET frame indicate both status and action.

The protect interface is configured with the IP address of the router that has the working interface. The APS Protect Group Protocol, which runs on top of UDP, provides communication between the process controlling the working interface and the process controlling the protect interface. Using this protocol, POS interfaces can be switched due to a router failure, degradation or loss of channel signal, or manual intervention. In bidirectional mode, the receive and transmit channels are switched as a pair. In unidirectional mode, the transmit and receive channels are switched independently. For example, if the receive channel on the working interface has a loss of channel signal, both the receive and transmit channels are switched.

In addition to the new Cisco IOS commands added for the APS feature, the POS interface configuration commands **pos threshold** and **pos report** have been added to support user configuration of the bit error rate (BER) thresholds and reporting of SONET alarms.

## Document Conventions

Command descriptions use these conventions:

- **Boldface** indicates commands and keywords that are entered literally as shown.
- *Italics* indicate arguments for which you supply values; in contexts that do not allow italics, arguments are enclosed in angle brackets (>).
- Square brackets ([ ]) indicate optional elements.
- Braces ( { } ) group required choices, and vertical bars ( | ) separate alternative elements.
- Braces and vertical bars within square brackets ( [ { | } ] ) indicate a required choice within an optional element.

## Platforms

This feature is supported on the Cisco 7500 series platforms.

## Supported MIBs and RFCs

None

## Configuration Tasks

Two SONET connections are required to support APS. In a telco environment, the SONET circuits must be provisioned as APS. You must also provision the operation (for example, 1+1), mode (for example, bidirectional), and revert options (for example, no revert). If the SONET connections are homed on two separate routers (the normal configuration), an out of band (OOB) communications channel between the two routers needs to be set up for APS communication.

When configuring APS, we recommend you configure the working interface first. Normal operation with 1+1 operation is to configure it as a working interface. Also configure the IP address of the interface being used as the APS OOB communications path.

For more information on POS interfaces, refer to the Cisco IOS documentation (in particular, the “Configuring Interfaces” chapter in the *Configuration Fundamentals Configuration Guide*), and the installation and configuration documentation that accompanies the POS hardware.

## Configure APS Working and Protect Interfaces

This section describes how to configure a working and protect interface. The tasks listed in this section are required. Configure the working interface before configuring the protect interface to avoid the protect interface from becoming the active circuit and disabling the working circuit when it is finally discovered.

To configure the working interface, perform the following steps beginning in global configuration mode:

Task	Command
<b>Step 1</b> Specify the POS interface to be configured as the working interface and enter interface configuration mode.	<b>interface pos</b> <i>slot/port-adapter/port</i>
<b>Step 2</b> Configure this interface as a working interface.	<b>aps working</b> <i>circuit-number</i>
<b>Step 3</b> Exit configuration mode.	<b>end</b>
<b>Step 4</b> Verify that the interface is configured correctly.	<b>show controller pos</b> <b>show interface pos</b> <b>show aps</b>

---

**Note** If a router has two or more protect interfaces, the **aps group** command for each interface must precede the corresponding **aps protect** command.

---

To configure the protect interface, perform the following steps beginning in global configuration mode:

Task	Command
<b>Step 1</b> Specify the POS interface to be configured as the protect interface and enter interface configuration mode.	<b>interface pos</b> <i>slot/port-adapter/port</i>
<b>Step 2</b> Configure this interface as a protect interface. Specify the IP address of the router that contains the working interface.	<b>aps protect</b> <i>circuit-number ip-address</i>
<b>Step 3</b> Exit configuration mode.	<b>end</b>
<b>Step 4</b> Verify that the interface is configured correctly.	<b>show controller pos</b> <b>show interface pos</b> <b>show aps</b>

## Configure Other APS Options

To configure the other APS options, perform any of the following tasks in interface configuration mode. The tasks listed in this section are optional.

Task	Command
Enable authentication and specify the string that must be present to accept any packet on the OOB communication channel.	<b>aps authenticate</b> <i>string</i>
Manually switch the specified circuit to a protect interface, unless a request of equal or higher priority is in effect.	<b>aps force</b> <i>circuit-number</i>
Allow more than one protect/working interface group to be supported on a router.	<b>aps group</b> <i>group-number</i>
Prevent a working interface from switching to a protect interface.	<b>aps lockout</b> <i>circuit-number</i>
Manually switch a circuit to a protect interface, unless a request of equal or higher priority is in effect.	<b>aps manual</b> <i>circuit-number</i>
Enable automatic switchover from the protect interface to the working interface after the working interface becomes available.	<b>aps revert</b> <i>minutes</i>
Change the time between hello packets and the time before the protect interface process declares a working interface's router to be down (that is, <i>seconds1</i> for the hello time, and <i>seconds2</i> for the hold time).	<b>aps timers</b> <i>seconds1 seconds2</i>
Configure a protect interface for unidirectional mode.	<b>aps unidirectional</b>

## Monitor and Maintain APS

To provide information about system processes, the Cisco IOS software includes an extensive list of EXEC commands that begin with the word **show**, which, when executed, display detailed tables of system information. Following is a list of some of the common **show** commands for the APS feature.

Perform these tasks in privileged EXEC mode to display the information described:

Task	Command
Display information about the automatic protection switching feature.	<b>show aps</b>
Display information about the hardware.	<b>show controllers pos</b>
Display information about the interface.	<b>show interface pos</b>

## Configure SONET Alarm Reporting

To configure the thresholds and the type of SONET alarms that are reported, perform any of the following tasks in interface configuration mode. The tasks listed in this section are optional. The default settings are adequate for most POS installations.

Task	Command
Configure the BER threshold values for signal failure (SF), signal degrade (SD), or threshold crossing alarms (TCA).	<b>pos threshold {b1-tca   b2-tca   b3-tca   sd-ber   sf-ber} rate</b>
Enable reporting of selected SONET alarms.	<b>pos report {b1-tca   b2-tca   b3-tca   lais   lrldi   pais   plop   prdi   rdool   sd-ber   sf-ber   slof   slo}</b>


To display the current BER threshold setting or to view the reporting of the SONET alarms, use the **show controllers pos** EXEC command.

## Configuration Examples

The following examples show how to configure basic APS on a router and how to configure more than one protect/working interface on a router by using the **aps group** command.

### Basic APS Configuration

The following example shows the configuration of APS on router A and router B (see Figure 1). In this example, router A is configured with the working interface, and router B is configured with the protect interface. If the working interface on router A becomes unavailable, the connection will automatically switchover to the protect interface on router B.

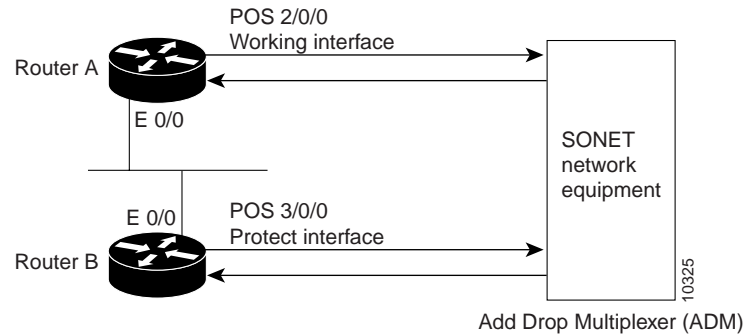**Figure 1 Basic APS Configuration**

On router A, which contains the working interface, use the following configuration:

```
router# configure terminal
router(config)# interface ethernet 0/0
router(config-if)# ip address 7.7.7.7 255.255.255.0
router(config)# interface pos 2/0/0
router(config-if)# aps working 1
router(config-if)# end
router#
```

On router B, which contains the protect interface, use the following configuration:


```
router# configure terminal
router(config)# interface ethernet 0/0
router(config-if)# ip address 7.7.7.6 255.255.255.0
router(config)# interface pos 3/0/0
router(config-if)# aps protect 1 7.7.7.7
router(config-if)# end
router#
```

To verify the configuration or to determine if a switchover has occurred, use the **show aps** command.

## Multiple APS Interface Configuration

To configure more than one protect/working interface on a router, you must use the **aps group** command. The following example shows the configuration of grouping more than one working/protect interface on a router. In this example, router A is configured with a working interface and a protect interface, and router B is configured with a working interface and a protect interface. If the working interface 2/0/0 on router A becomes unavailable, the connection will switchover to the protect interface 3/0/0 on router B because they are both in APS group 10. Similarly, if the working interface 2/0/0 on router B becomes unavailable, the connection will switchover to the protect interface 3/0/0 on router A because they are both in APS group 20.

**Figure 2 Multiple Working and Protect Interfaces Configuration**

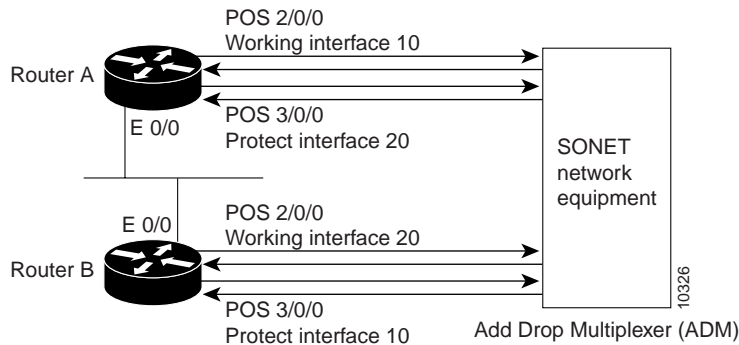

**Note** Configure the working interface before configuring the protect interface to avoid the protect interface from becoming the active circuit and disabling the working circuit when it is finally discovered.

On router A, which contains the working interface for group 10 and the protect interface for group 20, use the following configuration:

```
router# configure terminal
router(config)# interface ethernet 0/0
router(config-if)# ip address 7.7.7.6 255.255.255.0
router(config)# interface pos 2/0/0
router(config)# aps group 10
router(config-if)# aps working 1
router(config)# interface pos 3/0/0
router(config-if)# aps group 20
router(config-if)# aps protect 1 7.7.7.7
router(config-if)# end
router#
```

On router B, which contains the protect interface for group 10 and the working interface for group 20, use the following configuration:

```
router# configure terminal
router(config)# interface ethernet 0/0
router(config-if)# ip address 7.7.7.7 255.255.255.0
router(config)# interface pos 2/0/0
router(config)# aps group 20
router(config-if)# aps working 1
router(config)# interface pos 3/0/0
router(config-if)# aps group 10
router(config-if)# aps protect 1 7.7.7.6
router(config-if)# end
router#
```

To verify the configuration or to determine if a switchover has occurred, use the **show aps** command.

## Command Reference

This section documents new or modified commands. All other commands used with this feature are documented in the Cisco IOS Release 11.1 command references.

- **aps authenticate**
- **aps force**
- **aps group**
- **aps lockout**
- **aps manual**
- **aps protect**
- **aps protect**
- **aps revert**
- **aps timers**
- **aps unidirectional**
- **aps working**
- **pos report**
- **pos threshold**
- **show aps**
- **show controllers pos**

## aps authenticate

To enable authentication and specify the string that must be present to accept any packet on the out of band (OOB) communications channel, use the **aps authenticate** interface command. To disable authentication, use the **no** form of the command.

**aps authenticate** *string*  
**no aps authenticate**

### Syntax Description

*string*                      Text that must be present to accept the packet on a protected or working interface. Up to 8 alphanumeric characters are accepted.

### Default

Authentication is disabled.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps authenticate** command to ensure that only valid packets are accepted on the OOB communication channel.

The **aps authenticate** command must be configured on both the working and protect interfaces.

### Examples

The following example enables authentication on POS interface 0 in slot 4:

```
router# configure terminal
router(config)# interface pos 4/0/0
router(config-if)# aps working 1
router(config-if)# aps authenticate sanjose
router(config-if)# exit
router(config)# exit
router#
```

### Related Commands

**aps protect**  
**aps working**

## aps force

To manually switch the specified circuit to a protect interface, unless a request of equal or higher priority is in effect, use the **aps force** interface configuration command. To cancel the switch, use the **no** form of the command.

```
aps force circuit-number  
no aps force circuit-number
```

### Syntax Description

*circuit-number*            Number of the circuit to switch to the protect interface.

### Default

No circuit is switched.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps force** command to manually switch the interface to a protect interface when you are not using the **aps revert** command. For example, if you need to change the fiber connection, you can manually force the working interface to switch to the protect interface.

In a one-plus-one (1+1) configuration only, you can use the **aps force 0** command to force traffic from the protect interface back onto the working interface.

The **aps force** command has a higher priority than any of the signal failures or the **aps manual** command.

The **aps force** command is configured only on protect interfaces.

### Examples

The following example forces the circuit on POS interface 0 in slot 3 (a protect interface) back onto a working interface:

```
router# configure terminal  
router(config)# interface pos 3/0/0  
router(config-if)# aps protect 1  
router(config-if)# aps force 1  
router(config-if)# exit  
router(config)# exit  
router#
```

### Related Commands

**aps manual**  
**aps protect**  
**aps working**

## aps group

To allow more than one protect and working interface to be supported on a router, use the **aps group** interface configuration command. To remove a group, use the **no** form of the command.

```
aps group group-number  
no aps group group-number
```

### Syntax Description

*group-number*            Number of the group. The default group number is 0.

### Default

No groups exist.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps group** command to specify more than one working and protect interfaces on a router. For example, working channel for group 0 and protect channel for group 1 on one router and working channel for group 1 and protect channel for group 0 on another router.

The **aps group** command must be configured on both the protect and working interfaces.

### Examples

The following example configures two working/protect interface pairs. Working interface (3/0/0) is configured in group 10 (the protect interface for this working interface is configured on another router), and protect interface (2/0/1) is configured in group 20:

```
router# configure terminal  
router(config)# interface ethernet 0/0  
router(config-if)# ip address 7.7.7.6 255.255.255.0  
router(config)# interface pos 3/0/0  
router(config-if)# aps group 10  
router(config-if)# aps working 1  
router(config)# interface pos 2/0/1  
router(config-if)# aps group 20  
router(config-if)# aps protect 1 7.7.7.7  
router(config-if)# end
```

On the second router, protect interface (4/0/0) is configured in group 10, and working interface (5/0/0) is configured in group 20 (the protect interface for this working interface is configured on another router):

```
router(config)# interface ethernet 0/0  
router(config-if)# ip address 7.7.7.7 255.255.255.0  
router(config)# interface pos 4/0/0  
router(config-if)# aps group 10  
router(config-if)# aps protect 1 7.7.7.6  
router(config)# interface pos 5/0/0
```

```
router(config-if)# aps group 20  
router(config-if)# aps working 1  
router(config)# end  
router#
```

### Related Commands

**aps protect**

**aps working**

## aps lockout

To prevent a working interface from switching to a protect interface, use the **aps lockout** interface configuration command. To remove the lockout, use the **no** form of the command.

```
aps lockout circuit-number  
no aps lockout circuit-number
```

### Syntax Description

*circuit-number*            Number of the circuit to lock out.

### Default

No lockout exists.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

The **aps lockout** command is configured only on protect interfaces.

### Examples

The following example locks out (that is, prevents the circuit from switching to a protect interface in the event that the working circuit becomes unavailable) the POS interface 3/0/0:

```
router# configure terminal  
router(config)# interface pos 3/0/0  
router(config-if)# aps protect 1 7.7.7.7  
router(config-if)# aps lockout 1  
router(config-if)# end  
router#
```

### Related Commands

```
aps protect  
aps working
```

## aps manual

To manually switch a circuit to a protect interface, use the **aps manual** interface configuration command. To cancel the switch, use the **no** form of the command.

```
aps manual circuit-number  
no aps manual circuit-number
```

### Syntax Description

*circuit-number*            Number of the circuit to switch to a protect interface.

### Default

No circuit is switched.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps manual** command to manually switch the interface to a protect interface. For example, you can use this feature when you need to perform maintenance on the working channel. If a protection switch is already up, you can also use the **aps manual** command to revert the communication link back to the working interface before the wait to restore (WTR) time has expired. The WTR time period is set by the **aps revert** command.

In a one-plus-one (1+1) configuration only, you can use the **aps manual 0** command to force traffic from the protect interface back onto the working interface.

The **aps manual** command is a lower priority than any of the signal failures or the **aps force** command.

### Examples

The following example forces the circuit on POS interface 0 in slot 3 (a working interface) back onto the protect interface:

```
router# configure terminal  
router(config)# interface pos 3/0/0  
router(config-if)# aps working 1  
router(config-if)# aps manual 1  
router(config-if)# end  
router#
```

### Related Commands

```
aps force  
aps protect  
aps revert  
aps working
```

## aps protect

To enable a POS interface as a protect interface, use the **aps protect** interface command. To remove the POS interface as a protect interface, use the **no** form of the command.

**aps protect** *circuit-number ip-address*  
**no aps protect** *circuit-number ip-address*

### Syntax Description

*circuit-number*            Number of the circuit to enable as a protect interface.  
*ip-address*                IP address of the router that has the working POS interface.

### Default

No circuit is protected.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps protect** command to configure the POS interface used by a working interface if the working interface becomes unavailable due to a router failure, degradation or loss of channel signal, or manual intervention.

---

**Note** Configure the working interface before configuring the protect interface to avoid the protect interface from becoming the active circuit and disabling the working circuit when it is finally discovered.

---

### Examples

The following example configures circuit 1 on POS interface 5/0/0 as a protect interface for the working interface on the router with the IP address of 7.7.7.7. For information on how to configure the working interface, refer to the **aps working** command.

```
router# configure terminal
router(config)# interface pos 5/0/0
router(config-if)# aps protect 1 7.7.7.7
router(config-if)# end
router#
```

### Related Commands

**aps working**

## aps revert

To enable automatic switchover from the protect interface to the working interface after the working interface becomes available, use the **aps revert** interface command. To disable automatic switchover, use the **no** form of the command.

**aps revert** *minutes*  
**no aps revert**

### Syntax Description

*minutes*                      Number of minutes until the circuit is switched back to the working interface after the working interface is available.

### Default

Automatic switchover is disabled.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps revert** command to return the circuit to the working interface when it becomes available.

The **aps revert** command is configured only on protect interfaces.

### Examples

The following example enables circuit 1 on POS interface 5/0/0 to revert to the working interface after the working interface has been available for 3 minutes:

```
router# configure terminal
router(config)# interface pos 5/0/0
router(config-if)# aps protect 1 7.7.7.7
router(config-if)# aps revert 3
router(config-if)# end
router#
```

### Related Commands

**aps protect**

## aps timers

To change the time between hello packets and the time before the protect interface process declares a working interface's router to be down, use the **aps timers** interface configuration command. To return to the default timers, use the **no** form of the command.

```
aps timers seconds1 seconds2  
no aps timers
```

### Syntax Description

*seconds1*                      Number of seconds to wait before sending a hello packet (hello timer). The default is 1 second.

*seconds2*                      Number of seconds to wait to receive a response from a hello packet before the interface is declared down (hold timer). The default is 3 seconds.

### Default

Hello time is 1 second, and hold time is 3 seconds.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps timers** command to control the time between an automatic switchover from the protect interface to the working interface after the working interface becomes available.

Normally, the hold time is greater than or equal to three times the hello time.

The **aps timers** command is configured only on protect interfaces.

### Examples

The following example specifies a hello time of 2 seconds and a hold time of 6 seconds on circuit 1 on POS interface 5/0/0:

```
router# configure terminal  
router(config)# interface pos 5/0/0  
router(config-if)# aps working 1  
router(config-if)# aps timers 2 6  
router(config-if)# end  
router#
```

## aps unidirectional

To configure a protect interface for unidirectional mode, use the **aps unidirectional** interface configuration command. To return to the default, bidirectional mode, use the **no** form of the command.

```
aps unidirectional  
no aps unidirectional
```

### Syntax Description

This command has no keywords or arguments

### Default

Bidirectional mode.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Use the **aps unidirectional** command when you must interoperate with SONET network equipment (ADMs) that supports unidirectional mode.

---

**Note** We recommend bidirectional mode when it is supported by the interconnecting SONET equipment. When the protect interface is configured as unidirectional, the working and protect interfaces must cooperate to switch the transmit and receive SONET channel in a bidirectional fashion. This happens automatically when the SONET network equipment is in bidirectional mode.

---

The **aps unidirectional** command is configured only on protect interfaces.

### Examples

The following example configures POS interface 3/0/0 for unidirectional mode:

```
router# configure terminal  
router(config)# interface pos 3/0/0  
router(config-if)# aps unidirectional  
router(config-if)# aps protect 1 7.7.7.7  
router(config-if)# end  
router#
```

## aps working

To configure a POS interface as a working interface, use the **aps working** interface command. To remove the protect from the POS interface, use the **no** form of the command.

**aps working** *circuit-number*  
**no aps working** *circuit-number*

### Syntax Description

*circuit-number*           Circuit number associated with this working interface.

### Default

No circuit is configured as working.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

When a working interface becomes unavailable because of a router failure, degradation or loss of channel signal, or manual intervention, the circuit is switched to the protect interface to maintain the connection.

To enable the circuit on the protect interface to switch back to the working interface after the working interface becomes available again, use the **aps revert** interface configuration command.

---

**Note** Configure the working interface before configuring the protect interface to avoid the protect interface from becoming the active circuit and disabling the working circuit when it is finally discovered.

---

### Examples

The following example configures the POS interface 0 in slot 4 as a working interface. For information on how to configure the protect interface, refer to the **aps protect** command.

```
router# configure terminal
router(config)# interface pos 4/0/0
router(config-if)# aps working 1
router(config-if)# end
router#
```

### Related Commands

**aps protect**  
**aps revert**

## pos report

To permit selected SONET alarms to be logged to the console for a POS interface, use the **pos report** interface command. To disable logging of select SONET alarms, use the **no** form of this command.

```
pos report {b1-tca | b2-tca | b3-tca | lais | lrdi | pais | plop | prdi | rdool | sd-ber | sf-ber |
slof | slos}
no pos report {b1-tca | b2-tca | b3-tca | lais | lrdi | pais | plop | prdi | rdool | sd-ber | sf-ber |
slof | slos}
```

### Syntax Description

<b>b1-tca</b>	Report B1 bit error rate (BER) threshold crossing alarm errors. Reported by default.
<b>b2-tca</b>	Report B2 BER threshold crossing alarm errors. Reported by default.
<b>b3-tca</b>	Report B3 BER threshold crossing alarm errors. Reported by default.
<b>lais</b>	Report line alarm indication signal errors.
<b>lrdi</b>	Report line remote defect indication errors.
<b>pais</b>	Report path alarm indication signal errors.
<b>plop</b>	Report path loss of pointer errors. Reported by default.
<b>prdi</b>	Report path remote defect indication errors.
<b>rdool</b>	Report receive data out of lock errors.
<b>sd-ber</b>	Report signal degradation BER errors.
<b>sf-ber</b>	Report signal failure BER errors. Reported by default.
<b>slof</b>	Report section loss of frame errors. Reported by default.
<b>slos</b>	Report section loss of signal errors. Reported by default.

### Default

**b1-tca**, **b2-tca**, **b3-tca**, **plop**, **sf-ber**, **slof**, and **slos** are reported by default.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

Reporting an alarm means that the alarm can be logged to the console. Just because an alarm is permitted to be logged does not guarantee that it is logged. SONET alarm hierarchy rules dictate that only the most severe alarm of an alarm group is reported. Whether an alarm is reported or not, you can view the current state of a defect by checking the “Active Defects” line from the **show controllers pos** command output. A defect is a problem indication that is a candidate for an alarm.

For B1, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B1 byte of the following frame. Differences indicate that section level bit errors have occurred.

For B2, the bit interleaved parity error report is calculated by comparing the BIP-8/24 code with the BIP-8 code extracted from the B2 byte of the following frame. Differences indicate that line level bit errors have occurred.

For B3, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B3 byte of the following frame. Differences indicate that path level bit errors have occurred.

PAIS is sent by line terminating equipment (LTE) to alert the downstream path terminating equipment (PTE) that it has detected a defect on its incoming line signal.

PLOP is reported as a result of an invalid pointer (H1, H2) or an excess number of new data flag (NDF) enabled indications.

SLOF is detected when a severely error framing (SEF) defect on the incoming SONET signal persists for 3 milliseconds.

SLOS is detected when an all-zeros pattern on the incoming SONET signal lasts 19(+3) microseconds or longer. This defect might also be reported if the received signal level drops below the specified threshold.

To determine the alarms that are reported on the interface, use the **show controllers pos** command.

### Example

The following example enables reporting of SD-BER and LAIS alarms on the interface:

```
Router(config)# interface pos 3/0/0
Router(config-if)# pos report sd-ber
Router(config-if)# pos report lais
Router(config-if)# end
Router#
```

### Related Commands

**interface pos**

**show controllers pos**

## pos threshold

To set the BER threshold values of the specified alarms for a POS interface, use the **pos threshold** interface command. To return to the default setting, use the **no** form of this command.

```
pos threshold {b1-tca | b2-tca | b3-tca | sd-ber | sf-ber} rate
no pos threshold {b1-tca | b2-tca | b3-tca | sd-ber | sf-ber} rate
```

### Syntax Description

<b>b1-tca</b>	B1 bit error rate (BER) threshold crossing alarm.
<b>b2-tca</b>	B2 BER threshold crossing alarm.
<b>b3-tca</b>	B3 BER threshold crossing alarm.
<b>sd-ber</b>	Signal degrade BER threshold.
<b>sf-ber</b>	Signal failure BER threshold.
<i>rate</i>	Bit error rate from 3 to 9 (10-n). The default is 6 for all thresholds except for the <b>sf-ber</b> . For <b>sf-ber</b> , the default is 3 (that is, 10e-3).

### Default

The default is 6 for **b1-tca**, **b2-tca**, **b3-tca**, and **sd-ber**. The default is 3 for **sf-ber**.

### Command Mode

Interface configuration

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

For B1, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B1 byte of the following frame. Differences indicate that section level bit errors have occurred.

For B2, the bit interleaved parity error report is calculated by comparing the BIP-8/24 code with the BIP-8 code extracted from the B2 byte of the following frame. Differences indicate that line level bit errors have occurred.

For B3, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B3 byte of the following frame. Differences indicate that path level bit errors have occurred.

SF-BER and SD-BER are sourced from B2 BIP-8 error counts (as is B2-TCA). However, SF-BER and SD-BER feed into the APS machine and can lead to a protection switch (if APS is configured).

B1-TCA, B2-TCA, and B3-TCA do nothing more than print a log message to the console (if reports for them are enabled).

To determine the BER thresholds configured on the interface, use the **show controllers pos** command.

### Example

The following example configures thresholds on the interface:

```
Router(config)# interface pos 3/0/0
Router(config-if)# pos threshold sd-ber 8
Router(config-if)# pos threshold sf-ber 4
Router(config-if)# pos threshold b1_tca 4
Router(config-if)# end
Router#
```

### Related Commands

**interface pos**

**show controllers pos**

## show aps

To display information about the current automatic protection switching (APS) feature, use the **show aps** EXEC command.

```
show aps
```

### Syntax Description

This command has no arguments or keywords.

### Command Mode

Privileged EXEC

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC.

### Sample Displays

The following is sample output of the **show aps** command on a router configured with a working interface. In this example, POS interface 0/0/0 is configured as a working interface in group 1, and the interface is selected (that is, active).

```
router1# show aps
POS0/0/0 working group 1 channel 1 Enabled Selected
```

The following is sample output of the **show aps** command on a router configured with a protect interface. In this example, POS interface 2/0/0 is configured as a protect interface in group 1, and the interface is not selected (the ~ indicates that the interface is not active). The output also shows that the working channel is located on the router with the IP address 15.1.6.1 and that the interface is currently selected (that is, active).

```
router2# show aps
POS2/0/0 protect group 1 channel 0 bidirectional ~Selected
Rx_K1= 0, Rx_K2= 0 Tx_K1= 0 Tx_K2= 5
Working channel 1 at 15.1.6.1 Enabled
```

For the K1 field (8 bits), the first 4 bits indicate the channel number that has made the request, and the last 4 bits map to the the requests (local or external) listed in Table 1. For K2 field (8 bits), the first 4 bits indicate the channel number bridged onto the protect line, the next bit is the architecture used, and the last 3 bits indicate the mode of operation or non-APS use listed in Table 2.

**Table 1 K1 Bit Descriptions**

Bits (hex)	Description
<b>K1 Bits 87654321</b>	
<b>Bits 8 through 5</b>	
nnnn	Channel number that made the request.
<b>Bits 4 through 1</b>	
1111 (0xF)	Lockout of protection request.
1110 (0xE)	Forced switch request.

**Table 1 K1 Bit Descriptions (Continued)**

<b>Bits (hex)</b>	<b>Description</b>
1101 (0xD)	Signal failure (SF)—high priority request.
1100 (0xC)	Signal failure (SF)—low priority request.
1011 (0xB)	Signal degradation (SD)—high priority request.
1010 (0xA)	Signal degradation (SD)—low priority request.
1001 (0x9)	Not used.
1000 (0x8)	Manual switch request.
0111 (0x7)	Not used.
0110 (0x6)	Wait to restore request.
0101 (0x5)	Not used.
0100 (0x4)	Exercised request.
0011 (0x3)	Not used.
0010 (0x2)	Reverse request.
0001 (0x1)	Do not revert request.
0000 (0x0)	No request.

**Table 2 K2 Bits Descriptions**

<b>Bits</b>	<b>Description</b>
<b>K2 Bits 87654321</b>	
<b>Bits 8 through 5</b>	
nnnn	Channel number bridged on the protection line.
<b>Bit 4</b>	
1	One to n (1:n) architecture.
0	One plus one (1+1) architecture.
<b>Bits 3 through 1</b>	
111	Line AIS.
110	Line RDI.
101	Bidirectional operation mode.
100	Unidirectional operation mode.
other	Reserved.

**Related Commands**

- aps protect**
- aps working**

## show controllers pos

To display information about the POS controllers, use the **show controllers pos** privileged EXEC command.

**show controllers pos** [*slot-number*] [**details**]

### Syntax Description

<i>slot-number</i>	(Optional) The chassis slot that contains the POS interface. For the Cisco 7500 series, use slot/port-adapter/port (for example, 2/0/0). For the Cisco 12000 series, use slot/port (for example, 4/0). The "/" is required. If you do not specify a slot number, information for all the installed POS controllers is displayed.
<b>details</b>	(Optional) In addition to the normal information displayed by the show controllers pos command, the details option provides a hexadecimal and ASCII "dump" of the path trace buffer.

### Command Mode

Privileged EXEC

### Usage Guidelines

This command first appeared in Cisco IOS Release 11.1 CC and 11.2 GS.

The information displayed is generally useful for diagnostic tasks performed by technical support personnel only.

### Sample Display

The following is sample output of the **show controllers pos** command on a Cisco 7500 series router:

```
router# show controllers pos
POS2/0/0
SECTION
  LOF = 0           LOS = 2335           BIP(B1) = 77937133
LINE
  AIS = 2335       RDI = 20           FEBE = 3387950089 BIP(B2) = 1622825387
PATH
  AIS = 2340       RDI = 66090        FEBE = 248886263  BIP(B3) = 103862953
  LOP = 246806     NEWPTR = 11428072  PSE = 5067357     NSE = 4645

Active Defects: B2-TCA B3-TCA
Active Alarms:  None
Alarm reporting enabled for: B1-TCA

APS
COAPS = 12612784  PSBF = 8339
State: PSBF_state = False
Rx(K1/K2): 00/CC Tx(K1/K2): 00/00
S1S0 = 03, C2 = 96
CLOCK RECOVERY
RDOOL = 64322060
State: RDOOL_state = True
PATH TRACE BUFFER: UNSTABLE
Remote hostname :
```

```

Remote interface:
Remote IP addr  :
Remote Rx(K1/K2): ../.. Tx(K1/K2): ../..
BER thresholds: SF = 10e-3 SD = 10e-8
TCA thresholds: B1 = 10e-7 B2 = 10e-3 B3 = 10e-6
router#
    
```

Table 3 describes the fields shown in the display.

**Table 3 Show Controllers POS Field Descriptions**

Field	Description
POS2/0/0	Slot number of the POS interface.
LOF	Section loss of frame is detected when a severely error framing (SEF) defect on the incoming SONET signal persist for 3 milliseconds.
LOS	Section loss of signal is detected when an all-zeros pattern on the incoming SONET signal lasts 19(+3) microseconds or longer. This defect might also be reported if the received signal level drops below the specified threshold.
BIP(B1)/BIP(B2)/BIP(B3)	Bit interleaved parity error reported.  For B1, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B1 byte of the following frame. Differences indicate that section level bit errors have occurred.  For B2, the bit interleaved parity error report is calculated by comparing the BIP-8/24 code with the BIP-8 code extracted from the B2 byte of the following frame. Differences indicate that line level bit errors have occurred.  For B3, the bit interleaved parity error report is calculated by comparing the BIP-8 code with the BIP-8 code extracted from the B3 byte of the following frame. Differences indicate that path level bit errors have occurred.
AIS	Alarm indication signal.  Line alarm indication signal is sent by the section terminating equipment (STE) to alert the downstream line terminating equipment (LTE) that a LOS or LOF defect has been detected on the incoming SONET section.  Path alarm indication signal is sent by the LTE to alert the downstream path terminating equipment (PTE) that it has detected a defect on its incoming line signal.
RDI	Remote defect indication.  Line remote defect indication is reported by the downstream LTE when it detects LOF, LOS, or AIS.  Path remote defect indication is reported by the downstream PTE when it detects a defect on the incoming signal.
FEBE	Far end block errors.  Line far end block error (accumulated from the M0 or M1 byte) is reported when the downstream LTE detects BIP(B2) errors.  Path far end block error (accumulated from the G1 byte) is reported when the downstream PTE detects BIP(B3) errors.
LOP	Path loss of pointer is reported as a result of an invalid pointer (H1, H2) or an excess number of new data flag (NDF) enabled indications.
NEWPTR	An inexact count of the number of times the SONET framer has validated a new SONET pointer value (H1,H2).

**Table 3 Show Controllers POS Field Descriptions (Continued)**

<b>Field</b>	<b>Description</b>
PSE	An inexact count of the number of times the SONET framer has detected a positive stuff event in the received pointer (H1, H2).
NSE	An inexact count of the number of times the SONET framer has detected a negative stuff event in the received pointer (H1, H2).
Active Defects	List of all currently active SONET defects.
Active Alarms	List of current Alarms as enforced by Sonet Alarm Hierarchy.
Alarm reporting enabled for	List of alarms that you enabled reporting for with the <b>pos report</b> interface command.
APS	Automatic protection switching.
COAPS	An inexact count of the number of times a new APS value has been detected in the K1, K2 bytes.
PSBF	An inexact count of the number of times a protection switching byte failure has been detected (no three consecutive SONET frames contain identical K1 bytes).
PSBF_state	Protection switching byte failure state.
Rx(K1/K2)/Tx(K1/K2)	Contents of the received and transmitted K1 and K2 bytes. For more information on the K1 field, refer to Table 1. For more information on the K2 field, refer to Table 2.
S1S0	The two S bits received in the last H1 byte.
C2	The value extracted from the SONET path signal label byte (C2).
CLOCK RECOVERY	SONET clock is recovered using information in the SONET overhead. RDOOL is an inexact count of the number of times Receive Data Out Of Lock has been detected which indicates the clock recovery phased lock loop is unable to lock to the receive stream.
PATH TRACE BUFFER	SONET path trace buffer is used to communicate information regarding the remote hostname, interface name/number and IP address. This is a Cisco-proprietary use of the J1 (path trace) byte.
BER thresholds	List of the bit error rate (BER) thresholds you configured with the <b>pos threshold</b> interface command.
TCA thresholds	List of threshold crossing alarms (TCA) you configured with the <b>pos threshold</b> interface command.

