



Quick Start Guide




Cisco PIX 501 Firewall Quick Start Guide **For Cisco PIX Firewall Version 6.2 and PDM Version 2.1**

- 1** About the Cisco PIX 501 Firewall 2
- 2** Check Items Included 3
- 3** Connect the Cables 4
- 4** Power On the PIX 501 5
- 5** Check the LEDs 6
- 6** (Optional) Install a Cable Lock 7
- 7** Configuring the PIX 501 8
- 8** PDM Startup Wizard 8
- 9** Alternative Ways to Access the PIX 501 10
- 10** Upgrade to DES, 3DES, or a 50-User License 11
- 11** Restore the Default Configuration 13

1 About the Cisco PIX 501 Firewall

The PIX 501 delivers enterprise-class security for small offices and telecommuters in a reliable, plug-and-play security appliance. Ideal for securing high-speed “always on” broadband environments, the PIX 501, part of the market-leading Cisco PIX Firewall Series, provides robust security capabilities, small office networking features, and powerful remote management capabilities in a compact, all-in-one solution:

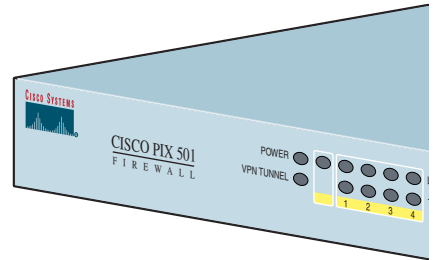

- Stateful inspection security based on state-of-the-art Adaptive Security Algorithm (ASA)
- Supports over 100 predefined applications, services, and protocols for flexible access control
- Virtual Private Networking (VPN) for secure remote network access using IKE/IPSec standards
- Intrusion protection from over 55 different network-based attacks
- URL filtering of outbound web traffic via industry-leading, third-party URL filtering products
- Integrated switch allows multiple users to share a single broadband connection

Hardware Features



- Compact, desktop chassis
- External power supply
- 133-MHz processor
- 16-MB RAM, 8-MB Flash memory
- 1 10BaseT Ethernet port (half duplex) for an outside connection to the Internet (port 0)
- Integrated 4-port 10/100-Mbps Ethernet switch for inside private LAN (ports 1 through 4)
- Serial console port for administrative access
- Security lock slot for added physical security
- Front panel LEDs for appliance and link status
- 10-Mbps cleartext firewall throughput
- 3-Mbps VPN throughput (3DES/SHA1)

Software Features


- Supports PIX Firewall version 6.1 (and higher), a secure, purpose-built embedded operating system
- Includes plug-and-play default configuration for simplified installation
- Includes Cisco PIX Device Manager (PDM) for intuitive, web-based administration of PIX Firewalls
- Supports up to 10 active hosts (an active host is one that has passed traffic through the PIX in the last xlate timeout seconds, or has reserved an authentication connection); up to 50 users with optional 50-user license
- Internal DHCP server supports up to 32 DHCP address leases; up to 128 with optional 50-user license
- Supports up to 5 remote access, or site-to-site, VPN peers




2 Check Items Included

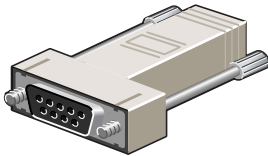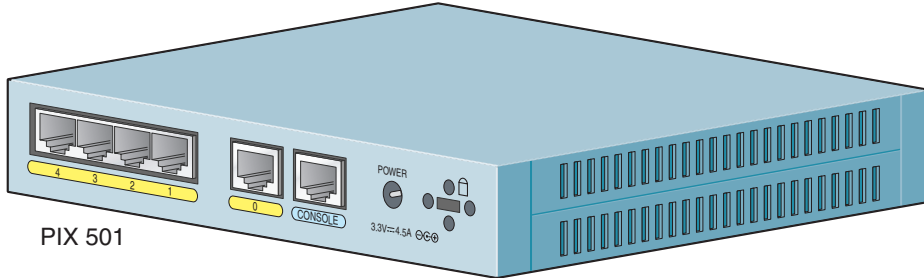


PC terminal adapter
(74-0495-01)

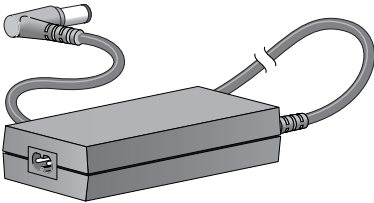


Power supply
(341-0008-01)

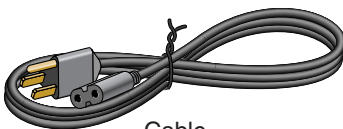

Cable
(US shown)
(72-0259)




Blue console cable
(72-1259-01)



Yellow Ethernet cable
(72-1482-01)




Orange Ethernet
Crossover cable
(72-3515-01)

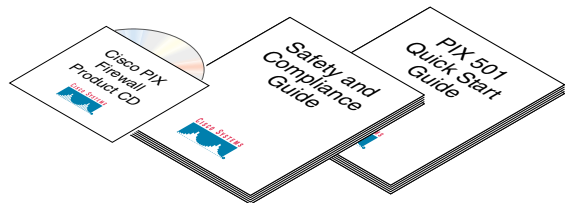

Documentation

3 Connect the Cables

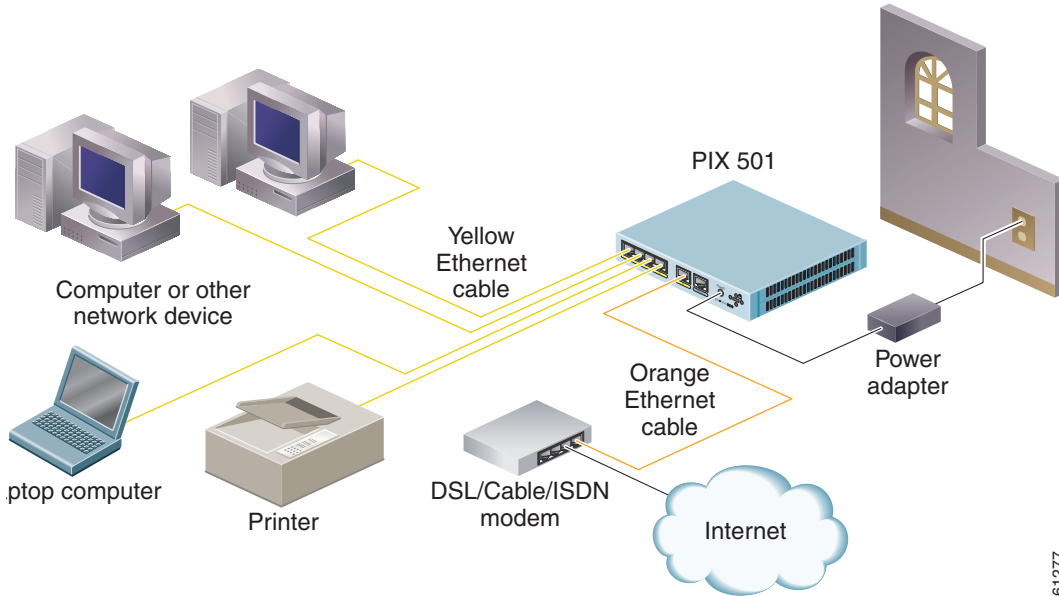

61277

Follow these steps to connect the cables:


-
- Step 1** Place the chassis on a flat, stable surface. The chassis is not rack mountable.
 - Step 2** Connect Port 0, the outside Ethernet port, to the public network:
 - a. Use the yellow Ethernet cable (72-1482-01) to connect the device to a switch or hub.
 - b. Use the orange Ethernet cable (72-3515-01) to connect the device to a cable/DSL/ISDN modem.
 - Step 3** Connect your PC or other network devices with an Ethernet cable (not provided) to one of the four switched inside ports (numbered 1 through 4).



Note

Make sure that one of the PCs has TCP/IP installed and is configured to obtain an IP address automatically through DHCP. This allows the PC to communicate with the PIX 501 and the Internet as well as run the PDM Startup Wizard.

4 Power On the PIX 501

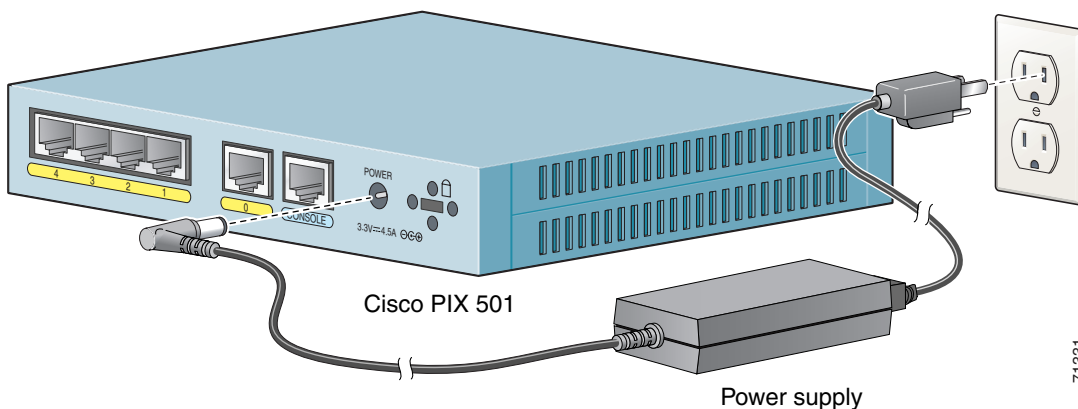

Follow these steps to power on the PIX Firewall:


- Step 1** Connect the small, round connector of the power supply cable to the power connector on the rear panel.
- Step 2** Connect the AC power connector of the power supply input cable to an electrical outlet.



Note

The PIX 501 does not have a power switch. Completing Step 2 powers on the device.

5 Check the LEDs

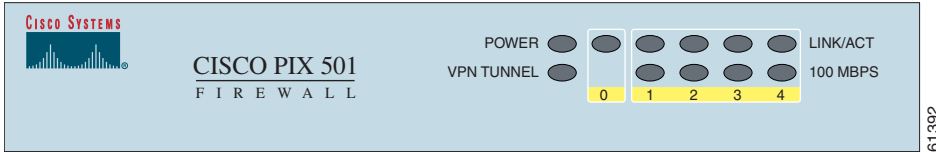


The LINK/ACT LED indicators on the front panel of the PIX Firewall are normally solid green when a link is established and flashing green when the ports are active. Each inside Ethernet interface (1 through 4) has two LEDs to indicate the operating speed and that the physical link is established.




Note If all LEDs are operating as expected (see Table 1), this concludes the hardware installation. The pages that follow include instructions on running PDM and additional optional procedures.

Table 1 PIX 501 LEDs

LED	State	Description
POWER	Green	The device is powered on.
	Off	The device is powered off.
LINK/ACT	Flashing green	Network activity, such as Internet access, is present.
	Green	The correct cable is in use, and the connected equipment has power.
	Off	No link is established.
		 <p>Tip If the LINK/ACT LED does not light up, you might be using the wrong type of cable. Try replacing the yellow (straight-through) Ethernet cable with the orange (crossover) Ethernet cable.</p>
VPN TUNNEL	Green	One or more IKE/IPSec VPN tunnels are active.
	Off	No VPN tunnels are active. The default configuration does not include VPN. Thus, the VPN tunnel LED will only be enabled if VPN is added to your configuration and a VPN tunnel is then established. Also, the LED does not light up when PPTP/L2TP tunnels are established.
100 MBPS	Green	The interface is autonegotiated at 100-Mbps half or full duplex.
	Flashing green	The interface is functioning at 10-Mbps half or full duplex.



6 (Optional) Install a Cable Lock

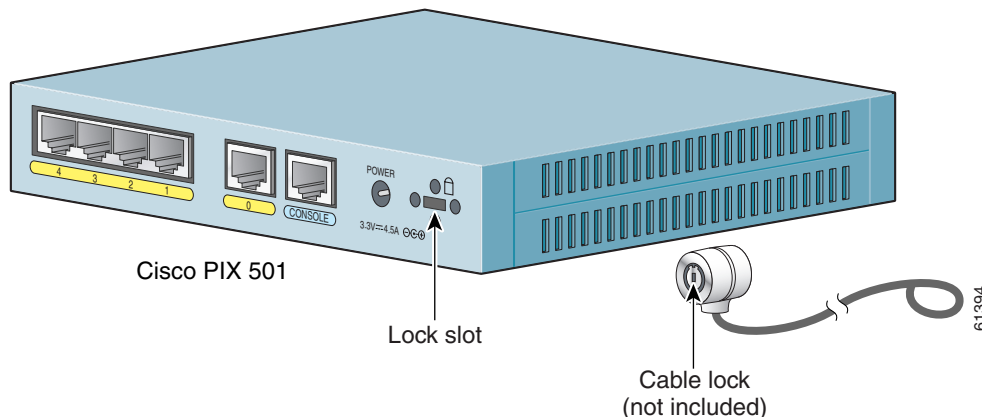

The PIX 501 includes a slot that accepts standard desktop cable locks to provide physical security for small portable equipment, such as a laptop computer. The cable lock is not included.

Follow these steps to install a cable lock:

-
- Step 1** Attach the cable lock (not included) to the lock slot on the back panel of the PIX 501.
 - Step 2** Follow the directions from the manufacturer for attaching the other end of the device for securing the PIX Firewall.
-

7 Configuring the PIX 501

The PIX 501 comes with a factory default configuration that meets the needs of most broadband networking environments. The factory default configuration on the PIX 501 protects your inside network from any unsolicited traffic. It is configured to use DHCP on the outside interface to acquire its IP address. A default DHCP server address pool is included for hosts on the inside interface.

PDM contains a Startup Wizard that lets you easily change settings to suit your needs.

Instances in which it might be necessary to change or make additional changes to the default configuration include the following:

- To create administrative and Telnet passwords




Note

We highly recommend that you change the administrative and Telnet passwords from their default settings to secure the administration of your PIX Firewall.

- To configure Point-to-Point Protocol over Ethernet (PPPoE) or a static IP address for an outside interface
- To configure VPN and Auto Update features

8 PDM Startup Wizard

The PIX 501 contains an integrated configuration utility called Cisco PIX Device Manager (PDM). PDM is a web browser-based configuration tool designed to help you set up, configure, and monitor the PIX Firewall. PDM is preinstalled on the PIX 501. To access PDM, make sure JavaScript and Java are enabled in your web browser. For best performance, we recommend that you use Microsoft Internet Explorer 5.5 or a higher release. Refer to the *Cisco PIX Device Manager Installation Guide* for more information on the operating system and Web browser environments supported by PDM.

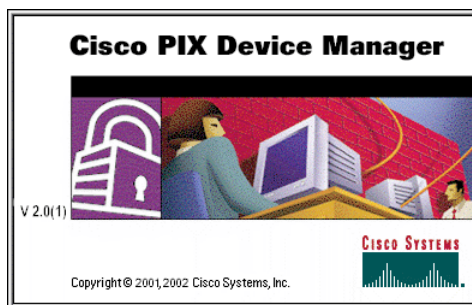



PDM version 2.0 and higher releases include a Startup Wizard for initial configuration. Follow these steps to load PDM and use the Startup Wizard:

Step 1 Use an Ethernet cable to connect your PC to one of the four switched inside ports (numbered 1 through 4) on the rear panel of the PIX Firewall.

Step 2 Configure your PC to use DHCP (to receive an IP address automatically from the PIX Firewall) or assign a static IP address to your PC by selecting an address out of the 192.168.1.0 network.



Note The inside interface of the PIX Firewall is assigned 192.168.1.1, so choose a different IP address.

Step 3 Check the LINK LED to verify that your PC has basic connectivity to the PIX Firewall on one of the inside ports (1 through 4). When connectivity occurs, the LINK LED on the front panel of the PIX Firewall lights up solid green.

Step 4 To access the Startup Wizard, use a PC connected to one of the PIX Firewall switch ports and enter the URL **https://192.168.1.1/startup.html** into your browser.




Note It is very important to enter the “s” in “**https://192.168.1.1**,” which indicates a secure connection. If you enter “**http://192.168.1.1**” without the “s” in “**https**,” you cannot access the PIX Firewall.

Step 5 Accept the certificates and follow the instructions in the Startup Wizard. For online help, click the Help button at the bottom of the Startup Wizard window.

9 Alternative Ways to Access the PIX 501

You can use a serial terminal emulator from a PC or workstation connected to the Console port for local administrative access.

You can also use PDM or a console to configure Telnet access to the PIX Firewall. By default, Telnet access is not permitted. To Telnet to the PIX Firewall from the outside perimeter of the firewall, configure an outside IP address and IPSec for a secure Telnet session. For more information, refer to the *Cisco PIX Firewall and VPN Configuration Guide*.

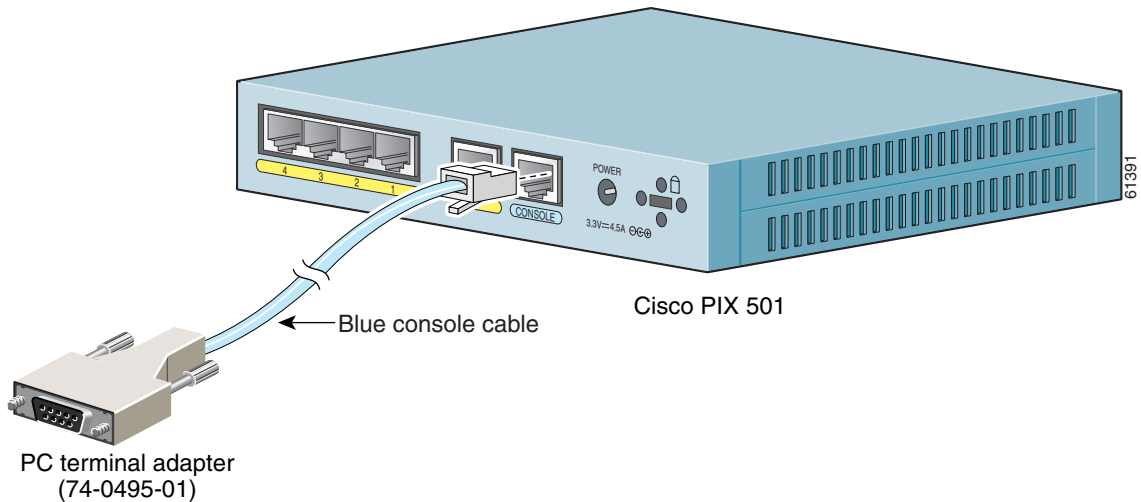

Follow these steps to connect a console for local administrative access:

-
- Step 1** Plug one end of the console cable adapter (29-0810-01) into a standard 9-pin PC serial port.
 - Step 2** Plug one end of the blue console cable (72-1259-01) into the console cable adapter.
 - Step 3** Plug the other end of the blue console cable into the Console port.
 - Step 4** Configure the PC terminal emulation software or terminal for 9600 baud, 8 data bits, no parity, and 1 stop bit.
-

Refer to the *Cisco PIX Firewall and VPN Configuration Guide* for information about how to use the command-line interface (CLI).



10 Upgrade to DES, 3DES, or a 50-User License



Note The following instructions are applicable to PIX Firewall version 6.2 and higher releases. If you are not running PIX Firewall version 6.2, refer to the Quick Start Guide for the version of software installed on your Cisco PIX Firewall.

To upgrade features you did not specify at the time of purchase, you need to use an activation key. The activation key lets you add software features to the PIX Firewall, such as DES (free), 3DES (not free), or a 50-user license.

To request a free activation key for DES, complete the online form at the following website:

<http://www.cisco.com/cgi-bin/Software/FormManager/formgenerator.pl?pid=221&fid=324>

PIX Software Information

PIX firewall 5.0 supports IPSEC for both 56bit and 168bit encryption. The 56bit key is free by registering on this page. For more information, contact your Cisco Systems account manager.

Please make sure you fill out the following important information:

PIX Firewall Serial Number: *

Email PIX License Upgrade Key should be sent to:
(if same as above, leave blank)

Should you have any questions, comments, or problems please send email to licensing@cisco.com or call 800-553-NETS.

Note: Fields marked with an asterisk (*) are required fields.

633669



Note If you are unable to access this form because you do not have a CCO login, send an e-mail to licensing@cisco.com. In the e-mail include the PIX Firewall serial number as it appears in the **show version** command and request a free 56-bit DES key.

To purchase an activation key for 3DES (PIX-501-VPN-3DES=) or a 50-user license (PIX-501-SW-10-50=), go to Cisco's ordering website:

http://www.cisco.com/public/Ordering_root.shtml



Note You can verify if you have DES, 3DES or a 50-user license features using the **show activation-key** command.

Follow these steps to use an activation key:

Step 1 Ensure that the image in Flash memory and the Running Image are the same.

Step 2 From the CLI, enter the **activation-key** *activation-key-four-tuple* command, replacing *activation-key-four-tuple* with the activation key obtained from Cisco.



Note Make sure that you are in config mode to enter a new activation key.

Step 3 Reboot the PIX Firewall by powering it off and then on again.

After the key update is complete, the system is reloads again to update the running image.

For activation key examples or upgrade troubleshooting, refer to the *Cisco PIX Firewall and VPN Configuration Guide*, available at the following website:

http://www.cisco.com/univercd/cc/td/doc/product/iaabu/pix/pix_62/index.htm

Active Host Limitation

The PIX 501 supports up to 10 active hosts on the inside network, or 50 active hosts on the inside network if the optional 50-User License has been purchased. A host is considered active when any of the following statements are true:

- The host has passed traffic through the PIX Firewall during the time configured for the xlate timeout interval
- The host has an established NAT/PAT translation through the PIX Firewall
- The host has an established TCP connection or UDP session through the PIX Firewall
- The host has an established user authentication through the PIX Firewall

Refer to the **System Properties>Timeout** online help within PDM for the default inactivity timeout values associated with each of the preceding bulleted items.



11 Restore the Default Configuration



Caution Entering the `config factory-default` command erases the current running configuration.

If you inadvertently erase the default configuration or need to restore the default configuration, you can restore the factory default values in one of the following ways:

- Run the Startup Wizard and click **Reset PIX to Factory Default Configuration** from the Starting Configuration page.
- Use PDM and click **File>Reset PIX to Factory Default Configuration**.
- Use PDM or a terminal emulation program and enter the following commands:

	Command	Description
Step 1	<code>configure factory-default [inside ip address [address_mask]]</code> ¹	Erases the running configuration and replaces it with the factory default configuration.
Step 2	<code>write memory</code>	Writes the factory default configuration to Flash memory.

1. If the optional inside IP address and optional address mask are specified, the factory-default configuration will reflect the specified IP address.



Note The `config factory-default` command considers both licensing and platform in creating DHCP pool sizes of 32 or 128.

Refer to the following website for detailed command information and configuration examples:

http://cisco.com/univercd/cc/td/doc/product/iaabu/pix/pix_62/cmd_ref/index.htm

The Cisco TAC website is available to all customers who need technical assistance. To access the TAC Website go to:

<http://www.cisco.com/tac>

12 Obtaining Documentation

Cisco provides several ways to obtain documentation, technical assistance, and other technical resources. These sections explain how to obtain technical information from Cisco Systems.

Cisco.com

You can access the most current Cisco documentation on the World Wide Web at this URL:

<http://www.cisco.com/univercd/home/home.htm>

You can access the Cisco website at this URL:

<http://www.cisco.com>

International Cisco websites can be accessed from this URL:

http://www.cisco.com/public/countries_languages.shtml

Documentation CD-ROM

Cisco documentation and additional literature are available in a Cisco Documentation CD-ROM package, which may have shipped with your product. The Documentation CD-ROM is updated regularly and may be more current than printed documentation. The CD-ROM package is available as a single unit or through an annual or quarterly subscription.

Registered Cisco.com users can order a single Documentation CD-ROM (product number DOC-CONDOCCD=) through the Cisco Ordering tool:

http://www.cisco.com/en/US/partner/ordering/ordering_place_order_ordering_tool_launch.html

All users can order annual or quarterly subscriptions through the online Subscription Store:

<http://www.cisco.com/go/subscription>

Ordering Documentation

You can find instructions for ordering documentation at this URL:

http://www.cisco.com/univercd/cc/td/doc/es_inpk/pdi.htm

You can order Cisco documentation in these ways:

- Registered Cisco.com users (Cisco direct customers) can order Cisco product documentation from the Networking Products MarketPlace:



<http://www.cisco.com/en/US/partner/ordering/index.shtml>

- Nonregistered Cisco.com users can order documentation through a local account representative by calling Cisco Systems Corporate Headquarters (California, USA.) at 408 526-7208 or, elsewhere in North America, by calling 800 553-NETS (6387).

Documentation Feedback

You can submit comments electronically on Cisco.com. On the Cisco Documentation home page, click **Feedback** at the top of the page.

You can send your comments in e-mail to bug-doc@cisco.com.

You can submit comments by using the response card (if present) behind the front cover of your document or by writing to the following address:

Cisco Systems
Attn: Customer Document Ordering
170 West Tasman Drive
San Jose, CA 95134-9883

We appreciate your comments.

13 Obtaining Technical Assistance

For all customers, partners, resellers, and distributors who hold valid Cisco service contracts, the Cisco Technical Assistance Center (TAC) provides 24-hour, award-winning technical support services, online and over the phone. Cisco.com features the Cisco TAC website as an online starting point for technical assistance.

Cisco TAC Website

The Cisco TAC website (<http://www.cisco.com/tac>) provides online documents and tools for troubleshooting and resolving technical issues with Cisco products and technologies. The Cisco TAC website is available 24 hours a day, 365 days a year.

Accessing all the tools on the Cisco TAC website requires a Cisco.com user ID and password. If you have a valid service contract but do not have a login ID or password, register at this URL:

<http://tools.cisco.com/RPF/register/register.do>

Opening a TAC Case

The online TAC Case Open Tool (<http://www.cisco.com/tac/caseopen>) is the fastest way to open P3 and P4 cases. (Your network is minimally impaired or you require product information). After you describe your situation, the TAC Case Open Tool automatically recommends resources for an immediate solution. If your issue is not resolved using these recommendations, your case will be assigned to a Cisco TAC engineer.

For P1 or P2 cases (your production network is down or severely degraded) or if you do not have Internet access, contact Cisco TAC by telephone. Cisco TAC engineers are assigned immediately to P1 and P2 cases to help keep your business operations running smoothly.

To open a case by telephone, use one of the following numbers:

Asia-Pacific: +61 2 8446 7411 (Australia: 1 800 805 227)

EMEA: +32 2 704 55 55

USA: 1 800 553-2447

For a complete listing of Cisco TAC contacts, go to this URL:

<http://www.cisco.com/warp/public/687/Directory/DirTAC.shtml>

TAC Case Priority Definitions

To ensure that all cases are reported in a standard format, Cisco has established case priority definitions.

Priority 1 (P1)—Your network is “down” or there is a critical impact to your business operations. You and Cisco will commit all necessary resources around the clock to resolve the situation.

Priority 2 (P2)—Operation of an existing network is severely degraded, or significant aspects of your business operation are negatively affected by inadequate performance of Cisco products. You and Cisco will commit full-time resources during normal business hours to resolve the situation.

Priority 3 (P3)—Operational performance of your network is impaired, but most business operations remain functional. You and Cisco will commit resources during normal business hours to restore service to satisfactory levels.

Priority 4 (P4)—You require information or assistance with Cisco product capabilities, installation, or configuration. There is little or no effect on your business operations.



14 Obtaining Additional Publications and Information

Information about Cisco products, technologies, and network solutions is available from various online and printed sources.

- The *Cisco Product Catalog* describes the networking products offered by Cisco Systems, as well as ordering and customer support services. Access the *Cisco Product Catalog* at this URL:
http://www.cisco.com/en/US/products/products_catalog_links_launch.html
- Cisco Press publishes a wide range of networking publications. Cisco suggests these titles for new and experienced users: *Internetworking Terms and Acronyms Dictionary*, *Internetworking Technology Handbook*, *Internetworking Troubleshooting Guide*, and the *Internetworking Design Guide*. For current Cisco Press titles and other information, go to Cisco Press online at this URL:
<http://www.ciscopress.com>

Packet magazine is the Cisco quarterly publication that provides the latest networking trends, technology breakthroughs, and Cisco products and solutions to help industry professionals get the most from their networking investment. Included are networking deployment and troubleshooting tips, configuration examples, customer case studies, tutorials and training, certification information, and links to numerous in-depth online resources. You can access Packet magazine at this URL:

<http://www.cisco.com/go/packet>

- iQ Magazine is the Cisco bimonthly publication that delivers the latest information about Internet business strategies for executives. You can access iQ Magazine at this URL:
<http://www.cisco.com/go/iqmagazine>
- Internet Protocol Journal is a quarterly journal published by Cisco Systems for engineering professionals involved in designing, developing, and operating public and private internets and intranets. You can access the Internet Protocol Journal at this URL:
http://www.cisco.com/en/US/about/ac123/ac147/about_cisco_the_internet_protocol_journal.html
- Training—Cisco offers world-class networking training. Current offerings in network training are listed at this URL:
<http://www.cisco.com/en/US/learning/index.html>



CISCO SYSTEMS



Corporate Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA

www.cisco.com

Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 526-4100

European Headquarters

Cisco Systems Europe
11 Rue Camille Desmoulins
92782 Issy-les-Moulineaux
Cedex 9
France

www-europe.cisco.com

Tel: 33 1 58 04 60 00
Fax: 33 1 58 04 61 00

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA

www.cisco.com

Tel: 408 526-7660
Fax: 408 527-0883

Asia Pacific Headquarters

Cisco Systems, Inc.
Capital Tower
168 Robinson Road
#22-01 to #29-01
Singapore 068912

www.cisco.com

Tel: +65 317 7777
Fax: +65 317 7799

Cisco Systems has more than 200 offices in the following countries. Addresses, phone numbers, and fax numbers are listed on the
Cisco Web site at www.cisco.com/go/offices

Argentina • Australia • Austria • Belgium • Brazil • Bulgaria • Canada • Chile • China PRC • Colombia • Costa Rica • Croatia • Czech Republic • Denmark • Dubai, UAE
Finland • France • Germany • Greece • Hong Kong SAR • Hungary • India • Indonesia • Ireland • Israel • Italy • Japan • Korea • Luxembourg • Malaysia • Mexico
The Netherlands • New Zealand • Norway • Peru • Philippines • Poland • Portugal • Puerto Rico • Romania • Russia • Saudi Arabia • Scotland • Singapore • Slovakia
Slovenia • South Africa • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • Ukraine • United Kingdom • United States • Venezuela • Vietnam • Zimbabwe