



CHAPTER 15

Managing the Unicast RIB and FIB

This chapter describes how to manage routes in the unicast Routing Information Base (RIB) and the Forwarding Information Base (FIB) on the Cisco NX-OS device.

This chapter includes the following sections:


- [Information About the Unicast RIB and FIB, page 15-1](#)
- [Licensing Requirements for the Unicast RIB and FIB, page 15-4](#)
- [Guidelines and Limitations, page 15-5](#)
- [Default Settings, page 15-5](#)
- [Managing the Unicast RIB and FIB, page 15-5](#)
- [Verifying the Unicast RIB and FIB, page 15-13](#)
- [Additional References, page 15-14](#)
- [Feature History for Unicast RIB and FIB, page 15-14](#)

Information About the Unicast RIB and FIB

The unicast RIB (IPv4 RIB and IPv6 RIB) and FIB are part of the Cisco NX-OS forwarding architecture, as shown in [Figure 15-1](#).

Send document comments to nexus7k-docfeedback@cisco.com.

Figure 15-1 Cisco NX-OS Forwarding Architecture

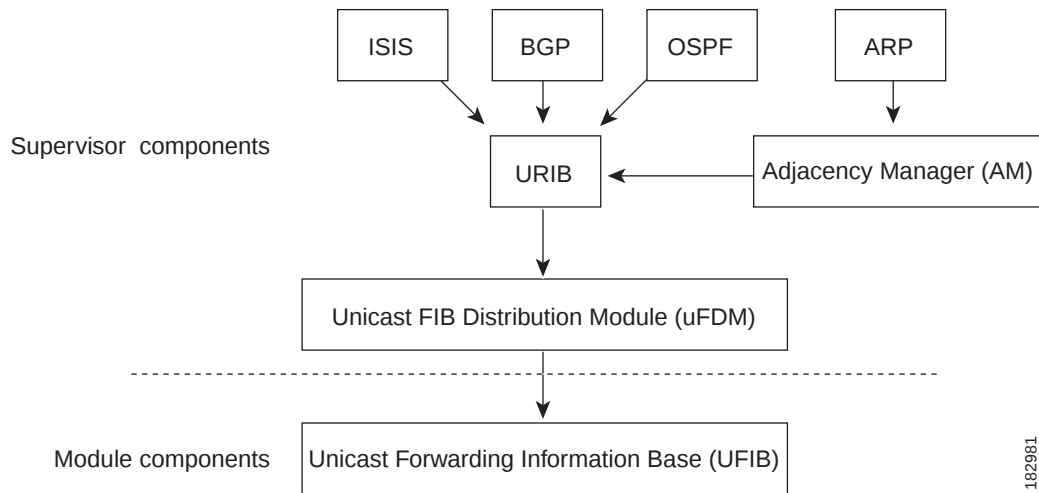

182981

The unicast RIB exists on the active supervisor. It maintains the routing table with directly connected routes, static routes, and routes learned from dynamic unicast routing protocols. The unicast RIB also collects adjacency information from sources such as the Address Resolution Protocol (ARP). The unicast RIB determines the best next hop for a given route and populates the unicast forwarding information bases (FIBs) on the modules by using the services of the unicast FIB distribution module (FDM).

Each dynamic routing protocol must update the unicast RIB for any route that has timed out. The unicast RIB then deletes that route and recalculates the best next hop for that route (if an alternate path is available).

This section includes the following topics:

- [Layer 3 Consistency Checker, page 15-2](#)
- [Dynamic TCAM Allocation, page 15-3](#)
- [Maximum TCAM Entries and FIB Scale Limits, page 15-3](#)
- [Virtualization Support, page 15-4](#)

Layer 3 Consistency Checker

In rare instances, an inconsistency can occur between the unicast RIB and the FIB on each module. In Cisco NX-OS Release 4.0(3) and later releases, Cisco NX-OS supports the Layer 3 consistency checker. This feature detects inconsistencies between the unicast IPv4 RIB on the supervisor module and the FIB on each interface module. Inconsistencies include the following:

- Missing prefix
- Extra prefix
- Wrong next-hop address
- Incorrect Layer 2 rewrite string in the ARP or neighbor discovery (ND) cache

The Layer 3 consistency checker compares the FIB entries to the latest adjacency information from the Adjacency Manager (AM) and logs any inconsistencies. The consistency checker then compares the unicast RIB prefixes to the module FIB and logs any inconsistencies. See the [“Triggering the Layer 3 Consistency Checker”](#) section on page 15-10.

Send document comments to nexus7k-docfeedback@cisco.com.

You can then manually clear any inconsistencies. See the “[Clearing Forwarding Information in the FIB](#)” section on page 15-11.

Dynamic TCAM Allocation

Dynamic TCAM allocation reallocates unused TCAM blocks on non-XL modules to an adjacent region when all existing blocks in that region are full. Dynamic TCAM allocation allows more flexibility in the number of routes that the FIB can allocate for a route type.

Cisco NX-OS divides the FIB to support multiple address families. The FIB TCAM for non-XL modules has 128K physical entries.

[Table 15-1](#) describes the default FIB TCAM allocation.

Table 15-1 Default FIB TCAM Allocation

Region	Default # Routes	#TCAM blocks	Entry size
IPv4 unicast routes	56,000	7	72 bits
IPv4 multicast routes or IPv6 unicast routes	32,000	8	144 bits
IPv6 multicast routes	2,000	1	288 bits

Maximum TCAM Entries and FIB Scale Limits

The FIB TCAM entries are system wide resources that are shared across virtual device contexts (VDC) configured on the module. [Table 15-2](#) describes the supported maximum FIB scale entries on the Nexus 7000 system configuration per route-type.

Table 15-2 Maximum Supported TCAM Entries and FIB Scale Limits

Module Type in a VDC	Maximum TCAM Physical Entries in a VDC	Maximum Supported IPv4 Unicast Routes	Maximum Supported IPv4 Multicast Routes	Maximum Supported IPv6 Unicast Routes	Maximum Supported IPv6 Multicast Routes
Only non-XL modules in a VDC	128K	112,000	32,000 mroutes	56,000 routes	2000 routes
Only XL modules in a VDC	900K	900,000	32,000 mroutes	350,000 routes	2000 routes
Mix of XL/non-XL modules in same VDC	128K	112,000	32,000 mroutes	56,000 routes	2000 routes



Note

[Table 15-2](#) captures the scale limits in a VDC. In a Cisco Nexus 7000 system, the total memory on the supervisor module restricts the actual route scale limits across all VDCs in the system.

Send document comments to nexus7k-docfeedback@cisco.com.

**Note**

Do not exceed the maximum route limits for non-XL modules in a VDC that contains both XL modules and non-XL modules.

**Note**

The actual FIB TCAM can scale to a higher scale number from a hardware perspective. [Table 15-2](#) captures the currently supported FIB sizes.

**Note**

The maximum routes are individual route-type maximum values and these values are not cumulative across each route-type.

You must install the Scalable Services License (see the *Cisco NX-OS Licensing Guide*) and configure the higher shared memory sizes (see the *Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x*) for the routing table to enable the higher FIB scale on the XL modules. See the *Cisco Nexus 7000 Series Hardware Installation and Reference Guide* for more information on the XL modules.

When you install the Scalable Services license, you may see the following system message:

"2011 Mar 30 12:38:13 switch %PLTFM_CONFIG-4-XL_LICENSE_MIX_NOTIFY: Mixed use of non-XL with XL modules in the same VDC may limit common resources to non-XL capacity."

This message occurs if you install the Scalable Services license in a system with non-XL modules or when non-XL modules come on line after you install this license.

**Note**

The full IPv4 Internet route tables currently have more than 300K routes and require the XL modules.

Virtualization Support

The unicast RIB and FIB support virtual routing and forwarding (VRF) instances. VRF exists within VDCs. By default, Cisco NX-OS places you in the default VDC and default VRF unless you specifically configure another VDC and VRF. For more information, see the *Cisco Cisco Nexus 7000 Series NX-OS Virtual Device Context Configuration Guide, Release 5.x* and see [Chapter 14, “Configuring Layer 3 Virtualization.”](#)

Licensing Requirements for the Unicast RIB and FIB

The following table shows the licensing requirements for this feature:

Product	License Requirement
Cisco NX-OS	The unicast RIB and FIB require no license. Any feature not included in a license package is bundled with the Cisco NX-OS system images and is provided at no extra charge to you. For a complete explanation of the Cisco NX-OS licensing scheme, see the <i>Cisco NX-OS Licensing Guide</i> .

Send document comments to nexus7k-docfeedback@cisco.com.

Guidelines and Limitations

Unicast RIB and FIB have the following configuration guidelines and limitations:

- You must install the Scalable Services license and configure the higher shared memory sizes to enable the higher FIB sizes for XL modules.

Default Settings

Table 15-3 lists the default settings for unicast RIB and FIB parameters.

Table 15-3 *Default Unicast RIB and FIB Parameters*

Parameters	Default
Dynamic TCAM allocation	Enabled by default and cannot be disabled

Managing the Unicast RIB and FIB

This section includes the following topics:

- [Displaying Module FIB Information, page 15-6](#)
- [Configuring Load Sharing in the Unicast FIB, page 15-6](#)
- [Configuring Per-Packet Load Sharing, page 15-8](#)
- [Displaying Routing and Adjacency Information, page 15-9](#)
- [Triggering the Layer 3 Consistency Checker, page 15-10](#)
- [Clearing Forwarding Information in the FIB, page 15-11](#)
- [Configuring Maximum Routes for the Unicast RIB, page 15-11](#)
- [Estimating Memory Requirements for Routes, page 15-12](#)
- [Clearing Routes in the Unicast RIB, page 15-13](#)



Note

If you are familiar with the Cisco IOS CLI, be aware that the Cisco NX-OS commands for this feature might differ from the Cisco IOS commands that you would use.

Send document comments to nexus7k-docfeedback@cisco.com.

Displaying Module FIB Information

You can display the FIB information on a module.

DETAILED STEPS

To display the FIB information on a module, use the following commands in any mode:

Command	Purpose
show ip fib adjacency module slot Example: switch# show ip fib adjacency module 2	Displays the adjacency information for IPv4.
show forwarding {ipv4 ipv6} adjacency module slot Example: switch# show forwarding ipv6 adjacency module 2	Displays the adjacency information for IPv4 or IPv6.
show ip fib interfaces module slot Example: switch# show ip fib interfaces module 2	Displays the FIB interface information for IPv4.
show ip fib route module slot Example: switch# show ip fib route module 2	Displays the route table for IPv4.
show forwarding {ipv4 ipv6} route module slot Example: switch# show forwarding ipv6 route module 2	Displays the route table for IPv4 or IPv6.

This example shows the FIB contents on a module:

```
switch# show ip fib route module 2
```

```
IPv4 routes for table default/base
```

```

-----+-----+-----
Prefix      | Next-hop      | Interface
-----+-----+-----
0.0.0.0/32   | Drop          | Null0
255.255.255.255/32 | Receive      | sup-eth1

```

Configuring Load Sharing in the Unicast FIB

Dynamic routing protocols such as Open Shortest Path First (OSPF) support load balancing with equal-cost multipath (ECMP). The routing protocol determines its best routes based on the metrics configured for the protocol and installs up to the protocol-configured maximum paths in the unicast RIB.

Send document comments to nexus7k-docfeedback@cisco.com.

The unicast RIB compares the administrative distances of all routing protocol paths in the RIB and selects a best path set from all of the path sets installed by the routing protocols. The unicast RIB installs this best path set into the FIB for use by the forwarding plane.

The forwarding plane uses a load-sharing algorithm to select one of the installed paths in the FIB to use for a given data packet.

You can globally configure the following load-sharing settings:

- **Load-share mode**—Selects the best path based on the destination address and port or the source and the destination address and port.
- **Universal ID**—Sets the random seed for the hash algorithm. You do not need to configure the Universal ID. Cisco NX-OS chooses the Universal ID if you do not configure it.



Note

Load sharing uses the same path for all packets in a given flow. A flow is defined by the load-sharing method that you configure. For example, if you configure source-destination load sharing, then all packets with the same source IP address and destination IP address pair follow the same path.

To configure the unicast FIB load-sharing algorithm, use the following command in global configuration mode:

Command	Purpose
<code>ip load-sharing address {destination port destination source-destination [port source-destination]} [universal-id seed]</code>	Configures the unicast FIB load-sharing algorithm for data traffic. The <i>universal-id</i> range is from 1 to 4294967295.
Example: switch(config)# ip load-sharing address source-destination	

To display the unicast FIB load-sharing algorithm, use the following command in any mode:

Command	Purpose
<code>show ip load-sharing</code>	Displays the unicast FIB load-sharing algorithm for data traffic.
Example: switch(config)# show ip load-sharing address source-destination	

To display the route that the unicast RIB and FIB use for a particular source address and destination address, use the following command in any mode:

Command	Purpose
<code>show routing hash source-addr dest-addr [source-port dest-port] [vrf vrf-name]</code>	Displays the route that the unicast RIB FIB use for a source and destination address pair. The source address and destination address format is x.x.x.x. The source port and destination port range is from 1 to 65535. The VRF name can be any case-sensitive, alphanumeric string up to 64 characters.
Example: switch# show routing hash 192.0.2.1 10.0.0.1	

Send document comments to nexus7k-docfeedback@cisco.com.

This example shows the route selected for a source/destination pair:

```
switch# show routing hash 10.0.0.5 30.0.0.2
Load-share parameters used for software forwarding:
load-share mode: address source-destination port source-destination
Universal-id seed: 0xe05e2e85
Hash for VRF "default"
Hashing to path *20.0.0.2 (hash: 0x0e), for route:
```

Configuring Per-Packet Load Sharing

You can use per-packet load sharing to evenly distribute data traffic in an IP network over multiple equal-cost connections. Per-packet load sharing allows the router to send successive data packets over paths on a packet-by-packet basis rather than on a per-flow basis.



Note

Using per-packet load sharing can result in out-of-order packets. Packets for a given pair of source-destination hosts might take different paths and arrive at the destination out of order. Make sure you understand the implications of out-of-order packets to your network and applications. Per-packet load sharing is not appropriate for all networks. Per-flow load sharing ensures packets always arrive in the order that they were sent.

Per-packet load sharing uses the round-robin method to determine which path each packet takes to the destination. With per-packet load sharing enabled on interfaces, the router sends one packet for destination1 over the first path, the second packet for (the same) destination1 over the second path, and so on. Per-packet load sharing ensures balancing over multiple links.

Use per-packet load sharing to ensure that a path for a single source-destination pair does not get overloaded. If most of the traffic passing through parallel links is for a single pair, per-destination load sharing will overload a single link while other links will have very little traffic. Enabling per-packet load sharing allows you to use alternate paths to the same busy destination.



Note

Per-packet load sharing on an interface overrides the global load-sharing configuration.

You configure per-packet load sharing on the input interface. This configuration determines the output interface that Cisco NX-OS chooses for the packet.

For example, if you have ECMP paths on two output interfaces, Cisco NX-OS uses the following load-sharing methods for input packets on Ethernet 1/1:

- Per-packet load sharing if you configure per-packet load sharing on Ethernet 1/1.
- Per-flow load sharing.

The configurations for the other interfaces have no effect on the load-sharing method used for Ethernet 1/1 in this example.

To configure per-packet load sharing, use the following command in interface configuration mode:

Command	Purpose
ip load-sharing per-packet	Configures per-packet load sharing on an interface.
Example: switch(config-if)# ip load-sharing per-packet	

Send document comments to nexus7k-docfeedback@cisco.com.

Displaying Routing and Adjacency Information

You can display the routing and adjacency information.

To display the routing and adjacency information, use the following commands in any mode:

Command	Purpose
show {ip ipv6} route [<i>route-type</i> <i>interface int-type number</i> <i>next-hop</i>] Example: switch# show ip route	Displays the unicast route table. The <i>route-type</i> argument can be a single route prefix, direct, static, or a dynamic route protocol. Use the ? command to see the supported interfaces.
show {ip ipv6} adjacency [<i>prefix</i> <i>interface-type number</i> [<i>summary</i>] <i>non-best</i>] [<i>detail</i>] [<i>vrf vrf-id</i>] Example: switch# show ip adjacency	Displays the adjacency table. The argument ranges are as follows: <i>prefix</i>—Any IPv4 or IPv6 prefix address. <i>interface-type number</i>—Use the ? command to see the supported interfaces. <i>vrf-id</i>—Any case-sensitive, alphanumeric string up to 64 characters.
show {ip ipv6} routing [<i>route-type</i> <i>interface int-type number</i> <i>next-hop</i> <i>recursive-next-hop</i> <i>summary</i> <i>updated {since until} time</i>] Example: switch# show routing summary	Displays the unicast route table. The <i>route-type</i> argument can be a single route prefix, direct, static, or a dynamic route protocol. Use the ? command to see the supported interfaces.

This example displays the unicast route table:

```
switch# show ip route
IP Route Table for Context "default"
'*' denotes best ucast next-hop          '**' denotes best mcast next-hop
'[x/y]' denotes [preference/metric]

0.0.0.0/0, 1 ucast next-hops, 0 mcast next-hops
  *via 10.1.1.1, mgmt0, [1/0], 5d21h, static
0.0.0.0/32, 1 ucast next-hops, 0 mcast next-hops
  *via Null0, [220/0], 1w6d, local, discard
10.1.0.0/22, 1 ucast next-hops, 0 mcast next-hops, attached
  *via 10.1.1.55, mgmt0, [0/0], 5d21h, direct
10.1.0.0/32, 1 ucast next-hops, 0 mcast next-hops, attached
  *via 10.1.0.0, Null0, [0/0], 5d21h, local
10.1.1.1/32, 1 ucast next-hops, 0 mcast next-hops, attached
  *via 10.1.1.1, mgmt0, [2/0], 5d16h, am
10.1.1.55/32, 1 ucast next-hops, 0 mcast next-hops, attached
  *via 10.1.1.55, mgmt0, [0/0], 5d21h, local
10.1.1.253/32, 1 ucast next-hops, 0 mcast next-hops, attached
  *via 10.1.1.253, mgmt0, [2/0], 5d20h, am
10.1.3.255/32, 1 ucast next-hops, 0 mcast next-hops, attached
  *via 10.1.3.255, mgmt0, [0/0], 5d21h, local
255.255.255.255/32, 1 ucast next-hops, 0 mcast next-hops
  *via Eth Inband Port, [0/0], 1w6d, local
```

This example shows the adjacency information:

```
switch# show ip adjacency
```

Send document comments to nexus7k-docfeedback@cisco.com.

```
IP Adjacency Table for context default
Total number of entries: 2
Address      Age      MAC Address  Pref Source  Interface  Best
10.1.1.1     02:20:54  00e0.b06a.71eb  50  arp      mgmt0      Yes
10.1.1.253   00:06:27  0014.5e0b.81d1  50  arp      mgmt0      Yes
```

Triggering the Layer 3 Consistency Checker

You can manually trigger the Layer 3 consistency checker.

To manually trigger the Layer 3 consistency checker, use the following commands in global configuration mode:

Command	Purpose
<pre>test forwarding [ipv4 ipv6] [unicast] inconsistency [vrf vrf-name] [module {slot all}]</pre> Example: switch(config)# test forwarding inconsistency	Starts a Layer 3 consistency check. The <i>vrf-name</i> can be any case-sensitive, alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.

To stop the Layer 3 consistency checker, use the following commands in global configuration mode:

Command	Purpose
<pre>test forwarding [ipv4 ipv6] [unicast] inconsistency [vrf vrf-name] [module {slot all}] stop</pre> Example: switch# test forwarding inconsistency stop	Stops a Layer 3 consistency check. The <i>vrf-name</i> can be any case-sensitive, alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.

To display the Layer 3 inconsistencies, use the following commands in any mode:

Command	Purpose
<pre>show forwarding [ipv4 ipv6] inconsistency [vrf vrf-name] [module {slot all}]</pre> Example: switch# show forwarding inconsistency	Displays the results of a Layer 3 consistency check. The <i>vrf-name</i> can be any case-sensitive, alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.

Send document comments to nexus7k-docfeedback@cisco.com.

Clearing Forwarding Information in the FIB

You can clear one or more entries in the FIB. Clearing a FIB entry does not affect the unicast RIB.



Caution

The **clear forwarding** command disrupts forwarding on the device.

To clear an entry in the FIB, including a Layer 3 inconsistency, use the following command in any mode:

Command	Purpose
<pre>clear forwarding {ipv4 ipv6} route {* prefix} [vrf vrf-name] module [slot all]</pre> Example: switch# clear forwarding ipv4 route * module 1	Clears one or more entries from the FIB. The route options are as follows: *—All routes. prefix—Any IP or IPv6 prefix. The <i>vrf-name</i> can be any case-sensitive, alphanumeric string up to 64 characters. The <i>slot</i> range is from 1 to 10.

Configuring Maximum Routes for the Unicast RIB

You can configure the maximum number of routes allowed in the routing table.

BEFORE YOU BEGIN

Ensure that you are in the default VDC (or use the **switchto vdc** command).

SUMMARY STEPS

1. **configure terminal**
2. **vrf context** *vrf-name*
3. **ipv4 unicast**
4. **maximum routes** *max-routes* [*threshold* [**reinstall** *threshold*] | **warning-only**]
5. (Optional) **copy running-config startup-config**

DETAILED STEPS

	Command	Purpose
Step 1	<pre>configure terminal</pre> Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	<pre>vrf context vrf-name</pre> Example: switch(config)# vrf context Red switch(config-vrf)#	Creates a VRF and enters VRF configuration mode.

Send document comments to nexus7k-docfeedback@cisco.com.

	Command	Purpose
Step 3	ipv4 unicast Example: switch(config-vrf)# ipv4 unicast switch(config-vrf-af-ipv4)#	Enters address family configuration mode.
Step 4	maximum routes max-routes [threshold [reinstall threshold] warning-only] Example: switch(config-vrf-af-ipv4)# maximum routes 250 90	Configures the maximum number of routes allowed in the routing table. The range is from 1 to 4294967295. You can optionally specify the following: • threshold—Percentage of maximum routes that triggers a warning message. The range is from 1 to 100. • warning-only—Logs a warning message when the maximum number of routes is exceeded. • reinstall threshold—Reinstalls routes that previously exceeded the maximum route limit and were rejected and specifies the threshold value at which to reinstall them. The threshold range is from 1 to 100.
Step 5	copy running-config startup-config Example: switch(config-vrf-af-ipv4)# copy running-config startup-config	(Optional) Saves this configuration change.

Estimating Memory Requirements for Routes

You can estimate the memory that a number of routes and next-hop addresses will use.

To estimate the memory requirements for routes, use the following command in any mode:

Command	Purpose
show routing {ipv6} memory estimate routes num-routes next-hops num-nexthops Example: switch# show routing memory estimate routes 5000 next-hops 2	Displays the memory requirements for routes. The <i>num-routes</i> range is from 1000 to 1000000. The <i>num-nexthops</i> range is from 1 to 16.

Send document comments to nexus7k-docfeedback@cisco.com.

Clearing Routes in the Unicast RIB

You can clear one or more routes from the unicast RIB.



Caution

The ***** keyword is severely disruptive to routing.

To clear one or more entries in the unicast RIB, use the following commands in any mode:

Command	Purpose
<pre>clear {ip ipv4 ipv6} route {* {route prefix/length} [next-hop interface] } [vrf vrf-name]</pre> Example: switch(config)# clear ip route 10.2.2.2	Clears one or more routes from both the unicast RIB and all the module FIBs. The route options are as follows: *—All routes. route—An individual IP or IPv6 route. prefix/length—Any IP or IPv6 prefix. next-hop—The next-hop address interface—The interface to reach the next-hop address. The <i>vrf-name</i> can be any case-sensitive, alphanumeric string up to 64 characters.
<pre>clear routing [multicast unicast] [ip ipv4 ipv6] {* {route prefix/length} [next-hop interface] } [vrf vrf-name]</pre> Example: switch(config)# clear routing ip 10.2.2.2	Clears one or more routes from the unicast RIB. The route options are as follows: *—All routes. route—An individual IP or IPv6 route. prefix/length—Any IP or IPv6 prefix. next-hop—The next-hop address interface—The interface to reach the next-hop address. The <i>vrf-name</i> can be any case-sensitive, alphanumeric string up to 64 characters.

Verifying the Unicast RIB and FIB

To display the unicast RIB and FIB information, perform one the following tasks:

Command	Purpose
show forwarding adjacency	Displays the adjacency table on a module.
show forwarding distribution { clients fib-state }	Displays the FIB distribution information.
show forwarding interfaces module slot	Displays the FIB information for a module.
show forwarding { ip ipv4 ipv6 } route	Displays routes in the FIB.

Send document comments to nexus7k-docfeedback@cisco.com.

Command	Purpose
show {ip ipv6} adjacency	Displays the adjacency table.
show {ip ipv6} route	Displays IPv4 or IPv6 routes from the unicast RIB.
show routing	Displays routes from the unicast RIB.

Additional References

For additional information related to managing unicast RIB and FIB, see the following sections:

- [Related Documents, page 15-14](#)
- [Feature History for Unicast RIB and FIB, page 15-14](#)

Related Documents

Related Topic	Document Title
Unicast RIB and FIB CLI commands	<i>Cisco Nexus 7000 Series NX-OS Unicast Routing Command Reference, Release 5.x</i>

Feature History for Unicast RIB and FIB

[Table 15-4](#) lists the release history for this feature.

Table 15-4 Feature History for Unicast RIB and FIB

Feature Name	Releases	Feature Information
Maximum routes	5.2(1)	Added support to configure the maximum number of routes allowed in the routing table.
TCAM Size for XL Modules	5.0(2)	Added support for larger TCAM and FIB sizes with XL modules.
Dynamic TCAM allocation	5.0(2)	Enabled by default and cannot be disabled.
IPv6 forwarding inconsistency checker	4.2(1)	Added support to check for inconsistencies in the IPv6 forwarding table.
Dynamic TCAM allocation	4.2(1)	Added support for dynamically allocating TCAM blocks in the FIB.
Per-packet load sharing	4.1(2)	Added support to load balance per packet on an interface.
Unicast RIB and FIB	4.0(3)	Added support to clear individual routes in unicast RIB and FIB.
Unicast RIB and FIB	4.0(1)	This feature was introduced.