



## Configure Switch using CLI

---

This chapter provides a command-line interface (CLI)-based setup procedure for the switch.

Before connecting the switch to a power source, review the [Warnings](#) section of the **Switch Installation** chapter.

- [Console Port CLI access, on page 1](#)
- [Initial System Configuration, on page 4](#)

## Console Port CLI access

You can enter Cisco IOS commands and parameters through the CLI. The IE3500/IE3505 switch switch has two console options: RJ45 8 pin, or USB-C. Use one of these options to access the CLI:


### RJ-45 Console Port

#### Procedure

---

- |               |   |
|---------------|---|
| <b>Step 1</b> | Connect one end of the console cable to your PC.<br>To connect, a USB to RS232 adapter may be required. |
| <b>Step 2</b> | Connect the other end of the cable or adapter to the switch console port.                               |
| <b>Step 3</b> | Start a terminal-emulation program on the PC.   |

**Figure 1: Connecting the Console Cable**

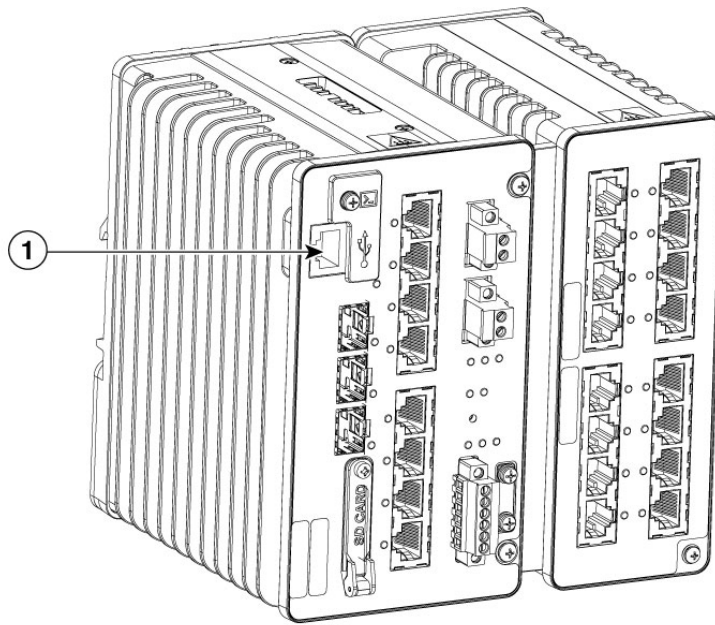

RJ-45 Console  
Port

**Step 4** Configure the baud rate and character format of the PC or terminal to match the console port characteristics:

The default characteristics are:

- 9600 baud
- 8 data bits
- 1 stop bit
- No parity
- None (flow control)

**Step 5** Connect power to the switch as described in Connecting to Power.

**Step 6** The PC or terminal displays the bootloader sequence.

After the switch has finished booting press **Enter** to display the setup prompt.

See [Initial System Configuration, on page 4](#) to configure the switch using the Setup program.

# USB-C Console Port

## Before you begin




**Note** The USB Console port is intended only for service operation and not for continuous use.

## Procedure

- Step 1** Use a Phillips screwdriver to loosen the screw on the USB type C console port cover.  
Remove the screw and take off the cover.

*Figure 2: USB-C Console Port, Cover*

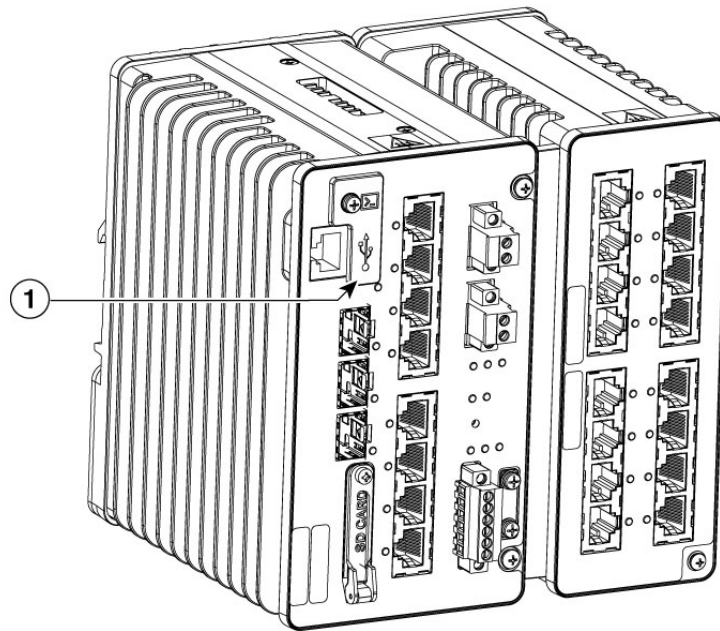

1	USB-C Console Port, Cover
---	---------------------------

- Step 2** Connect a USB cable to the PC USB port.  
Connect the other end of the cable to the switch USB-C console port.
- Step 3** Identify the COM port assigned to the USB-C console port.
- Step 4** Start the terminal-emulation program on the PC.
- Step 5** Configure the COM port.
- Step 6** Configure the baud rate and character format of the PC or terminal to match the console port characteristics:  
The default characteristics are:

- 9600 baud
- 8 data bits
- 1 stop bit
- No parity
- None (flow control)

**Step 7** Apply power to the switch as described in Connecting to Power.

**Step 8** The PC or terminal displays the bootloader sequence.

Press **Enter** to display the setup prompt.

See [Initial System Configuration, on page 4](#) to configure the switch using the Setup program.

**Step 9** Place the console port cover back, hand tighten the screw.

---

## Initial System Configuration

To set up the switch, you need to complete the setup program, which runs automatically after the switch is powered on. You must assign an IP address and other configuration information necessary for the switch to communicate with the local routers and the Internet. This information is also required if you plan to use WebUI to configure and manage the switch.

## IP and Password Settings

You need this information from your network administrator before you complete the setup program:

- Encryption level and Master key
- Switch IP address
- Subnet mask (IP netmask)
- Default gateway (router)
- Enable secret password
- Enable password

## Initial Configuration

Complete the following steps to create an initial configuration for the switch with the setup program:

### Procedure

---

**Step 1** Enter **Yes** at these two prompts:

Would you like to enter the initial configuration dialog? [yes/no]: **yes**  
 At any point you may enter a question mark '?' for help.  
 Use ctrl-c to abort configuration dialog at any prompt.  
 Default settings are in square brackets '[]'.  
 Basic management setup configures only enough connectivity  
 for management of the system, extended setup will ask you  
 to configure each interface on the system.  
 Would you like to enter basic management setup? [yes/no]: **yes**

**Step 2** Enter a hostname for the switch.

On a command switch, the hostname is limited to 28 characters; on a member switch, it is limited to 31 characters. Do not use *-n*, where n is a number, as the last character in a hostname for any switch.

Configuring global parameters:

Enter host name [Switch]:*host\_name*

**Step 3** Enter an enable secret password.

The password can be of minimum 10 to maximum 25 alphanumeric characters, and must contain atleast one uppercase, one lower case, and a digit.

**Note**

The password should not contain the word **cisco** in it.

Enter enable secret: *secret\_password*  
 Confirm enable secret: *secret\_password*

**Step 4** Enter an enable password.

Enter enable password: *enable\_password*

**Step 5** Enter a virtual terminal password.

The password can be from 1 to 25 alphanumeric characters, is case sensitive, allows spaces, but ignores leading spaces.

Enter virtual terminal password: *terminal-password*

**Step 6** Enter the interface name (physical interface or VLAN name) of the interface that connects to the management network.

For this release, always use **vlan1** as the interface connecting to the management network.

**Note**

The switch will transmit a DHCP discover message on the **vlan1** interface. If the switch is connected to the network before the CLI initial setup process is started, the interface may have been assigned a dynamic IP address. If you do not see an IP address on the **vlan1** interface, this process allows you set a static IP address for management. This will over write the dynamically assigned IP address.

Current interface summary

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	10.0.113.39	YES	DHCP	up	up
GigabitEthernet1/1	unassigned	YES	unset	down	down
GigabitEthernet1/2	unassigned	YES	unset	down	down
GigabitEthernet1/3	unassigned	YES	unset	down	down

GigabitEthernet1/4	unassigned	YES	unset	down	down
GigabitEthernet1/5	unassigned	YES	unset	down	down
GigabitEthernet1/6	unassigned	YES	unset	down	down
GigabitEthernet1/7	unassigned	YES	unset	down	down
GigabitEthernet1/8	unassigned	YES	unset	down	down
GigabitEthernet1/9	unassigned	YES	unset	down	down
GigabitEthernet1/10	unassigned	YES	unset	down	down
GigabitEthernet1/11	unassigned	YES	unset	up	up
AppGigabitEthernet1/1	unassigned	YES	unset	up	up

Enter interface name used to connect to the management network from the above interface summary:

**vlan1**

**Step 7** Configure the interface by entering the switch IP address and subnet mask.

The configuration summary is displayed.

**Step 8** Select option 2 to save the configuration and exit the configuration menu.

---

The switch can run on the default configuration. However, you can use the CLI, enter commands at the **Switch>** prompt to change the configuration or perform other management tasks.

### Example

```

--- System Configuration Dialog ---
Would you like to enter the initial configuration dialog? [yes/no]: yes

At any point you may enter a question mark '?' for help.
Use ctrl-c to abort configuration dialog at any prompt.
Default settings are in square brackets '[]'.

Basic management setup configures only enough connectivity
for management of the system, extended setup will ask you
to configure each interface on the system

Would you like to enter basic management setup? [yes/no]: yes
Configuring global parameters:

Enter host name [Switch]: Switch

The enable secret is a password used to protect
access to privileged EXEC and configuration modes.
This password, after entered, becomes encrypted in
the configuration.
-----
secret should be of minimum 10 characters and maximum 32 characters with
at least 1 upper case, 1 lower case, 1 digit and
should not contain [cisco]
-----
Enter enable secret: *****
Confirm enable secret: *****
Netconf SSH RSA key generated
Key Name: NETCONF_SSH_RSA_KEY
Key Type: ssh-rsa
Modulus Size: 2048
Public Key: ssh-rsa AAAAB3AAADAQABAAQAC46E60fS9Tl6bHuxJkyrCy9JDwgkE9tK
XJcgD2Mu26NTCGpIDRyGAjaj9+gc04Gc/TOHruWEt/XTZu9hWK1dN+rZytJMNw3nEavFcsm+d

```

```
gDzYwh3BAi16edDil97YzlNr5bsisrgehSqKoq7Srj8fW3SyPNRU2WNdbeLkwjLtZQSgA7hBL
xlr9V+wS9+hk8SQJsMRBhMSLMo7Mo/XZ22risylZPeWvypmip6zGakKml4K8TbgnKmTbgZscp
hn/qJ9ag+tzuDQug+ZLWw/QE3MJHZmcbXdt1gcE8b01TRT
```

The enable password is used when you do not specify an enable secret password, with some older software versions, and some boot images.

Enter enable password: \*\*\*\*\*

The virtual terminal password is used to protect access to the router over a network interface.

Enter virtual terminal password: \*\*\*\*\*

Current interface summary

Interface	IP-Address	OK?	Method	Status	Protocol
Vlan1	10.0.113.39	YES	DHCP	up	up
GigabitEthernet1/1	unassigned	YES	unset	down	down
GigabitEthernet1/2	unassigned	YES	unset	down	down
GigabitEthernet1/3	unassigned	YES	unset	down	down
GigabitEthernet1/4	unassigned	YES	unset	down	down
GigabitEthernet1/5	unassigned	YES	unset	down	down
GigabitEthernet1/6	unassigned	YES	unset	down	down
GigabitEthernet1/7	unassigned	YES	unset	down	down
GigabitEthernet1/8	unassigned	YES	unset	down	down
GigabitEthernet1/9	unassigned	YES	unset	down	down
GigabitEthernet1/10	unassigned	YES	unset	down	down
GigabitEthernet1/11	unassigned	YES	unset	up	up
AppGigabitEthernet1/1	unassigned	YES	unset	up	up

Enter interface name used to connect to the management network from the above interface summary: Vlan1

Configuring interface Vlan1:

IP address for this interface [10.0.113.39]:

Subnet mask for this interface [255.0.0.0] :

Class A network is 10.0.0.0, 8 subnet bits; mask is /8

The following configuration command script was created:

```
hostname Switch
enable secret 9 $9$IjMTkpAcBKRIK.$W27WanN6KUn4NnrjTTJteGEoxlu.
enable password enable_password
line vty 0 15
password teminal_password
no snmp-server
!
no ip routing

!
interface Vlan1
no shutdown
ip address 22.1.1.39 255.0.0.0
!
interface GigabitEthernet1/1
!
interface GigabitEthernet1/2
!
interface GigabitEthernet1/3
!
interface GigabitEthernet1/4
!
interface GigabitEthernet1/5
```

```
!  
interface GigabitEthernet1/6  
!  
interface GigabitEthernet1/7  
!  
interface GigabitEthernet1/8  
!  
interface GigabitEthernet1/9  
!  
interface GigabitEthernet1/10  
!  
interface GigabitEthernet1/11  
!  
interface AppGigabitEthernet1/1  
!  
end
```

```
[0] Go to the IOS command prompt without saving this config.  
[1] Return back to the setup without saving this config.  
[2] Save this configuration to nvram and exit.
```

```
Enter your selection [2]: 2  
Building configuration...  
[OK]  
Use the enabled mode 'configure' command to modify this configuration.
```

Press RETURN to get started!

## Configure System Security

The device is configured with Type-6 encryption by default. To change the encryption type, see [Controlling Switch Access with Passwords and Privilege Levels](#).