



# Cables and Connectors

- [Connector Specifications, on page 1](#)
- [Cables and Adapters, on page 4](#)

## Connector Specifications

### 10/100/1000/2500 Ports

The 10/100/1000 Ethernet ports on the switches use RJ-45 connectors.

*Figure 1: 10/100/1000 Port Pinouts*

Pin	Label	1 2 3 4 5 6 7 8
1	TP0+	
2	TP0-	
3	TP1+	
4	TP2+	
5	TP2-	
6	TP1-	
7	TP3+	
8	TP3-	



**Note** Connector pins 1, 2, 3, and 6 are used for PoE. All the 8 pins are used for 4PPoE.

### SFP Module Connectors

The illustration below shows an LC style connector that is used with the SFP Module slots. It is a fiber-optic cable connector.

Figure 2: Fiber-Optic SFP Module LC Connector



**Warning** Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments. Statement 1051


**Avertissement :**

Les fibres ou les connecteurs déconnectés peuvent émettre des rayonnements laser invisibles. Ne fixez pas les rayons ou ne les regardez pas directement avec des instruments optiques. Énoncé 1051

## Console Port

The switch has two console ports: a USB micro-Type B port and an RJ-45 console port, both on the front panel.

Figure 3: USB Micro-Type B Port

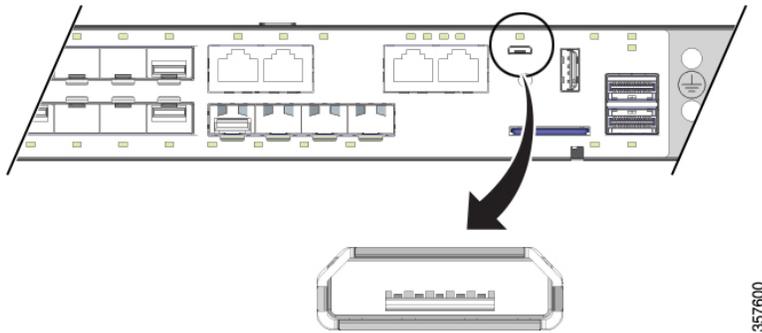


The USB console port uses a USB Type A to 5-pin mini-Type B cable, shown in the following illustration. The USB micro Type A-to-USB mini-Type B cable is not supplied.



**Note** When running Linux, access the USB Console using **Minicom** instead of **Screen**.

Figure 4: USB Micro Type A-to-USB 5-Pin Micro-Type B Cable

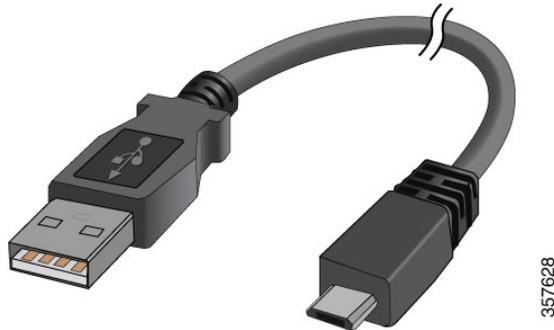

The RJ-45 console port uses an 8-pin RJ-45 connector. The supplied RJ-45-to-DB-9 adapter cable is used to connect the console port of the switch to a console PC.

## Alarm Port

The alarm port uses an RJ-45 connector.

Figure 5: Alarm Port Details

### Alarm Input Details

Normally-Open (NO) Contacts  
"closed" triggers alarm

To Pin 8 Alarm In Common      To Pin 1, 2, 4, or 5 Alarm Input

---

Normally-Closed (NC) Contacts  
"open" triggers alarm

To Pin 8 Alarm In Common      To Pin 1, 2, 4, or 5 Alarm Input

### IE9300 supports:

- Four External Alarm Inputs
- One form C output

Alarm Connection	RJ-45 Pin
Alarm 1 input	1
Alarm 2 input	2
Alarm Output N/C	3
Alarm 3 input	4
Alarm 4 input	5
Alarm Output N/O	6
Alarm Output Common	7
Alarm Input Common	8

### Alarm Output Details

Form-C  
Normally-Open/Normally-Closed Contacts  
"No Alarm" State Shown(default config)

To Pin 6 Alarm Out N/O      To Pin 3 Alarm Out N/C  
To Pin 7 Alarm Out Common

**RJ-45 Alarm Connector  
on IE9300 Chassis**

See the sections [Alarms](#) and Alarm Ratings for more information.

# Cables and Adapters

## SFP Module Cables

Each port must match the wave-length specifications on each end of the cable, and for reliable communications, the cable must not exceed the allowable length.

For more information about SFP/SFP+ modules and cables, see [Transceiver Modules](#) on Cisco.com.

## Console Port Adapter Pinouts

The console port uses an 8-pin RJ-45 connector. If you did not order a console cable, you must provide an RJ-45-to-DB-9 adapter cable to connect the switch console port to a PC console port.

The following table lists the pinouts for the console port, the RJ-45-to-DB-9 adapter cable, and the console device.

**Table 1: Console Port Adapter Pinouts (RJ-45-to-DB-9)**

Switch Console Port (DTE) Signal	RJ-45-to- DB-9 Terminal Adapter DB-9 Pin	Console Device Signal
RTS	8	CTS
DTR	6	DSR
TxD	2	RxD
GND	5	GND
RxD	3	TxD
DSR	4	DTR
CTS	7	RTS