



Configuring Cisco Cloud APIC Using the Setup Wizard

- [Configuring and Deploying Inter-Site Connectivity](#), on page 1
- [Gathering On-Premises Configuration Information](#), on page 2
- [Understanding Limitations for Number of Sites, Regions and CSRs](#), on page 2
- [Cloud Resources Naming](#), on page 3
- [Locating the Cloud APIC IP Address](#), on page 7
- [Configuring Cisco Cloud APIC Using the Setup Wizard](#), on page 9
- [Verifying the Cisco Cloud APIC Setup Wizard Configurations](#), on page 17

Configuring and Deploying Inter-Site Connectivity

Before you can begin to configure and deploy your Cloud APIC, you must first configure and deploy your Cisco ACI Multi-Site and your on-premises Cisco ACI, if you are connecting an on-premises site to cloud sites. The actual configuration for each varies, depending on your requirements and setup. If you are connecting an on-premises site to cloud sites, you will also need to configure and deploy an on-premises IPsec termination device to connect to the Cisco Cloud Services Router 1000Vs deployed by Cloud APIC in Microsoft Azure. See [Components of Extending Cisco ACI Fabric to the Public Cloud](#) for more information.

Following are documents that will aid you in the process of configuring and deploying these components:

- Cisco ACI documentation: Available at [Cisco Application Policy Infrastructure Controller \(APIC\) documentation](#), such as [Operating Cisco Application Centric Infrastructure](#) and [Cisco APIC Basic Configuration Guide, Release 4.0\(1\)](#).
- Cisco ACI Multi-Site: Available at [Cisco ACI Multi-Site documentation](#), such as [Cisco ACI Multi-Site Orchestrator Installation and Upgrade Guide, Release 2.0\(1\)](#).
- Cisco Cloud Services Router 1000V: Available at [Cisco CSR 1000v documentation](#).

Gathering On-Premises Configuration Information



Note You do not have to gather any information in this section if you are only configuring cloud site-to-cloud site connectivity for your Cisco Cloud APIC.

Use the following list to gather and record the necessary on-premises configuration information that you will need throughout these procedures to set up your Cisco Cloud APIC:

Necessary On-Premises Information	Your Entry
On-premises IPsec device public IP address	
IPsec termination device to CSR OSPF area	
On-premises APIC IP address	
Cisco Cloud APIC IP address	

Understanding Limitations for Number of Sites, Regions and CSRs

Throughout this document, you will be asked to decide on various configurations for sites, regions and CSRs. Following is a list of limitations for each that you should keep in mind as you're making configuration decisions for each.

Sites

The total number of sites that you can have with Cloud APIC depends on the type of configuration that you are setting up:

- **On-premises ACI site-to-cloud site configuration (AWS or Azure):** ACI Multi-Site multi-cloud deployments support any combination of one or two cloud sites (AWS or Azure) and one or two on-premises sites for a maximum total of four sites. The connectivity options are:
 - Hybrid-Cloud: On-premises-to-single cloud site connectivity
 - Hybrid Multi-Cloud: On-premises-to-multiple cloud sites connectivity
- **Multi-Cloud: Cloud site-to-cloud site connectivity (AWS or Azure):** ACI Multi-Site multi-cloud deployments support a combination of any two cloud sites (AWS, Azure, or both) for a total of two sites.
- **Cloud First: Single-Cloud Configuration:** ACI Multi-Site multi-cloud deployments support a single cloud site (AWS or Azure)

Regions

Within each site, you can have a maximum of four regions per site. Cloud APIC can manage multiple regions as a single site.

CSRs

You can have a certain number of CSRs within some regions, with the following limitations:

- You must have at least one region with CSRs deployed to have inter-VNET (Azure), inter-VPC (AWS), or inter-VRF communications.
- You do not have to have CSRs in every region.
- For regions with CSRs deployed to enable connectivity:
 - CSRs can be deployed on all four managed regions.
 - The number of CSRs supported per managed region varies, depending on the release:
 - For releases prior to 5.1(2), a maximum of four CSRs per managed region is supported, for a total of 16 CSRs per cloud site.
 - For Release 5.1(2) and later, a maximum of eight CSRs per managed region is supported, for a total of 32 CSRs per cloud site. For more information on increasing the number of CSRs, see the *Cloud APIC for Azure User Guide*.



Note The number of CSRs per managed region differs between AWS and Azure, with four CSRs per region supported for AWS and eight CSRs per region supported for Azure for release 5.1(2) and later.

Cloud Resources Naming

Prior to Cloud APIC Release 5.0(2), the cloud resources created by the Cloud APIC in Azure were assigned names that were derived from the names of the ACI objects:

- Resource groups were created based on the Tenant, VRF, and region. For example, `CAPIC_<tenant>_<vrf>_<region>`.
- VNET names matched the name of the Cloud APIC VRF.
- Subnet names were derived from the CIDR address space. For example, `subnet-10.10.10.0_24` for the `10.10.10.0/24` cloud subnet.
- The cloud application name was derived from the EPG name and the application profile name. For example, `<epg-name>_cloudapp_<app-profile-name>`

This approach is not ideal for deployments with strict cloud resource naming conventions and it does not follow the Azure best practices for naming and tagging of cloud resources.

Starting with Cloud APIC Release 5.0(2), you can create a global naming policy on the Cloud APIC, which allows you to define a custom cloud resources naming convention for all objects deployed from the Cloud

APIC into the Azure cloud. You can define custom naming rules for all cloud resources during the first time setup wizard of the Cloud APIC, with the exception of the **Resource group** name used for the Cloud APIC ARM template deployment. The resource group name for the template is defined when you first deploy it and cannot be changed after. In addition to the global policy, you can also explicitly define the names of the cloud resources created from each Cloud APIC object using the REST API.

Starting with Cloud APIC Release 5.1(2), for Layer 4 to Layer 7 service deployments, you can provide custom names to cloud resources, such as, Network Load Balancers, Application Load Balancers and Device Application Security Groups.



Note Keep in mind that even with custom naming policy, once a cloud resource is created, you will not be able to modify the name. If you want to change the name of an existing cloud resource, you would need to delete all configured cloud resources and recreate them. Cloud resources to be deleted include overlay-2 CIDR and subnets, Cisco Cloud Services Router 1000Vs deployed by Cloud APIC and therefore IPsec tunnels from the CSRs to every remote site.

Variables Available for Naming Rules

When creating your cloud resources naming policy, you can use the following variables to dynamically define the name of the cloud resource based on the Cisco Cloud APIC objects:

- `${tenant}` – the resource will include the name of the Tenant
- `${ctx}` – the resource will include the name of the VRF
- `${ctxprofile}` – the resources will include the cloud context profile, which is a VRF deployed in a given cloud region
- `${subnet}` – the resource will include the string `subnet` followed by the subnet IP address
- `${app}` – the resource will include the name of the application profile.
- `${epg}` – the resource will include the name of the EPG.
- `${contract}` – the resource will include the name of the contract
- `${region}` – the resource will include the name of the cloud region
- `${priority}` – the resource will include the name of the network security group (NSG) rule priority. This number is allocated automatically to ensure that each NSG rule name is unique
- `${serviceType}` – the resource will include an abbreviation of the service Type (only valid for private endpoint resources)
- `${resourceName}` – the resource will include the name of the target resource (only valid for private endpoint resources)
- `${device}` – the resource will include the name of the Layer 4 to Layer 7 device.
- `${interface}` – the resource will include the name of the Layer 4 to Layer 7 device interface.
- `${deviceInterfaceDn}` – the resource will include the DN of the Layer to Layer 7 device interface.

For private endpoints, the combination of the

`${app}-${svcepg}-${subnet}-${serviceType}-${resourceName}` makes the private endpoint name unique. Removing any of these variables might form a name of a private endpoint that already exists. This would result in a fault raised by the Cisco Cloud APIC. Also, the max length requirements vary from Azure service to service.

When you define a global naming policy using one or more of the above variables, Cisco Cloud APIC validates the string to ensure that all mandatory variables are present and no invalid string is specified.

There is a maximum name length limit in Azure. If the length of the name exceeds the length supported by the cloud provider, it rejects the config and Cisco Cloud APIC raises a fault that the resource creation failed. You can then check the fault for details and correct the naming rules. The maximum length limits at the time of Cisco Cloud APIC, Release 5.0(2) are listed below, for the latest up-to-date information and any changes to the length limit, consult the Azure documentation.

The following table provides a summary of which cloud resources support each of the naming variables above. Cells denoted with an asterisk (*) indicate variables that are mandatory for that type of cloud resource. Cells denoted with a plus sign (+) indicate that at least one of these variables is mandatory for that type of cloud resource; for example, for VNET resources you can provide `${ctx}`, or `${ctxprofile}`, or both.

Table 1: Supported Variables for Cloud Resources

Azure Resource	<code>\${tenant}</code>	<code>\${ctx}</code>	<code>\${ctxprofile}</code>	<code>\${subnet}</code>	<code>\${app}</code>	<code>\${epg}</code>	<code>\${contract}</code>	<code>\${region}</code>	<code>\${priority}</code>
Resource Group Max Length: 90	Yes*	Yes*						Yes*	
Virtual Network (VNET) Max Length: 64	Yes	Yes+	Yes+					Yes	
Subnet Max Length: 80	Yes	Yes	Yes	Yes*				Yes	
Application Security Group (ASG) Max Length: 80	Yes				Yes*	Yes*		Yes	

Azure Resource	\${tenant}	\${ctx}	\${ctxprofile}	\${subnet}	\${app}	\${epg}	\${contract}	\${region}	\${priority}
Network Security Group (NSG) Max Length: 80	Yes				Yes*	Yes*		Yes	
Network Security Group Rule Max Length: 80	Yes						Yes		Yes* (auto)

Table 2: Supported Variables for Cloud Resources (Layer 4 to Layer 7 device services)

Azure Resource	\${tenant}	\${region}	\${ctxprofile}	\${device}	\${interface}	\${deviceInterfaceID}
Internal Network Load Balancer Max Length: 80	Yes	Yes	Yes	Yes*		
Internet-facing Network Load Balancer Max Length: 80	Yes	Yes	Yes	Yes*		
Internal Application Load Balancer Max Length: 80	Yes	Yes	Yes	Yes*		
Internet-facing Application Load Balancer Max Length: 80	Yes	Yes	Yes	Yes*		
Device ASG Max Length: 80	Yes	Yes		Yes*	Yes*	Yes*

Naming Rules Guidelines and Limitations

When configuring custom rules for naming cloud resources, the following restrictions apply:

- You define global naming policy during the Cloud APIC's first time setup using two sets of naming rules:
 - Hub Resource Naming Rules** define names for the Hub Resource Group, Hub VNET, Overlay-1 CIDR, Overlay-2 CIDR subnet in the Infra Tenant, as well as the subnet prefixes for subnets that are created automatically by the system in the Infra tenant.
 - Cloud Resource Naming Rules** define the names of the Network Security Group (NSG), Application Security Group (ASG), Network Load Balancer, Application Load Balancer, Device Application Security Group, and subnets you create in the Infra Tenant, as well as the names of all resources (Resource Groups, Virtual Networks, Subnets, NSG, ASG, Network Load Balancer, Application Load Balancer) in user Tenants.

After you define the naming rules, you will be required to review and confirm them. Keep in mind that you must confirm the naming rules before any cloud resources are deployed.

- Once a cloud resource is created, its name cannot be changed and the naming policy cannot be updated in the GUI. If you upgrade your Cloud APIC to Release 5.0(2) with some resources already deployed in Azure, you will also not be able to change the global custom naming rules.

If you want to change the names of the existing cloud resources or the policy, you would need to delete the deployed resources before being able to update the global naming policy in the GUI.

In these cases you can use the REST API to explicitly assign custom names to any new resources you create.

- When updating cloud resources naming via REST API, we recommend you do not import configuration at the same time.


We recommend you define any naming rules first. Then any tenant configuration.

We recommend that you do not change the naming policy after the tenant configuration is deployed.

Locating the Cloud APIC IP Address

These procedures describe how to locate the IP address for the Cloud APIC through the Azure site.

- Step 1** From the main Azure management portal page, click the **All services** link in the left nav bar, then click the **Subscriptions** link.

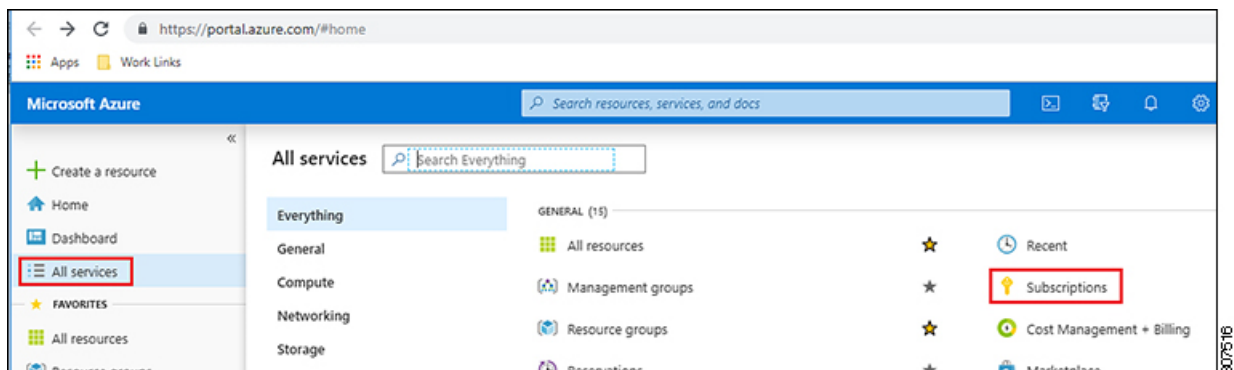

- Step 2** In the **Subscriptions** page in the Azure management portal, click the subscription account that you just created.

Locating the Cloud APIC IP Address

The overview information for that subscription is displayed.


Step 3 From the overview page for that subscription, locate the **Resource groups** link in the left nav bar and click that link.

The resource groups for that subscription is displayed.

Step 4 Choose the resource group that you chose or created in [Deploying the Cloud APIC in Azure](#).


The overview information for that resource group is displayed.

Step 5 In the overview page for the resource group, locate your Cloud APIC VM instance (shown as **Virtual machine** under the TYPE column), and click the link for that VM instance.

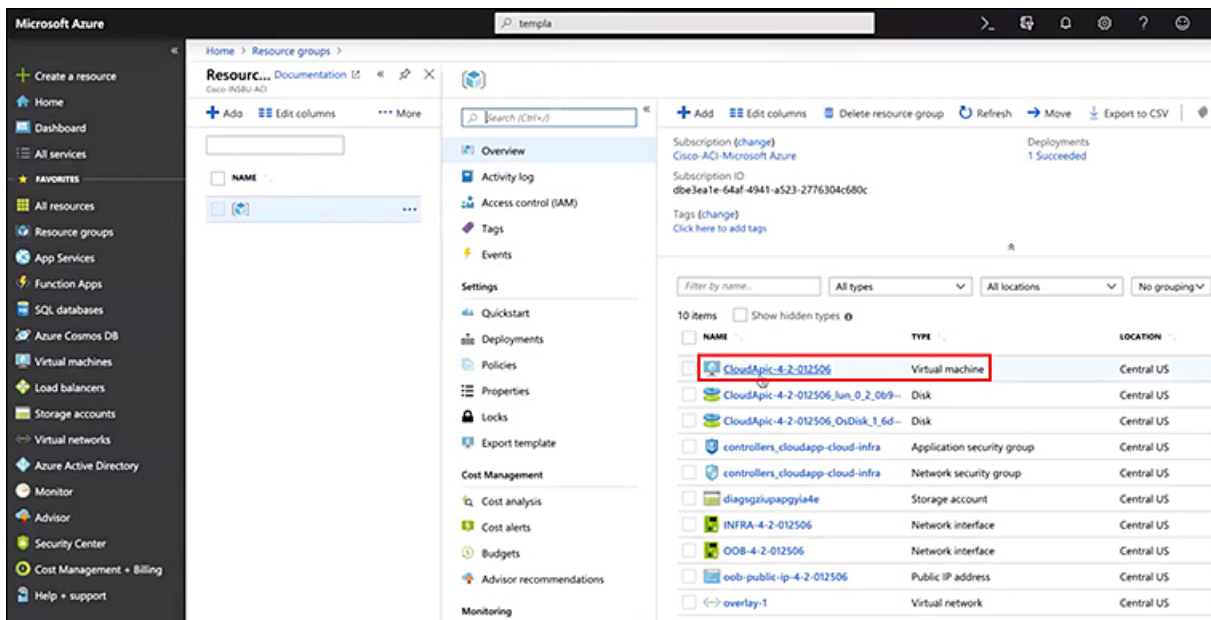

The overview information for the Cloud APIC VM instance is displayed.

Step 6 Locate the entry in the **Public IP address** field in this page and copy that IP address entry.

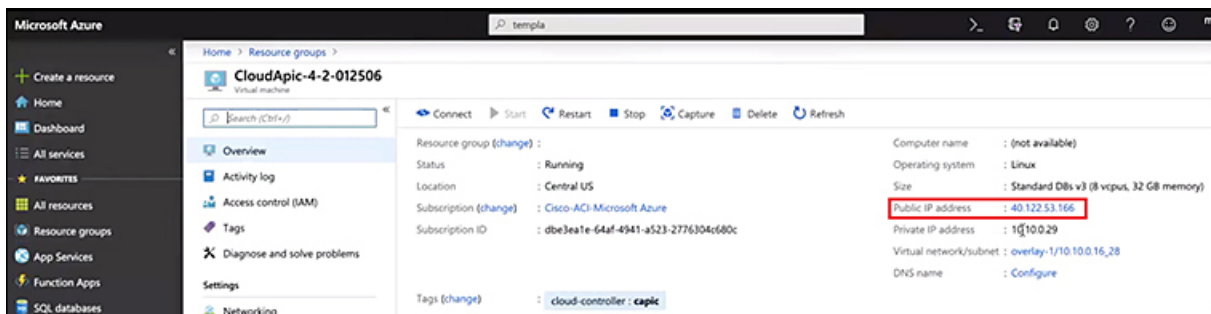

This is the Cloud APIC IP address that you will use to log into the Cloud APIC.

Configuring Cisco Cloud APIC Using the Setup Wizard

Follow the procedures in this topic to set up the cloud infrastructure configuration for your Cloud APIC. Cloud APIC will automatically deploy the required Azure constructs and the necessary CSRs.

Before you begin

Following are the prerequisites for this task:

- You have met the requirements that are outlined in [Requirements for Extending the Cisco ACI Fabric to the Public Cloud](#) before proceeding with the tasks in this section.
- You have successfully completed the procedures that are provided in [Deploying the Cloud APIC in Azure](#).

Step 1 Locate the IP address for your Cloud APIC.

See [Locating the Cloud APIC IP Address, on page 7](#) for those instructions.

Step 2 Open a browser window and, using the secure version of HTTP (`https://`), paste the IP address into the URL field, then press Return to access this Cloud APIC.

For example, `https://192.168.0.0`.

If you see a message asking you to **Ignore Risk and Accept Certificate**, accept the certificate to continue.

Step 3 Enter the following information in the login page for the Cloud APIC:

- **Username:** Enter **admin** for this field.
- **Password:** Enter the password that you provided to log into the Cloud APIC.
- **Domain:** If you see the **Domain** field, leave the default Domain entry as-is.

Step 4 Click **Login** at the bottom of the page.

Note If you see an error message when you try to log in, such as `REST Endpoint user authentication datastore is not initialized - Check Fabric Membership Status of this fabric node`, wait for several minutes, then try again after a few minutes. You might also have to refresh the page in order to log in.

The Welcome to Cloud APIC setup wizard page appears.

Step 5 Click **Begin Set Up**.

The **Let's Configure the Basics** page appears, with these areas to be configured:

- **DNS and NTP Servers**
- **Region Management**
- **Smart Licensing**

Step 6 In the **DNS and NTP Servers** row, click **Edit Configuration**.

The **DNS and NTP** page appears.

Step 7 In the **DNS and NTP** page, add the DNS, if necessary, and NTP servers.

- A DNS server is already configured by default. Add a DNS server if you want to use a specific DNS server.
 - An NTP server is not configured by default, however, so we recommend that you configure an NTP server. Skip to [7.d, on page 10](#) if you want to configure an NTP server and you do not want to configure a DNS server.
- a) If you want to use a specific DNS server, under the **DNS Servers** area, click **+Add DNS Provider**.
 - b) Enter the IP address for the DNS servers and, if necessary, check the box next to Preferred DNS Provider.
 - c) Click the check mark next to the DNS server, and repeat for any additional DNS servers that you want to add.
 - d) Under the **NTP Servers** area, click **+Add Providers**.
 - e) Enter the IP address for the NTP servers and, if necessary, check the box next to Preferred NTP Provider.
 - f) Click the check mark next to the NTP server, and repeat for any additional NTP servers that you want to add.

Step 8 When you have finished adding the DNS and NTP servers, click **Save and Continue**.

The **Let's Configure the Basics** page appears again.

Step 9 In the **Region Management** row, click **Begin**.

The **Region Management** page appears.

Step 10 Set the type of connectivity that you want for the internal network in the **Connectivity for Internal Network** area, if necessary.

VNet peering at the global level is set in the **Connectivity for Internal Network** area, which enables VNet peering at the Cloud APIC level, deploying NLBs in all the regions with a CSR. For more information on the VNet peering feature, see the *Configuring VNet Peering for Cloud APIC for Azure* document in the [Cisco Cloud APIC documentation page](#).

- For release 5.1(2) and later, VNet peering at the global level is enabled by default and cannot be disabled.
- For releases prior to release 5.1(2), you can set the type of connectivity that you want for the internal network in the **Connectivity for Internal Network** area.
 - To enable Azure VNet peering at the global level, click **Virtual Network Peering**.
 - To enable the traditional VPN connectivity through the CSRs instead of through VNet peering, click **VPN Connectivity via CSR**.

Step 11 If you want connectivity to the on-premises site or another cloud site—in addition to connectivity within a region—check the **Inter-Site Connectivity** check box.

Step 12 Verify that the Cloud APIC home region is selected.

The region that you selected when you were configuring your cloud site is the home region and should be selected already in this page. This is the region where the Cloud APIC is deployed (the region that will be managed by Cloud APIC), and will be indicated with the text `Cloud APIC Deployed` in the Region column.

Note If you enabled Azure VNet peering in [Step 10, on page 10](#), you must also check the box in the **Cloud Routers** column for the Cloud APIC home region, if it is not checked already.

Step 13 Select additional regions if you want the Cloud APIC to manage additional regions, and to possibly deploy CSRs to have inter-VNET communication and Hybrid-Cloud, Hybrid Multi-Cloud, or Multi-Cloud connectivity on those other regions.

The CSR can manage up to four regions, including the home region where Cloud APIC is deployed.

A Cloud APIC can manage multiple cloud regions as a single site. In a typical Cisco ACI configuration, a site represents anything that can be managed by an APIC cluster. If a Cloud APIC manages two regions, those two regions are considered a single site by Cisco ACI.

The following options are available on the row for any region that you select:

- **Cloud Routers:** Select this option if you want to deploy CSRs in this region. You must have at least one region with CSRs deployed to have inter-VNET or inter-VPC communications. However, if you choose multiple regions in this page, you do not have to have CSRs in every region that you choose. See [Understanding Limitations for Number of Sites, Regions and CSRs, on page 2](#) for more information.
- **Inter-Site Connectivity:** Select this option if you want this region to connect to other sites (for example, if you want this region to connect to an on-premises site, or to connect cloud site-to-cloud site, through Cisco ACI Multi-Site). Infra VNETs or VPCs are deployed on all regions selected for inter-site connectivity. Note that when you select inter-site connectivity for a region, the cloud routers option is also selected automatically for this region because you must have two cloud routers deployed for inter-site connectivity hubs.

Step 14 When you have selected all the appropriate regions, click **Next** at the bottom of the page.

The **General Connectivity** page appears.

Step 15 Enter the following information on the **General Connectivity** page.

- a) Under the **General** area, in the **Subnet Pools for Cloud Routers** field, click **Add Subnet Pool for Cloud Routers** if you want to add additional subnets for CSRs.

The first subnet pool is automatically populated (shown as `System Internal`). Addresses from this subnet pool will be used for inter-region connectivity for any additional regions that are added that need to be managed by the Cloud APIC. Subnet pools added in this field must be a valid IPv4 subnet with mask /24.

Add additional subnets for CSRs in this step in these situations:

- If you have a CSR deployed in the Cloud APIC home region, add one additional subnet pool in addition to the `System Internal` subnet pool that is automatically generated
- If you selected additional regions to be managed by Cloud APIC in the previous page:
 - Add *one* additional subnet pool for every managed region with 2-4 CSRs per managed region (if you enter **2**, **3**, or **4** in the **Number of Routers Per Region** field in [15.d, on page 13](#))
 - Add *two* additional subnet pools for every managed region with five or more CSRs per managed region (if you enter between **5** and **8** in the **Number of Routers Per Region** field in [15.d, on page 13](#))

For example:

- Assume you have only the Cloud APIC home region selected in the previous page, and you have a CSR deployed in the Cloud APIC home region. You will need two subnet pools (the automatically-populated **System Internal** subnet pool and one additional subnet pool that is created by you).
- Next, assume you selected two additional regions for Cloud APIC to manage in the previous page, and you have CSRs deployed in both additional regions. In addition, assume you select between 2-4 CSRs to be deployed in each managed region in the **Number of Routers Per Region** field ([15.d, on page 13](#)). In this case, you would need to add two additional subnet pools (one subnet pool for every region with CSRs that you selected in the previous page), for a total of four subnet pools (one automatically populated as **System Internal** and three additional ones that are created by you).

- Finally, assume that you decide to increase the number of CSRs in each managed region to eight at a later date, where you return to this page and you change the value to **8** in the **Number of Routers Per Region** field (15.d, on page 13). Because you have three regions selected in the previous screen (the Cloud APIC home region and two additional regions that you selected to have the Cloud APIC to manage), and you increased the number of CSRs per managed region above four, you would need to add three additional subnet pools again, one for every managed region that has more than four CSRs, for a total of seven subnet pools:

- One automatically populated as **System Internal**
- Two for the CSRs in the home region (one subnet pool created by you previously, and the other one created by you here when you increased the number of CSRs to 8 per managed region)
- Four for the CSRs in the two additional regions that you selected to have managed by the Cloud APIC (two subnet pools created by you previously, and the other two created by you here when you increased the number of CSRs to 8 per managed region)

- b) Under the **CSRs** area, in the **BGP Autonomous System Number for CSRs** field, enter the BGP autonomous system number (ASN) that is unique to this site.

The BGP autonomous system number can be in the range of 1 - 65534.

Note the following Microsoft Azure ASN restrictions:

- Do not use 64518 as the autonomous system number in this field.
- Do not use 32-bit ASNs. Azure VPN Gateways support 16-Bit ASNs at this time.
- The following ASNs are reserved by Azure for both internal and external peerings:
 - Public ASNs: 8074, 8075, 12076
 - Private ASNs: 65515, 65517, 65518, 65519, 65520

You cannot specify these ASNs for your on-premises VPN devices when connecting to Azure VPN gateways.

- The following ASNs are [reserved by IANA](#) and cannot be configured on your Azure VPN Gateway: 23456, 64496-64511, 65535-65551 and 429496729

- c) In the **Assign Public IP to CSR Interface** field, determine if you want to assign public IP addresses or private IP addresses to the CSR interfaces.

The CSR interface IP addresses are used for the following purposes:

- Allows you to configure the CSR through the Management Interface in the Cloud APIC GUI
- Allows you to cross-program the interfaces across sites for multi-cloud and hybrid cloud connectivity through the ACI Multi-Site Orchestrator
- For the CSRs for both control plane and data plane traffic

By default, the **Enabled** check box is checked. This means that public IP addresses can be assigned to the CSRs.

- If you want *public* IP addresses assigned to the CSRs, leave the check in the box next to **Enabled**.
- If you want *private* IP addresses assigned to the CSRs, remove the check in the box next to **Enabled**.

Note that changing the CSR connectivity from private to public, or vice versa, may cause disruption in your network.

Note Beginning with release 5.1(2), both the public and private IP addresses assigned to a CSR are displayed with the other details of the router in the Cloud Resources area. If a public IP is not assigned to a CSR, only the private IP is displayed.

- d) In the **Number of Routers Per Region** field, choose the number of Cisco Cloud Services Routers (CSRs) that will be used in each region.

See [Understanding Limitations for Number of Sites, Regions and CSRs, on page 2](#) for more information on any limitations on the number of CSRs per region.

- e) In the **Username**, enter the username for the Cisco Cloud Services Router.

Note Do not use `admin` as a username for the Cisco Cloud Services Router when connecting to an Azure cloud site.

- f) In the **Password** field, enter the password for the Cisco Cloud Services Router.

Enter the password again in the **Confirm Password** field.

- g) In the **Throughput of the routers** field, choose the throughput of the Cisco Cloud Services Router.

Changing the value in this field changes the size of the CSR instance that is deployed. Choosing a higher value for the throughput results in a larger VM being deployed.

Note the following:

- The licensing of the CSR is based on this setting. You will need the equivalent or higher license in your Smart account for it to be compliant. See [Requirements for the Azure Public Cloud](#) for more information.
- Cloud routers should be undeployed from all regions before changing the router throughput or login credentials.

If you wish to change this value at some point in the future, you must delete the CSR, then repeat the processes in this chapter again and select the new value that you would like in the same **Throughput of the routers** field.

- h) Enter the necessary information in the **TCP MSS** field, if applicable.

Beginning with Release 5.0(2i), the **TCP MSS** option is available to configure the TCP maximum segment size (MSS). This value will be applied to all cloud router interfaces, including data Gigabit Ethernet interfaces, IPsec tunnel interfaces of cloud routers, and VPN tunnel interfaces toward cloud, on-premises, or other cloud sites. For VPN tunnels towards the cloud, if the cloud provider's MSS value is less than the value that you enter in this field, then the lower value is used; otherwise, the value that you enter in this field is used.

The MSS value affects only TCP traffic, and has no impact on other types of traffic, such as ping traffic.

- i) In the **License Token** field, enter the license token for the Cisco Cloud Services Router.

This is the Product Instance Registration token from your Cisco Smart Software Licensing account. To get this license token, go to <http://software.cisco.com>, then navigate to **Smart Software Licensing > Inventory > Virtual Account** to find the Product Instance Registration token. See [Cisco Cloud APIC Licensing](#) for more information.

Note If you assigned private IP addresses to the CSRs in [15.c, on page 12](#), the only supported option is **Direct connect to Cisco Smart Software Manager (CSSM)** when registering smart licensing for CSRs with private IP addresses. You must provide reachability to the CSSM through express route in this case.

Step 16 Click the appropriate button, depending on whether you are configuring inter-site connectivity or not.

- If you are not configuring inter-site connectivity (if you did not select **Inter-Site Connectivity** when you were selecting regions to manage in the **Region Management** page), click **Save and Continue**. The **Let's Configure the Basics** page appears again. Skip to [Step 22, on page 15](#).
- If you are configuring inter-site connectivity (if you selected **Inter-Site Connectivity** when you were selecting regions to manage in the **Region Management** page), click **Next** at the bottom of the page. The **Inter-Site Connectivity** page appears.

Step 17 Enter the following information in the **Inter-Site Connectivity** page:

- **IPSec Tunnels to Inter-Site Routers:** This field is necessary only for on-premises connectivity to cloud sites. There is no need to enter information in this field if you don't have an on-premises site.
In this area, click the + button next to the **Add Public IP of IPsec Tunnel Peer** field.
 - Enter the peer IP address for the IPsec tunnel termination to the on-premises device.
 - Click the check mark to add this peer IP address.
- **OSPF Area for Inter-Site Connectivity:** Enter the underlay OSPF area ID that will be used with on-premises ISN peering (for example, 0 . 0 . 0 . 1)
- Under the **External Subnets for Inter-Site Connectivity** heading, click the + button next to the **+Add External Subnet** field.
 - Enter the subnet tunnel endpoint pool (the cloud TEP) that will be used in Azure. It must be a valid IPv4 subnet with a mask between /16 and /22 (for example, 30 . 29 . 0 . 0 /16). This subnet will be used to address the IPsec tunnel interfaces and loopbacks of the Cloud Routers used for on-premises connectivity, and cannot overlap with other on-premises TEP pools.
 - Click the check mark after you have entered in the appropriate subnet pools.

Step 18 When you have configured all the connectivity options, click **Next** at the bottom of the page. The **Cloud Resource Naming Rules** page appears.

Step 19 Choose **Cloud Resource Naming** mode.

Starting with Release 5.0(2), you can create a global naming policy on the Cloud APIC, which allows you to define a custom cloud resources naming convention for all objects deployed from the Cloud APIC into the Azure cloud. Additional details about naming rules, available object name variables, guidelines, and limitations are available in the earlier [Cloud Resources Naming, on page 3](#) section of this chapter.

You can choose one of the following:

- **Default**, in which case the cloud resources created by the Cloud APIC in Azure will be assigned names that are derived from the names of the ACI objects. For example, resource groups' names will be based on the Tenant, VRF, and region: `CAPIC_<tenant>_<vrf>_<region>`.
- **Custom**, in which case you can define your own rules for how each of the cloud resources is named.
When you select the custom naming, an **Edit** icon appears next to each cloud resource. You can click the edit icon to define the naming convention for one or more of the displayed resources.
The variables that are available for this type of resource are listed under the naming rule text box. The variables are divided into the **Required Keyword** and **Optional Keywords**, you must include all the required keywords

for the rule you are updating. For example, when defining the naming rule for Azure's Resource Groups, you must include the Tenant name, VRF name, and the Region keywords.

Step 20 Confirm you have reviewed and accept the global resource naming policy.

Once a cloud resource is created, its name cannot be changed. As such, you must review and accept the global naming policy you have defined in the previous step before any cloud resources can be deployed. When ready, enable the **Deploy cloud resources based on these naming rules** checkbox.

Note that you can leave the checkbox unchecked and choose to proceed, in which case any changes you have made will be saved but no configuration will be deployed. You would need to come back to this screen to accept the naming policy to deploy.

Step 21 When you have entered all the necessary information on this page, click **Save and Continue** at the bottom of the page. The **Let's Configure the Basics** page appears again.

Step 22 In the **Smart Licensing** row, click **Register**.

The **Smart Licensing** page appears.

Step 23 Enter the necessary information in the **Smart Licensing** page.

Cisco Smart Licensing is a unified license management system that manages software licenses across Cisco products. To register your Cloud APIC with Cisco Smart Software Licensing, do the following

- Ensure that this product has access to the internet or a Smart Software Manager satellite installed on your network.
- Log in to Smart Account:
 - Smart Software Manager: <https://software.cisco.com/>
 - Smart Software Manager Satellite: <https://www.cisco.com/c/en/us/buy/smart-accounts/software-manager-satellite.html>
- Navigate to the Virtual Account containing the licenses to be used by this Product Instance.
- Generate a Product Instance Registration Token (this identifies your Smart Account) and copy or save it.

To learn more about Smart Software Licensing, visit <https://www.cisco.com/go/smartlicensing>.

Step 24 Click **Register** at the bottom of the page if you entered the necessary licensing information on this page, or click **Continue in Evaluation Mode** if you want to continue in evaluation mode instead.

The **Summary** page appears.


Step 25 Verify the information on the **Summary** page, then click **Finish**.

At this point, you are finished with the internal network connectivity configuration for your Cloud APIC.

If this is the first time that you are deploying your Cloud APIC, this process might take quite a bit of time, possibly 30 minutes or so before the process is successfully completed.

Step 26 Verify that the CSRs were successfully deployed.

- a) From the main Azure management portal page, click the **All services** link in the left nav bar, then click the **Subscriptions** link.

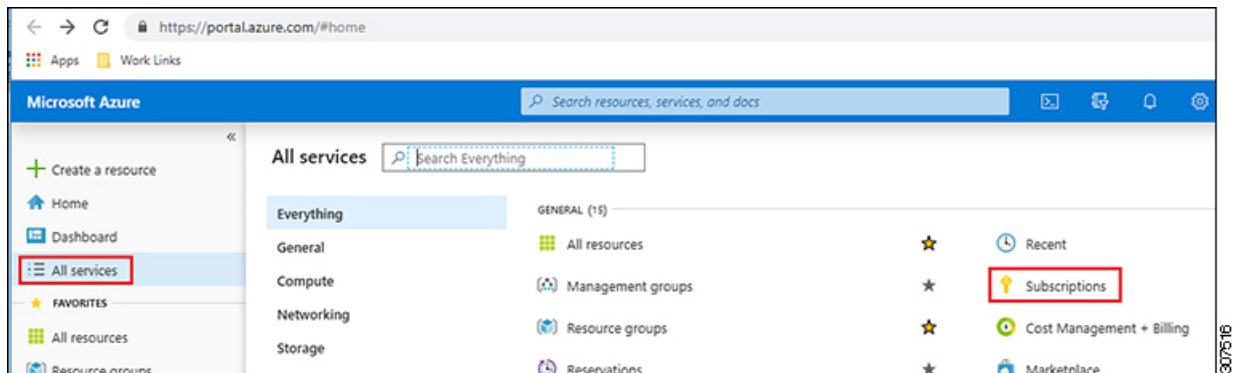

- b) In the **Subscriptions** page in the Azure management portal, click the subscription account that you created.
The overview information for that subscription is displayed.
- c) From the overview page for that subscription, locate the **Resource groups** link in the left nav bar and click that link.
The resource groups for that subscription is displayed.
- d) Choose the resource group that you chose or created in the **Custom deployment** page in [Deploying the Cloud APIC in Azure](#).
The overview information for that resource group is displayed.
- e) In the overview page for the resource group, locate your CSR VM instance (shown as **Virtual machine** under the TYPE column), and click the link for that VM instance.
The CSR VM instance will have a name with a `ct_routerp_region_x_0` format, where:
 - *region* is the managed region (for example, `westus`, `westus2`, `centralus`, or `eastus`)
 - *x* is the CSR count, starting from zero

For example: `ct_routerp_centralus_0_0` or `ct_routerp_centralus_1_0`

 The overview information for the CSR VM instance is displayed.
- f) Locate the **Status** field at the top left area in the page.
 - If you see the text **Creating** in the **Status** field, then the CSRs are not fully deployed yet.
 - If you see the text **Running** in the **Status** field, then the CSRs are fully deployed.

What to do next

Determine if you are managing additional sites along with the Cisco Cloud APIC site or not:

- If you are managing additional sites (an on-premises site or cloud sites) along with the Cisco Cloud APIC site (if you selected the **Inter-Site Connectivity** option in the **Region Management** page), go to [Managing Cisco Cloud APIC Through Cisco ACI Multi-Site](#).
- If you are setting up a Cloud First configuration, where you are not managing any other sites along with the Cisco Cloud APIC site (if you selected only the **Cloud Routers** option in the **Region Management**

page), you will not need to use the Cisco ACI Multi-Site for additional configurations. However, you will have additional configurations that you must perform in the Cisco Cloud APIC GUI in this case.

You also need to create a tenant using the Cisco Cloud APIC GUI using the instructions in [Creating a Tenant Using the Cisco Cloud APIC GUI](#).

Use the Global Create option in the Cisco Cloud APIC GUI to configure the following components:

- Tenant
- Application Profile
- EPG

See [Navigating the Cisco Cloud APIC GUI](#) and [Configuring Cisco Cloud APIC Components](#) for more information.

Verifying the Cisco Cloud APIC Setup Wizard Configurations

Use the procedures in this topic to verify that the configuration information that you entered in the Cloud APIC Setup Wizard are applied correctly.

In Cisco Cloud APIC, verify the following settings:

- Under **Cloud Resources**, click on **Regions** and verify that the regions that you selected are shown as **managed** in the Admin State column.
- Under **Infrastructure**, click on **Inter-Region Connectivity** and verify the information in this screen is correct.
- Under **Infrastructure**, click on **Inter-Site Connectivity** and verify the information in this screen is correct.
- Click on Dashboard and use the information in the On Premises Connectivity Status and the Inter-Region Connectivity Status boxes to verify that the setup wizard and tunnel configurations were done properly.

What to do next

Complete the multi-site configuration using the procedures provided in [Managing Cisco Cloud APIC Through Cisco ACI Multi-Site](#).

