



Editing Routed Fabric Settings, Release 4.2.1

Table of Contents

New and changed information	1
Editing routed fabric settings	2
General	3
Fabric Management	4
General Parameters	4
vPC	6
Protocols	7
Security	8
Advanced	9
Freeform	14
Manageability	14
Bootstrap	15
Configuration Backup	16
Flow Monitor	17
Telemetry	19
Edit configuration settings	20
Edit NAS settings	20
Disable Telemetry	21
Perform force disable telemetry on your fabric	21
NAS	21
Guidelines and limitations for network attached storage	22
Add network attached storage to export flow records	22
Add NAS to Nexus Dashboard	22
Add the onboarded NAS to Nexus Dashboard	23
Flow collection	25
Understanding flow telemetry	25
Flow telemetry guidelines and limitations	25
Configure flows	27
Monitor the subnet for flow telemetry	29
Understanding Netflow	31
Understanding Netflow types	31
Netflow guidelines and limitations	32
Configure Netflow	33
Understanding sFlow	34
Guidelines and limitations for sFlow	34
Configure sFlow telemetry	34
External streaming	36
Configure external streaming settings	36
Guidelines and limitations	37
Guidelines and limitations in NX-OS fabrics	37
Email	37

Message bus	39
Add Kafka broker configuration	39
Configure Kafka exports in fabric settings	41
Anomalies	43
Advisories	44
Statistics	44
Faults	45
Audit Logs	45
Syslog	45
Guidelines and limitations for syslog	46
Add syslog server configuration	46
Configure syslog to enable exporting anomalies data to a syslog server	46
Additional settings	49
Retrieving the authentication key	49
Retrieve the 3DES encrypted OSPF authentication key	49
Retrieve the encrypted IS-IS authentication key	49
Retrieve the 3DES encrypted BGP authentication key	50
Retrieve the encrypted BFD authentication key	50
Guidelines for VXLAN Fabric With eBGP Underlay	51
Adding Switches	52
Assigning Switch Roles	52
AI QoS classification and queuing policies	52
Understanding AI QoS classification and queuing policies	52
Guidelines and limitations for AI QoS classification and queuing policies	53
Configure AI QoS classification and queuing policies	53
Create a policy using the custom QoS templates	55
Border Gateway Support	55
Border Gateway Route Filtering	56
Guidelines and Limitations	57
Layer 3 VNI without VLAN	57
Guidelines and limitations for Layer 3 VNI without VLAN	58
Configuring downstream VNI	59
Benefits of downstream VNI	60
Use cases for downstream VNI	60
Supported platforms	61
Guidelines and limitations for downstream VNI	61
MACsec support in Data Center VXLAN EVPN and BGP fabrics	61
Guidelines	61
Enable MACsec	62
Disable MACsec	67
vPC fabric peering	67
Guidelines and limitations	68
QoS for fabric vPC-peering	68

Create a virtual peer link	70
Convert a physical peer link to a virtual peer link	71
Convert a virtual peer link to a physical peer link	72
Deploying Fabric Underlay eBGP Policies	73
Deploying Fabric Overlay eBGP Policies	73
Deploying Spine Switch Overlay Policies	74
Deploying Leaf Switch Overlay Policies	74
Adding a Super Spine Switch to an Existing VXLAN BGP EVPN Fabric	75
Managing BGP-Based Routed Fabrics	76
Creating an eBGP-based Fabric	76
Adding Switches to a Fabric	85
Deploying Fabric Underlay eBGP Policies	85
Deploying Networks in eBGP-based Fabrics	86
Copyright	92

New and changed information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.2.1		There were no major changes from the previous release.

Editing routed fabric settings

A **routed** fabric is a type of fabric that is used to automate the provisioning of a BGP-based Clos fabric on Cisco Nexus (NX-OS) switches.

When you first create a routed fabric using the procedures provided in [Creating Fabrics and Fabric Groups](#), the standard workflow allows you to create a fabric using the bare minimum settings so that you are able to create a fabric quickly and easily. Use the procedures in this article to make more detailed configurations for your routed fabric.



When you update the BGP ASN for spines field in a fabric configured with External Connectivity, the change is not immediately reflected in the deployment preview nor applied during the **Recalculate & Deploy** operation. The updated ASN takes effect only after the affected switch is removed from the fabric and re-onboarded.

1. Navigate to the main Fabrics page:

Manage > Fabrics

2. Locate the fabric that you want to edit.
3. Click the circle next to the routed fabric that you want to edit to select that fabric, then click **Actions > Edit Fabric Settings**.

The **Edit *fabric_name* Settings** page appears.

4. Click the appropriate tab to edit these settings for the fabric:
 - o [General](#)
 - o [Fabric Management](#)
 - o [Telemetry](#) (if the **Telemetry** feature is enabled for the fabric)

General

Use the information in this section to edit the settings in the **General** window for your routed fabric.

Change the general parameters that you configured previously for the routed fabric, if necessary, or click another tab to leave these settings unchanged.

Fabric type	Description
Name	The name for the fabric. This field is not editable.
Type	The fabric type for this fabric. This field is not editable.
Location	Choose the location for the fabric.
BGP ASN for Spines	Enter the BGP autonomous system number (ASN) for the fabric's spine switches.
License tier	Choose the licensing tier for the fabric: <ul style="list-style-type: none">• Essentials• Advantage• Premier Click on the information icon (i) next to License tier to see what functionality is enabled for each license tier.
Enabled features	Check the box to enable Telemetry for the fabric. This is the equivalent of enabling the Nexus Dashboard Insights service in previous releases.
Telemetry collection	This option becomes available if you choose to enable Telemetry in the Enable features field above. Choose either Out-of-band or In-band for telemetry collection.
Telemetry streaming	This option becomes available if you choose to enable Telemetry in the Enable features field above. Choose either IPv4 or IPv6 for telemetry streaming.
Security domain	Choose the security domain for the fabric.

Fabric Management

Use the information in this section to edit the settings in the **Fabric Management** window for your routed fabric. The tabs and their fields in the screen are explained in the following sections. The fabric-level parameters are included in these tabs.

- [General Parameters](#)
- [vPC](#)
- [Protocols](#)
- [Security](#)
- [Advanced](#)
- [Freeform](#)
- [Manageability](#)
- [Bootstrap](#)
- [Configuration Backup](#)
- [Flow Monitor](#)

General Parameters

The **General Parameters** tab is displayed, by default. The fields in this tab are described in the following table.

General Parameters for VXLAN EVPN Fabric with eBGP

Field	Description
First Hop Redundancy Protocol	<p>This field is available if you did not select the Enable EVPN VXLAN Overlay option above. This field is only applicable to a routed fabric.</p> <p>Specify the First Hop Redundancy Protocol that you want to use:</p> <ul style="list-style-type: none">• hsrp: Hot Standby Router Protocol• vrrp: Virtual Router Redundancy Protocol <div style="border-left: 1px solid #ccc; padding-left: 10px;"> After a network has been created, you cannot change this fabric setting. You should delete all networks, and then change the First Hop Redundancy Protocol setting.</div>
BGP ASN for Super Spines	Enter the ASN used for super spine and border super spines, if the fabric contains any super spine or border super spine switches.
BGP ASN for Leafs	Enter the ASN used for leaf switches, if the fabric contains any leaf switches.
BGP ASN for Border and Border Gateway switches	Enter the ASN used for border and border gateway switches, if the fabric contains any border and border gateway switches.

Field	Description
BGP AS Mode	<p>Choose Multi-AS or Same-Tier-AS.</p> <ul style="list-style-type: none"> • In a Multi-AS fabric, a unique AS number per leaf/border is used. • In a Same-Tier-AS fabric, all leaf nodes share one unique AS and all border nodes share another unique AS. <p>In both Multi-AS and Same-Tier-AS, all spine switches in a fabric share one unique AS number. The fabric is identified by the spine switch ASN.</p>
Enable ASN Auto Allocation	Enable automated BGP ASN allocation for leaf switches, border devices, and border gateways in Multi-AS mode. Nexus Dashboard assigns unique ASNs from the defined pool. This field applies only when the underlay and overlay routing protocol is eBGP.
BGP ASN Range	Specifies the BGP ASN range for automatic allocation. This field is available when ASN Auto Allocation is enabled. If you do not provide a value, the system automatically generates a range. Use a unique BGP ASN range for each eBGP fabric.
Allow Same ASN On Leafs	Uses the same ASN on all the leaf nodes even when you have configured Multi-AS mode.
Enable IPv6 routed fabric or VXLAN with IPv6 underlay	<p>Enables IPv6 routed fabric or IPv6 underlay. With the checkbox cleared, the system configures IPv4 routed fabric or IPv4 underlay.</p> <p>To configure IPv6 underlay, you must also configure the VXLAN overlay parameters in the EVPN tab.</p>
Underlay Subnet IP Mask	Specifies the subnet mask for the fabric interface IP addresses.
Manual Underlay IP Address Allocation	Check the check box to disable dynamic underlay IP address allocations.
Underlay Routing Loopback IP Range	Specifies the loopback IPv4 addresses for protocol peering.
Underlay Subnet IP Range	Specifies the IPv4 addresses for underlay P2P routing traffic between interfaces.
Underlay Routing Loopback IPv6 Range	Specifies the loopback IPv6 addresses for protocol peering.
Disable Route-Map Tag	Disables subnet redistribution.
Route-Map Tag	Configures a route tag for redistributing subnets. By default, the tag value of 12345 is configured, when enabled.
Subinterface Range Dot1q	Specifies the subinterface range when Layer 3 sub interfaces are used.

Field	Description
Enable Performance Monitoring	<p>Check the check box to enable performance monitoring.</p> <p>Ensure that you do not clear interface counters from the command-line interface of the switches. Clearing interface counters can cause the Performance Monitor to display incorrect data for traffic utilization. If you must clear the counters and the switch has both clear counters and clear counters snmp commands (not all switches have the clear counters snmp command), ensure that you run both the main and the SNMP commands simultaneously. For example, you must run the clear counters interface ethernet slot/port command followed by the clear counters interface ethernet slot/port snmp command. This can lead to a one-time spike.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>Performance monitoring is supported on switches with NX-OS Release 9.3.6 and later.</p> </div>

vPC

vPC Configuration for VXLAN EVPN Fabric with eBGP

Field	Description
vPC Peer Link VLAN	VLAN used for the vPC peer link SVI.
Make vPC Peer Link VLAN as Native VLAN	Enables vPC peer link VLAN as Native VLAN.
vPC Peer Keep Alive option	From the drop-down list, select management or loopback . To use IP addresses assigned to the management port and the management VRF, select management . To use IP addresses assigned to loopback interfaces (in non-management VRF), select loopback . If you use IPv6 addresses, you must use loopback IDs.
vPC Auto Recovery Time	Specifies the vPC auto recovery time-out period in seconds.
vPC Delay Restore Time	Specifies the vPC delay restore period in seconds.
vPC Peer Link Port Channel Number	Specifies the Port Channel ID for a vPC Peer Link. By default, the value in this field is 500.
vPC IPv6 ND Synchronize	Enables IPv6 Neighbor Discovery synchronization between vPC switches. The check box is enabled by default. Uncheck the check box to disable the function.
Fabric wide vPC Domain Id	Enables the usage of same vPC Domain Id on all vPC pairs in the fabric. When you select this field, the vPC Domain Id field is editable.
vPC Domain Id	Specifies the vPC domain ID to be used on all vPC pairs. Otherwise unique vPC domain IDs are used (in increment of 1) for each vPC pair.

Field	Description
Enable Qos for Fabric vPC-Peering	<p>Enables QoS on spines for guaranteed delivery of vPC Fabric Peering communication.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>QoS for vPC fabric peering and queuing policies options in fabric settings are mutually exclusive.</p> </div>
Qos Policy Name	Specifies QoS policy name that should be same on all spines.

Protocols

Protocol Configuration for VXLAN EVPN Fabric with eBGP

Field	Description
Routing Loopback Id	The loopback interface ID is populated as 0 by default. It is used as the BGP router ID.
VTEP Loopback Id	The loopback interface ID is populated as 1 and it is used for VTEP peering purposes.
BGP Maximum Paths	Specifies maximum number for BGP routes to be installed for same prefix on the switches for ECMP.
Enable BGP Authentication	Check the check box to enable BGP authentication. If you enable this field, the BGP Authentication Key Encryption Type and BGP Authentication Key fields are enabled.
BGP Authentication Key Encryption Type	Choose the three for 3DES encryption type, or seven for Cisco encryption type.
BGP Authentication Key	<p>Enter the encrypted key based on the encryption type.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>Plain-text passwords are not supported.</p> </div> <p>Log on to the switch, retrieve the encrypted key. Enter the key in the BGP Authentication Key field.</p> <p>For more information, see Retrieve the encrypted BFD authentication key.</p>
Enable PIM Hello Authentication	Enables the PIM hello authentication.
PIM Hello Authentication Key	Specifies the PIM hello authentication key.

Field	Description
Enable BFD	<p>Check the Enable BFD check box to enable feature bfd on all switches in the fabric. This feature is valid only on IPv4 underlay and the scope is within a fabric.</p> <p>Nexus Dashboard supports BFD within a fabric. The BFD feature is disabled by default in the Fabric Settings. If enabled, BFD is enabled for the underlay protocols with the default settings. Any custom BFD configurations requires configurations to be deployed via the per switch freeform or per interface freeform policies.</p> <p>The following configuration is pushed after you enable BFD.</p> <pre>'feature bfd'</pre> <p>For Nexus Dashboard with BFD-enabled, the following configurations are pushed on all the P2P fabric interfaces:</p> <div style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;"> <pre>no ip redirects no ipv6 redirects</pre> </div> <p>For information about BFD feature compatibility, refer your respective platform documentation and for information about the supported software versions, see <i>Cisco Nexus Dashboard Fabric Controller Compatibility Matrix</i>.</p>
Enable BFD for BGP	Check the check box to enable BFD for the BGP neighbor. This option is disabled by default.
Enable BFD Authentication	Check the check box to enable BFD authentication. If you enable this field, the BFD Authentication Key ID and BFD Authentication Key fields are enabled.
BFD Authentication Key ID	Specifies the BFD authentication key ID for the interface authentication.
BFD Authentication Key	Specifies the BFD authentication key. For information about how to retrieve the BFD authentication parameters, see Retrieve the encrypted BFD authentication key .

Security

Security Configuration for VXLAN EVPN Fabric with eBGP

Field	Description
Enable MACsec	Check the check box to enable MACsec in the fabric. MACsec configuration is not generated until MACsec is enabled on an intra-fabric link. Perform a Recalculate and deploy operation to generate the MACsec configuration and deploy the configuration on the switch.

Field	Description
MACsec Cipher Suite	<p>Choose one of the following MACsec cipher suites for the MACsec policy:</p> <ul style="list-style-type: none"> • GCM-AES-128 • GCM-AES-256 • GCM-AES-XPN-128 • GCM-AES-XPN-256 <p>The default value is GCM-AES-XPN-256.</p>
MACsec Primary Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing the primary MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p> <p> The default key lifetime is infinite.</p>
MACsec Primary Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the primary key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p> <p>You can configure a fallback key on the device to initiate a backup session if the primary session fails.</p>
MACsec Fallback Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing a fallback MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p>
MACsec Fallback Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the fallback key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p>
MACsec Status Report Timer	<p>Specify the MACsec operational status periodic report timer in minutes.</p>

Advanced

Advanced Configuration for VXLAN EVPN Fabric with eBGP

Field	Description
Intra Fabric Interface MTU	Specifies the MTU for the intra fabric interface. This value must be an even number.
Layer 2 Host Interface MTU	Specifies the MTU for the Layer 2 host interface. This value must be an even number.
Power Supply Mode	Choose the appropriate power supply mode.
CoPP Profile	From the drop-down list, select the appropriate Control Plane Policing (CoPP) profile policy for the fabric. By default, the strict is selected.

Field	Description
VTEP HoldDown Time	Specifies the NVE source interface hold down time.
VRF Lite Subnet IP Range	<p>These fields are prefilled with the DCI subnet details. Update the fields as needed.</p> <p>The values shown on the page are automatically generated. If you want to update the IP address ranges, VXLAN Layer 2/Layer 3 network ID ranges or the VRF/network VLAN ranges, ensure that each fabric has its own unique range and is distinct from any underlay range to avoid possible duplication. You should only update one range of values at a time.</p>
VRF Lite Subnet Mask	<p>If you want to update more than one range of values, do it in separate instances. For example, if you want to update Layer 2 and Layer 3 ranges, you should do the following.</p> <ol style="list-style-type: none"> 1. Update the Layer 2 range and click Save. 2. Click the Edit Fabric option again, update the Layer 3 range, and click Save.
Enable CDP for Bootstrapped Switch	Check the check box to enable CDP for switches discovered using Bootstrap.
Enable NX-API	Check the check box to enable NX-API on HTTPS. This check box is checked by default.
Enable NX-API on HTTP	<p>Specifies enabling of NX-API on HTTP. Check Enable NX-API on HTTP and Enable NX-API check boxes to use HTTP. This check box is checked by default. If you uncheck this check box, the applications that use NX-API and supported by Nexus Dashboard, such as Endpoint Locator (EPL), Layer 4-Layer 7 services (L4-L7 services), VXLAN OAM, and so on, start using the HTTPS instead of HTTP.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;">  <p>If you check both Enable NX-API and Enable NX-API on HTTP check boxes, applications use HTTP.</p> </div>
Enable Strict Config Compliance	<p>Enable the Strict Configuration Compliance feature by selecting this check box.</p> <p>For more information, see the section "Strict Configuration Compliance" in Configuration Compliance.</p>
Enable AAA IP Authorization	Enables AAA IP authorization (make sure IP Authorization is enabled in the AAA Server).
Enable Nexus Dashboard as Trap Host	Check the check box to enable Nexus Dashboard as a trap host.
Enable TCAM Allocation	TCAM commands are automatically generated for VXLAN and vPC Fabric Peering when enabled.
Greenfield Cleanup Option	Enable the switch cleanup option for greenfield switches without performing a switch reload. This option is typically recommended only for the Data centers with the Cisco Nexus 9000v Switches.

Field	Description
Enable Default Queuing Policies	<p>Check the check box to apply QoS policies on all the switches in this fabric. To remove the QoS policies that you applied on all the switches, uncheck this check box, update all the configurations to remove the references to the policies, and deploy the configuration. Pre-defined QoS configurations are included that can be used for various Cisco Nexus 9000 Series Switches. When you check this check box, the appropriate QoS configurations are pushed to the switches in the fabric. The system queuing is updated when configurations are deployed to the switches. You can perform the interface marking with defined queuing policies, if required, by adding the necessary configuration to the peer interface freeform block.</p> <p>Review the actual queuing policies by opening the policy file in the template editor. From the Nexus Dashboard Web UI, choose Operations > Template. Search for the queuing policies by the policy file name, for example, queuing_policy_default_8q_cloudscale. Choose the file and click the Modify/View template icon to edit the policy.</p> <p>See the <i>Cisco Nexus 9000 Series NX-OS Quality of Service Configuration Guide</i> for platform specific details.</p>
N9K Cloud Scale Platform Queuing Policy	<p>Choose the queuing policy from the drop-down list to be applied to all Cisco Nexus 9200 Series Switches and the Cisco Nexus 9000 Series Switches that ends with EX, FX, and FX2 in the fabric. The valid values are queuing_policy_default_4q_cloudscale and queuing_policy_default_8q_cloudscale. Use the queuing_policy_default_4q_cloudscale policy for FEXs. You can change from the queuing_policy_default_4q_cloudscale policy to the queuing_policy_default_8q_cloudscale policy only when FEXs are offline.</p>
N9K R-Series Platform Queuing Policy	<p>Select the queuing policy from the drop-down list to be applied to all Cisco Nexus switches that ends with R in the fabric. The valid value is queuing_policy_default_r_series.</p>
Other N9K Platform Queuing Policy	<p>Choose the queuing policy from the drop-down list to be applied to all other switches in the fabric other than the switches mentioned in the above two options. The valid value is queuing_policy_default_other.</p>
Advanced Configuration QoS	<p>Check the box to enable AI QoS and queuing policies in the BGP fabric. For more information, see AI QoS classification and queuing policies.</p> <div style="border-left: 1px solid #ccc; padding-left: 10px; margin-top: 10px;"> <p>This option is not available if you also enabled either of the following options:</p> <ul style="list-style-type: none"> • Enable Qos for Fabric vPC-Peering option in the vPC tab • Enable Default Queuing Policies option in the Advanced tab </div>

Field	Description
AI QoS & Queuing Policy	<p>This field is available if you checked the Advanced QoS Configuration option above.</p> <p>Choose the queuing policy from the drop-down list based on the predominant fabric link speed for certain switches in the fabric. For more information, see AI QoS classification and queuing policies.</p> <p>Options are:</p> <ul style="list-style-type: none"> • 800G: Enable QoS queuing policies for an interface speed of 400 Gb. • 400G: Enable QoS queuing policies for an interface speed of 400 Gb. • 100G: Enable QoS queuing policies for an interface speed of 100 Gb. • 25G: Enable QoS queuing policies for an interface speed of 25 Gb. • User-defined: Provides customization options for parameters that are fixed in port speed templates.
	<p>The ROCEv2 DSCP through Bandwidth remaining % fields are editable if you choose User-defined in the AI QoS & queuing policy field.</p>
ROCEv2 DSCP	Enter the DSCP value (0-63) for RDMA traffic. The default value is 26.
CNP DSCP	Enter the DSCP value (0-63) for congestion notification. The default value is 48.
WRED minimum threshold (in kbytes)	Enter the minimum queue size for WRED. The default value is 950.
WRED maximum threshold (in kbytes)	Enter the maximum queue size for WRED. The default value is 3000.
Drop probability %	Enter the value to control WRED. The default value is 7.
WRED weight	Enter the value to control WRED, which influences queue changes. The default value is 0.
Bandwidth remaining %	Enter the percentage of remaining bandwidth allocated to AI traffic queue. The default value is 50.
Enable Dynamic load balancing	<p>Click to Enable the options. Choose the DLB Mode from the drop-down list and enter the aging period in the Flowlet aging timer field. For more information, see Add a Dynamic Load Balancing (DLB) policy template.</p> <ul style="list-style-type: none"> • Flowlet aging is applicable when you choose the flowlet, policy-driven-flowlet, or policy-driven-mixed-mode mode option from the DLB Mode drop-down list when you add a Dynamic Load Balancing (DLB) policy template. It is not effective when you choose the per-packet or policy-driven-per-packet mode option from the DLB Mode drop-down list. • The NX-OS CLI does accept a flowlet aging value, regardless of the mode; however, it may have a no operation result based on the mode choice.

Field	Description
Enable IP Load Sharing	Click to enable IP load sharing using source and destination addresses for AI workloads.
Enable MACsec	Check the box to enable MACsec in the BGP fabric. For more information, see Enable MACsec .
MACsec Primary Key String	Specify a Cisco Type 7 encrypted octet string that is used for establishing the primary MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric. <div style="display: flex; align-items: center; margin-top: 10px;">  <p>The default key lifetime is infinite.</p> </div>
MACsec Primary Cryptographic Algorithm	Choose the cryptographic algorithm used for the primary key string. It can be AES_128_CMAC or AES_256_CMAC . The default value is AES_128_CMAC . You can configure a fallback key on the device to initiate a backup session if the primary session fails.
MACsec Fallback Key String	Specify a Cisco Type 7 encrypted octet string that is used for establishing a fallback MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.
MACsec Fallback Cryptographic Algorithm	Choose the cryptographic algorithm used for the fallback key string. It can be AES_128_CMAC or AES_256_CMAC . The default value is AES_128_CMAC .
MACsec Cipher Suite	Choose one of the following MACsec cipher suites for the MACsec policy: <ul style="list-style-type: none"> ▪ GCM-AES-128 ▪ GCM-AES-256 ▪ GCM-AES-XPN-128 ▪ GCM-AES-XPN-256 <p>The default value is GCM-AES-XPN-256.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>The MACsec configuration is not deployed on the switches after the fabric deployment is complete. You need to enable MACsec on intra-fabric links to deploy the MACsec configuration on the switch.</p> </div>
MACsec Status Report Timer	Specifies the MACsec operational status periodic report timer in minutes.
Leaf Freeform Config	Add CLIs that should be added to switches that have Leaf, Border, and Border Gateway roles.
Spine Freeform Config	Add CLIs that should be added to switches with Spine, Border Spine, and Border Gateway Spine roles.

Field	Description
Intra-fabric Links Additional Config	Add CLIs that should be added to the intra-fabric links.

Freeform

The fields in this tab are shown below. For more information, see "Enabling Freeform Configurations on Fabric Switches" in [Configuring Switches for LAN and IPFM Fabrics](#).

Field	Description
Leaf Pre-Interfaces Freeform Config	Enter additional CLIs, added before interface configurations, for all Leafs and Tier2 Leafs as captured from Show Running Configuration.
Spine Pre-Interfaces Freeform Config	Enter additional CLIs, added before interface configurations, for all Spines as captured from Show Running Configuration.
Leaf Post-Interfaces Freeform Config	Enter additional CLIs, added after interface configurations, for all Leafs and Tier2 Leafs as captured from Show Running Configuration.
Spine Post-Interfaces Freeform Config	Enter additional CLIs, added after interface configurations, for all Spines as captured from Show Running Configuration.
Intra-fabric Links Additional Config	Add CLIs that should be added to the intra-fabric links.

Manageability

Manageability Parameters for VXLAN EVPN Fabric with eBGP

Field	Description
DNS Server IPs	Specifies the comma-separated list of IP addresses (v4/v6) of the DNS servers.
DNS Server VRFs	Specifies one VRF for all DNS servers or a comma separated list of VRFs, one per DNS server.
NTP Server IPs	Specifies the comma-separated list of IP addresses (v4/v6) of the NTP server.
NTP Server VRFs	Specifies one VRF for all NTP servers or a comma-separated list of VRFs, one per NTP server.
Syslog Server IPs	Specifies the comma-separated list of IP addresses (v4/v6) IP address of the syslog servers, if used.
Syslog Server Severity	Specifies the comma-separated list of syslog severity values, one per syslog server. The minimum value is 0 and the maximum value is 7. To specify a higher severity, enter a higher number.
Syslog Server VRFs	Specifies one VRF for all syslog servers or a comma-separated list of VRFs, one per syslog server.

Field	Description
AAA Freeform Config	<p>Specifies the AAA freeform configs.</p> <p>If AAA configs are specified in the fabric settings, switch_freeform PTI with source as UNDERLAY_AAA and description as AAA Configurations will be created.</p>

Bootstrap

Bootstrap Parameters for VXLAN EVPN Fabric with eBGP

Field	Description
Enable Bootstrap	<p>Check the Enable Bootstrap check box to enable the bootstrap feature.</p> <p>After you enable bootstrap, you can enable the DHCP server for automatic IP address assignment using one of the following methods:</p> <ul style="list-style-type: none"> • External DHCP Server - Enter information about the external DHCP server in the Switch Mgmt Default Gateway and Switch Mgmt IP Subnet Prefix fields. • Local DHCP Server - Check the Local DHCP Server check box and enter details for the remaining mandatory fields.
Enable Local DHCP Server	<p>Check the Enable Local DHCP Server check box to enable DHCP service on Nexus Dashboard and initiate automatic IP address assignment. When you check this check box, the DHCP Scope Start Address and DHCP Scope End Address fields become editable.</p> <p>If you do not check this check box, Nexus Dashboard uses the remote or external DHCP server for automatic IP address assignment.</p>
DHCP Version	<p>Select DHCPv4 or DHCPv6 from this drop-down list. When you select DHCPv4, the Switch Mgmt IPv6 Subnet Prefix field is disabled. If you select DHCPv6, the Switch Mgmt IP Subnet Prefix is disabled.</p> <div style="border: 1px solid #ccc; padding: 10px; margin-top: 10px;">  <p>Nexus Dashboard IPv6 POAP is not supported with Cisco Nexus 7000 Series Switches. Cisco Nexus 9000 and 3000 Series Switches support IPv6 POAP only when switches are either Layer2 adjacent (eth1 or out-of-band subnet must be a /64) or Layer3 adjacent residing in some IPv6 /64 subnet. Subnet prefixes other than /64 are not supported.</p> </div>
DHCP Scope Start Address	<p>Specifies the first and last IP addresses of the IP address range. IPs from this scope are allocated to the switches during the POAP bootstrap process.</p>
DHCP Scope End Address	
Switch Mgmt Default Gateway	Specifies the default gateway for the DHCP scope.

Field	Description
Switch Mgmt IP Subnet Prefix	Specifies the prefix length for DHCP scope.
DHCP scope and management default gateway IP address specification	If you specify the management default gateway IP address 10.0.1.1 and subnet mask 24, ensure that the DHCP scope is within the specified subnet, between 10.0.1.2 and 10.0.1.254.
Switch Mgmt IPv6 Subnet Prefix	Specifies the IPv6 prefix for the Mgmt0 interface on the switch. The prefix should be between 112 and 126. This field is editable if you enable IPv6 for DHCP.
Enable AAA Config	Check the check box to include AAA configs from the Manageability tab during device bootup.
Bootstrap Freeform Config	<p>Enter additional commands as needed. For example, if you are using AAA or remote authentication related configurations, you need to add these configurations in this field to save the intent. After the devices boot up, they contain the intent defined in the Bootstrap Freeform Config field.</p> <p>Copy-paste the running-configuration to a freeform config field with correct indentation, as seen in the running configuration on the NX-OS switches. The freeform config must match the running config.</p> <p>For more information, see the section "Resolve freeform config errors in switches" in Working with Inventory in Your Nexus Dashboard LAN or IPFM Fabrics.</p>
DHCPv4/DHCPv6 Multi Subnet Scope	<p>Specifies the field to enter one subnet scope per line. This field is editable after you check the Enable Local DHCP Server check box. The format of the scope should be defined as:</p> <p>DHCP Scope Start Address, DHCP Scope End Address, Switch Management Default Gateway, Switch Management Subnet Prefix</p> <p>For example: 10.6.0.2, 10.6.0.9, 10.6.0.1, 24</p>

Configuration Backup

Configuration Backup Parameters for VXLAN EVPN Fabric with eBGP

Field	Description
Hourly Fabric Backup	<p>Check the Hourly Fabric Backup check box to enable an hourly backup of fabric configurations and the intent.</p> <p>You can enable an hourly backup for fresh fabric configurations and the intent. If there is a configuration push in the previous hour, Nexus Dashboard takes a backup.</p> <p>Intent refers to configurations that are saved in Nexus Dashboard but yet to be provisioned on the switches.</p>

Field	Description
Scheduled Fabric Backup	Check the check box to enable a daily backup. This backup tracks changes in running configurations on the fabric devices that are not tracked by configuration compliance.
Scheduled Time	<p>Specifies the scheduled backup time in a 24-hour format. This field is enabled if you check the Scheduled Fabric Backup check box.</p> <ol style="list-style-type: none"> Select both the check boxes to enable both back up processes. The backup process is initiated after you click Save. <div style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;">  <p>Hourly and scheduled backup processes happen only during the next periodic configuration compliance activity, and there can be a delay of up to an hour.</p> </div> <ol style="list-style-type: none"> To trigger an immediate backup, do the following: <ol style="list-style-type: none"> Choose Overview > Topology. Click within the specific fabric box. The fabric topology screen comes up. From the Actions pane at the left part of the screen, click Re-Sync Fabric. <p>You can also initiate the fabric backup in the fabric topology window. Click Backup Now in the Actions pane.</p> Click Save after filling and updating relevant information.

Flow Monitor

Configuration Parameters for VXLAN EVPN Fabric with eBGP

Field	Description
Enable Netflow	<p>Check the Enable Netflow check box to enable Netflow on VTEPs for this Fabric. By default, Netflow is disabled.</p> <div style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;">  <p>When Netflow is enabled on the fabric, you can choose not to have netflow on a particular switch by having a fake no_netflow PTI.</p> </div> <p>If netflow is not enabled at the fabric level, an error message is generated when you enable netflow at the interface, network, or VRF level.</p> <p>For information about Netflow support for Nexus Dashboard, see the "Configuring Netflow support" section in Creating Fabrics and Fabric Groups.</p>

Field	Description
Netflow Exporter	<p>To add Netflow exporters for receiving netflow data:</p> <ol style="list-style-type: none"> In the Netflow Exporter area, choose Actions > Add. The Add Item page appears. In the Exporter Name field, enter a name of the exporter. In the IP field, enter the IP address of the exporter. In the VRF field, specify the VRF over which the exporter is routed. In the Source Interface field, enter the source interface name. In the UDP Port field, enter the UDP port number over which the netflow data is exported. Click Save to configure the exporter.
Netflow Record	<p>To add Netflow records:</p> <ol style="list-style-type: none"> In the Netflow Record area, choose Actions > Add to add one or more Netflow records. In the Record Name field, enter a name for the record. In the Record Template field, select the required templates. From Release 12.0.2, the following two record templates are available for use. You can create custom netflow record templates. Custom record templates saved in the template library are available for use here. <ul style="list-style-type: none"> netflow_ipv4_record - to use the IPv4 record template. netflow_l2_record - to use the Layer 2 record template. Check the Is Layer2 Record check box if the record is for Layer2 netflow. Click Save to configure the report.
Netflow Monitor	<p>To add Netflow monitors:</p> <ol style="list-style-type: none"> In the Netflow Monitor area, choose Actions > Add. In the Monitor Name field, enter a name for the monitor. In the Record Name field, enter a name for the record. In the Exporter1 Name field, enter the name of the exporter for the netflow monitor. (Optional) In the Exporter2 Name field, enter the name of the secondary exporter for the netflow monitor. <p>The record name and exporters referred to in each netflow monitor must be defined in the Netflow Record and Netflow Exporter configuration sections in the Flow Monitor tab. . Click Save to configure the flow monitor.</p>

Telemetry

For a Nexus Dashboard fabric in Monitored mode, Nexus Dashboard will not deploy the telemetry configuration to the switches in the fabric. In order to activate, pause, or deactivate telemetry, you must copy and paste the expected configuration on the switches.



1. Navigate to **Admin > System Status > Telemetry > Switches**
2. Click the checkbox next to a switch, then click **Actions > Expected configuration**.
3. View and copy the configuration information in the **Software Telemetry** and **Flow Telemetry** area,.
4. Using the command line, log in to the switch.
5. Enter this command.

```
switch(config)# copy running-config startup-config
```

The telemetry feature in Nexus Dashboard allows you to collect, manage, and monitor real-time telemetry data from your Nexus Dashboard. This data provides valuable insights into the performance and health of your network infrastructure, enabling you to troubleshoot proactively and optimize operations. When you enable telemetry, you gain enhanced visibility into network operations and efficiently manage your fabrics.

Follow these steps to enable telemetry for a specific fabric.

1. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

2. Choose the fabric for which you want to enable telemetry.
3. From the **Actions** drop-down list, choose **Edit fabric settings**.

The **Edit *fabric-name* settings** page displays.



You can also access the **Edit *fabric-name* settings** page for a fabric from the **Fabric Overview** page. In the **Fabric Overview** page, click the **Actions** drop-down list and choose **Edit fabric settings**.

4. In the **Edit *fabric-name* settings** page, click the **General** tab.
5. Under the **Enabled features** section, check the **Telemetry** check box.
6. Click **Save**.

Navigate back to the **Edit *fabric-name* settings** page. The **Telemetry** tab displays.



The **Telemetry** tab appears only when you enable the **Telemetry** option under the **General** tab in the **Edit *fabric-name* settings** page.

The **Telemetry** tab includes these options.

- **Configuration**—allows you to manage telemetry settings and parameters.
- **NAS**—provides Network Analytics Service (NAS) features for advanced insights.

Edit configuration settings

The **Configuration** tab includes these settings.

- **General**—allows you to enable analysis.

You can enable these settings.

- **Enable assurance analysis**—enables you to collect of telemetry data from devices to ensure network reliability and performance.
- **Enable Microburst sensitivity** - allows you to monitor traffic to detect unexpected data bursts within a very small time window (microseconds). Choose the sensitivity type from the **Microburst Sensitivity Level** drop-down list. The options are **High sensitivity**, **Medium sensitivity**, and **Low sensitivity**.



The **Enable Microburst sensitivity** option is available only for ACI fabrics.

- **Flow collection modes**—allows you to choose the mode for telemetry data collection. Modes include **NetFlow**, **sFlow**, and **Flow Telemetry**.

For more information see: [Flow collection](#) and [Configure flows](#).

- **Flow collection rules**—allows you to define rules for monitoring specific subnets or endpoints. These rules are pushed to the relevant devices, enabling detailed telemetry data collection.

For more information, see [Flow collection](#).

Edit NAS settings

Nexus Dashboard allows you to export captured flow records to a remote NAS device using the Network File System (NFS) protocol. Nexus Dashboard defines the directory structure on NAS where the flow records are exported.

You can choose between the two export modes.

- **Full**—exports the complete data for each flow record.
- **Base**—exports only the essential 5-tuple data for each flow record.

Nexus Dashboard needs both read and write permissions on the NAS to perform the export successfully. If Nexus Dashboard cannot write to the NAS, it will generate an alert to notify you of the issue.

Disable Telemetry

You can uncheck the **Telemetry** check box on your fabric's **Edit Fabric Settings > General >** page to disable the telemetry feature for your fabric. Disabling telemetry puts the telemetry feature in a transition phase and eventually the telemetry feature is disabled.

In certain situations, the disable telemetry workflow can fail, and you may see the **Force disable telemetry** option on your fabric's **Edit Fabric Settings** page.

If you disable the telemetry option using the instructions provided in [Perform force disable telemetry on your fabric](#), Nexus Dashboard acknowledges the user intent to disable telemetry feature for your fabric, ignoring any failures.

The Nexus Dashboard **Force disable telemetry** allows you to perform a force disable action for the telemetry configuration on your fabric. This action is recommended when the telemetry disable workflow has failed and you need to disable the telemetry feature on your fabric.



Using the **Force disable telemetry** feature may leave switches in your fabric with stale telemetry configurations. You must manually clean up these stale configurations on the switches before re-enabling telemetry on your fabric.

Perform force disable telemetry on your fabric

Follow these steps to perform a force disable telemetry on your fabric.

1. (Optional) Before triggering a force disable of telemetry configuration, resolve any telemetry configuration anomalies flagged on the fabric.
2. On the **Edit Fabric Settings** page of your fabric, a banner appears to alert you that telemetry cannot be disabled gracefully, and a **Force Disable** option is provided with the alert message.
3. Disable telemetry from the Nexus Dashboard UI using one of these options.
 - a. Click the **Force disable** option in the banner that appears at the top of your fabric's **Edit Fabric Settings** page to disable telemetry for your fabric gracefully.
 - b. Navigate to your fabric's **Overview** page and click the **Actions** drop-down list to choose **Telemetry > Force disable telemetry** option.

Once the force disable action is executed, the **Telemetry** configuration appears as disabled in **Edit Fabric Settings > General > Enabled features > Telemetry** area, that is, the **Telemetry** check box is unchecked.

4. Clean up any stale telemetry configurations from the fabric before re-enabling telemetry on Nexus Dashboard.

NAS

You can export flow records captured by Nexus Dashboard on a remote Network Attached Storage (NAS) with NFS.

Nexus Dashboard defines the directory structure on NAS where the flow records are exported.

You can export the flow records in Base or Full mode. In Base mode, only 5-tuple data for the flow record is exported. In Full mode the entire data for the flow record is exported.

Nexus Dashboard requires read and write permission to NAS in order to export the flow record. A system issue is raised if Nexus Dashboard fails to write to NAS.

Guidelines and limitations for network attached storage

- In order for Nexus Dashboard to export the flow records to an external storage, the Network Attached Storage added to Nexus Dashboard must be exclusive for Nexus Dashboard.
- Network Attached Storage with Network File System (NFS) version 3 must be added to Nexus Dashboard.
- Flow Telemetry and Netflow records can be exported.
- Export of FTE is not supported.
- Average Network Attached Storage requirements for 2 years of data storage at 20k flows per sec:
 - Base Mode: 500 TB data
 - Full Mode: 2.8 PB data
- If there is not enough disk space, new records will not be exported and an anomaly is generated.

Add network attached storage to export flow records

The workflow to add Network Attached Storage (NAS) to export flow records includes the following steps:

1. Add NAS to Nexus Dashboard.
2. Add the onboarded NAS to Nexus Dashboard to enable export of flow records.

Add NAS to Nexus Dashboard

Follow these steps to add NAS to Nexus Dashboard.

1. Navigate to **Admin > System Settings > General**.
2. In the **Remote storage** area, click **Edit**.
3. Click **Add Remote Storage Locations**.
4. Complete the following fields to add NAS to Nexus Dashboard.
 - a. Enter the name of the Network Attached Storage and a description, if desired.
 - b. In the **Remote storage location type** field, click **NAS Storage**.
 - c. In the **Type** field, choose **Read Write**.

Nexus Dashboard requires read and write permission to export the flow record to NAS. A system issue is raised if Nexus Dashboard fails to write to NAS.

- d. In the **Hostname** field, enter the IP address of the Network Attached Storage.
- e. In the **Port** field, enter the port number of the Network Attached Storage.

f. In the **Export path** field, enter the export path.

Using the export path, Nexus Dashboard creates the directory structure in NAS for exporting the flow records.

g. In the **Alert threshold** field, enter the alert threshold time.

Alert threshold is used to send an alert when the NAS is used beyond a certain limit.

h. In the **Limit (Mi/Gi)** field, enter the storage limit in Mi/Gi.

i. Click **Save**.



In a three-node Nexus Dashboard cluster deployment, NAS backup operations require that all cluster nodes are in an operational and healthy state. If any node is down, unreachable, or not in a fully functional state, NAS backup operations do not proceed.

This ensures cluster consistency and data integrity during backup operations. Verify cluster health and confirm that all three nodes are up and synchronized before initiating or scheduling NAS backups.

Add the onboarded NAS to Nexus Dashboard

Follow these steps to add the onboarded NAS to Nexus Dashboard.

1. Navigate to the Fabrics page:

Manage > Fabrics

2. Choose the fabric with the telemetry feature enabled.

3. Choose **Actions > Edit Fabric Settings**.

4. Click **Telemetry**.

5. Click the **NAS** tab in the **Telemetry** window.

6. Make the necessary configurations in the **General settings** area.

a. Enter the name in the **Name** field.

b. In the **NAS server** field, choose the NAS server added to Nexus Dashboard from the drop-down list.


7. In the **Collection settings** area, choose the flow from the **Flows** drop-down list.

o In Base mode, only 5-tuple data for the flow record is exported.

o In Full mode, the entire data for the flow record is exported.

8. Click **Save**.

The traffic from the flows displayed in the **Flows** page is exported as a JSON file to the external NAS in the following directory hierarchy.

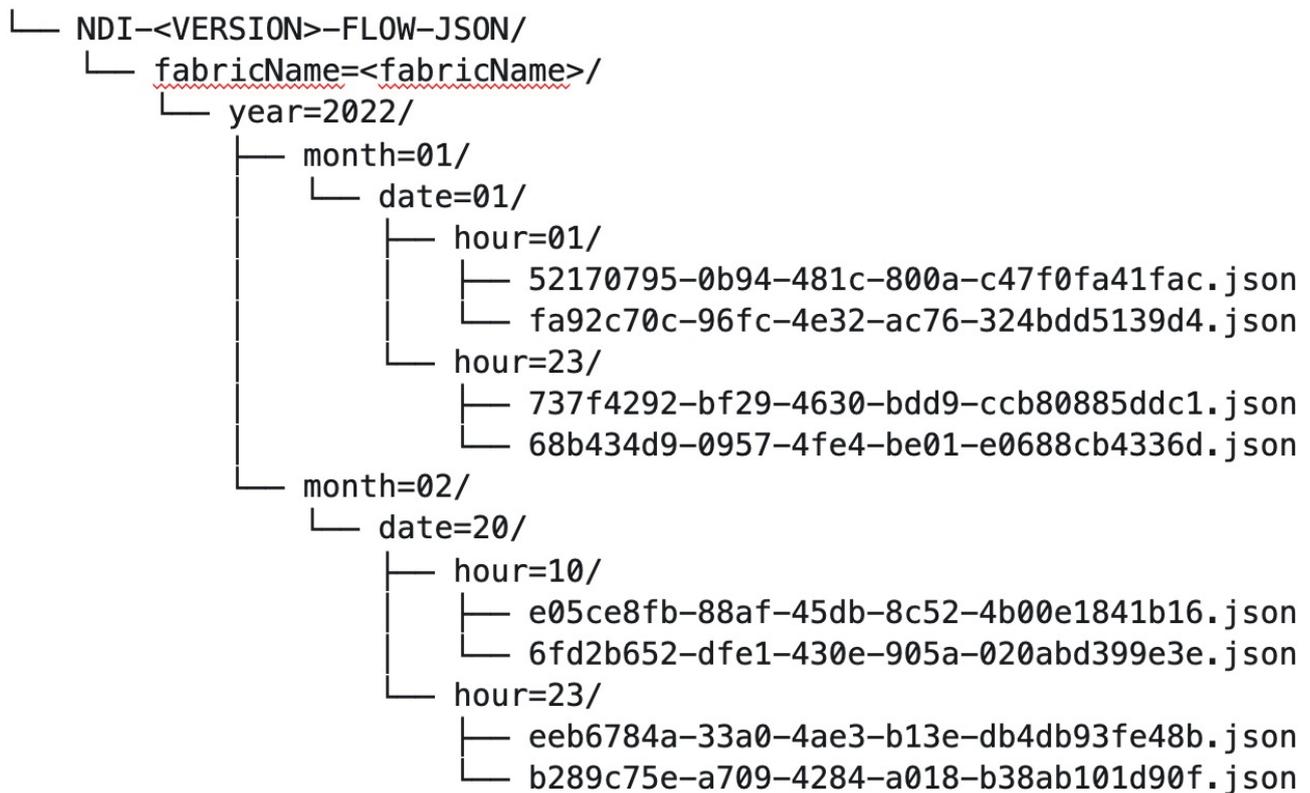

Navigate to **Analyze > Flows** to view the flows that will be exported.

Each flow record is written as a line delimited JSON.

JSON output file format for a flow record in base mode

```

{"fabricName":"myopic","terminalTs":1688537547433,"originTs":1688537530376,"srcIpl":
"2000:201:1:1::1","dstIpl":"2000:201:1:1::3","srcPort":1231,"dstPort":1232,"ingressVrf":
"vrf1","egressVrf":"vrf1","ingressTenant":"FSV1","egressTenant":"FSV1","protocol":"U
DP"}

```

```

{"fabricName":"myopic","terminalTs":1688537547378,"originTs":1688537530377,"srcIpl":
"201.1.1.127","dstIpl":"201.1.1.1","srcPort":0,"dstPort":0,"ingressVrf":"vrf1","egressVrf":
":"","ingressTenant":"FSV2","egressTenant":"","protocol":"ANY-HOST"}

```

JSON output file format for a flow record in full mode

```

{"fabricName":"myopic","terminalTs":1688538023562,"originTs":1688538010527,"srcIpl":
"201.1.1.121","dstIpl":"201.1.1.127","srcPort":0,"dstPort":0,"ingressVrf":"vrf1","egress
Vrf":"vrf1","ingressTenant":"FSV2","egressTenant":"FSV2","protocol":"ANY-
HOST","srcEpg":"ext-epg","dstEpg":"ext-
epg1","latencyMax":0,"ingressVif":"eth1/15","ingressVni":0,"latency":0,"ingressNodes":
"Leaf1-
2","ingressVlan":0,"ingressByteCount":104681600,"ingressPktCount":817825,"ingressBur
st":0,"ingressBurstMax":34768,"egressNodes":"Leaf1-2","egressVif":"po4",

```

```
" egressVni" :0," egressVlan" :0," egressByteCount" :104681600," egressPktCount" :817825," egressBurst" :0," egressBurstMax" :34768," dropPktCount" :0," dropByteCount" :0," dropCode" :"" , " dropScore" :0," moveScore" :0," latencyScore" :0," burstScore" :0," anomalyScore" :0," hashCollision" :false," dropNodes" :"" [ ]" , " nodeNames" :"" [\" Leaf1-2\" ]" , " nodeIngressVifs" :"" [\" Leaf1-2,eth1/15\" ]" , " nodeEgressVifs" :"" [\" Leaf1-2,po4\" ]" , " srcMoveCount" :0," dstMoveCount" :0," moveCount" :0," prexmit" :0," rtoOutside" :false," events" :"" [[\\\" 1688538010527,Leaf1-2,0,3,1,no,no,eth1/15,,po4,po4,,,,,0,64,0,,,,,,\\\" ]]" }
```

Flow collection

Understanding flow telemetry

Flow telemetry allows users to see the path taken by different flows in detail. It also allows you to identify the EPG and VRF instance of the source and destination. You can see the switches in the flow with the help of flow table exports from the nodes. The flow path is generated by stitching together all the exports in order of the flow.

You can configure the Flow Telemetry rule for the following interface types:

- VRF instances
- Physical interfaces
- Port channel interfaces
- Routed sub-interfaces (Cisco ACI fabric)
- SVIs (Cisco ACI fabric)



In a Cisco ACI fabric, if you want to configure routed sub-interfaces from the UI, select L3 Out.

In an NX-OS fabric, physical or port channel flow rules are supported only on routed interfaces.

Flow telemetry monitors the flow for each fabric separately, as there is no stitching across the fabrics in a fabric group. Therefore, flow telemetry is for individual flows. For example, if there are two fabrics (fabric A and fabric B) within a fabric group, and traffic is flowing between the two fabrics, they will be displayed as two separate flows. One flow will originate from Fabric A and display where the flow exits. And the other flow from Fabric B will display where it enters and where it exits.

Flow telemetry guidelines and limitations

- All flows are monitored as a consolidated view in a unified pipeline for Cisco ACI and NX-OS fabrics, and the flows are aggregated under the same umbrella.
- Even if a particular node (for example, a third-party switch) is not supported for Flow Telemetry, Nexus Dashboard will use LLDP information from the previous and next nodes in the path to identify the switch name and the ingress and egress interfaces.
- Nexus Dashboard supports Kafka export for Flow anomalies. However, Kafka export is not currently supported for Flow Event anomalies.

Flow telemetry guidelines and limitations for NX-OS fabrics

- Ensure that you have configured NTP and enabled PTP in Nexus Dashboard. See [Cisco Nexus Dashboard Deployment Guide](#) and [Precision Time Protocol \(PTP\) for Cisco Nexus Dashboard Insights](#) for more information. You are responsible for configuring the switches with external NTP servers.
- In the **Edit Flow** page, you can enable all three telemetry types. sFlow is most restrictive, Netflow has some more capability, and Flow Telemetry has the most capability. We recommend that you enable Flow Telemetry if it is available for your configuration. If Flow Telemetry is not available, then use Netflow. If Netflow is not available, use sFlow.
- If there are multiple Nexus Dashboard clusters onboarded to Nexus Dashboard, partial paths will be generated for each fabric.
- If you manually configure the fabric to use with Nexus Dashboard and Flow Telemetry support, the Flows Exporter port changes from 30000 to 5640. To prevent a breakage of the Flows Exporter, adjust the automation.
- Nexus Dashboard supports Kafka export for Flow anomalies. However, Kafka export is not currently supported for Flow Event anomalies.
- Flow telemetry is supported in -FX3 platform switches for the following NX-OS versions:
 - 9.3(7) and later
 - 10.1(2) and later
 - Flow telemetry is not supported in -FX3 platform switches for NX-OS version 10.1(1).
- Interface based Flow Telemetry is only supported on modular chassis with -FX land -GX line cards on physical ports and port-channels rules.
- If interface-based Flow Telemetry is pushed from Nexus Dashboard for **Classic LAN** and **External Connectivity Network** fabrics, perform the following steps:
 - Choose the fabric.
 - Choose **Policies** > **Action** > **Add policy** > **Select all** > **Choose template** > host_port_resync and click **Save**.
 - In the Fabric Overview page, choose **Actions** > **Recalculate and deploy**.
- For VXLAN fabrics, interface-based Flow Telemetry is not supported on switch links between spine switch and leaf switch.
- If you want to use the default VRF instance for flow telemetry, you must create the VRF instance with a name of "default" in lowercase. Do not enter the name with any capital letters.
- Flow telemetry is not supported in classic LAN topologies with 2-level VPC access layers.
- If you want to enable Flow Telemetry, ensure that there are no pre-existing Netflow configurations on the switches. If there are any pre-existing configurations, the switch configuration may fail.

To enable Flow Telemetry without configuration issues, follow these steps:

- Ensure that there are no pre-existing Netflow configurations on the switches. If such configurations exist, enabling Flow Telemetry might result in a system anomaly with an error message stating **invalid command match IP source address**.
- If you encounter the error, disable Flow Telemetry.
- Remove any existing Netflow configurations from the switches.

- o Re-enable Flow Telemetry.
- o For some flows, latency information is not available, which could happen due to latency issues. In these cases, latency information will be reported as 0.

Flow telemetry rules guidelines and limitations for NX-OS fabrics

- If you configure an interface rule (physical or port channel) on a subnet, it can monitor only incoming traffic. It cannot monitor outgoing traffic on the configured interface rule.
- If a configured port channel that contains two physical ports, only the port channel rule is applicable. Even if you configure physical interface rules on the port, only port channel rule takes precedence.
- For NX-OS release 10.3(2) and earlier, if a flow rule are configured on an interface, then global flow rules are not matched.
- For NX-OS release 10.3(3) and later, a flow rule configured on an interface is matched first and then the global flow rules are matched.

Configure flows

Configure flow collection modes

Follow these steps to configure flow collection modes.

1. Navigate to **Admin > System Settings > Flow collection**.
2. In the **Flow collection mode** area, choose **Flow telemetry**.



Enabling Flow Telemetry automatically activates Flow Telemetry Events. Whenever a compatible event takes place, an anomaly will be generated, and the What's the impact? section in the **Anomaly** page will display the associated flows. You can manually configure a Flow Telemetry rule to acquire comprehensive end-to-end information about the troublesome flow.

Configure flow collection rules in an NX-OS fabric

Follow these steps to configure flow collection rules in an NX-OS fabric.

1. Navigate to the **Telemetry** window for your fabric.
 - a. Navigate to the main **Fabrics** page:

Manage > Fabrics
 - b. In the table showing all of the Nexus Dashboard fabrics that you have already created, locate the LAN or IPFM fabric where you want to configure telemetry settings.
 - c. Single-click on that fabric.

The **Overview** page for that fabric appears.
 - d. Click **Actions > Edit Fabric Settings**.

The **Edit *fabric_name* Settings** window appears.

e. Verify that the **Telemetry** option is enabled in the **Enabled features** area.

The Telemetry tab doesn't become available unless the **Telemetry** option is enabled in the **Enabled features** area.

f. Click the **Telemetry** tab to access the telemetry settings for this fabric.

2. Click the **Flow collection** tab in the **Telemetry** window.

3. In the **Mode** area, click **Flow telemetry**.

4. In the **Flow collections rules** area, determine what sort of flow collection rule that you want to add.

- o [VRF](#)
- o [Physical interface](#)
- o [Port channel](#)

VRF

To add a VRF rule:

1. Click the **VRF** tab.

A table with already-configured VRF flow collection rules is displayed.

For any VRF flow collection rule in this table, click the ellipsis (...), then click **Edit rule** to edit that rule or **Delete rule** to delete it.

2. Add a new rule by clicking **Create flow collection rule**.

a. In the **General** area, complete the following:

- i. Enter the name of the rule in the **Rule Name** field.
- ii. The VRF field is disabled. The flow rule applies to all the VRF instances.
- iii. In the **Flow Properties** area, select the protocol for which you intend to monitor the flow traffic.
- iv. Enter the source and destination IP addresses. Enter the source and destination port.
- v. Click **Save**.

Physical interface

To add a physical interface rule:

1. Click the **Physical interface** tab.

A table with already-configured physical interface flow collection rules is displayed.

For any physical interface flow collection rule in this table, click the ellipsis (...), then click **Edit rule** to edit that rule or **Delete rule** to delete it.

2. Add a new rule by clicking **Create flow collection rule**.

a. In the **General** area, complete the following:

- i. Enter the name of the rule in the **Rule Name** field.

- ii. Check the **Enabled** check box to enable the status. If you enable the status, the rule will take effect. Otherwise, the rule will be removed from the switches.
- iii. In the **Flow Properties** area, select the protocol for which you intend to monitor the flow traffic.
- iv. Enter the source and destination IP addresses. Enter the source and destination port.
- v. In the **Interface List** area, click **Select a Node**. Use the search box to select a node.
- vi. From the drop-down list, select an interface. You can add more than one row (node+interface combination) by clicking **Add Interfaces**. However, within the rule, a node can appear only once. Configuration is rejected if more than one node is added.
- vii. Click **Save**.

Port channel

To add a port channel rule:

1. Click the **Port channel** tab.

A table with already-configured port channel flow collection rules is displayed.

For any port channel flow collection rule in this table, click the ellipsis (...), then click **Edit rule** to edit that rule or **Delete rule** to delete it.

2. Add a new rule by clicking **Create flow collection rule**.

- a. In the **General** area, enter the name of the rule in the **Rule Name** field.

- i. Select the **Enabled** check box to enable the status. If you enable the status, the rule will take effect. Otherwise, the rule will be removed from the switches.
- ii. In the **Flow Properties** area, select the protocol for which you intend to monitor the flow traffic.
- iii. Enter the source and destination IP addresses. Enter the source and destination port.
- iv. From the drop-down list, select an interface. You can add more than one row (node+interface combination) by clicking **Add Interfaces**. However, within the rule, a node can appear only once. Configuration is rejected if more than one node is added.
- v. Click **Save**.

3. Click **Done**.

Monitor the subnet for flow telemetry

In the following example, the configured rule for a flow monitors the specific subnet provided. The rule is pushed to the fabric which pushes it to the switches. So, when the switch sees traffic coming from a source IP or the destination IP, and if it matches the subnet, the information is captured in the TCAM and exported to the Nexus Dashboard service. If there are 4 nodes (A, B, C, D), and the traffic moves from A > B > C > D, the rules are enabled on all 4 nodes and the information is captured by all the 4 nodes. Nexus Dashboard stitches the flows together. Data such as the number of drops and the number of packets, anomalies in the flow, and the flow path are aggregated for the 4 nodes.

Follow these steps to monitor the subnet for flow telemetry.

1. Navigate to **Manage > Fabric**.
2. Choose a fabric.
3. Verify that your **Fabrics** and the **Snapshot** values are appropriate. The default snapshot value is 15 minutes. Your choice will monitor all the flows in the chosen fabric or snapshot fabric.
4. Navigate to **Connectivity > Flows** to view a summary of all the flows that are being captured based on the snapshot that you chose.

The related anomaly score, record time, the nodes sending the flow telemetry, flow type, ingress and egress nodes, and additional details are displayed in a table format. If you click a specific flow in the table, specific details are displayed in the sidebar for the particular flow telemetry. In the sidebar, if you click the Details icon, the details are displayed in a larger page. In this page, in addition to other details, the **Path Summary** is also displayed with specifics related to source and destination. If there are flows in the reverse direction, that will also be visible in this location.

For a bi-directional flow, there is an option to choose to reverse the flow and see the path summary displayed. If there are any packet drops that generate a flow event, they can be viewed in the Anomaly dashboard.

Understanding Netflow

Netflow is an industry standard where Cisco routers monitor and collect network traffic on an interface. Netflow version 9 is supported.

Netflow enables the network administrator to determine information such as source, destination, class of service, and causes of congestion. Netflow is configured on the interface to monitor every packet on the interface and provide telemetry data. You cannot filter on Netflow.

Netflow in Nexus series switches is based on intercepting the packet processing pipeline to capture summary information of network traffic.

The components of a flow monitoring setup are as follows:

- Exporter: Aggregates packets into flows and exports flow records towards one or more collectors
- Collector: Reception, storage, and pre-processing of flow data received from a flow exporter
- Analysis: Used for traffic profiling or network intrusion
- The following interfaces are supported for Netflow:

Supported interfaces for Netflow

Interfaces	5 Tuple	Nodes	Ingress	Egress	Path	Comments
Routed Interface/Port Channel	Yes	Yes	Yes	No	Yes	Ingress node is shown in path
Sub Interface/Logical (Switch Virtual Interface)	Yes	Yes	No	No	No	No



In an NX-OS fabric, port channel support is available if you monitor only the host-facing interfaces.

Understanding Netflow types

You can use these Netflow types.

- [Full Netflow](#)
- [Sampled Netflow](#)

Full Netflow

With Full Netflow, all packets on the configured interfaces are captured into flow records in a flow table. Flows are sent to the supervisor module. Records are aggregated over configurable intervals and exported to the collector. Except in the case of aliasing (multiple flows hashing to the same entry in the flow table), all flows can be monitored regardless of their packet rate.

Nexus 9000 Series switches with the Fabric Controller type as well as switches in a Cisco ACI fabric

support Full Netflow.

Sampled Netflow

With Sampled Netflow, packets on configured interfaces are time sampled. Flows are sent to the supervisor or a network processor for aggregation. Aggregated flow records are exported at configured intervals. The probability of a record for a flow being captured depends on the sampling frequency and packet rate of the flow relative to other flows on the same interface.

Nexus 7000 and Nexus 7700 Series switches with F/M line cards and the Fabric Controller type, support Sampled Netflow.

Netflow guidelines and limitations

- In Cisco Nexus 9000 series switches, Netflow supports a small subset of the published export fields in the RFC.
- Netflow is captured only on the ingress port of a flow as only the ingress switch exports the flow. Netflow cannot be captured on fabric ports.

Netflow guidelines and limitations for Cisco ACI fabrics

- We recommend that you enable Flow Telemetry. If that is not available for your configuration, use Netflow. However, you can determine which mode of flow to use based upon your fabric configuration.
- Enabling both Flow Telemetry and Netflow is not supported.
- After you enable Netflow, you must obtain the Netflow collector IP address and configure Cisco APIC with the collector IP address. See [Cisco APIC and NetFlow](#).

To obtain the Netflow collector IP address, navigate to **Admin > System Settings > General**, then locate the **External Pools** area. Click **View all** at the bottom left area of the **External Pools** tile; the **Telemetry-collector** persistent IP addresses listed in the table are used for the Netflow collector IP address.

- The Netflow and sFlow flow collection modes do not support any anomaly.

Netflow guidelines and limitations for NX-OS fabrics

- In the **Edit Flow** page, you can enable all three modes. Choose the best possible mode for a product. sFlow is the most restrictive, Netflow has more capabilities, and Flow Telemetry has the most capabilities. We recommend that you enable Flow Telemetry if it is available for your configuration. If Flow Telemetry is not available, then use Netflow. If Netflow is not available, use sFlow.
- In Nexus 7000 and Nexus 9000 Series switches, only the ingress host-facing interface configured for Netflow are supported (either in VXLAN or Classic LAN).
- The Netflow supported fabrics are Classic and VXLAN. VXLAN is not supported on fabric ports.
- Netflow configurations will not be pushed. However, if a fabric is managed, the software sensors will be pushed.
- If you manually configure the fabric to use with Nexus Dashboard and Netflow support, the Flows Exporter port changes from 30000 to 5640. To prevent a breakage of the Flows Exporter, adjust

the automation.

- To configure Netflow on fabric switches, see the **Configuring Netflow** section in the [Cisco Nexus 9000 Series NX-OS System Management Configuration Guide](#).

Configure Netflow

Follow these steps to configure Netflow.

1. Navigate to the **Telemetry** page for your LAN or IPFM fabric.
2. Click the **Flow collection** tab on the **Telemetry** page.
3. In the **Mode** area, make the following choices:
 - Choose **Netflow**.
 - Choose **Flow Telemetry**.
4. Click **Save**.

Understanding sFlow

sFlow is an industry standard technology traffic in data networks containing switches and routers. Nexus Dashboard supports [sFlow version 5](#) on Cisco Nexus 3000 series switches.

sFlow provides the visibility to enable performance optimization, an accounting and billing for usage, and defense against security threats.

The following interfaces are supported for sFlow:

Supported interfaces for sFlow

Interfaces	5 Tuple	Nodes	Ingress	Egress	Path	Comments
Routed Interface	Yes	Yes	Yes	Yes	Yes	Ingress node is shown in path

Guidelines and limitations for sFlow

- Nexus Dashboard supports sFlow with Cisco Nexus 3000 series switches.
- It is recommended to enable Flow Telemetry if it is available for your configuration. If it is not available for your configuration, use Netflow. If Netflow, is not available for your configuration, then use sFlow.
- For sFlow, Nexus Dashboard requires the configuration of persistent IPs under cluster configuration, and 6 IPs in the same subnet as the data network are required.
- sFlow configurations will not be pushed. However, if a fabric is managed, the software sensors will be pushed.
- If you manually configure the fabric to use with Nexus Dashboard and sFlow support, the Flows Exporter port changes from 30000 to 5640. To prevent a breakage of the Flows Exporter, adjust the automation.
- Nexus Dashboard does not support sFlow in the following Cisco Nexus 3000 Series switches:
 - Cisco Nexus 3600-R Platform Switch (N3K-C3636C-R)
 - Cisco Nexus 3600-R Platform Switch (N3K-C36180YC-R)
 - Cisco Nexus 3100 Platform Switch (N3K-C3132C-Z)
- Nexus Dashboard does not support sFlow in the following Cisco Nexus 9000 Series fabric modules:
 - Cisco Nexus 9508-R fabric module (N9K-C9508-FM-R)
 - Cisco Nexus 9504-R fabric module (N9K-C9504-FM-R)
- To configure sFlow on fabric switches, see the **Configuring sFlow** section in the [Cisco Nexus 9000 Series NX-OS System Management Configuration Guide](#).

Configure sFlow telemetry

Prerequisites

Follow these steps to configure sFlow telemetry.

1. Navigate to the **Telemetry** page for your LAN or IPFM fabric.
2. Click the **Flow collection** tab on the **Telemetry** page.
3. In the **Mode** area, make the following choices:
 - o Choose **sFlow**.
 - o Choose **Flow Telemetry**.
4. Click **Save**.

External streaming

The **External streaming** tab in Nexus Dashboard allows you export data that Nexus Dashboard collects over Kafka, email, and syslog. Nexus Dashboard generates data such as advisories, anomalies, audit logs, faults, statistical data, and risk and conformance reports. When you configure a Kafka broker, Nexus Dashboard writes all data to a topic. By default, the Nexus Dashboard collects export data every 30 seconds or at a less frequent interval.

For ACI fabrics, you can also collect data for specific resources (CPU, memory, and interface utilization) every 10 seconds from the leaf and spine switches using a separate data pipeline. To export this data, select the **Usage** option under **Collection Type** in the **Message bus** export settings. Additionally, CPU and memory data is collected for the controllers.



Nexus Dashboard does not store the collected data in Elasticsearch; instead, it exports the data directly to your repository or data lake using a Kafka broker for consumption. By using the Kafka export functionality, you can then export this data to your Kafka broker and push it into your data lake for further use.

You can configure an email scheduler to define the type of data and the frequency at which you want to receive information via email. You can also export anomaly records to an external syslog server. To do this, select the **Syslog** option under the **External Streaming** tab.

Configure external streaming settings

Follow these steps to configure external streaming settings.

1. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

2. Choose the fabric for which you configure streaming settings.
3. From the **Actions** drop-down list, choose **Edit fabric settings**.

The **Edit *fabric-name* settings** page displays.



You can also access the **Edit *fabric-name* settings** page for a fabric from the **Fabric Overview** page. In the **Fabric Overview** page, click the **Actions** drop-down list and choose **Edit fabric settings**.

4. In the **Edit *fabric-name* settings** page, click the **External streaming** tab.

You can view these options.

- o Email
- o Message bus
- o Syslog

Guidelines and limitations

- Intersight connectivity is required to receive the reports by email.
- You can configure up to five emails per day for periodic job configurations.
- A maximum of six exporters is supported for export across all types of exporters including email, message bus, and syslog. You must provide unique names for each export.
- The scale for Kafka exports is increased to support up to 20 exporters per cluster. However, statistics selection is limited to any six exporters.
- Before configuring your Kafka export, you must add the external Kafka IP address as a known route in your Nexus Dashboard cluster configuration and verify that Nexus Dashboard can reach the external Kafka IP address over the network.
- The anomalies in Kafka and email messages include categories such as Resources, Environmental, Statistics, Endpoints, Flows, and Bugs.
- Export data is not supported for snapshot fabrics.
- You must provide unique names for each exporter, and they may not be repeated between Kafka export for **Alerts and Events** and Kafka export for **Usage**.
- Nexus Dashboard supports Kafka export for flow anomalies. However, Kafka export is not currently supported for flow Event anomalies.

Guidelines and limitations in NX-OS fabrics

- Remove all configurations in the *Message Bus Configuration* and *Email* page before you disable Software Telemetry on any fabric and remove the fabric from Nexus Dashboard.
- If you use interface groups while enabling PTP in an Enhanced Classic LAN fabric, you must add the following commands to the freeform section of the interface group.
 - `ttag`
 - `ttag-strip`

If you do not add these commands, endpoints connected behind these interfaces will experience traffic loss.

Email

The email scheduler feature in Nexus Dashboard automates the distribution of summarized data collected from Nexus Dashboard. It allows customization of selection of email recipients, choice of email format, scheduling frequency settings, and configuring the types of alerts and reports.

Follow these steps to configure an email scheduler.

1. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

2. Choose the fabric for which you configure streaming settings.
3. From the **Actions** drop-down list, choose **Edit fabric settings**.

The **Edit *fabric-name* settings** page displays.

4. In the **Edit *fabric-name* settings** page, click the **External streaming** tab.
5. Click the **Email** tab.
6. Review the information provided in the **Email** tab for already-configured email configurations.

The following details display under **Email** tab.

Field	Description
Name	The name of the email configuration.
Email	The email addresses used in the email configuration.
Start time	The start date used in the email configuration.
Frequency	The frequency in days or weeks set in the email configuration.
Anomalies	The severity level for anomalies and advisories set in the email configuration.
Advisories	
Risk and conformance reports	The status of the overall inventory for a fabric, including software release, hardware platform, and a combination of software and hardware conformance.

To add a new email configuration, click **Add email** in the **Email** page.

1. Follow these steps to configure **General Settings**.
 - a. In the **Name** field, enter the name of the email scheduler.
 - b. In the **Email** field, enter one or more email addresses separated by commas.
 - c. In the **Format** field, choose **Text** or **HTML** email format.
 - d. In the **Start date** field, choose the start date when the scheduler should begin sending emails.
 - e. In the **Collection frequency in days** field, specify how often the summary is sent, you can choose days or weeks.

General settings

Name *

Email *

Use commas to enter multiple email addresses

Format

Text HTML

Start date*

Collection frequency in days*

 Days ▾

2. Follow these steps to configure **Collection Settings**.
 - a. In the **Mode** field, choose one of the following modes.

- **Basic**—displays the severity levels for anomalies and advisories.
 - **Advanced**—displays the categories and severity levels for anomalies and advisories.
- b. Check the **Only include active alerts in email** check box, to include only active anomaly alerts.
 - c. Under **Anomalies** choose the categories and severity levels for the anomalies.
 - d. Under **Advisories** choose the categories and severity levels for the advisories.
 - e. Under **Risk and Conformance Reports**, choose from the following options.
 - Software
 - Hardware

Collection settings

Mode
 Basic Advanced

Only include active alerts in email

Anomalies [Select all](#) [Clear all](#)

Critical
 Major
 Warning
 Minor

Advisories [Select all](#) [Clear all](#)

Critical
 Major
 Warning
 Minor

Risk and Conformance Reports [Select all](#) [Clear all](#)

Software
 Hardware

[Cancel](#) [Save](#)

3. Click **Save**.

The **Email** area displays the configured email schedulers.

You will receive an email about the scheduled job on the provided *Start Date* and at the time provided in the **Collection frequency in days** field. The subsequent emails follow after *Collect Every* frequency expires. If the provided time is in the past, Nexus Dashboard will send you an email immediately and trigger the next email after the duration from the provided start time expires.

Message bus

Add Kafka broker configuration

Follow these steps to configure the message bus and add kafka broker.

1. Configure the message bus at the **System Settings** level.
 - a. Navigate to **Admin > System Settings > General**.
 - b. In the **Message bus configuration** area, click **Edit**.

The **Message bus configuration** dialog box opens.

- c. Click **Add message bus configuration**.

The **Add message bus configuration** dialog box opens.

- d. In the **Name** field, enter a name for the configuration.
- e. In the **Hostname/IP address** and **Port** fields, enter the IP address of the message bus consumer and the port that is listening on the message bus consumer.
- f. In the **Topic name** field, enter the name of the Kafka topic to which Nexus Dashboard must send the messages.
- g. In the **Mode** field, choose the security mode.

The supported modes are **Unsecured**, **Secured SSL** and **SASLPLAIN**. The default value is **Unsecured**.

- For **Unsecured**, no other configurations are needed.
- For **Secured SSL**, fill out the following field:

Client certification name—The System Certificate name configured at the Certificate Management level. The CA certificate and System Certificate (which includes Client certificate and Client key) are added at the Certificate Management level.

Refer to Step 2 for step-by-step instructions on managing certificates. Navigate to **Admin > Certificate Management** to manage the following certificates:

- **CA Certificate**—The CA certificate used for signing consumer certificate, which will be stored in the trust-store so that Nexus Dashboard can trust the consumer.
 - **Client Certificate**—The CA signed certificate for Nexus Dashboard. The certificate is signed by the same CA, and the same CA certificate will be in the truststore of the consumer. This will be stored in Nexus Dashboard’s Kafka keystore that is used for exporting.
 - **Client Key**—A private key for the Kafka producer, which is Nexus Dashboard in this case. This will be stored in Nexus Dashboard’s Kafka keystore that is used for exporting.
- For **SASLPLAIN**, fill out these fields:
 - **Username**—The username for the SASL/PLAIN authentication.
 - **Password**—The password for the SASL/PLAIN authentication.

- h. Click **Save**

2. Add CA certificates and System certificates at the **Certificate Management level**.

- a. Navigate to **Admin > Certificate Management**.
- b. In the **Certificate management** page, click the **CA Certificates** tab, then click **Add CA certificate**.

The fields in the **CA Certificates** tab are described in the following table.

Field	Description
Certificate name	The name of the CA certificate.
Certificate details	The details of the CA certificate.
Attached to	The CA signed certificate attached to Nexus Dashboard.
Expires on	The Expiry date and time of the CA certificate.
Last updated time	The last updated time of the CA certificate.

- c. In the **Certificate management** page, click the **System certificates** tab, then click **Add system certificate** to add Client Certificate and Client key. Note that the Client certificate and Client key should have same names except extensions as .cer/.crt/.pem for Client certificate and .key for Client key.



You must add a valid CA Certificate before adding the corresponding System Certificate.

The fields in the **System Certificates** tab are described in the following table.

Field	Description
Certificate name	The name of the Client certificate.
Certificate details	The details of the Client certificate.
Attached to	The feature to which the system certificate is attached to, in this case, the message bus.
Expires on	The Expiry date and time of the CA certificate.
Last updated time	The last updated time of the CA certificate.



To configure message bus, the System Certificate should be attached to message bus feature.

To attach a System Certificate to the message bus feature:

- a. Choose the System Certificate that you want to use and click the ellipses (...) on that row.
- b. Choose **Manage Feature Attachments** from the drop-down list.

The **Manage Feature Attachments** dialog box opens.

- c. In the **Features** field, choose **messageBus**.
- d. Click **Save**.

For more information on CA certificates, see [Managing Certificates in your Nexus Dashboard](#).

Configure Kafka exports in fabric settings

1. Navigate to the **External streaming** page for your fabric.
 - a. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

- b. Choose the fabric for which you configure streaming settings.
- c. From the **Actions** drop-down list, choose **Edit fabric settings**.

The **Edit fabric-name settings** page displays.

- d. In the **Edit fabric-name settings** page, click the **External streaming** tab.
 - e. Click the **Message bus** tab.
2. Review the information provided in the **Message bus** tab for already-configured message bus configurations, or click **Add message bus** to add a new message bus configuration.

Skip to Step 3 if you are adding a message bus.

The fields in the **Message bus** tab are described in the following table.

Field	Description
Message bus stream	The name of the message bus stream configuration.
Collection type	The collection type used by the message bus stream.
Mode	The mode used by the message bus stream.
Anomalies	The severity level for anomalies and advisories set in the message bus stream configuration.
Advisories	
Statistics	The statistics that were configured for the message bus stream.
Faults	The severity level for faults set in the message bus stream configuration.
Audit Logs	The audit logs that were configured for the message bus stream.

- 3. To configure a new message bus stream, in the **Message bus** page, click **Add message bus**.
- 4. In the **Message bus stream** field, choose the message bus stream that you want to edit.
- 5. In the **Collection Type** area, choose the appropriate collection type.

Depending on the **Collection Type** that you choose, the options displayed in this area will change.

- o **Alerts and events:** This is the default setting. Continue to Step 7, if you choose **Alerts and events**.
- o **Usage:** In the **Collection settings** area, under **Data**, the Resources, and Statistics for the collection settings are displayed. By default, the data for CPU, Memory, and Interface Utilization are collected and exported. You cannot choose to export a subset of these resources.



Usage is applicable only for ACI Fabrics. This option is disabled for other fabrics.

- 6. Click **Save**. The configured message bus streams are displayed in the **Message bus** area. This configuration now sends immediate notification when the selected anomalies or advisories occur.
- 7. If you choose **Alerts and events** as the **Collection Type**, in the **Mode** area, choose either **Basic** or **Advanced**.

The configurations that are available in each collection settings section might vary, depending on

the mode that you set.

8. Determine which area you want to configure for the message bus stream.

The following areas appear in the page:

- o [Anomalies](#)
- o [Advisories](#)
- o [Statistics](#)
- o [Faults](#)
- o [Audit Logs](#)

After you complete the configurations on this page, click **Save**. Nexus Dashboard displays the configured message bus streams in the **Message bus** area. This configuration now sends immediate notification when the selected anomalies or advisories occur.

Anomalies

• If you chose **Basic** in the **Mode** area, choose one or more of the following severity levels for anomaly statistics that you want to configure for the message bus stream:

- o Critical
- o Major
- o Warning
- o Minor

Or click **Select all** to select all available statistics for the message bus stream.

• If you chose **Advanced** in the **Mode** area:

o Choose one or more of the following categories for anomaly statistics that you want to configure for the message bus stream:

- Active Bugs
- Capacity
- Compliance
- Configuration
- Connectivity
- Hardware
- Integrations
- System

o Choose one or more of the following severity levels for anomaly statistics that you want to configure for the message bus stream:

- Critical
- Major
- Warning

- Minor

Or click **Select all** to select all available categories and statistics for the message bus stream.
For more information on anomaly levels, see [Detecting Anomalies and Identifying Advisories in Your Nexus Dashboard](#).

Advisories

- If you chose **Basic** in the **Mode** area, choose one or more of the following severity levels for advisory statistics that you want to configure for the message bus stream:
 - Critical
 - Major
 - Warning
 - Minor

Or click **Select all** to select all available statistics for the message bus stream.

- If you chose **Advanced** in the **Mode** area:
 - Choose one or more of the following categories for advisory statistics that you want to configure for the message bus stream:
 - Best Practices
 - Field Notices
 - HW end-of-life
 - SW end-of-life
 - PSIRT
 - Choose one or more of the following severity levels for advisory statistics that you want to configure for the message bus stream:
 - Critical
 - Major
 - Warning
 - Minor

Or click **Select all** to select all available categories and statistics for the message bus stream.
For more information on advisory levels, see [Detecting Anomalies and Identifying Advisories in Your Nexus Dashboard](#).

Statistics

There are no differences in the settings in the **Statistics** area when you choose **Basic** or **Advanced** in the **Mode** area.

Choose one or more of the following categories to configure the statistics you want to stream over the message bus.

- Interfaces—streams statistics related to network interfaces, such as traffic volume, error rates, and interface status.

- Protocol—streams protocol-specific statistics, including packet counts, protocol errors, and handshake success rates.
- Resource Allocation—streams data about system resources, such as CPU usage, memory consumption, and bandwidth allocation.
- Environmental—streams environmental metrics such as temperature, humidity, and power supply status.
- Endpoints—streams statistics about connected endpoints, including connection status, data throughput, and session durations.

Faults

There are no differences in the settings in the **Faults** area when you choose **Basic** or **Advanced** in the **Mode** area.

Choose one or more of the following severity levels for fault statistics that you want to configure for the message bus stream:

- Critical
- Major
- Minor
- Warning
- Info

Audit Logs

There are no differences in the settings in the **Audit Logs** area when you choose **Basic** or **Advanced** in the **Mode** area.

Choose one or more of the following categories for audit logs that you want to configure for the message bus stream:

- Creation
- Deletion
- Modification

Syslog

Nexus Dashboard supports the export of anomalies in syslog format. You can use the syslog configuration feature to develop network monitoring and analytics applications on top of Nexus Dashboard, integrate with the syslog server to get alerts, and build customized dashboards and visualizations.

After you choose the fabric where you want to configure the syslog exporter and set up the syslog export configuration, Nexus Dashboard establishes a connection with the syslog server and sends data to the syslog server.

Nexus Dashboard exports anomaly records to the syslog server. With syslog support, you can export

anomalies to your third-party tools even if you do not use Kafka.

Guidelines and limitations for syslog

If the syslog server is not operational at a certain time, messages generated during that downtime will not be received by a server after the server becomes operational.

Add syslog server configuration

Follow these steps to add syslog server configuration.

1. Navigate to **Admin > System Settings > General**.
2. In the **Remote streaming servers** area, click **Edit**.

The **Remote streaming servers** page displays.

3. Click **Add server**.

The **Add server** page displays.

4. Choose the **Service** as **Syslog**.
5. Choose the **Protocol**.

You have these options.

- o TCP
- o UDP

6. In the **Name** field, provide the name for the syslog server.
7. In the **Hostname/IP address** field, provide the hostname or IP address of the syslog server.
8. In the **Port** field, specify the port number used by the syslog server.
9. If you want to enable secure communication, check the **TLS** check box.



Before you enable **TLS** you must upload the CA certificate for the syslog destination host to Nexus Dashboard. For more information see, [Upload a CA certificate](#).

Configure syslog to enable exporting anomalies data to a syslog server

Follow these steps to configure syslog to enable exporting anomalies data to a syslog server.

1. Navigate to the **Fabrics** page.

Go to **Manage > Fabrics**.

2. Choose the fabric for which you configure streaming settings.
3. From the **Actions** drop-down list, choose **Edit fabric settings**.

The **Edit *fabric-name* settings** page displays.

4. In the **Edit fabric-name settings** page, click the **External streaming** tab.
5. Click the **Syslog** tab.

The following details display under **Syslog** tab.

Edit CS1 Settings ×

i Some fabric settings can only be modified from the ND Cluster owner standaloneM5PND246

General Telemetry **External streaming**

Email Message bus **Syslog**

General settings

Syslog server*

Select servers ▾

Facility

▾

Collection settings

Anomalies [Select all](#) [Clear all](#)

● Critical

● Major

● Warning

[Cancel](#) [Save](#)

6. Make the necessary configurations in the **General settings** area.
 - a. In the **Syslog server** drop down list, choose a syslog server.

The **Syslog server** drop down list displays the syslog servers that you added in the **System Settings** level. For more information, see [Add syslog server configuration](#).

- b. In the **Facility** field, from the drop-down list, choose the appropriate facility string.

A facility code is used to specify the type of system that is logging the message. For this feature, the **local0-local7** keywords for locally used facility are supported.

7. In the **Collection settings** area, choose the desired severity options.

The options available are **Critical**, **Major**, and **Warning**.

8. Click **Save**.

Upload a CA certificate

Follow these steps to upload a CA certificate for syslog server **TLS**.

1. Navigate to **Admin > Certificate Management**.
2. In the **Certificate management** page, click the **CA certificates** tab, then click **Add CA certificate**.

You can upload multiple files at a single instance.

3. Browse your local directory and choose the certificate-key pair to upload.

You can upload certificates with the **.pem/.cer/.crt/** file extensions.

4. Click **Save** to upload the selected files to Nexus Dashboard.

A successful upload message appears. The uploaded certificates are listed in the table.

Additional settings

The following sections provide information for additional settings that might be necessary when editing the settings for a routed fabric.

Retrieving the authentication key

Retrieve the 3DES encrypted OSPF authentication key

1. SSH into the switch.
2. On an unused switch interface, enable the following:

```
config terminal
feature ospf
interface Ethernet1/1
no switchport
ip ospf message-digest-key 127 md5 ospfAuth
```

In the example, **ospfAuth** is the unencrypted password.



This Step 2 is needed when you want to configure a new key.

3. Enter the **show run interface Ethernet1/1** command to retrieve the password.

```
Switch # show run interface Ethernet1/1
interface Ethernet1/1
no switchport
ip ospf message-digest key 127 md5 3 sd8478f4fsw4f4w34sd8478fsdfw
no shutdown
```

The sequence of characters after **md5 3** is the encrypted password.

4. Update the encrypted password into the **OSPF Authentication Key** field.

Retrieve the encrypted IS-IS authentication key

To get the key, you must have access to the switch.

1. SSH into the switch.
2. Create a temporary keychain.

```
config terminal
key chain isis
key 127
```

```
key-string isisAuth
```

In the example, **isisAuth** is the plaintext password. This will get converted to a Cisco type 7 password after the CLI is accepted.

3. Enter the **show run | section "key chain"** command to retrieve the password.

```
key chain isis
key 127
  key-string 7 071b245f5a
```

The sequence of characters after key-string 7 is the encrypted password. Save it.

4. Update the encrypted password into the ISIS Authentication Key field.
5. Remove any unwanted configuration made in Step 2.

Retrieve the 3DES encrypted BGP authentication key

1. SSH into the switch and enable BGP configuration for a non-existent neighbor.



Non-existent neighbor configuration is a temporary BGP neighbor configuration for retrieving the password.

```
router bgp
  neighbor 10.2.0.2 remote-as 65000
  password bgpAuth
```

In the example, **bgpAuth** is the unencrypted password.

2. Enter the show run bgp command to retrieve the password. A sample output:

```
neighbor 10.2.0.2
  remote-as 65000
  password 3 sd8478fswerdfw3434fsw4f4w34sdsd8478fswerdfw3434fsw4f4w3
```

The sequence of characters after password 3 is the encrypted password.

3. Update the encrypted password into the **BGP Authentication Key** field.
4. Remove the BGP neighbor configuration.

Retrieve the encrypted BFD authentication key

1. SSH into the switch.
2. On an unused switch interface, enable the following:

```
switch# config terminal
switch(config)# int e1/1
switch(config-if)# bfd authentication keyed-SHA1 key-id 100 key passwd
```

In the example, **passwd** is the unencrypted password and the key ID is **100**.



This Step 2 is needed when you want to configure a new key.

3. Enter the **show running-config interface** command to retrieve the key.

```
switch# show running-config interface Ethernet1/1

interface Ethernet1/1
description connected-to- switch-Ethernet1/1
no switchport
mtu 9216
bfd authentication Keyed-SHA1 key-id 100 hex-key 636973636F313233
no ip redirects
ip address 10.4.0.6/30
no ipv6 redirects
ip ospf network point-to-point
ip router ospf 100 area 0.0.0.0
no shutdown
```

The BFD key ID is **100** and the encrypted key is **636973636F313233**.

4. Update the key ID and key in the **BFD Authentication Key ID** and **BFD Authentication Key** fields.

Guidelines for VXLAN Fabric With eBGP Underlay

- Brownfield migration is not supported for eBGP fabrics.
- You cannot change the leaf switch Autonomous System (AS) number after it is created and the configuration is deployed. You must delete the **leaf_bgp_asn** policy and perform **Recalculate & Deploy** to remove BGP configuration related to this AS. Then, add the **leaf_bgp_asn policy** with the new AS number.
- To switch between Multi-AS and Same-Tier-AS modes, remove all manually added BGP policies (including **leaf_bgp_asn** on the leaf switch and the eBGP overlay policies), and perform the **Recalculate & Deploy** operation before the mode change.
- You cannot change or delete the leaf switch **leaf_bgp_asn** policy if there are ebgp overlay policies present on the device. You need to delete the eBGP overlay policy first, and then delete the **leaf_bgp_asn** policy.
- The roles supported with VXLAN BGP fabric vary, depending on the release:
 - For releases prior to NDFC release 12.2.1, the roles supported with VXLAN BGP fabric are leaf, spine, border, super spine and border super spine.

- For NDFC release 12.2.1 and later, the border gateway, border gateway spine, and border gateway super spine roles are also supported with VXLAN BGP fabric.
- Intra-fabric links only support IPv6 link local addresses when the underlay is IPv6.
- On a border device, VRF-Lite is supported with manual mode.
- Support for VXLAN eBGP fabrics in VXLAN multi-site varies, depending on the release:
 - For releases prior to NDFC release 12.2.1, VXLAN multi-site is not supported for VXLAN eBGP fabrics.
 - For release NDFC 12.2.1 and later, VXLAN eBGP fabrics are supported as child fabrics in VXLAN Multi-Site fabrics.
- TRM (Tenant Routed Multicast) is supported with an eBGP fabric with an IPv4 or an IPv6 underlay.
- VXLAN with an IPv6 underlay does not support the following features:
 - Bidirectional Forwarding Detection (BFD)
 - MACSec
 - Flexible Netflow
 - BGP authentication

Adding Switches

Switch can be added to a single fabric at any point in time. To add switches to a fabric and discover existing or new switches, refer to the section "Adding Switches to a Fabric" in [Working with Inventory in Your Nexus Dashboard LAN or IPFM Fabrics](#).

Assigning Switch Roles

To assign roles to switches on Nexus Dashboard Fabric Controller refer to the "Assigning Switch Roles" section in [Working with Inventory in Your Nexus Dashboard LAN or IPFM Fabrics](#).

AI QoS classification and queuing policies

These sections provide information about the AI QoS classification and queuing policies.

- [Understanding AI QoS classification and queuing policies](#)
- [Guidelines and limitations for AI QoS classification and queuing policies](#)
- [Configure AI QoS classification and queuing policies](#)
- [Create a policy using the custom QoS templates](#)

Understanding AI QoS classification and queuing policies

Support is available for configuring a low latency, high throughput, and lossless fabric configuration that can be used for artificial intelligence (AI) fabric based traffic.

The AI QoS feature allows you to:

- Easily configure a network with homogeneous interface speeds, where most or all of the links run at 400Gb, 100Gb, or 25Gb speeds.

- Provide customizations to override the predominate queuing policy for a host interface.

When you apply the AI QoS policy, Nexus Dashboard will automatically pre-configure any inter-fabric links with QoS and system queuing policies, and will also enable Priority Flow Control (PFC). If you enable the AI QoS feature on a VXLAN EVPN fabric, then the Network Virtual (NVE) interface will have the attached AI QoS policies.

You can enable this feature and set queuing policy parameters based on interface speed using new fields available during BGP fabric configuration.

+ Policies defined with these custom Classification and Queuing templates can be used in various host interface polices. For more information, see [Create a policy using the custom QoS templates](#).

When enabling the AI feature, **priority-flow-control watchdog-interval on** is enabled on all of your configured devices, intra-fabric links, and all your host interfaces where Priority Flow Control (PFC) is also enabled. The PFC watchdog interval is for detecting whether packets in a no-drop queue are being drained within a specified time period. This release also adds the **Priority flow control watchdog interval** field on the **Advanced tab**. When you create or edit a Data Center VXLAN EVPN fabric or other fabrics and AI is enabled, you can set the **Priority flow control watch-dog interval** field to a non-system default value (the default is 100 milliseconds). For more information on the PFC watchdog interval for Cisco NX-OS, see [Configuring a priority flow control watchdog Interval](#) in the *Cisco Nexus 9000 Series NX-OS Quality of Service Configuration Guide*.

If you perform an upgrade from an earlier release, and then do a **Recalculate and deploy**, you may see additional **priority-flow-control watchdog-interval on** configurations.

Guidelines and limitations for AI QoS classification and queuing policies

Following are the guidelines and limitations for the AI QoS and queuing policy feature:

- Apply AI QoS policies at the fabric level rather than on individual switches to ensure consistent traffic classification and uniform policy enforcement.
- On Cisco Nexus N9K-C9808 and N9K-C9804 series switches, the command **priority-flow-control watch-dog-interval** is not supported in either global or interface configuration modes and the command **hardware qos nodrop-queue-thresholds queue-green** is not supported in global configuration mode.
- Cisco Nexus N9K-C9808 and N9K-C9804 series switches only support AI fabric type from NX-OS version 10.5(1) and later.
- This feature does not automate any per-interface speed settings.
- This feature is supported only on Nexus devices with Cisco Cloud Scale technology, such as the Cisco Nexus 9300-FX2, 9300-FX3, 9300-GX, and 9300-GX2 series switches.
- This feature is not supported in fabrics with devices that are assigned with a ToR role.

Configure AI QoS classification and queuing policies

Follow these steps to configure AI QoS and queuing policies:

1. Enable AI QoS and queuing policies at the fabric level.
 - a. Create a fabric as you normally would.

- b. In the **Advanced** tab in those instructions, make the necessary selections to configure AI QoS and queuing policies at the fabric level.
- c. Configure any remaining fabric-level settings as necessary in the remaining tabs.
- d. When you have completed all the necessary fabric-level configurations, click **Save**, then click **Recalculate and deploy**.

At this point in the process, the network QoS and queuing policies are configured on each device, the classification policy is configured on NVE interfaces (if applicable), and priority flow control and classification policy is configured on all intra-fabric link interfaces.

2. For host interfaces, selectively enable priority flow control, QoS, and queuing by editing the policy associated with that host interface.

See [Working with Connectivity for LAN Fabrics](#) for more information.

- a. Within a fabric where you enabled AI QoS and queuing policies in the previous step, click the **Interfaces** tab.

The configured interfaces within this fabric are displayed.

- b. Locate the host interface where you want to enable AI QoS and queuing policies, then click the box next to that host interface to select it and click **Actions > Edit**.

The **Edit Interfaces** page is displayed.

- c. In the **Policy** field, verify that the policy that is associated with this interface contains the necessary fields that will allow you to enable AI QoS and queuing policies on this host interface.

For example, these policy templates contain the necessary AI QoS and queuing policies fields:

- int_access_host
- int_dot1q_tunnel_host
- int_pvlan_host
- int_routed_host
- int_trunk_host

- d. Locate the **Enable priority flow control** field and click the box next to this field to enable Priority Flow Control for this host interface.
- e. In the **Enable QoS Configuration** field, click the box next to this field to enable AI QoS for this host interface.

This enables the QoS classification on this interface if AI queuing is enabled at the fabric level.

- f. If you checked the box next to the **Enable QoS Configuration** field in the previous step and you created a custom QoS policy using the procedures provided in [Create a policy using the custom QoS templates](#), enter that custom QoS classification policy in the **Custom QoS Policy for this interface** field to associate that custom QoS policy with this host interface, if necessary.

If this field is left blank, then Nexus Dashboard will use the default QOS_CLASSIFICATION

policy, if available.

- g. If you created a custom queuing policy using the procedures provided in [Create a policy using the custom QoS templates](#), enter that custom queuing policy in the **Custom Queuing Policy for this interface** field to associate that custom queuing policy with this host interface, if desired.
- h. Click **Save** when you have completed the AI QoS and queuing policy configurations for this host interface.

Create a policy using the custom QoS templates

Follow these procedures to use the custom QoS templates to create a policy, if desired. See [Managing Your Template Library](#) for general information on templates.

1. Within a fabric where you enabled AI QoS and queuing policies, click **Inventory > Switches**, then double-click the switch that has the host interface where you enabled AI QoS and queuing policies.

The **Switch Overview** page for that switch appears.

2. Choose **Configuration Policies > Policies**.
3. Click **Actions > Add policy**.

The **Create Policy** page appears.

4. Set the priority and enter a description for the new policy.

Note that the priority for this policy must be lower (must come before) the priority that was set for the host interface.

5. In the **Select Template** field, click the **No Policy Selected** text.

The **Select Policy Template** page appears.

1. Make the necessary QoS classification or queuing configurations in the template that you selected, then click **Save**.

Any custom QoS policy created using these procedures are now available to use when you configure QoS and queuing policies for the host interface.

Border Gateway Support

Beginning with NDFC release 12.2.1, the following border gateway roles are now supported in an eBGP fabric:

- Border gateway
- Border gateway spine
- Border gateway super spine

Support is also available for eBGP fabrics as child fabrics within a VXLAN EVPN Multi-Site fabric. Several new fields are available when creating a BGP fabric that allow you to enter an ASN and to

advertise the Anycast Border Gateway PIP as a Virtual Tunnel End Point (VTEP) for the BGP fabric in the VXLAN EVPN Multi-Site fabric. For more information, see [\[EVPN\]](#).

The way that the BGP ASN is allocated for the border gateway will match the settings for the leaf switches and border switches. You also might have to make additional configurations, based on the device role that you assign to the switch:

- If you set the device role as **border gateway**, then you must manually add the **leaf_bgp_asn** policy to the device to specify the BGP ASN that will be used on the switch, following the same Multi-AS mode or Same-Tier-AS mode rule that you have set at the fabric level.
- If you set the device role as **border gateway spine**, then the device ASN is the same value as the value provided in the **BGP ASN for Spines** option at the fabric level.
- If you set the device role as **border gateway super spine**, then the device ASN is the same value as the value provided in the **BGP ASN for Super Spines** option at the fabric level.

Nexus Dashboard Fabric Controller will automatically generate the BGP underlay configuration after you click **Recalculate & Deploy** at the end of the configuration process. You will then need to manually add the eBGP overlay policies for the border gateways using the procedures provided in [Deploying Fabric Overlay eBGP Policies](#).

Border Gateway Route Filtering

Two prefix-list policies are created for each border gateway when you perform a **Recalculate & Deploy** at the VXLAN EVPN Multi-Site fabric level:

- **fabric-internal**: This policy is applied to an eBGP session toward fabric internal, and is used to avoid routes that are learned from DCI from being propagated to other nodes within the fabric.

For this policy, permit only the following:

- Routing loopback (typically loopback0) subnet
- VTEP loopback (typically loopback1) subnet
- Anycast RP loopback (typically loopback254) subnet
- Multisite loopback IP address

Following is a sample configuration for this policy:

```
ip prefix-list ebgp-fabric-to-internal seq 10 permit 8.2.0.0/22 eq 32
ip prefix-list ebgp-fabric-to-internal seq 20 permit 8.3.0.0/22 eq 32
ip prefix-list ebgp-fabric-to-internal seq 30 permit 8.254.254.0/24 eq 32
ip prefix-list ebgp-fabric-to-internal seq 40 permit 10.10.0.2/32
```

```
route-map ebgp-rmap-filter-to-internal permit 10
  match ip address prefix-list ebgp-fabric-to-internal
route-map ebgp-rmap-filter-to-internal deny 20
```

```
router bgp 65028
neighbor 8.4.0.1
address-family ipv4 unicast
route-map ebgp-rmap-filter-to-internal out
```

- **fabric-to-dci:** This policy is applied to the VXLAN EVPN Multi-Site underlay eBGP session, and is used to avoid VXLAN fabric underlay routes from being propagated to external fabrics.

For this policy, permit only the BGW and the local loopback interface IP address of its neighbor BGW (loopback0/1/VPC VIP/multisite loopback).

Following is a sample configuration for this policy:

```
ip prefix-list ebgp-fabric-to-dci seq 10 permit 8.2.0.2/32
ip prefix-list ebgp-fabric-to-dci seq 20 permit 8.3.0.1/32
ip prefix-list ebgp-fabric-to-dci seq 30 permit 10.10.0.2/32
```

```
route-map ebgp-rmap-filter-to-dci permit 10
match ip address prefix-list ebgp-fabric-to-dci
route-map ebgp-rmap-filter-to-dci deny 20
```

```
router bgp 65028
neighbor 10.10.1.2
address-family ipv4 unicast
route-map ebgp-rmap-filter-to-dci out
next-hop-self
```

You can edit either of these two prefix-list policies using the template [ipv4_prefix_list_internal](#) to add the custom prefix-list entries. For more information on adding or editing a policy, see the section "Add a policy" in [Working with Configuration Policies for Your Nexus Dashboard LAN or IPFM Fabrics](#).

Guidelines and Limitations

Following are the guidelines and limitations with the border gateway support in BGP fabrics:

- Border gateway support for an eBGP fabric is only available when EVPN is enabled, and when the underlay is IPv4.
- Tenant Routed Multicast (TRM) is also supported with border gateway roles in a BGP fabric.

Layer 3 VNI without VLAN

Following is the upper-level process to enable the Layer 3 VNI without VLAN feature in a fabric:

1. (Optional) When configuring a new fabric, check the **Enable L3VNI w/o VLAN** field to enable the Layer 3 VNI without VLAN feature at the fabric level. The setting at this fabric-level field affects the related field at the VRF level, as described below.
2. When creating or editing a VRF, check the **Enable L3VNI w/o VLAN** field to enable the Layer 3 VNI without VLAN feature at the VRF level. The default setting for this field varies depending on the following factors:
 - o For existing VRFs, the default setting is disabled (the **Enable L3VNI w/o VLAN** box is unchecked).
 - o For newly-created VRFs, the default setting is inherited from the fabric settings, as described above.
 - o This field is a per-VXLAN fabric variable. For VRFs that are created from a VXLAN EVPN Multi-Site fabric, the value of this field is inherited from the fabric setting in the child fabric. You can edit the VRF in the child fabric to change the value, if desired.

See the "Create a VRF" section in [Working with Segmentation and Security for Your Nexus Dashboard VXLAN Fabric](#) for more information.

The VRF attachment (new or edited) then uses the new Layer 3 VNI without VLAN mode if the following conditions are met:

- The **Enable L3VNI w/o VLAN** is enabled at the VRF level
- The switch supports this feature and the switch is running on the correct release (see [Guidelines and limitations for Layer 3 VNI without VLAN](#))

The VLAN is ignored in the VRF attachment when these conditions are met.

Guidelines and limitations for Layer 3 VNI without VLAN

Following are the guidelines and limitations for the Layer 3 without VLAN feature:

- The Layer 3 VNI without VLAN feature is supported on the -EX, -FX, and -GX versions of the Nexus 9000 switches. When you enable this feature at the VRF level, the feature setting on the VRF will be ignored on switch models that do not support this feature.
- When used in a Campus VXLAN EVPN fabric, this feature is only supported on Cisco Nexus 9000 series switches in that type of fabric. This feature is not supported on Cisco Catalyst 9000 series switches in the Campus VXLAN EVPN fabric; those switches require VLANs for Layer 3 VNI configurations.
- This feature is supported on switches running on NX-OS release 10.3.1 or later. If you enable this feature at the VRF level, the feature setting on the VRF is ignored on switches running an NX-OS image earlier than 10.3.1.
- When you perform a brownfield import in a Data Center VXLAN EVPN fabric, if one switch configuration is set with the **Enable L3VNI w/o VLAN** configuration at the VRF level, then you should also configure this same setting for the rest of the switches in the same fabric that are associated with this VRF, if the switch models and images support this feature.
- For VXLAN fabric or fabric group deployments with Campus switches, use a VNI range within 4096 to 1,677,721 to align with the best practices for VNI allocation in Campus environments.

Configuring downstream VNI

In a VXLAN fabric, the Layer 3 and Layer 2 virtual network identifier (VNIs) are centrally managed using a VXLAN fabric group for inter-fabric connectivity. All the VXLAN fabrics within the VXLAN fabric group use the same VNI value for the Layer 3 or Layer 2 network. The problem is that before the fabrics are brought in for inter-fabric connectivity, the fabrics have been managed as standalone fabrics with existing VRFs and networks. The Layer 2 and Layer 3 overlays have been configured independently and have conflicting VNIs among fabrics.

There are two types of VNI conflicts:

- The same VNI is used by different VRFs or networks in different VXLAN fabrics.
- The same VRF or network uses different VNIs in different VXLAN fabrics.

This feature is supported when creating or editing fabric types:

- VXLAN
- Campus VXLAN Prior to Nexus Dashboard release 4.1.1, you could not add a VXLAN fabric to a VXLAN fabric group if there was a VNI conflict. With Nexus Dashboard release 4.1.1, downstream VNI (DSVNI) allows VXLAN fabrics with a VNI conflict to communicate with each other. On the border gateway, Nexus Dashboard uses different VNIs for exchanging intra-fabric and inter-fabric traffic. The existing VNI continues to be used for intra-fabric traffic. Stitching of the VNI occurs at the border gateways for inter-fabric traffic between fabrics using different VNIs.

Nexus Dashboard added downstream VNI options in a VXLAN fabric group for configuring a global Layer 2 VNI and a Layer 3 VNI pool. The two ranges should not conflict with VNIs already in use in existing VXLAN fabrics. We suggest picking from the high end of the VNI range for the global **Layer 3 VXLAN VNI Global Range** and the **Layer 2 VXLAN VNI Global Range** in the **General Parameters** page for the fabric. Nexus Dashboard generates a new VRF and a network VNI allocation based on these two ranges.



Enabling downstream VNI in a VXLAN fabric group does not affect existing VRFs and networks.

When Nexus Dashboard allocates a VNI for a VRF or a network, and its intra-fabric VNI is different from the downstream VNI, Nexus Dashboard requires additional configuration on the border gateway.

VRF CLIs on border gateways for downstream VNI

```
ip extcommunity-list standard <vrf-name> seq 10 permit rt 2324:50005
route-map MS-FABRIC-TO-EXTERNAL-RMAP permit 100
  match extcommunity <vrf-name>
  set extcomm-list <vrf-name> delete

vrf context <vrf-name>
  address-family ipv4 unicast
    route-target both <local-asn>:<DSVNI>
    route-target both <local-asn>:<DSVNI> evpn
  address-family ipv6 unicast
```

```
route-target both <local-asn>:<DSVNI>
route-target both <local-asn>:<DSVNI> evpn
```

Network CLIs on border gateways for downstream VNI

```
ip extcommunity-list standard <network-name> permit rt 27:30001
route-map MS-FABRIC-TO-EXTERNAL-RMAP permit 200
  match extcommunity <network-name>
  set extcomm-list <network-name> delete
route-map MS-FABRIC-TO-EXTERNAL-RMAP permit 65535
evpn
vni <local-VNI> I2
route-target both <local-asn>:<DSVNI>
```

Nexus Dashboard generates an additional route target containing the downstream VNI allowing border gateways in different fabrics to exchange routes.

`extcommunity-list` and `route-map` removes the local VNI from the BGP updates towards Data Center Interconnectivity (DCI). This prevents route leaking if the same VNI is used in a different fabric for a different VRF or network. `route-map MS-FABRIC-TO-EXTERNAL-RMAP` is applied to all multi-site overlay inter-fabric links if downstream VNI is enabled in the fabric group, regardless of whether the inter-fabric link is manually created or auto-generated by Nexus Dashboard.

Benefits of downstream VNI

- Resolves overlapping VNIs when using conflicted VNIs for a VRF or a network in different fabrics because of not changing the default VNI pool, which is the same for all VXLAN fabrics
- Supports route exchange using a route target
- Prevents route leaking
- The downstream VNI feature provides normalized VNI ID support for both Layer 2 and Layer 3 VNIs, helping manage VNI consistency and prevent conflicts.

Use cases for downstream VNI

When you add a new VXLAN fabric to a VXLAN fabric group for inter-fabric connectivity, and if Nexus Dashboard detects a VNI conflict, Nexus Dashboard allocates a new downstream VNI range.

- If the same VNI is used by a VRF or a network in a VXLAN fabric group and the incoming VXLAN fabric (**vrf1** in the fabric group and **vrf2** in the incoming VXLAN fabric), Nexus Dashboard allocates a new VNI from the global VNI pool for both the VRF and the network. In this example, Nexus Dashboard allocates a new VNI for **vrf1** and **vrf2**.
- If a VRF or a network use a different VNI in a VXLAN fabric group and the incoming VXLAN fabric, Nexus Dashboard allocates a new VNI, if the VNI in the VXLAN fabric group is not already in the global VNI range.
- In these two use cases, if there is a VNI conflict between the VXLAN fabric group and the incoming VXLAN fabric, and the VNI in the incoming VXLAN fabric is already in the global VNI

range, you cannot add the VXLAN fabric to the VXLAN fabric group. In this use case, you can edit the global **L2 VNI** and or the **L3 VNI** range so that the VNI range does not overlap with the VNIs already used in the incoming VXLAN fabric.

Supported platforms

Ensure that all border gateways have the correct platform and NX-OS version that supports downstream VNI. For the list of supported platforms and NX-OS versions, see the [Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide](#).

Guidelines and limitations for downstream VNI

- You must use unique names for VRFs and networks.

This means that **vrf foo** on fabric1 and **vrf foo** on fabric2 refer to the same VRF. The same applies for network names.

- You cannot disable downstream VNI in a VXLAN fabric group if there are any existing VRFs or networks with a fabric VNI that differs from the VNI of the VXLAN fabric group.

These features are not supported for downstream VNI:

- Using the same VRF or network but using a different VRF name or network name in a different VXLAN fabric
- IPv6 underlay
- Security groups
- PVLAN
- TRM and TRMv6
- CloudSec VXLAN tunnel encryption
- Brownfield deployment where downstream VNI is already configured on a switch

MACsec support in Data Center VXLAN EVPN and BGP fabrics

MACsec is supported in Data Center VXLAN EVPN and BGP fabrics for intra-fabric links. You should enable MACsec on the fabric and on each required intra-fabric link to configure MACsec. Unlike CloudSec, auto-configuration of MACsec is not supported.

Support is available for MACsec for inter-fabric links, DCI MACsec, with a QKD server to generate keys or using preshared keys. For more information, see the section "About connecting two NX-OS fabrics with MACsec using QKD" in [Creating Fabrics and Fabric Groups](#).

MACsec is supported on switches with minimum Cisco NX-OS releases 7.0(3), 17(8), and 9.3(5).

Guidelines

- If MACsec cannot be configured on the physical interfaces of the link, an error is displayed when you click **Save**. MACsec cannot be configured on the device and link due to the following reasons:

- o The minimum NX-OS version is not met.
- o The interface is not MACsec capable.
- MACsec global parameters in the fabric settings can be changed at any time.
- MACsec and CloudSec can coexist on a BGW device.
- MACsec status of a link with MACsec enabled is displayed on the **Links** page.
- Brownfield migration of devices with MACsec configured is supported using switch and interface freeform configs.

For more information about MACsec configuration, which includes supported platforms and releases, see the [Configuring MACsec](#) chapter in *Cisco Nexus 9000 Series NX-OS Security Configuration Guide*.

The following sections show how to enable and disable MACsec in Nexus Dashboard.

Enable MACsec

The process described in this section is for configuring MACsec for intra-fabric links and inter-fabric links.

For information on configuring data center interconnect (DCI) MACsec for inter-fabric links and using a quantum key distribution (QKD) server, see the section "About connecting two NX-OS fabrics with MACsec using QKD" in [Creating Fabrics and Fabric Groups](#).

1. Navigate to **Manage > Fabrics**.
2. Click **Create Fabric** to create a new fabric or click **Actions > Edit Fabric Settings** on an existing Data Center VXLAN EVPN fabric.
3. Click **Fabric Management > Security** and specify the MACsec details.

Field	Description
Enable MACsec	Check the check box to enable MACsec in the fabric. MACsec configuration is not generated until MACsec is enabled on an intra-fabric link. Perform a Recalculate and deploy operation to generate the MACsec configuration and deploy the configuration on the switch.
MACsec Cipher Suite	Choose one of the following MACsec cipher suites for the MACsec policy: <ul style="list-style-type: none"> • GCM-AES-128 • GCM-AES-256 • GCM-AES-XPB-128 • GCM-AES-XPB-256 <p>The default value is GCM-AES-XPB-256.</p>

Field	Description
MACsec Primary Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing the primary MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p> <p> The default key lifetime is infinite.</p>
MACsec Primary Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the primary key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p> <p>You can configure a fallback key on the device to initiate a backup session if the primary session fails.</p>
MACsec Fallback Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing a fallback MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p>
MACsec Fallback Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the fallback key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p>
Enable DCI MACsec	<p>Check the check box to enable DCI MACsec on DCI links.</p> <p> If you enable the Enable DCI MACsec option and disable the Use Link MACsec Setting option, Nexus Dashboard uses the fabric settings for configuring DCI MACsec on the DCI links.</p>
Enable QKD	<p>Check the check box to enable the QKD server for generating quantum keys for encryption.</p> <p> If you choose to not enable the Enable QKD option, Nexus Dashboard generates preshared keys instead of using the QKD server to generate the keys. If you disable the Enable QKD option, all the fields pertaining to QKD are grayed out.</p>
DCI MACsec Cipher Suite	<p>Choose one of the following DCI MACsec cipher suites for the DCI MACsec policy:</p> <ul style="list-style-type: none"> • GCM-AES-128 • GCM-AES-256 • GCM-AES-XPB-128 • GCM-AES-XPB-256 <p>The default value is GCM-AES-XPB-256.</p>

Field	Description
DCI MACsec Primary Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing the primary DCI MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p> <p> The default key lifetime is infinite.</p>
DCI MACsec Primary Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the primary key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p> <p>You can configure a fallback key on the device to initiate a backup session if the primary session fails.</p>
DCI MACsec Fallback Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing a fallback MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p> <p> If you disabled the Enable QKD option, you need to specify the DCI MACsec Fallback Key String option.</p>
DCI MACsec Fallback Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the fallback key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p>
QKD Profile Name	<p>Specify the crypto profile name.</p> <p>The maximum size is 63.</p>
KME Server IP	Specify the IPv4 address for the Key Management Entity (KME) server.
KME Server Port Number	Specify the port number for the KME server.
Trustpoint Label	<p>Specify the authentication type trustpoint label.</p> <p>The maximum size is 64.</p>
Ignore Certificate	Enable this check box to skip verification of incoming certificates.
MACsec Status Report Timer	Specify the MACsec operational status periodic report timer in minutes.

- Click **Save**.
- Click a fabric to view the **Summary** in the side panel.
- Click the **Launch** icon to open the **Fabric Overview** page.
- Click the **Fabric Overview > Links** tab.
- Choose an inter-fabric connection (IFC) link on which you want to enable MACsec and click **Actions > Edit**. For more information on creating a VRF-Lite inter-fabric link, see the section "Establishing inter-fabric connectivity using VRF Lite" [Working with Connectivity in Your Nexus](#)

The **Link Management - Edit Link** page displays.

- From the **Link Management - Edit Link** page, navigate to the **Security** tab and enter the required parameters.

For an inter-fabric link, the **Enable MACsec** option is in [Security](#).

Field	Description
Enable MACsec	<p>Check the check box to enable MACsec on the VRF-Lite inter-fabric connection (IFC) link.</p> <div style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;">  <p>If you enable the Enable MACsec option and you disable the Use Link MACsec Setting option, Nexus Dashboard uses the fabric settings for configuring MACsec on the VRF-Lite IFC.</p> </div> <p>When MACsec is configured on the link, Nexus Dashboard generates the following configurations:</p> <ul style="list-style-type: none"> • Switch-level MACsec configurations if this is the first link that enables MACsec. • MACsec configurations for the link.
Source MACsec Policy/Key-Chain Name Prefix	<p>Specify the prefix for the policy and key-chain names for the MACsec configuration at the source.</p> <p>The default value is DCI, and you can change the value.</p>
Destination MACsec Policy/Key-Chain Name Prefix	<p>Specify the prefix for the policy and key-chain names for the MACsec configuration at the destination.</p> <p>The default value is DCI, and you can change the value.</p>
Enable QKD	<p>Check the check box to enable the QKD server for generating quantum keys for encryption.</p> <div style="border: 1px solid #ccc; padding: 10px; margin: 10px 0;">  <p>If you choose to not enable the Enable QKD option, Nexus Dashboard uses preshared keys provided by the user instead of using the QKD server to generate the keys. If you disable the Enable QKD option, all the fields pertaining to QKD are grayed out.</p> </div>
Use Link MACsec Setting	<p>Check this check box as the override option for using the link settings instead of using the fabric settings.</p>

Field	Description
MACsec Cipher Suite	<p>Choose one of the following MACsec cipher suites for the MACsec policy:</p> <ul style="list-style-type: none"> ▪ GCM-AES-128 ▪ GCM-AES-256 ▪ GCM-AES-XPB-128 ▪ GCM-AES-XPB-256 <p>The default value is GCM-AES-XPB-256.</p>
MACsec Primary Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing the primary DCI MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>The default key lifetime is infinite.</p> </div>
MACsec Primary Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the primary key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p> <p>You can configure a fallback key on the device to initiate a backup session if the primary session fails.</p>
MACsec Fallback Key String	<p>Specify a Cisco Type 7 encrypted octet string that is used for establishing a fallback MACsec session. For AES_256_CMAC, the key string length must be 130 and for AES_128_CMAC, the key string length must be 66. If these values are not specified correctly, an error is displayed when you save the fabric.</p> <div style="display: flex; align-items: center; margin-top: 10px;">  <p>This parameter is mandatory if Enable QKD is not selected.</p> </div>
MACsec Fallback Cryptographic Algorithm	<p>Choose the cryptographic algorithm used for the fallback key string. It can be AES_128_CMAC or AES_256_CMAC. The default value is AES_128_CMAC.</p>
Source QKD Profile Name	<p>Specify the source crypto profile name.</p> <p>The maximum size is 63.</p>
Source KME Server IP	<p>Specify the source IPv4 address for the Key Management Entity (KME) server.</p>
Source KME Server Port Number	<p>Specify the source port number for the KMEserver.</p>
Source Trustpoint Label	<p>Specify the source authentication type trustpoint label.</p> <p>The maximum size is 64.</p>

Field	Description
Destination Profile Name QKD	Specify the destination crypto profile name.
Destination Server IP KME	Specify the destination IPv4 address for the KME server.
Destination Server Port Number KME	Specify the destination port number for the KME server.
Destination Trustpoint Label	Specify the destination authentication type trustpoint label. The maximum size is 64.
Ignore Certificate	Specify if you want to skip verification of incoming certificates.

10. Click **Save**.

11. From the **Fabric Overview > Switches** tab, select **Actions > Recalculate and deploy** to deploy the MACsec configuration on the switch.

Disable MACsec

The process described in this section is for disabling MACsec on an inter-fabric link for Data Center VXLAN EVPN and BGP fabrics.

For information on disabling MACsec for an inter-fabric link with a quantum key distribution (QKD) server, see the section "About connecting two NX-OS fabrics with MACsec using QKD" in [Creating Fabrics and Fabric Groups](#)].

Nexus Dashboard performs the following operations when you disable MACsec:

- Disables MACsec on an inter-fabric link using QKD or a preshared key.
- If this is the last link where MACsec is enabled, Nexus Dashboard deletes the switch-level MACsec configuration from the switch.

1. Navigate to the **Fabric Overview > Links** tab.
2. Choose the link on which you want to disable MACsec on the inter-fabric link.
3. From the **Link Management - Edit Link** page, navigate to the appropriate tab and unselect the **Enable MACsec** option.

For an intra-fabric link, the **Enable MACsec** option is in the [Advanced](#) tab.

For an inter-fabric link, the **Enable MACsec** option is in the [Security](#) tab.

4. Click **Save**.
5. From the **Fabric Overview > Switches** tab, select **Actions > Deploy** to remove the MACsec configuration from the switch.

vPC fabric peering

vPC Fabric Peering provides an enhanced dual-homing access solution without the overhead of wasting physical ports for vPC Peer Link. This feature preserves all the characteristics of a traditional

vPC. For more information, see *Information about vPC Fabric Peering* section in *Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide*.

You can create a virtual peer link for two switches or change the existing physical peer link to a virtual peer link. Nexus Dashboard supports vPC fabric peering in both greenfield as well as brownfield deployments. This feature is applicable for **Data Center VXLAN EVPN** and **BGP Fabric** fabric templates.



The **BGP Fabric** fabric does not support brownfield import.

Guidelines and limitations

The following are the guidelines and limitations for vPC fabric pairing.

- vPC fabric peering is supported from Cisco NX-OS Release 9.2(3).
- Only Cisco Nexus N9K-C9332C Switch, Cisco Nexus N9K-C9364C Switch, Cisco Nexus N9K-C9348GC-FXP Switch as also the Cisco Nexus 9000 Series Switches that ends with FX, and FX2 support vPC fabric peering.
- Cisco Nexus N9K-C93180YC-FX3S and N9K-C93108TC-FX3P platform switches support vPC fabric peering.
- Cisco Nexus 9300-EX, and 9300-FX/FXP/FX2/FX3/GX/GX2 platform switches support vPC Fabric Peering. Cisco Nexus 9200 and 9500 platform switches do not support vPC Fabric Peering. For more information, see *Guidelines and Limitations for vPC Fabric Peering* section in *Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide*.
- If you use other Cisco Nexus 9000 Series Switches, a warning will appear during **Recalculate & Deploy**. A warning appears in this case because these switches will be supported in future releases.
- If you try pairing switches that do not support vPC fabric peering, using the **Use Virtual Peerlink** option, a warning will appear when you deploy the fabric.
- You can convert a physical peer link to a virtual peer link and vice-versa with or without overlays.
- Switches with border gateway leaf roles do not support vPC fabric peering.
- vPC fabric peering is not supported for Cisco Nexus 9000 Series Modular Chassis and FEXs. An error appears during **Recalculate & Deploy** if you try to pair any of these.
- Brownfield deployments and greenfield deployments support vPC fabric peering in Cisco Nexus Dashboard.
- However, you can import switches that are connected using physical peer links and convert the physical peer links to virtual peer links after **Recalculate & Deploy**. To update a TCAM region during the feature configuration, use the hardware access-list tcam ingress-flow redirect512 command in the configuration terminal.

QoS for fabric vPC-peering

In the **Data Center VXLAN EVPN** fabric settings, you can enable QoS on spines for guaranteed delivery of vPC Fabric Peering communication. Additionally, you can specify the QoS policy name.

Note the following guidelines for a greenfield deployment:

- If QoS is enabled and the fabric is newly created:
 - If spines or super spines neighbor is a virtual vPC, make sure neighbor is not honored from invalid links, for example, super spine to leaf or borders to spine when super spine is present.
 - Based on the Cisco Nexus 9000 Series Switch model, create the recommended global QoS config using the **switch_freeform** policy template.
 - Enable QoS on fabric links from spine to the correct neighbor.
- If the QoS policy name is edited, make sure policy name change is honored everywhere, that is, global and links.
- If QoS is disabled, delete all configuration related to QoS fabric vPC peering.
- If there is no change, then honor the existing PTI.

For more information about a greenfield deployment, see [Creating Fabrics and Fabric Groups](#).

Note the following guidelines for a brownfield deployment:

Brownfield Scenario 1:

- If QoS is enabled and the policy name is specified:



You need to enable only when the policy name for the global QoS and neighbor link service policy is same for all the fabric vPC peering connected spines.

- Capture the QoS configuration from switch based on the policy name and filter it from unaccounted configuration based on the policy name and put the configuration in the **switch_freeform** with PTI description.
- Create service policy configuration for the fabric interfaces as well.
- Greenfield configuration should make sure to honor the brownfield configuration.
- If the QoS policy name is edited, delete the existing policies and brownfield extra configuration as well, and follow the greenfield flow with the recommended configuration.
- If QoS is disabled, delete all the configuration related to QoS fabric vPC peering.



No cross check for possible or error mismatch user configuration, and user might see the diff.

Brownfield Scenario 2:

- If QoS is enabled and the policy name is not specified, QoS configuration is part of the unaccounted switch freeform config.
- If QoS is enabled from fabric settings after **Recalculate & Deploy** for brownfield, QoS configuration overlaps and you will see the diff if fabric vPC peering config is already present.

For more information about a brownfield deployment, see [Creating Fabrics and Fabric Groups](#)].

To view the vPC pairing window of a switch, from the fabric topology window, right-click the switch and choose **vPC Pairing**. The vPC pairing window for a switch has the following fields:

Field	Description
Use Virtual Peerlink	Allows you to enable or disable the virtual peer linking between switches.
Switch name	Specifies all the peer switches in a fabric. NOTE: When you have not paired any peer switches, you can see all the switches in a fabric. After you pair a peer switch, you can see only the peer switch in the vPC pairing window.
Recommended	Specifies if the peer switch can be paired with the selected switch. Valid values are true and false . Recommended peer switches will be set to true .
Reason	Specifies why the vPC pairing between the selected switch and the peer switches is possible or not possible.
Serial Number	Specifies the serial number of the peer switches.

You can perform the following with the **vPC Pairing** option:

Create a virtual peer link

To create a virtual peer link from the Cisco Nexus Dashboard Web UI, perform the following steps:

1. Choose **Home > Topology**.
2. Choose a fabric with the **Data Center VXLAN EVPN** or **BGP Fabric** fabric type.
3. Right-click a switch and choose **vPC Pairing** from the drop-down list.

The window to choose the peer appears.



Alternatively, you can also navigate to the fabric **Overview** window. Choose a switch in the **Inventory > Switches** tab and click on **Actions > vPC Pairing** to create, edit, or unpair a vPC pair. However, you can use this option only when you choose a Cisco Nexus switch.

You will get the following error when you choose a switch with the border gateway leaf role.
<switch-name> has a Network/VRF attached. Please detach the Network/VRF before vPC Pairing/Unpairing

4. Check the **Use Virtual Peerlink** check box.
5. Choose a peer switch and check the **Recommended** column to see if pairing is possible.

If the value is **true**, pairing is possible. You can pair switches even if the recommendation is **false**. However, you will get a warning or error during **Recalculate & Deploy**.

6. Click **Save**.
7. In the **Topology** window, choose **Recalculate & Deploy**.

The **Deploy Configuration** window appears.

8. Click the field against the switch in the **Preview Config** column.

The **Config Preview** window appears for the switch.

9. View the vPC link details in the pending configuration and side-by-side configuration.
10. Close the window.
11. Click the pending errors icon next to **Recalculate & Deploy** icon to view errors and warnings, if any.

If you see any warnings that are related to TCAM, click the **Resolve** icon. A confirmation dialog box about reloading switches appears. Click **OK**. You can also reload the switches from the topology window. For more information, see *Guidelines and Limitations for vPC Fabric Peering* and *Migrating from vPC to vPC Fabric Peering* sections in *Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide*.

The switches that are connected through vPC fabric peering, are enclosed in a gray cloud.

Convert a physical peer link to a virtual peer link

Before you begin

- Perform the conversion from physical peer link to virtual peer link during the maintenance window of switches.
- Ensure the switches support vPC fabric peering. Only the following switches support vPC fabric peering:
 - Cisco Nexus N9K-C9332C Switch, Cisco Nexus N9K-C9364C Switch, and Cisco Nexus N9K-C9348GC-FXP Switch.
 - Cisco Nexus 9000 Series Switches that ends with FX, FX2, and FX2-Z.
 - Cisco Nexus 9300-EX, and 9300-FX/FXP/FX2/FX3/GX/GX2 platform switches. For more information, see *Guidelines and Limitations for vPC Fabric Peering* section in *Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide*.

To convert a physical peer link to a virtual peer link from the Cisco Nexus Dashboard Web UI, perform the following steps:

1. Choose **Home > Topology**.
2. Choose a fabric with the **Data Center VXLAN EVPN** or **BGP Fabric** fabric type.
3. Right-click the switch that is connected using the physical peer link and choose **vPC Pairing** from the drop-down list.

The window to choose the peer appears.



Alternatively, you can also navigate to the fabric **Overview** window. Choose a switch in the **Inventory > Switches** tab and click on **Actions > vPC Pairing** to create, edit, or unpair a vPC pair. However, you can use this option only when you choose a Cisco Nexus switch.

You will get the following error when you choose a switch with the border gateway leaf role.
<switch-name> has a Network/VRF attached. Please detach the Network/VRF before vPC

Pairing/Unpairing

4. Check the **Recommended** column to see if pairing is possible.

If the value is **true**, pairing is possible. You can pair switches even if the recommendation is **false**. However, you will get a warning or error during **Recalculate & Deploy**.

5. Check the **Use Virtual Peerlink** check box.

The **Unpair** icon changes to **Save**.

6. Click **Save**.



After you click **Save**, the physical vPC peer link is automatically deleted between the switches even without deployment.

7. In the **Topology** window, choose **Recalculate & Deploy**.

The **Deploy Configuration** window appears.

8. Click the field against the switch in the **Preview Config** column.

The **Config Preview** window appears for the switch.

9. View the vPC link details in the pending configuration and the side-by-side configuration.

10. Close the window.

11. Click the pending errors icon next to the **Recalculate & Deploy** icon to view errors and warnings, if any.

If you see any warnings that are related to TCAM, click the **Resolve** icon. A confirmation dialog box about reloading switches appears. Click **OK**. You can also reload the switches from the fabric topology window.

The physical peer link between the peer switches turns red. Delete this link. The switches are connected only through a virtual peer link and are enclosed in a gray cloud.

Convert a virtual peer link to a physical peer link

Before you begin

Connect the switches using a physical peer link before disabling the vPC fabric peering.

To convert a virtual peer link to a physical peer link from the Cisco Nexus Dashboard Web UI, perform the following steps:

1. Choose **Home > Topology**.
2. Choose a fabric with the **Data Center VXLAN EVPN** or **BGP Fabric** fabric type.
3. Right-click the switch that is connected through a virtual peer link and choose **vPC Pairing** from the drop-down list.

The window to choose the peer appears.



Alternatively, you can also navigate to the fabric **Overview** window. Choose a switch in the **Inventory > Switches** tab and click on **Actions > vPC Pairing** to create, edit, or unpair a vPC pair. However, you can use this option only when you choose a Cisco Nexus switch.

4. Uncheck the **Use Virtual Peerlink** check box.

The **Unpair** icon changes to **Save**.

5. Click **Save**.
6. In the **Topology** window, choose **Recalculate & Deploy**.

The **Deploy Configuration** window appears.

7. Click the field against the switch in the **Preview Config** column.

The **Config Preview** window appears for the switch.

8. View the vPC peer link details in the pending configuration and the side-by-side configuration.
9. Close the window.
10. Click the pending errors icon next to the **Recalculate & Deploy** icon to view errors and warnings, if any.

If you see any warnings that are related to TCAM, click the **Resolve** icon. The confirmation dialog box about reloading switches appears. Click **OK**. You can also reload the switches from the fabric topology window.

The virtual peer link, represented by a gray cloud, disappears and the peer switches are connected through a physical peer link.

Deploying Fabric Underlay eBGP Policies

To deploy fabric underlay eBGP policy, you must manually add the **leaf_bgp_asn** policy on each leaf switch to specify the BGP AS number used on the switch. Implementing the **Recalculate & Deploy** operation afterwards will generate eBGP peering over the physical interface between the leaf and spine switches to exchange underlay reachability information. If **Same-Tier-AS mode** is used, you can deploy the **leaf_bgp_asn** policy on all leaves at the same time as they share the same BGP ASN.

In a Multi-AS fabric, add the the **leaf_bgp_asn** policy on each leaf node and the fabric. In a vPC switch pair, they share the same AS number.

To add a policy to the required switch, see the section "Add a policy" in [Working with Configuration Policies for Your Nexus Dashboard LAN or IPFM Fabrics](#).

Deploying Fabric Overlay eBGP Policies

You must manually add the eBGP overlay policy for overlay peering. NDFC provides the built-in eBGP leaf and spine overlay peering policy templates that you must manually add to the eBGP leaf and spine switches to form the EVPN overlay peering.

Deploying Spine Switch Overlay Policies

Add the **ebgp_overlay_spine_all_neighbor** policy on the spine or super spine switches. This policy can be deployed on all the spine switches at once, since they share the same field values. If the network contains spine switches and super spine switches, you must deploy the policy only on the super spine switches.

1. Navigate to **Manage > Fabrics** and double-click on the fabric.

The **Fabric Overview** window appears.

2. On the **Policies** tab, choose **Actions > Add policy**.
3. Select all the spine switches to which you want to add the **ebgp_overlay_spine_all_neighbor** policy and click **Next**.

The **Create Policy** window appears.

4. Click **Choose Template** and select the **ebgp_overlay_spine_all_neighbor** policy.
5. Enter the necessary field values for the following fields, as required and click **Save**.

Field	Description
Leaf IP List	Specifies the IPv6 or the IPv4 address of the connected leaf switch routing loopback interface. If you have enabled IPv6 underlay, ensure you enter the IPv6 address in this field.
Leaf BGP ASN	The BGP AS numbers of the leaf switches.
BGP Update-Source Interface	This is the source interface for BGP updates. Underlay routing loopback (loopback0) is used by default.

1. At the top-right of the **Fabric Overview** window, choose **Actions > Recalculate and deploy**.
2. After the configuration deployment is complete, click **Close**.

You can use the **Edit policy** option to edit the policy and click **Push Configuration** to deploy the configuration.

Deploying Leaf Switch Overlay Policies

Add the **ebgp_overlay_leaf_all_neighbor** policy on all the leaf switches, to establish eBGP overlay peering towards the spine switch. This policy can be deployed on all leaf switches at once, since they share the same field values.

1. Navigate to **Manage > Fabrics** and double-click on the fabric.

The **Fabric Overview** window appears.

2. On the **Policies** tab, choose **Actions > Add policy**.
3. Select all the spine switches to which you want to add the **ebgp_overlay_leaf_all_neighbor** policy and click **Next**.

The **Create Policy** window appears.

4. Click **Choose Template** and select the **ebgp_overlay_leaf_all_neighbor** policy.
5. Enter the necessary field values for the following fields, as required and click **Save**.

Field	Description
Spine/Super Spine IPv4/IPv6 List	Specifies the IPv4 or IPv6 addresses of the routing loopback interfaces of spine or super spine switches for BGP peering. If you have enabled IPv6 underlay, enter the IPv6 address in this field. If the fabric has any super spine or border super spine, provide the IP addresses of the super spines or border super spines.
BGP Update-Source Interface	This is the source interface for BGP updates. Underlay routing loopback (loopback0) is used by default.

6. At the top-right of the **Fabric Overview** window, choose **Actions > Recalculate and deploy**.
7. After the configuration deployment is complete, click **Close**.

You can use the **Edit policy** option to edit the policy and click **Push Configuration** to deploy the configuration.

Adding a Super Spine Switch to an Existing VXLAN BGP EVPN Fabric

If your fabric contains both spine and super spine switches, you must reconfigure the fabric to use the super spine for deploying the overlay between the leaf and the border devices. This topic describes steps to integrate a super spine switch to your existing fabric which has a leaf switch and a spine switch with an overlay between them.

1. To add the **ebgp_overlay_spine_all_neighbor** policy to super spine switches that are newly added to an existing VXLAN BGP EVPN fabric:
 - a. Navigate to the **Fabric Overview** window for your fabric and click the **Policies** tab.
 - b. Select the super spine switches to which you want to add the **ebgp_overlay_spine_all_neighbor** policy and click **Next**.

The **Create Policy** window appears.

- c. Click **Choose Template** and select the **ebgp_overlay_spine_all_neighbor** policy.
 - d. Enter the IPv4 or IPv6 addresses of the leaf switches in the **Leaf IP List** field.
 - e. Enter the AS numbers for the leaf switches in the **Leaf BGP ASN** field and click **Save**.
2. To modify the existing **ebgp_overlay_leaf_all_neighbor** policy on each leaf node:
 - a. Find the existing policy by filtering based on **ebgp_overlay_leaf_all_neighbor** template name.



Ensure you modify only one policy at a time.

- b. Select a policy and choose **Action > Edit policy**.
 - c. Enter the IP addresses of the super spine routing loopback interfaces in the **Spine/Super Spine IP List** field and click **Save**.

3. Select the leaf and the super spine switches that you have added in step 2 and choose **Actions > Deploy**.
4. On the **Links** tab, click on Protocol View and verify that eBGP peering between the super spine and leaf switches are established.
5. Remove the existing overlay between the leaf and the spine switches as follows:
 - a. On the spine switch, select the **ebgp_overlay_spine_all_neighbor** policy and choose **Actions > Delete policy**.
 - b. On the leaf switch, select the **ebgp_overlay_leaf_all_neighbor** policy and choose **Actions > Edit policy**.
 - c. Remove the IP address of the spine switch in the **Spine/Super Spine IPv4/IPv6 List** field and click **Save**.
6. To deploy the updated configuration on spine and leaf switches , choose **Actions > Recalculate and deploy** at the top-right of the **Fabric Overview** window.

or

Select the leaf and the spine switches and choose **Actions > Deploy**.

Managing BGP-Based Routed Fabrics

This chapter describes how to configure a typical spine-leaf based routed fabric with eBGP as the routing protocol of choice. This is the preferred deployment choice for Massively Scalable Data Center (MSDC) networks. Both Same-Tier-AS and Multi-AS options are supported. A routed fabric has no Layer-2 stretch or subnet stretch across leafs. In other words, networks are localized to a pair of leafs or a rack, with leafs hosting the default gateway for the directly attached server workloads. Subnet advertisement across racks are communicated over eBGP via the spine thereby providing any-to-any reachability within the routed fabric. Routed Fabric can be IPv4 or IPv6 based. IPv6 routed fabric uses IPv6 to build the intra-fabric connectivity and route advertisement. IPv6 routed fabric assigns link local address for intra-fabric links and support RFC 5549 to allow IPv4 route advertising using IPv6 next hop. Switch roles leaf, spine, border, super spine, and border super spine are supported.

Creating an eBGP-based Fabric

1. Choose **Manage > Fabrics**.
2. From the **Actions** drop-down list, choose **Create Fabric**.

The **Create Fabric** window appears.

The fields are explained:

Fabric Name - Enter the name of the fabric.

Fabric Template - Click on this to choose the **BGP Fabric** fabric template. The fabric settings for creating a standalone fabric appear. Click **Select**.

3. The **General Parameters** tab is displayed by default.
4. Click the **EVPN** tab and uncheck the **Enable EVPN VXLAN Overlay** check box.

5. The fields in the **General Parameters** tab are:

BGP ASN for Spines: Enter the BGP AS number of the fabric's spine switches.

BGP ASN for Super Spines: Enter the BGP AS number that is used for super spine and border super spines, if the fabric contains any super spine or border super spine.

BGP AS Mode: Choose **Multi-AS** or **Same-Tier-AS**.

In a **Multi-AS** fabric, the spine switches have a unique BGP AS number and each leaf switch has a unique AS number. If two leaf switches form a vPC switch pair, then they have the same AS number.

In a **Same-Tier-AS** fabric, the spine switches have a unique BGP AS number and the leaf switches have a unique AS number, the borders share one AS. Leaf or border switches with the same role cannot have different AS.

Leafs and borders can have the same AS, or different AS.

The fabric is identified by the spine switch AS number.

Enable IPv6 routed fabric: Check the **Enable IPv6 routed fabric** check box.

If not enabled, IPv4 underlay/routed fabric is used. To select this option, disable **EVPN** first.



Supports NX-OS software image version 9.3.6 and above.

Manual Underlay IP Address Allocation: Check the **Manual Underlay IP Address Allocation** check box to disable Dynamic Underlay IP Address Allocations.

6. Click **EVPN**. The Enable EVPN VXLAN Overlay option must be explicitly disabled. Note that this check box is enabled by default. This option should be enabled only for use-cases where customers want to build an eBGP-underlay/overlay based VXLAN EVPN fabric.

Routed Fabric: In a Routed Fabric, once the IP reachability between the spine-leaf network has been established, you can easily create and deploy networks on the leafs using either HSRP or VRRP as the First-Hop Routing Protocol (FHRP) of choice.

When you create an eBGP Routed fabric, the fabric uses eBGP as the control plane to build intra-fabric connectivity. Links between spine and leaf switches are autoconfigured with point-to-point (p2p) numbered IP addresses with eBGP peering built on top.

Note that **Routed_Network_Universal Template** is only applicable to a Routed Fabric.

First Hop Redundancy Protocol: Specifies the FHRP protocol. Choose either **hsrp** or **vrrp**. This field is only applicable to a Routed Fabric.



- o After a network has been created, you cannot change this fabric setting. You should delete all networks, and then change the FHRP setting.
- o The rest of the fields in the EVPN tab section are only applicable if you enable the EVPN VXLAN Overlay.

7. Click **vPC**. The fields in the tab are:

vPC Peer Link VLAN: VLAN used for the vPC peer link SVI.

Make vPC Peer Link VLAN as Native VLAN - Enables vPC peer link VLAN as Native VLAN.

vPC Peer Keep Alive option: Choose the management or loopback option. If you want to use IP addresses assigned to the management port and the management VRF, choose management. If you use IP addresses assigned to loopback interfaces (and a non-management VRF), choose loopback. If you use IPv6 addresses, you must use loopback IDs.

vPC Auto Recovery Time: Specifies the vPC auto recovery time-out period in seconds.

vPC Delay Restore Time: Specifies the vPC delay restore period in seconds.

vPC Peer Link Port Channel Number: Specifies the Port Channel ID for a vPC Peer Link. By default, the value in this field is 500.

vPC IPv6 ND Synchronize: Enables IPv6 Neighbor Discovery synchronization between vPC switches. The check box is enabled by default. uncheck the check box to disable the function.

vPC advertise-pip: Check the **vPC advertise-pip** check box to enable the advertise PIP feature.

You can enable the advertise PIP feature on a specific vPC as well.

Enable the same vPC Domain Id for all vPC Pairs: Check the **Enable the same vPC Domain Id for all vPC Pairs** check box. When you select this field, the **vPC Domain Id** field is editable

vPC Domain Id: Specifies the vPC domain ID to be used on all vPC pairs

vPC Domain Id Range: Specifies the vPC Domain Id range to use for new pairings.

Enable QoS for Fabric vPC-Peering: Enable QoS on spines for guaranteed delivery of vPC Fabric Peering communication.



QoS for vPC fabric peering and queuing policies options in fabric settings are mutually exclusive.

QoS Policy Name: Specifies QoS policy name that should be same on all fabric vPC peering spines.

The default name is **spine_qos_for_fabric_vpc_peering**.

8. Click **Protocols**. The fields in the tab are:

Routing Loopback Id - The loopback interface ID is populated as 0 by default. It is used as the BGP router ID.

BGP Maximum Paths - Specifies the BGP maximum paths.

Enable BGP Authentication: Check the **Enable BGP Authentication** check box to enable BGP authentication. uncheck the check box to disable it. If you enable this field, the BGP Authentication Key Encryption Type and BGP Authentication Key fields are enabled.

BGP Authentication Key Encryption Type: Choose the three for 3DES encryption type, or seven for Cisco encryption type.

BGP Authentication Key: Enter the encrypted key based on the encryption type.



Plain text passwords are not supported. Login to the switch, retrieve the encrypted key and enter it in the BGP Authentication Key field. Refer the Retrieving the Authentication Key section for details.

Enable BFD: Check the **Enable BFD** check box to enable **feature bfd** on all switches in the fabric. This feature is valid only on IPv4 underlay and the scope is within a fabric.

NDFC supports BFD within a fabric. The BFD feature is disabled by default in the Fabric Settings. If enabled, BFD is enabled for the underlay protocols with the default settings. Any custom required BFD configurations must be deployed through per switch freeform or per interface freeform policies.

The following config is pushed after you check the **Enable BFD** check box:

feature bfd



NDFC with BFD enabled, the following configurations are pushed on all P2P fabric interfaces: `no ip redirects no ipv6 redirects`

For information about BFD feature compatibility, refer your respective platform documentation and for information about the supported software images, see *Compatibility Matrix for Cisco NDFC*.

Enable BFD for BGP: Check the **Enable BFD for BGP** check box to enable BFD for the BGP neighbor. This option is disabled by default.

Enable BFD Authentication: Check the **Enable BFD Authentication** check box to enable BFD authentication. If you enable this field, the **BFD Authentication Key ID** and **BFD Authentication Key** fields are editable.

BFD Authentication Key ID: Specifies the BFD authentication key ID for the interface authentication.

BFD Authentication Key: Specifies the BFD authentication key.

For information about how to retrieve the BFD authentication parameters, see *Retrieving the Encrypted BFD Authentication Key, in Cisco NDFC Fabric Controller Configuration Guide*.

9. Click **Advanced**. The fields in the tab are:

Intra Fabric Interface MTU: Specifies the MTU for the intra fabric interface. This value should be an even number.

Layer 2 Host Interface MTU: Specifies the MTU for the layer 2 host interface. This value should be an even number.

Power Supply Mode: Choose the appropriate power supply mode.

CoPP Profile: Choose the appropriate Control Plane Policing (CoPP) profile policy for the fabric. By default, the strict option is populated.

VRF Lite Subnet IP Range and **VRF Lite Subnet Mask:** These fields are prefilled with the DCI

subnet details. Update the fields as needed.

The values shown on the page are automatically generated. If you want to update the IP address ranges, VXLAN Layer 2/Layer 3 network ID ranges or the VRF/network VLAN ranges, ensure that each fabric has its own unique range and is distinct from any underlay range to avoid possible duplication. You should only update one range of values at a time.

If you want to update more than one range of values, do it in separate instances. For example, if you want to update Layer 2 and Layer 3 ranges, you should do the following.

- a. Update the Layer 2 range and click **Save**.
- b. Click the **Edit Fabric** option again, update the Layer 3 range, and click **Save**.

Enable CDP for Bootstrapped Switch: Check the **Enable CDP for Bootstrapped Switch** check box to enable CDP for bootstrapped switch.

Enable NX-API: Specifies enabling of NX-API on HTTPS. This check box is checked by default.

Enable NX-API on HTTP: Specifies enabling of NX-API on HTTP. Check **Enable NX-API on HTTP** and **Enable NX-API** check boxes to use HTTP. This check box is checked by default. If you uncheck this check box, the applications that use NX-API and supported by Cisco NDFC, such as Endpoint Locator (EPL), Layer 4-Layer 7 services (L4-L7 services), VXLAN OAM, and so on, start using the HTTPS instead of HTTP.



If you check **Enable NX-API** and **Enable NX-API on HTTP** check boxes, applications use HTTP.

Enable Strict Config Compliance: Check the **Enable Strict Config Compliance** check box to enable this feature.

For Strict Configuration Compliance, see *Enhanced Monitoring and Monitoring Fabrics Guide*.



If Strict Configuration Compliance is enabled in a fabric, you cannot deploy Network Insights for Resources on Cisco NDFC.

Enable AAA IP Authorization: Enables AAA IP authorization, when IP Authorization is enabled in the AAA Server.

Enable DCNM as Trap Host: Check the **Enable DCNM as Trap Host** check box to enable NDFC as a trap host.

Enable TCAM Allocation: TCAM commands are automatically generated for VXLAN and vPC Fabric Peering when enabled.

Greenfield Cleanup Option: Enable the switch cleanup option for greenfield switches without a switch reload. This option is typically recommended only for the data center environments with the Cisco Nexus 9000v Switches.

Enable Default Queuing Policies: Check **Enable Default Queuing Policies** check box to apply QoS policies on all the switches in this fabric. To remove the QoS policies that you applied on all the switches, uncheck this check box, update all the configurations to remove the

references to the policies, and save and deploy. Pre-defined QoS configurations are included that can be used for various Cisco Nexus 9000 Series Switches. When you check this check box, the appropriate QoS configurations are pushed to the switches in the fabric. The system queuing is updated when configurations are deployed to the switches. You can perform the interface marking with defined queuing policies, if required, by adding the required configuration to the per interface freeform block.

Review the actual queuing policies by opening the policy file in the template editor. From Cisco NDFC Web UI, choose **Operations > Template**. Search for the queuing policies by the policy file name, for example, **queuing_policy_default_8q_cloudscale**. Choose the file and click the **Modify/View template** icon to edit the policy.

See the *Cisco Nexus 9000 Series NX-OS Quality of Service Configuration Guide* for platform specific details.

N9K Cloud Scale Platform Queuing Policy: Choose the queuing policy from the drop-down list to be applied to all Cisco Nexus 9200 Series Switches and the Cisco Nexus 9000 Series Switches that ends with EX, FX, and FX2 in the fabric. The valid values are **queuing_policy_default_4q_cloudscale** and **queuing_policy_default_8q_cloudscale**. Use the **queuing_policy_default_4q_cloudscale** policy for FEXes. You can change from the **queuing_policy_default_4q_cloudscale** policy to the **queuing_policy_default_8q_cloudscale** policy only when FEXes are offline.

N9K R-Series Platform Queuing Policy: Choose the queuing policy from the drop-down list to be applied to all Cisco Nexus switches that ends with R in the fabric. The valid value is **queuing_policy_default_r_series**.

Other N9K Platform Queuing Policy: Choose the queuing policy from the drop-down list to be applied to all other switches in the fabric other than the switches mentioned in the above two options. The valid value is **queuing_policy_default_other**.

Enable MACsec: Enables MACsec for the fabric. For more information, see [MACsec support in Data Center VXLAN EVPN and BGP fabrics](#).

Leaf Freeform Config: Add CLIs that should be added to switches that have the Leaf, Border, and Border Gateway roles.

Spine Freeform Config: Add CLIs that should be added to switches with a Spine, Border Spine, and Border Gateway Spine roles.

Intra-fabric Links Additional Config: Add CLIs that should be added to the intra-fabric links.

10. Click **Manageability**. The fields in this tab are:

DNS Server IPs: Specifies the comma separated list of IP addresses (v4/v6) of the DNS servers.

DNS Server VRFs: Specifies one VRF for all DNS servers or a comma separated list of VRFs, one per DNS server.

NTP Server IPs: Specifies comma separated list of IP addresses (v4/v6) of the NTP server.

NTP Server VRFs: Specifies one VRF for all NTP servers or a comma separated list of VRFs, one per NTP server.

Syslog Server IPs: Specifies the comma separated list of IP addresses (v4/v6) IP address of the syslog servers, if used.

Syslog Server Severity: Specifies the comma separated list of syslog severity values, one per syslog server. The minimum value is 0 and the maximum value is 7. To specify a higher severity, enter a higher number.

Syslog Server VRFs: Specifies one VRF for all syslog servers or a comma separated list of VRFs, one per syslog server.

AAA Freeform Config: Specifies the AAA freeform configs.

If AAA configs are specified in the fabric settings, **switch_freeform** PTI with source as **UNDERLAY_AAA** and description as "**AAA Configurations**" will be created.

11. Click **Bootstrap** tab. The fields in this tab are:

Enable Bootstrap: Check the **Enable Bootstrap** check box to enable the bootstrap feature.

After you enable bootstrap, you can enable the DHCP server for automatic IP address assignment using one of the following methods:

- o External DHCP Server: Enter information about the external DHCP server in the **Switch Mgmt Default Gateway** and **Switch Mgmt IP Subnet Prefix** fields.
- o Local DHCP Server: Check the **Local DHCP Server** check box and enter details for the remaining mandatory fields.

Enable Local DHCP Server: Check the **Enable Local DHCP Server** check box to initiate enabling of automatic IP address assignment through the local DHCP server. When you check this check box, the **DHCP Scope Start Address** and **DHCP Scope End Address** fields become editable.

If you do not check this check box, NDFC uses the remote or external DHCP server for automatic IP address assignment.

DHCP Version - Select DHCPv4 or DHCPv6 from this drop-down list. When you select DHCPv4, the **Switch Mgmt IPv6 Subnet Prefix** field is disabled. If you select DHCPv6, the **Switch Mgmt IP Subnet Prefix** is disabled.



Cisco NDFC IPv6 POAP is not supported with Cisco Nexus 7000 Series Switches. Cisco Nexus 9000 and 3000 Series Switches support IPv6 POAP only when switches are either L2 adjacent (eth1 or out-of-band subnet must be a /64) or they are L3 adjacent residing in some IPv6 /64 subnet. Subnet prefixes other than /64 are not supported.

DHCP Scope Start Address and **DHCP Scope End Address:** Specifies the first and last IP addresses of the IP address range to be used for the switch out of band POAP.

Switch Mgmt Default Gateway: Specifies the default gateway for the management VRF on the switch.

Switch Mgmt IP Subnet Prefix: Specifies the prefix for the Mgmt0 interface on the switch. The prefix should be between 8 and 30.

DHCP scope and management default gateway IP address specification: If you specify the management default gateway IP address 10.0.1.1 and subnet mask 24, ensure that the DHCP scope is within the specified subnet, between 10.0.1.2 and 10.0.1.254.

Switch Mgmt IPv6 Subnet Prefix: Specifies the IPv6 prefix for the Mgmt0 interface on the switch. The prefix should be between 112 and 126. This field is editable if you enable IPv6 for DHCP.

Enable AAA Config: Check the **Enable AAA Config** check box to include AAA configs from the **Manageability** tab during device bootup.

Bootstrap Freeform Config: (Optional) Enter additional commands as needed. For example, if you are using AAA or remote authentication related configurations, you need to add these configurations in this field to save the intent. After the devices boot up, they contain the intent defined in the **Bootstrap Freeform Config** field.

Copy-paste the running-config to a **freeform config** field with correct indentation, as seen in the running configuration on the NX-OS switches. The freeform config must match the running config. For more information, see *Resolving Freeform Config Errors in Switches in Enabling Freeform Configurations on Fabric Switches*.

DHCPv4/DHCPv6 Multi Subnet Scope: Specifies the field to enter one subnet scope per line. This field is editable after you check the **Enable Local DHCP Server** check box.

The format of the scope should be defined as:

DHCP Scope Start Address, DHCP Scope End Address, Switch Management Default Gateway, Switch Management Subnet Prefix

For example: 10.6.0.2, 10.6.0.9, 10.6.0.1, 24

12. Click **Configuration Backup**. The fields on this tab are:

Hourly Fabric Backup: Check the **Hourly Fabric Backup** check box to enable an hourly backup of fabric configurations and the intent.

You can enable an hourly backup for fresh fabric configurations and the intent as well. If there is a configuration push in the previous hour, NDFC takes a backup.

Intent refers to configurations that are saved in NDFC but yet to be provisioned on the switches.

Scheduled Fabric Backup: Check the **Scheduled Fabric Backup** check box to enable a daily backup. This backup tracks changes in running configurations on the fabric devices that are not tracked by configuration compliance.

Scheduled Time: Specify the scheduled backup time in a 24-hour format. This field is enabled if you check the **Scheduled Fabric Backup** check box.

Select both the check boxes to enable both back up processes.

The backup process is initiated after you click **Save**.



Hourly and scheduled backup processes happen only during the next periodic configuration compliance activity, and there can be a delay of up to an hour. To

trigger an immediate backup, do the following:

- a. Choose **Overview > Topology**.
- b. Click within the specific fabric box. The fabric topology screen comes up.
- c. From the **Actions** pane at the left part of the screen, click **Re-Sync Fabric**.

You can also initiate the fabric backup in the fabric topology window. Click **Backup Now** in the **Actions** pane.

Click **Save** after filling and updating relevant information.

13. Click **Flow Monitor**. The fields on this tab are:

Enable Netflow - Check the **Enable Netflow** check box to enable Netflow on VTEPs for this Fabric. By default, Netflow is disabled. On Enable, NetFlow configuration will be applied to all VTEPS that support netflow.



When Netflow is enabled on the fabric, you can choose not to have netflow on a particular switch by having a dummy no_netflow PTI.

If netflow is not enabled at the fabric level, an error message is generated when you enable netflow at the interface, network, or vrf level. For information about Netflow support for Cisco NDFC, see the "Configuring Netflow support" section in [Creating Fabrics and Fabric Groups](#).

In the **Netflow Exporter** area, click **Actions > Add** to add one or more Netflow exporters. This exporter is the receiver of the netflow data. The fields on this tab are:

- o **Exporter Name:** Specifies the name of the exporter.
- o **IP:** Specifies the IP address of the exporter.
- o **VRF:** Specifies the VRF over which the exporter is routed.
- o **Source Interface:** Enter the source interface name.
- o **UDP Port:** Specifies the UDP port over which the netflow data is exported.

Click **Save** to configure the exporter. Click **Cancel** to discard. You can also choose an existing exporter and select **Actions > Edit** or **Actions > Delete** to perform relevant actions.

In the **Netflow Record** area, click **Actions > Add** to add one or more Netflow records. The fields on this screen are:

- o **Record Name:** Specifies the name of the record.
- o **Record Template:** Specifies the template for the record. Enter one of the record templates names. In Release 12.0.2, the following two record templates are available for use. You can create custom netflow record templates. Custom record templates saved in the template library are available for use here.
 - **netflow_ipv4_record:** to use the IPv4 record template.
 - **netflow_l2_record:** to use the Layer 2 record template.
- o **Is Layer2 Record:** Check the **Is Layer2 Record** check box if the record is for Layer2 netflow.

Click **Save** to configure the report. Click **Cancel** to discard. You can also choose an existing record and select **Actions > Edit** or **Actions > Delete** to perform relevant actions.

In the **Netflow Monitor** area, click **Actions > Add** to add one or more Netflow monitors. The fields on this screen are:

- **Monitor Name:** Specifies the name of the monitor.
- **Record Name:** Specifies the name of the record for the monitor.
- **Exporter1 Name:** Specifies the name of the exporter for the netflow monitor.
- **Exporter2 Name:** (optional) Specifies the name of the secondary exporter for the netflow monitor.

The record name and exporters referred to in each netflow monitor must be defined in "**Netflow Record**" and "**Netflow Exporter**".

Click **Save** to configure the monitor. Click **Cancel** to discard. You can also choose an existing monitor and select **Actions > Edit** or **Actions > Delete** to perform relevant actions.

14. Click on the **Fabric** to view summary in the slide-in pane. Click on the Launch icon to view the Fabric Overview.

Salient Points

- Brownfield migration is not supported for eBGP fabrics.
- You cannot change the leaf switch AS number after it is created and **Recalculate & Deploy** operation is executed. You need to delete the **leaf_bgp_asn** policy and execute **Recalculate & Deploy** operation to remove BGP configuration related to this AS first. Then, you can add the leaf_bgp_asn policy with the new AS number.
- If you want to switch between Multi-AS and Same-Tier-AS modes, remove all manually added BGP policies (including leaf_bgp_asn on the leaf switch and the ebgp overlay policies), and execute the **Recalculate & Deploy** operation before the mode change.
- The supported roles are leaf, spine, super spine, border leaf, and border super spine.
- On the border and super spine border device, VRF-Lite is supported with manual mode

Adding Switches to a Fabric

Switches in each fabric are unique, and hence, each switch can only be added to one fabric. For more information, see "Add switches to a fabric" in [Working with Inventory in Your Nexus Dashboard LAN or IPFM Fabrics](#).

Deploying Fabric Underlay eBGP Policies

In NDFC, a fabric with the **BGP Fabric** template is created. One spine switch and three leaf switches are imported to it.

The two different types of fabrics are:

- **Creating a Multi-AS mode fabric:** In a Multi-AS mode fabric, spine switches have a common BGP AS number and each leaf switch has a unique BGP AS number. Use the same steps for Same-Tier-AS to Multi-AS mode fabric conversion.

- **Creating a Same-Tier-AS mode fabric:** Alternate steps are mentioned for Same-Tier-AS mode fabric creation. Use the same steps for Multi-AS to a Same-Tier-AS mode fabric conversion.

In a Same-Tier-AS fabric, all spine switches have a common BGP AS number and all leaf switches have a common BGP AS number (differing from the spine switches' BGP AS number). You must deploy policies as explained in the next section.

To deploy fabric underlay eBGP policy, you must manually add the **leaf_bgp_asn** policy on each leaf switch to specify the BGP AS number used on the switch. Implementing the **Recalculate & Deploy** operation afterward will generate eBGP peering over the physical interface between the leaf and spine switches to exchange underlay reachability information.

To add a policy to the required switch, see the section "Add a policy" in [Working with Configuration Policies for Your Nexus Dashboard LAN or IPFM Fabrics](#).

Deploying Networks in eBGP-based Fabrics

Overview of Networks in a Routed Fabric

You can create a top-down network configuration for a routed fabric using NDFC. A routed fabric is run in one VRF, which is the default VRF. Note that creating VRFs manually is disabled for a routed fabric. Since the fabric is an IPv4 fabric, IPv6 address within the network is not supported. In a routed fabric, a network can only be attached to one device or a pair of vPC devices, unless it is a Layer-2 only network.



A routed fabric network configuration will not be put under a config-profile. When the eBGP fabric is configured as Routed Fabric (EVPN is disabled), at the fabric level, you can select the first hop redundancy protocol (FHRP) for host traffic to be either HSRP or VRRP. HSRP is the default value.

For a vPC pair, NDFC generates network level HSRP or VRRP configuration based on the fabric setting. If HSRP is chosen, each network is configured with one HSRP group, and the HSRP VIP address. By default, all the networks will share the same HSRP group number allocated by NDFC, while you can overwrite it per network. VRRP support is similar to HSRP.

Guidelines

- HSRP authentication or VRRP authentication is not supported. If you want to use authentication, you can enter the applicable commands in the network freeform config.
- vPC peer gateway can be used to minimize peer link usage in the case that some third-party devices ignore the HSRP virtual-MAC and use the ARP packet source MAC for ARP learning. In Routed fabric mode, NDFC generates vPC peer gateway command for VPC devices.
- For an eBGP fabric, changing between routed fabric type and EVPN fabric type, or HSRP and VRRP, is not allowed with the presence of networks and VRFs. You need to undeploy and delete these networks and VRFs before changing the fabric type or FHRP. For more information, see *Undeploying Networks for the Standalone Fabric* and *Undeploying VRFs for the Standalone Fabric*.
- If the fabric was running in Routed Fabric mode previously, the default fabric values such as FHRP protocol and network VLAN range are internally set for a Routed Fabric. You need to edit the fabric settings if you want to configure different values. Before deploying a network configuration, you need to update the FHRP protocol fabric setting and click **Recalculate & Deploy**.

Creating and Deploying a Network in a Routed Fabric

Before you begin:

Create a routed fabric and deploy the necessary leaf and spine policies.

This procedure shows how to create and deploy a network in a routed fabric.

1. Choose any one of the following navigation paths:
 - o Choose **Manage > Fabrics**. Click on a fabric to open the **Fabric** slide-in pane. Click the **Launch** icon. Choose **Fabric Overview > Networks**.
 - o Choose **Manage > Fabrics**. Double-click on a fabric to open **Fabric Overview > Networks**.
2. From the **Actions** drop-down list, choose **Create**.

The **Create Networks** window appears. The fields in this window are:

Network Name: Specifies the name of the network. The network name should not contain any white spaces or special characters except underscore (_) and hyphen (-).

Layer 2 Only: (Optional) Specifies whether the network is a Layer 2 only network. FHRP configuration is not generated in a Layer 2 only network.



When an L3 Network template is attached to a standalone device, no FHRP configuration is generated.

Network Template: Select the **Routed_Network_Universal** template.

VLAN ID: Optional. Specifies the corresponding tenant VLAN ID for the network.

Network Profile section contains the General Parameters and Advanced tabs.

In the *General Parameters*tab, specify the required details.

Intf IPv4 addr on active: Specifies the IPv4 interface address on an active device in a vPC pair. This field is applicable only when you are creating and deploying a network for a vPC pair of devices.

Intf IPv4 addr on standby: Specifies the IPv4 interface address on a standby/backup device in a vPC pair. This field is applicable only when you are creating and deploying a network for a vPC pair of devices.

IPv4 Gateway/NetMask: Specifies the IPv4 gateway address with subnet.

Interface IPv6 addr on active: Specifies the IPv6 interface address on an active device in a vPC pair. This field is applicable only when you are creating and deploying a network for a vPC pair of devices.

Interface IPv6 addr on standby: Specifies the IPv6 interface address on a standby/backup device in a vPC pair. This field is applicable only when you are creating and deploying a network for a vPC pair of devices.

IPv6 Link Local address: Specifies the IPv6 link local address. This field is applicable only when you are creating and deploying a network for a vPC pair of devices and VRRP is chosen as the

FHRP protocol.



The IPv4 gateway address and interface addresses should be in the same subnet.

The following fields under the **General Parameters** tab are optional:

Vlan Name: Specifies the VLAN name.

Interface Description: Specifies the description for the interface.

Standby Intf Description: Specifies the description for the standby interface in a vPC pair.

MTU for the L3 interface: Enter the MTU for Layer 3 interfaces.

Routing Tag: Specifies the routing tag that is associated with each gateway IP address prefix.

Advanced tab: This tab is applicable only when you are creating and deploying a network for a vPC pair of devices.

First Hop Redundancy Protocol: A read-only field that specifies FHRP selected in the fabric settings.

Active/master Switch Priority: Specifies the priority of the active or master device.

Standby/backup Switch Priority: Specifies the priority of the standby or backup device. The default value is 100. Note that this default value is not displayed when you preview the network configuration before deployment.

Enable Preempt: Specifies whether the standby/backup device can preempt an active device.

HSRP/VRRP Group: Specifies the HSRP or VRRP group number. By default, HSRP group number is 1.

Virtual MAC Address: Optional. Specifies the virtual MAC address. By default, VMAC is internally generated based on the HSRP group number (0000.0c9f.f000 + group number). The virtual MAC address is only applicable when **hsrp** is selected in the fabric settings.

HSRP Version: Specifies the HSRP version. The default value is 1. The **HSRP version** field is only applicable for HSRP.

3. Click **Create Network**. For more information, see the "Working with networks" section in [Working with Segmentation and Security for Your Nexus Dashboard VXLAN Fabric](#).
4. In the **Network Attachment** window, for a vPC pair, assign the active state for a device.

Check the **isActive** check box for an active device and uncheck the **isActive** check box for a standby device.

Click **Save**.



In a routed fabric, when you edit a deployed network and save without making any changes, the status of the network changes to **Pending**. Similarly, if a **Network Attachment** window is opened for a deployed network, and saved

without any changes, the status of the network changes to **Pending**. In these cases, click the **Preview** icon to preview the configuration. This action changes the network status back to **Deployed**.

5. (Optional) Click the **Preview** icon to preview the configuration that deployed on devices.

The **Preview Configuration** window is displayed.

6. Click **Deploy**.

You can also deploy the network by navigating to the **Fabric Overview** window and clicking the **Deploy** button.

Creating Inter-Fabric Links Between a Routed Fabric and an External Fabric

You can use an inter-fabric link to connect a route fabric to an edge router. This link configures an IP address on the physical interface and establish eBGP peering with the edge router on default vrf. The BGP configuration includes advertising default route to leaf switches.



The **Fabric Monitor Mode** check box in the external fabric settings can be unchecked. Unchecking the **Fabric Monitor Mode** check box enables NDFC to deploy configurations to the external fabric. For more information, see [Editing External Fabric Settings](#).

1. Choose **Manage > Fabrics**. Double-click on a routed fabric.

The **Fabric Overview** window appears.

2. On the **Links** tab, click **Actions > Create**.

The **Link Management - Create Link** window appears.

Link Type: Choose **Inter-Fabric** to create an inter-fabric connection between two fabrics, via their border switches or edge routers.

Link Sub-Type: This field populates the IFC type. Choose **ROUTED_FABRIC** from the drop-down list.

Link Template: The link template is populated. The templates are auto populated with corresponding pre-packaged default templates that are based on your selection. For a routed fabric, the **ext_routed_fabric** template is populated.

Source Fabric: This field is pre-populated with the source fabric name.

Destination Fabric: Choose the destination fabric from this drop-down box.

Source Device and **Source Interface:** Choose the source device and Ethernet or port channel interface that connects to the destination device. Only device with the border role can be chosen.

Destination Device and **Destination Interface:** Choose the destination device and Ethernet or port channel interface that connects to the source device.

Based on the selection of the source device and source interface, the destination information is auto populated based on Cisco Discovery Protocol information, if available. There is an extra

validation performed to ensure that the destination external device is indeed part of the destination fabric.

The **General Parameters** tab contains the following fields.

Source BGP ASN: In this field, the AS number of the leaf is auto populated if you have created and applied the **leaf_bgp_asn** policy.

Source IPv4 Address/Mask: Fill up this field with the IP address of the source interface that connects to the destination device.

Destination IPv4: Fill up this field with the IPv4 address of destination interface

Destination BGP ASN: In this field, the AS number of the destination device is auto populated.

Source IPv6 Address/Mask: Fill up this field with the IP address of the source interface that connects to the destination device.

Destination IPv6: Fill up this field with the IPv6 address of destination interface.

BGP Maximum Paths: Specifies the maximum supported BGP paths.

Link MTU: Fill up this field with the interface MTU.

Disable Default Route Config: Check the **Disable Default Route Config** check box.

The **Advanced** tab contains the following optional fields:

Source Interface Description and **Destination Interface Description** - Describe the links for later use. After **Save & Deploy**, this description will reflect in the running configuration.

Source Interface Freeform CLIs*and *Destination Interface Freeform CLIs: Enter the freeform configurations specific to the source and destination interfaces. You should add the configurations as displayed in the running configuration of the switch, without indentation. For more information, see the section "Enable freeform configurations on fabric switches" in [Working with Inventory in Your Nexus Dashboard LAN or IPFM Fabrics](#).

3. Click **Save**.
4. Double-click the device which is connecting to the edge router in the external fabric, and click **Actions > Recalculate & Deploy**.
5. After the configuration deployment is completed in the **Deploy Configuration** window, click **Close**.
6. Navigate to the external fabric in the **LAN Fabric** window, and double-click on the fabric.
7. Click the **Links** tab to see all the links for the external fabric.

You can see the inter-fabric link that has been created.



The inter-fabric link is created if the External fabric is not in the monitor mode.

8. Navigate to the **LAN Fabric** window.
9. Double-click the external fabric connecting to the routed fabric and click **Actions > Recalculate & Deploy**.

10. After the configuration deployment is completed in the **Deploy Configuration** window, click **Close**.

Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2026 Cisco Systems, Inc. All rights reserved.

Americas Headquarters

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<https://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883