



LEDs


You can perform the following check on LEDs that assist you with the troubleshooting process:

- [Chassis LED, on page 1](#)
- [Route Processor LEDs, on page 1](#)
- [MPA LEDs, on page 5](#)
- [Power Supply LED, on page 7](#)
- [Fan Tray LED, on page 10](#)
- [Switch Card LED, on page 11](#)
- [Fan Spinner LEDs, on page 13](#)

Chassis LED

This section describes the chassis LED and its status.


Table 1: Chassis LED Descriptions

LED	Color	Status
	Flashing Blue	The operator has activated this LED to identify this chassis.
	Off	The operator has not activated this LED.

Route Processor LEDs

The Route Processor (RP) LEDs are located on the front of the chassis.

Figure 1: RP LEDs - Cisco 8608

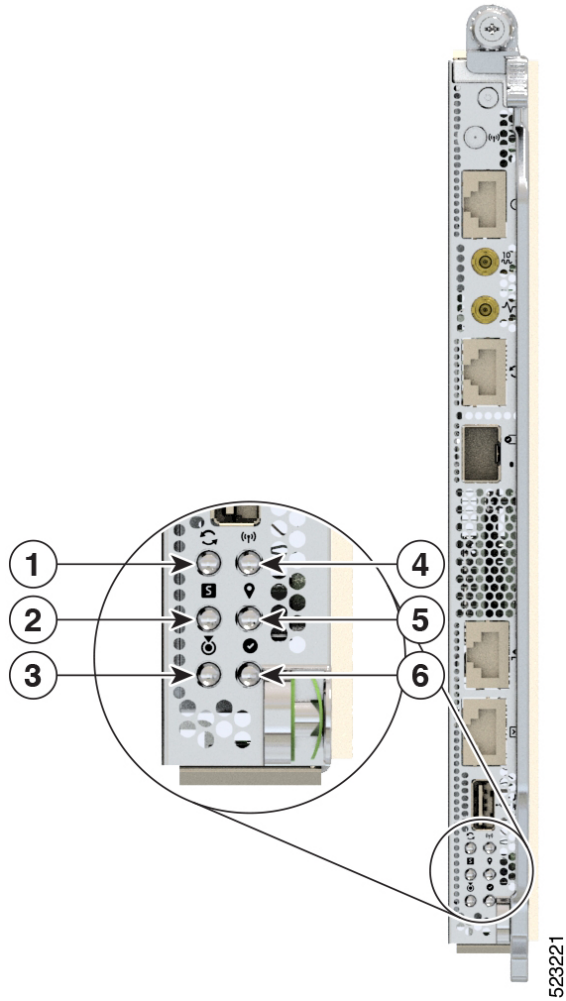

523221

1	Sync
2	Status
3	Attention
4	Management Activity
5	GPS
6	Active

Table 2: RP LED Descriptions

LED	Color	Status
Attention	Flashing Blue	The operator has activated this LED to identify this chassis.
	Solid Blue	<p>During bootup, if secure boot validation check fails on BIOS, it causes the router to halt the booting process. During run time, if secure JTAG detect tampering attempt to the CPU JTAG chain, then the router halts the CPU and sets the LED into this state.</p> <p>Note The router displays two LEDs. Solid Blue for Attention LED and Solid Red for Status LED.</p>
	Off	The operator has not activated this LED.


LED	Color	Status
Status	Solid Amber	The module is in one of the following states: <ul style="list-style-type: none"> • Booting up • Shutting down • Power cycling • Installing image
	Solid Green	This module is operational with no issues.
	Flashing Green	Auto or Manual FPD upgrade is in-progress.
	Flashing Amber	The module has an active minor alarm.
	Flashing Red	The module has an active major or critical alarm.
	Solid Red	The module is in one of the following states: <ul style="list-style-type: none"> • Power-up failure that prevents the CPU from booting. • During bootup, if secure boot validation check fails on BIOS, it causes the router to halt the booting process. During run time, if secure JTAG detect tampering attempt to the CPU JTAG chain, then the router halts the CPU and sets the LED into this state. <p>Note The router displays two LEDs. Solid Blue for Attention LED and Solid Red for Status LED.</p>
Off	The module is in one of the following states: <ul style="list-style-type: none"> • The module is in shutdown state by using either shutdown location <i>location</i> command in the EXEC mode or by using the hw-module shutdown location <i>location</i> command in the Config mode. • While the card is in running state, the ejector lever is opened that triggers the auto-shutdown operation for the module. • The module is placed in shutdown state by the software due to a hardware fault or a critical alarm condition. <p>Note While in this state, the module can be safely removed from the router.</p>	

LED	Color	Status
Active	Solid Green	This module is operational and in active redundancy state
	Off	The module is in one of the following states: <ul style="list-style-type: none"> • The redundancy state, active or standby, is not decided yet. • This module is in the standby redundancy state.
Management Link	Green	The management port is linked up.
	Off	The management port is not linked up.
Management Activity	Flashing Green	The management port is transmitting or receiving.
	Off	The management port is not transmitting or receiving.
1588 Port Link	Green	The 1588 port is linked up.
	Off	The 1588 port is not linked up.
1588 Port Activity	Flashing Green	The 1588 port is transmitting or receiving.
	Off	The 1588 port is not transmitting or receiving.
Sync	Green	The frequency, time, and phase are synchronized with an external interface (BITS, GPS, Recovered RX Clock).
	Amber	The time core is in free-run or holdover mode.
	Off (Default after reset)	The time core clock synchronization is disabled. This is the default state after a reset.
GPS	Green	The GPS interface is provisioned and ports are turned on. Time of day (ToD), 1 packet per second (1PPS), and 10MHz are all valid.
	Off (Default after reset)	Either the interface is not provisioned or the ports are not turned on. ToD, 1PPS, and 10MHz are not valid.

MPA LEDs

The Status LED and the Attention LED are located on the bottom of the MPA. The Link LEDs for each port are located on the right-side of the MPA, next to the ejector lever.

Figure 2: MPA LEDs

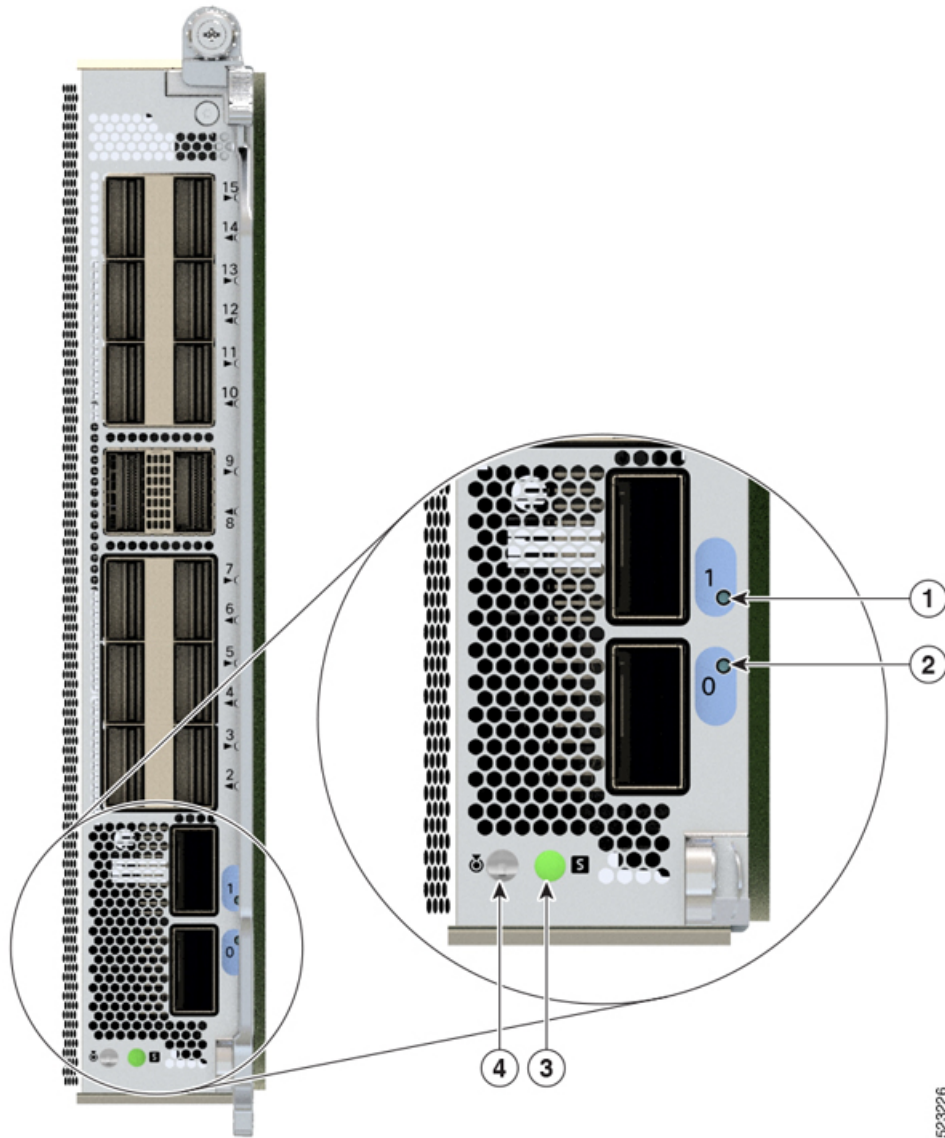

523226

1	Link (Port 1)
2	Link (Port 0)
3	Status
4	Attention

Table 3: MPA LED Descriptions

LED	Color	Status
Attention	Flashing Blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not identified by the operator.
Status	Solid Amber	The module is in one of the following states: <ul style="list-style-type: none"> • Booting up • Shutting down • Power cycling
	Solid Green	The module is operational with no issues.
	Solid Red	The module has failed to power-up
	Flashing Green	Auto or manual FPD upgrade is in-progress.
	Flashing Red	The module has an active major or critical alarm.
	Flashing Amber	The module has an active minor alarm.
	Off	The module is in one of the following states: <ul style="list-style-type: none"> • The module is in shutdown state by using either shutdown location <i>location</i> command in the EXEC mode or by using the hw-module shutdown location <i>location</i> command in the Config mode. • While the card is in running state, the ejector lever is opened that triggers the auto-shutdown operation for the module. • The module is placed in shutdown state by the software due to a hardware fault or a critical alarm condition. <p>Note While in this state, the module can be safely removed from the router.</p>
Port (for each port)	Green	The port is administratively enabled and the link is up.
	Amber	The port is administratively enabled and the link is down.
	Off	The port is administratively shut down.


Power Supply LED

For the AC PSU, the power module LEDs are located on the upper-left portion of the module. For a DC PSU, the power module LEDs are located on the lower-right portion of the module.



Note The following figure displays LEDs for an AC PSU.

Figure 3: Power Supply LEDs

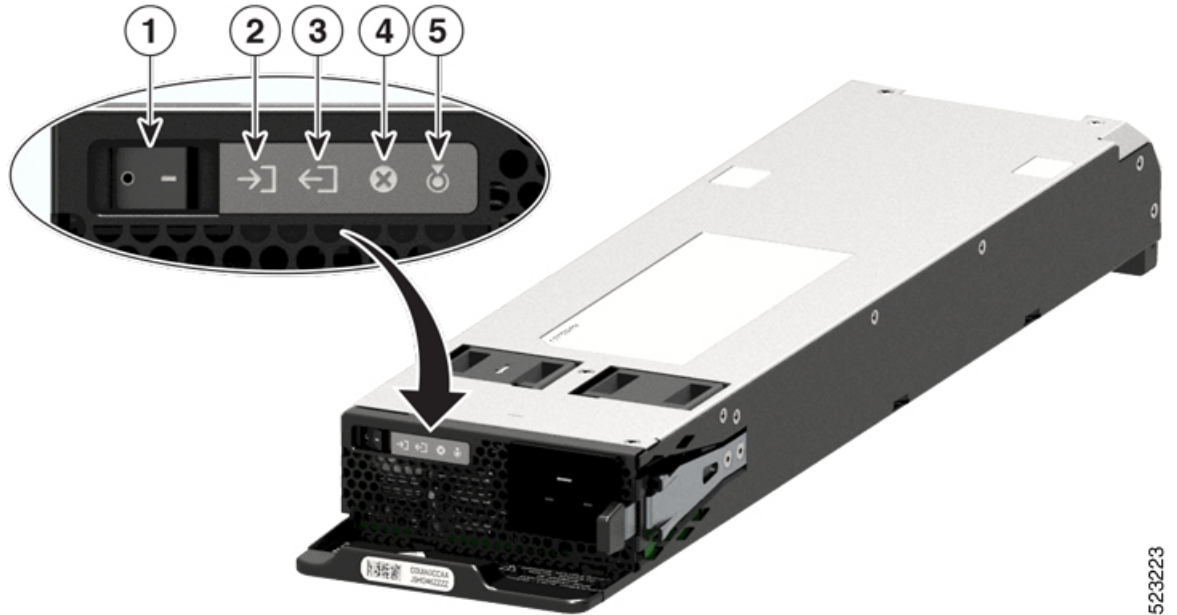

523223

1	On/Off Switch
2	IN (Input OK)
3	OUT (Output OK)
4	Fail (Output Fault)
5	Attention

Table 4: Power Module LED Description

LED	Color	Status
Attention	Flashing Blue	The operator has activated this LED to identify this chassis.
	Off	This device is not identified or activated.


LED	Color	Status
IN (Input OK)	Green	<p>Both inlet power present</p> <p>Note AC input voltage is 70 V minimum. AC PSU is single-input supply.</p> <p>DC input voltage is -40 V minimum. DC PSU is dual-input supply.</p>
	Flashing Green	<p>The module is in one of the following states:</p> <ul style="list-style-type: none"> • Only one input power present • Hot unplugged <p>Note AC input voltage is between 70 V and 85 V.</p> <p>DC input voltage is:</p> <ul style="list-style-type: none"> • between -27 V and -37 V • greater than -75 V and less than -77 V <p>Note In DC dual-inputs mode, the absence of LED light indicates that DC input(s) are less than -26 V or greater than 77 V.</p> <p>For a DC input voltage between -27 V and -37 V, or greater than -75 V and less than -77 V, the IN LED flashes on/off (0.5 sec ON / 0.5 sec OFF).</p> <p>In single-input mode, the IN LED flashes on/off to indicate an ON state.</p>
	Off	<p>The module is in one of the following states:</p> <ul style="list-style-type: none"> • No input is present • Module firmware upgrade is in-progress <p>Note AC input voltage is less than 70 V.</p> <p>DC input voltage is less than -26 V.</p>

LED	Color	Status
OUT (Output OK)	Green	The module is in one of the following states: Output power is enabled
	Flashing Green	The module is in one of the following states: <ul style="list-style-type: none"> • Output is out of regulation. • In sleep mode (Not present in DC-60)
	Off	Firmware upgrade is in-progress.
Fail	Red	An output voltage is out of the specified range, or the power supply module's fan has failed (as sensed by lack of fan rotation), or the power supply module is turned off after input power is applied. Illuminates for 2-3 seconds after input is applied or disconnected through the front panel On/ Off switch (for AC-input power supplies) or On/ Off power button (for DC-input power supplies) or a circuit breaker. Note For DC input voltages that are greater than 77 VDC, this LED blinks on-off (0.5 sec ON / 0.5 sec OFF).
	Flashing Red	Module firmware upgrade is in-progress

Fan Tray LED

The fan tray LED is located on the top left portion of the fan tray.

Figure 4: Fan Tray LED

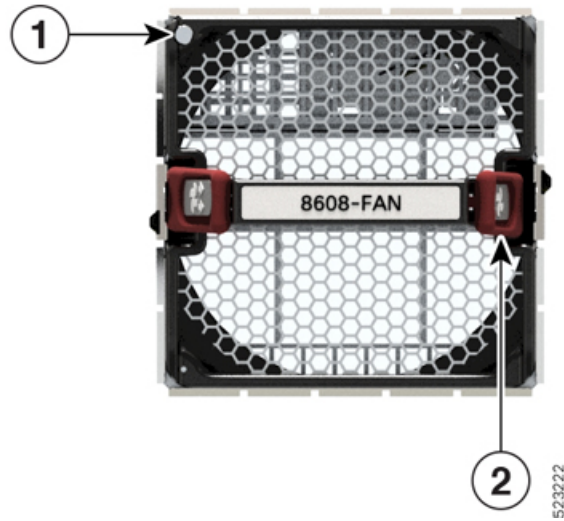

1	Attention or Status
2	Latch


Table 5: Fan Tray LED Descriptions

LED	Color	Status
Attention or Status	Green	The fan is operational, fan speed (RPM) is within normal range.
	Flashing Amber	The module is in one of the following states: <ul style="list-style-type: none"> • Fan speed (RPM) is outside normal range for one or more fans. • The module has a minor, major, or critical alarm.
	Flashing Blue	The module is identified or activated.
	Off	The module is not receiving power.

Switch Card LED

This section describes the LEDs and their status for Switch Card (SC) and Fan Board.

Figure 5: Switch Card LEDs

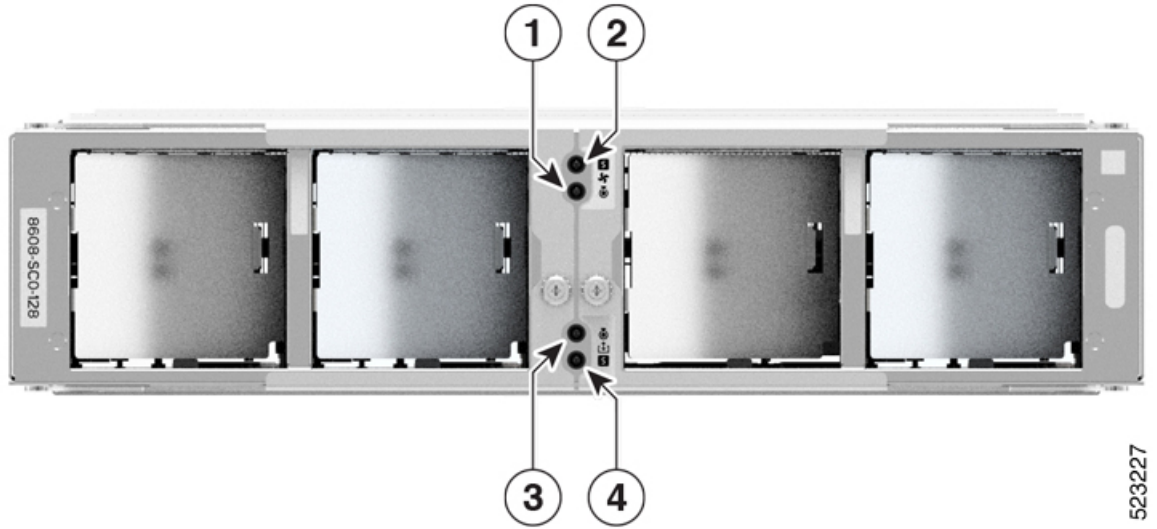

1	Fan Board Attention
2	Fan Board Status
3	Switch Card Attention
4	Switch Card Status

Table 6: Fan Board LED Descriptions

LED	Color	Status
Fan Board Attention	Flashing Blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.
Fan Board Status	Solid Amber	The module is in one of the following states: <ul style="list-style-type: none"> • The module is powered on. • Graceful chassis reload, shutdown, or reimage
	Solid Green	This module is operational with no issues.
	Flashing Green	Auto or Manual FPD upgrade is in-progress.
	Flashing Amber	The module has an active minor alarm.
	Flashing Red	The module has major or critical alarms.



Note The Fan Board is hosted inside an SC. Fan Board controls the fan trays that are installed in the four fan tray slots. The fan tray slots are located in the front panel of the SC.

Table 7: Switch Card LED Descriptions


LED	Color	Status
Switch Card Attention	Flashing Blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.
Switch Card Status	Solid Amber	The module is in one of the following states: <ul style="list-style-type: none"> • The module is powered on. • Graceful chassis reload, shutdown, or reimage
	Solid Green	This module is operational with no issues.
	Solid Red	Power-up failure that prevents the card from powering up.
	Flashing Green	Auto or manual FPD upgrade is in-progress.
	Flashing Amber	The module has an active minor alarm.
	Flashing Red	The module has major or critical alarms.
	Off	The module is in one of the following states: <ul style="list-style-type: none"> • The module is in shutdown state by using either shutdown location location command in the EXEC mode or by using the hw-module shutdown location location command in the Config mode. • While the card is in running state, the ejector lever is opened that triggers the auto-shutdown operation for the module. • The module is placed in shutdown state by the software due to a hardware fault or a critical alarm condition. <p>Note While in this state, the module can be safely removed from the router.</p>

Fan Spinner LEDs

This section describes the Fan Spinner LEDs and their status.

These LEDs are for the fan board that controls the fan trays inserted in the four fan tray slots.

Figure 6: Fan Spinner LEDs

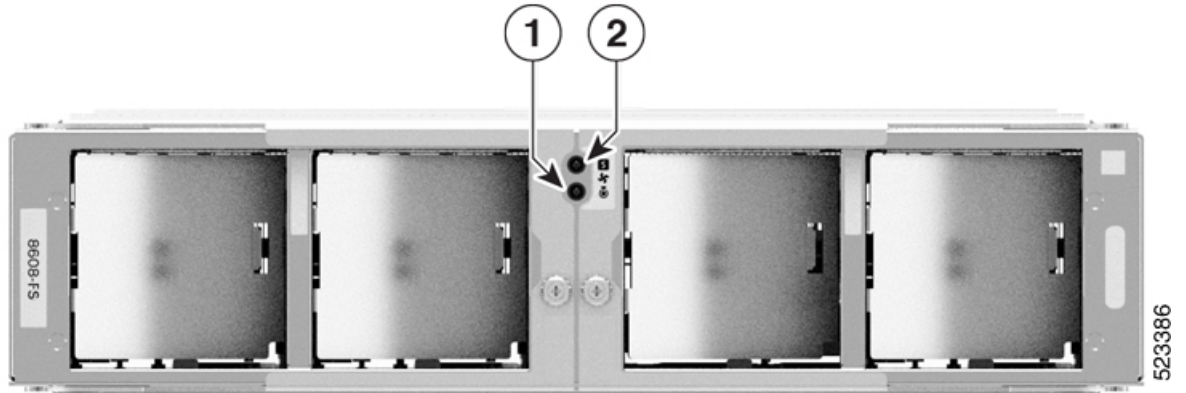

1	Fan Spinner Attention
2	Fan Spinner Status

Table 8: Fan Spinner LED Descriptions

LED	Color	Status
Fan Spinner Attention	Flashing Blue	The operator has activated this LED to identify this module in the chassis.
	Off	This module is not being identified.
Fan Spinner Status	Solid Amber	The module is in one of the following states: <ul style="list-style-type: none"> • The module is powered on. • Graceful chassis reload, shutdown, or reimage
	Solid Green	This module is operational with no issues.
	Flashing Green	Auto or manual FPD upgrade is in-progress.
	Flashing Amber	The module has an active minor alarm.
	Flashing Red	The module has major or critical alarms.