



## Managing Blueprints

---

The following topics tell you how to manage Cisco NFVI Blueprints.

- [Blueprints, on page 1](#)
- [Creating a Blueprint Using Upload Functionality, on page 2](#)
- [Managing Post Install Features , on page 101](#)

## Blueprints

Blueprints contain the configuration metadata required to deploy an OpenStack system through a Cisco VIM pod in Cisco VIM Unified Management. You can create a blueprint in Cisco UM or you can upload a yaml file that contains the metadata for a blueprint. You can also create a blueprint from an existing OpenStack system that you are configuring as a Cisco VIM pod.

The configuration in the blueprint is specific to the type of Cisco UCS server that is in the OpenStack system. A blueprint for a C-Series server-based OpenStack system cannot be used to configure a B-Series server-based OpenStack system. Cisco UM displays an error if the blueprint does not match the configuration of the OpenStack system.

The blueprint enables you to quickly change the configuration of an OpenStack system. While only one blueprint can be active, you can create or upload multiple blueprints for a Cisco VIM pod. If you change the active blueprint for a pod, you have to update the configuration of the OpenStack system to match the new blueprint.



---

**Note** You can modify and validate an existing blueprint, or delete a blueprint. However, you cannot modify any of the configuration metadata in the active blueprint for a Cisco VIM pod.

---

## Blueprint Activation

A blueprint becomes active when you use it in a successful installation for a Cisco VIM pod. Other blueprints that you created or uploaded to that pod are in nonactive state.

Uploading or creating a blueprint does not activate that blueprint for the pod. Install a blueprint through the **Cisco VIM Suite** wizard. If the installation is successful, the selected blueprint becomes active.



---

**Note** If you want to activate a new blueprint in an existing pod, you have to delete certain accounts and the credential policies for that pod before you activate the blueprint. See [Activating a Blueprint in an Existing Pod with OpenStack Installed, on page 3](#).

---

## Viewing Blueprint Details

To view blueprint details:

- 
- Step 1** Log in to Cisco VIM Insight as pod user.
  - Step 2** Choose the Cisco VIM pod with the blueprint that you want to view.
  - Step 3** Click **Menu** at the top left corner to expand the navigation pane.
  - Step 4** Choose **Pre-Install > Blueprint Management**.
  - Step 5** Choose a blueprint from the list.
  - Step 6** Click **Preview and Download YAML**.
- 

## Creating a Blueprint Using Upload Functionality

### Before you begin

- You must have a YAML file (B series or C Series) on your system.
- Only one blueprint can be uploaded at a time. To create a blueprint off-line, refer to the `setup_data.yaml.B_Series_EXAMPLE` or `setup_data.yaml.C_Series_EXAMPLE`.
- The respective keys in the sample YAML have to match or the corresponding pane does not get populated during the upload.

- 
- Step 1** Log in to **Cisco VIM UM**.
  - Step 2** In the navigation pane, expand the **Pre-Install** section and click **Blueprint** setup.
  - Step 3** Click the **Browse** in the **Blueprint Initial Setup**.
  - Step 4** Click **Select**.
  - Step 5** Click **Load** in the **Insight UI Application**.  
All the fields present in the YAML file is uploaded to the respective fields in the UI.
  - Step 6** Provide a **Name for the Blueprint**.  
While saving the blueprint name has to be unique.
  - Step 7** Click **Offline Validation**.

- If all the mandatory fields in the UI are populated, then Offline Validation of the Blueprint commences, or else a pop up message indicating the section of Blueprint creation that has missing information error shows up.

**Step 8** On Offline Blueprint Validation being successful, **Save Blueprint** and **Cancel** is enabled.

**Note** If the Blueprint Validation Fails, only the **Cancel** button is enabled.

---

## Activating a Blueprint in an Existing Pod with OpenStack Installed

### Before you begin

You must have a POD which has an active Installation of OpenStack. If the OpenStack installation is in Failed State, then UM UI will not be able to fetch the Blueprint.

---

**Step 1** Go to the **Landing page** of the UM Log in.

**Step 2** Click **Register Management Node**.

**Step 3** Enter the following details:

- Management Node IP Address.
- Management Node Name (Any friendly Name).
- REST API Password ( /opt/cisco/ui\_config.json).
- Description about the Management Node.
- POD Admin's Email ID.

A notification email is sent to the email id entered during registration.

**Step 4** Log in using the same email id and password.

**Step 5** In the navigation pane, click **Pre-Install > Blueprint Management**.

Choose the **NEWSETUPDATA** from the **Blueprint Management** pane.

This is the same setup data which was used by ciscovimclient, to run the installation on the Management Node.

---

## Blueprint Management



**Note** You must have at least one blueprint (In any state Active or In-Active or In-progress), in the Blueprint Management Pane.

---

The screenshot shows the Cisco VIM Unified Management interface. The top navigation bar includes the Cisco logo, 'VIM Unified Management', the user's name 'Calsoft', IP address '10.30.116.244', role 'Full-Pod-Access', and user ID 'rohshar'. A notification bar indicates 'Press F11 to exit full screen'. The left sidebar contains navigation options: Dashboard, Pre-Install, Blueprint Setup (with sub-option 'Blueprint Management' selected), Post-Install, View Topology, and Pod User Administration. The main content area is titled 'Blueprints Management' and features a table with columns: Blueprint Title, Modified Date, Status, and Action. The table lists four blueprints: 'Test' (Invalid), '5555' (Invalid), 'NEWSETUPDATA' (Deployed), and '56646' (Invalid). Each row has an 'Action' column with icons for edit, delete, and download. A search bar and pagination controls are also visible.

Blueprint Title	Modified Date	Status	Action
Test	4/3/2018, 2:55:18 PM	Invalid	[Edit] [Delete] [Download]
5555	4/2/2018, 9:27:07 PM	Invalid	[Edit] [Delete] [Download]
NEWSETUPDATA	4/3/2018, 5:15:25 PM	Deployed	[Edit] [Delete] [Download]
56646	4/2/2018, 9:29:00 PM	Invalid	[Edit] [Delete] [Download]

Blueprint Management grid contains the list of all the blueprints that are saved. You can save the blueprint even if it is failed in the Blueprint Setup. However, you will not be allowed to deploy those Blueprints.

Blueprint Management table provides the following information:

- Blueprint Name
- Modified Date
- Edit, Remove, and Download Blueprint
- Search Blueprint

**Blueprint Name:** It shows the name of the Blueprint. You cannot edit this field. It shows the name of the blueprint that is saved after Offline Validation.



**Note** No two blueprints can have the same Blueprint name.

**Modified Date:** This shows when blueprint was last modified.

**Blueprint Status:** There are 6 total status for the Blueprint.

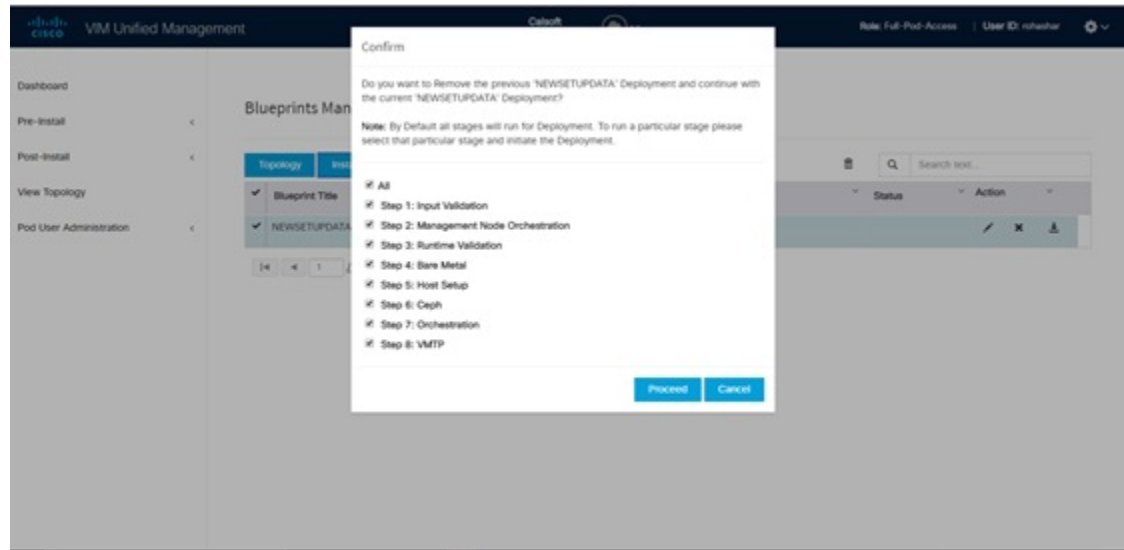
- Valid: Blueprint that is saved after offline validation success.
- Invalid: Blueprint that is saved after Offline Validation failure.
- Inprogress: Blueprint that is saved without running Offline Validation.
- Deployed: Blueprint that is used to bring up cloud without failures.
- Installing: Blueprint that is used to initiate the cloud deployment.

- Failed: Blueprint that is used to deploy the cloud which eventually failed.

With every blueprint record, there are some operations associated that you can perform by using the buttons – Topology, Install, and Remove.

### Topology

Topology allows you to view graphical representation of the control, compute, and storage node that is associated with the various network segments.



### Install Button

Click **Install**, a confirmation message is generated requesting to initiate the deployment with the stages you want to run. By default all stages are selected but you can also do an incremented install. In case of Incremented Install, you have to choose stages in the order. For Example: If you choose Validation Stage then the 2nd stage Management Node Orchestration is enabled. You cannot skip stages and run a deployment. Once you click **Proceed**, the Cloud Deployment is initiated and the progress can be viewed from the Dashboard.

### Remove Button

Choose the blueprint and click **Remove** to remove the blueprint. A confirmation message appears. If you click **Proceed**, the blueprint removal operation is initiated.

### Edit, Remove, and Download Blueprint

You can edit or delete a Blueprint which is not in Deployed State. If you want to take a backup of the Blueprint locally, click *Download* icon which generates the preview to download the Blueprint.

Following are the ways to deploy a Blueprint:

- If there is no Blueprint in Deployed state, then you can choose any Valid Blueprint from the list.
- If there is a Blueprint in a Failed state, then you can choose another Valid Blueprint but Insight asks you to remove the previous deployment before proceeding.
- If there is a Blueprint in Deployed state, then you can choose another Valid Blueprint but Insight asks you to remove the previous deployment before proceeding.

The deployment of Blueprint occurs stepwise and if any one step fails for some reason, a **Play** button is displayed on that particular step. You can click a **Play** button and begin the installation for that particular state.



**Note** There is always one blueprint in Deployed state. You cannot deploy multiple blueprints in the cloud.

**Search Blueprint:** Search box is displayed on top-right of the table which facilitates you to lookup for Blueprint by their name or status. Navigate to **Topology** and choose a Blueprint which redirects you to the default blueprint, the one which is selected in the Blueprint Management pane.



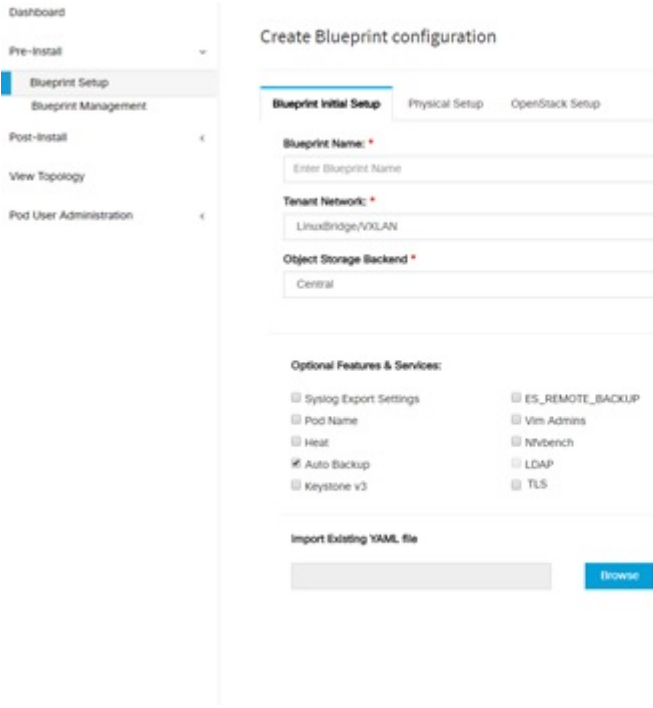
**Note** During the various operations across the application the cloud icon in the center of the header changes its color which is based on the following table.

**Table 1:**

POD Operation	Status	Icon or Color
Management Node Registered, No Active Deployment	Pending	Gray
Cloud Up And Running, No Failure	Active	Green
Cloud Installation/ Any Operation In Progress	In-Progress	Blue
Cloudpulse Failed	Critical Warnings	Red
Pod Operation Failed	Warning	Amber
Software Update (Auto) Rollback Failed	Critical Warnings	Red
Uncommitted Software Update	Warning	Amber
Reconfigure Openstack Password	Critical Warning	Red
Reconfigure CIMC Password	Warning	Amber
Reconfigure Optional Features/ OS	Critical Warning	Red
Power Management Operation Fails	Warning	Amber
Management Not-Reachable	Not-Reachable	Red

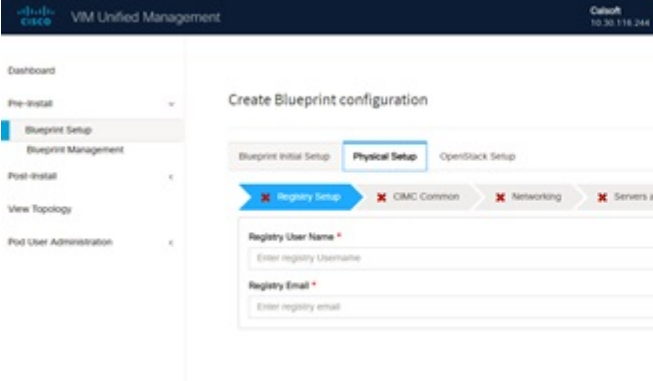
# Creating a Blueprint for B-Series Server Platform

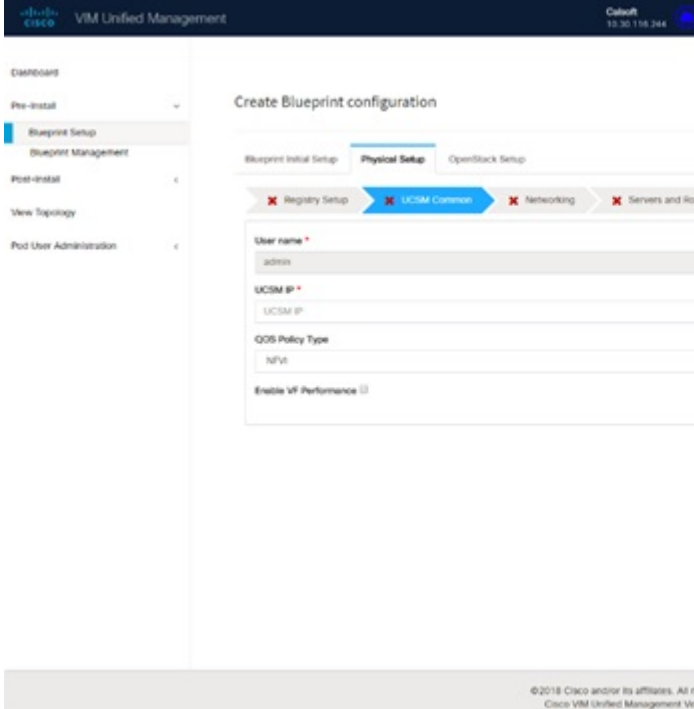
## Procedure

	Command or Action	Purpose						
<b>Step 1</b>	In the navigation pane, choose <b>Pre-Install &gt; Blueprint Setup</b> .							
<b>Step 2</b>	To create a <b>B Series Blueprint</b> :	<p><b>1.</b> On the <b>Blueprint Initial Setup</b> pane of the Cisco VIM Insight, complete the following fields:</p>  <table border="1" data-bbox="966 1312 1531 1747"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>Blueprint Name</b> field</td> <td>Enter blueprint configuration name.</td> </tr> <tr> <td><b>Platform Type</b> drop-down list</td> <td>Choose one of the following platform types:                             <ul style="list-style-type: none"> <li>• B-Series (By default) choose B series for this section.</li> <li>• C-Series</li> </ul> </td> </tr> </tbody> </table>	Name	Description	<b>Blueprint Name</b> field	Enter blueprint configuration name.	<b>Platform Type</b> drop-down list	Choose one of the following platform types: <ul style="list-style-type: none"> <li>• B-Series (By default) choose B series for this section.</li> <li>• C-Series</li> </ul>
Name	Description							
<b>Blueprint Name</b> field	Enter blueprint configuration name.							
<b>Platform Type</b> drop-down list	Choose one of the following platform types: <ul style="list-style-type: none"> <li>• B-Series (By default) choose B series for this section.</li> <li>• C-Series</li> </ul>							

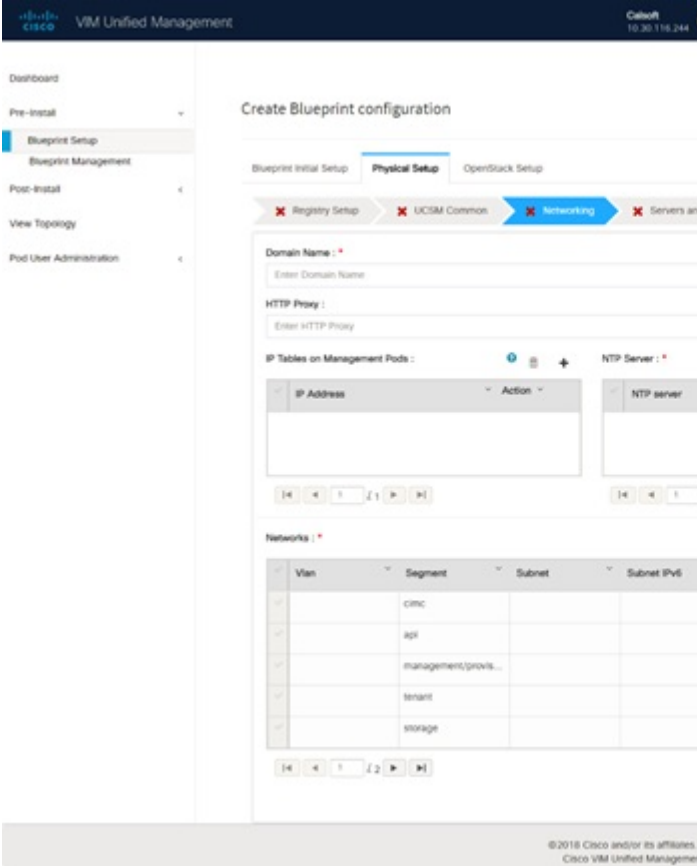
	Command or Action	Purpose			
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1208 327">Name</th> <th data-bbox="1208 275 1494 327">Description</th> </tr> </thead> </table>	Name	Description	
Name	Description				
		<table border="1"> <tbody> <tr> <td data-bbox="854 327 1208 562"> <b>Tenant Network</b> drop-down list                             </td> <td data-bbox="1208 327 1494 562">                                 Choose one of the following tenant network types:                                 <ul style="list-style-type: none"> <li>• Linuxbridge/VXLAN</li> <li>• OVS/VLAN</li> </ul> </td> </tr> </tbody> </table>	<b>Tenant Network</b> drop-down list	Choose one of the following tenant network types: <ul style="list-style-type: none"> <li>• Linuxbridge/VXLAN</li> <li>• OVS/VLAN</li> </ul>	
<b>Tenant Network</b> drop-down list	Choose one of the following tenant network types: <ul style="list-style-type: none"> <li>• Linuxbridge/VXLAN</li> <li>• OVS/VLAN</li> </ul>				
		<table border="1"> <tbody> <tr> <td data-bbox="854 562 1208 716"> <b>Pod Type</b> drop-down list                             </td> <td data-bbox="1208 562 1494 716">                                 Choose one of the following pod types:                                 <ul style="list-style-type: none"> <li>• Fullon(By Default)</li> </ul> </td> </tr> </tbody> </table>	<b>Pod Type</b> drop-down list	Choose one of the following pod types: <ul style="list-style-type: none"> <li>• Fullon(By Default)</li> </ul>	
<b>Pod Type</b> drop-down list	Choose one of the following pod types: <ul style="list-style-type: none"> <li>• Fullon(By Default)</li> </ul>				
		<table border="1"> <tbody> <tr> <td data-bbox="854 716 1208 982"> <b>Ceph Mode</b> drop-down list                             </td> <td data-bbox="1208 716 1494 982">                                 Choose one of the following Ceph types:                                 <ul style="list-style-type: none"> <li>• Dedicated</li> <li>• Central (By Default) - Not supported in Production</li> </ul> </td> </tr> </tbody> </table>	<b>Ceph Mode</b> drop-down list	Choose one of the following Ceph types: <ul style="list-style-type: none"> <li>• Dedicated</li> <li>• Central (By Default) - Not supported in Production</li> </ul>	
<b>Ceph Mode</b> drop-down list	Choose one of the following Ceph types: <ul style="list-style-type: none"> <li>• Dedicated</li> <li>• Central (By Default) - Not supported in Production</li> </ul>				
		<table border="1"> <tbody> <tr> <td data-bbox="854 982 1208 1545"> <b>Optional Features and Services</b> Checkbox                             </td> <td data-bbox="1208 982 1494 1545">                                 Swiftstack, LDAP, Syslog Export Settings, Install Mode, ToR Switch Information, TLS, NFVMON, Pod Name, VMTP, NFV Bench, Auto-backup, Heat, Keystone v3, Enable Esc Priv.                                 <p>If any one is selected, the corresponding section is visible in various Blueprint sections.</p> <p>By default all features are disabled except Auto-backup.</p> </td> </tr> </tbody> </table>	<b>Optional Features and Services</b> Checkbox	Swiftstack, LDAP, Syslog Export Settings, Install Mode, ToR Switch Information, TLS, NFVMON, Pod Name, VMTP, NFV Bench, Auto-backup, Heat, Keystone v3, Enable Esc Priv. <p>If any one is selected, the corresponding section is visible in various Blueprint sections.</p> <p>By default all features are disabled except Auto-backup.</p>	
<b>Optional Features and Services</b> Checkbox	Swiftstack, LDAP, Syslog Export Settings, Install Mode, ToR Switch Information, TLS, NFVMON, Pod Name, VMTP, NFV Bench, Auto-backup, Heat, Keystone v3, Enable Esc Priv. <p>If any one is selected, the corresponding section is visible in various Blueprint sections.</p> <p>By default all features are disabled except Auto-backup.</p>				



	Command or Action	Purpose												
		<table border="1" data-bbox="966 273 1526 787"> <thead> <tr> <th data-bbox="966 273 1242 325">Name</th> <th data-bbox="1242 273 1526 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="966 325 1242 787"><b>Import Existing YAML file</b></td> <td data-bbox="1242 325 1526 787">                     Click <b>Browse</b> button to import the existing yaml file.                       If you have an existing B Series YAML file you can use this feature to upload the file.                       Unified Management automatically fill in the fields and if any mandatory field is missed then it gets highlighted in the respective section.                 </td> </tr> </tbody> </table> <p data-bbox="901 808 1526 913">2. Click <b>Physical Setup</b> to navigate to the <b>Registry Setup configuration</b> page. Fill in the following details for Registry Setup:</p>  <table border="1" data-bbox="966 1333 1526 1648"> <thead> <tr> <th data-bbox="966 1333 1242 1386">Name</th> <th data-bbox="1242 1333 1526 1386">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="966 1386 1242 1470"><b>Registry User Name</b> text field</td> <td data-bbox="1242 1386 1526 1470">Enter the User-Name for Registry (<b>Mandatory</b>).</td> </tr> <tr> <td data-bbox="966 1470 1242 1554"><b>Registry Password</b> text field</td> <td data-bbox="1242 1470 1526 1554">Enter the Password for Registry (<b>Mandatory</b>).</td> </tr> <tr> <td data-bbox="966 1554 1242 1648"><b>Registry Email</b> text field</td> <td data-bbox="1242 1554 1526 1648">Enter the Email ID for Registry (<b>Mandatory</b>).</td> </tr> </tbody> </table> <p data-bbox="966 1669 1526 1732">Once all mandatory fields are filled the <b>Validation Check Registry Pane</b> shows a Green Tick.</p> <p data-bbox="901 1753 1526 1816">3. Click <b>UCSM Common Tab</b> and complete the following fields:</p>	Name	Description	<b>Import Existing YAML file</b>	Click <b>Browse</b> button to import the existing yaml file.  If you have an existing B Series YAML file you can use this feature to upload the file.  Unified Management automatically fill in the fields and if any mandatory field is missed then it gets highlighted in the respective section.	Name	Description	<b>Registry User Name</b> text field	Enter the User-Name for Registry ( <b>Mandatory</b> ).	<b>Registry Password</b> text field	Enter the Password for Registry ( <b>Mandatory</b> ).	<b>Registry Email</b> text field	Enter the Email ID for Registry ( <b>Mandatory</b> ).
Name	Description													
<b>Import Existing YAML file</b>	Click <b>Browse</b> button to import the existing yaml file.  If you have an existing B Series YAML file you can use this feature to upload the file.  Unified Management automatically fill in the fields and if any mandatory field is missed then it gets highlighted in the respective section.													
Name	Description													
<b>Registry User Name</b> text field	Enter the User-Name for Registry ( <b>Mandatory</b> ).													
<b>Registry Password</b> text field	Enter the Password for Registry ( <b>Mandatory</b> ).													
<b>Registry Email</b> text field	Enter the Email ID for Registry ( <b>Mandatory</b> ).													

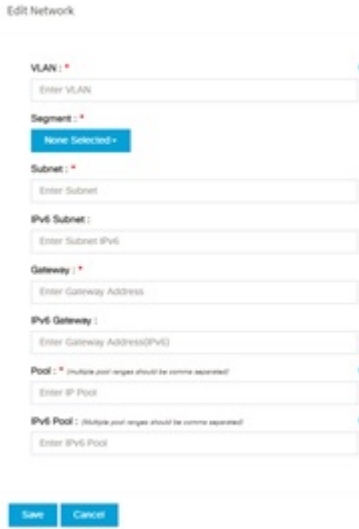
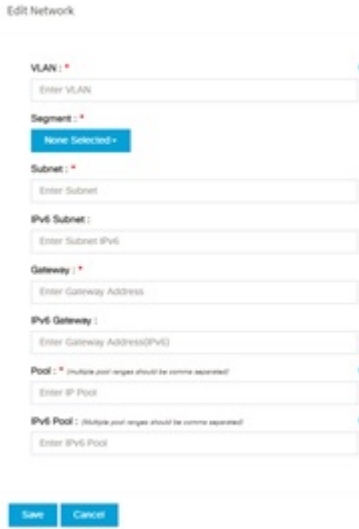
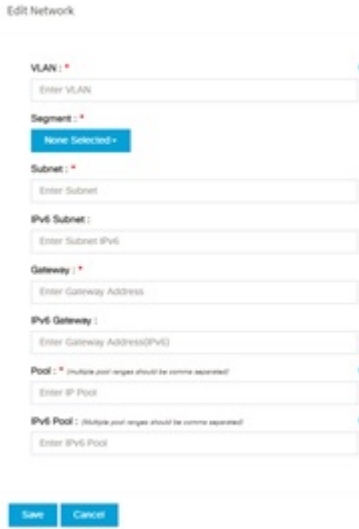
	Command or Action	Purpose												
		 <table border="1" data-bbox="925 1018 1489 1686"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>User name disabled field</td> <td>By default the value is Admin.</td> </tr> <tr> <td>Password text field</td> <td>Enter Password for UCSM Common <b>(Mandatory)</b>.</td> </tr> <tr> <td>UCSM IP text field</td> <td>Enter IP Address for UCSM Common <b>(Mandatory)</b>.</td> </tr> <tr> <td>Resource Prefix text field</td> <td>Enter the resource prefix<b>(Mandatory)</b>.</td> </tr> <tr> <td>QOS Policy Type drop-down</td> <td>Choose one of the following types:                             <ul style="list-style-type: none"> <li>NFVI (Default)</li> <li>Media</li> </ul> </td> </tr> </tbody> </table>	Name	Description	User name disabled field	By default the value is Admin.	Password text field	Enter Password for UCSM Common <b>(Mandatory)</b> .	UCSM IP text field	Enter IP Address for UCSM Common <b>(Mandatory)</b> .	Resource Prefix text field	Enter the resource prefix <b>(Mandatory)</b> .	QOS Policy Type drop-down	Choose one of the following types: <ul style="list-style-type: none"> <li>NFVI (Default)</li> <li>Media</li> </ul>
Name	Description													
User name disabled field	By default the value is Admin.													
Password text field	Enter Password for UCSM Common <b>(Mandatory)</b> .													
UCSM IP text field	Enter IP Address for UCSM Common <b>(Mandatory)</b> .													
Resource Prefix text field	Enter the resource prefix <b>(Mandatory)</b> .													
QOS Policy Type drop-down	Choose one of the following types: <ul style="list-style-type: none"> <li>NFVI (Default)</li> <li>Media</li> </ul>													

	Command or Action	Purpose	
		Name	Description
		<b>Max VF Count</b> text field	Select the Max VF Count. <1-54> Maximum VF count 54, default is 20.  If VF performance is enabled we recommend you to keep MAX_VF_COUNT to 20 else may fail on some VICs like 1240.
		<b>Enable VF Performance</b> optional checkbox	Default is false. Set to true to apply adaptor policy at VF level.
		<b>Enable Prov FI PIN</b> optional checkbox	Default is false.
		<b>MRAID-CARD</b> optional checkbox	Enables JBOD mode to be set on disks. Applicable only if you have RAID controller configured on Storage C240 Rack servers.
		<b>Enable UCSM Plugin</b> optional checkbox	Visible when Tenant Network type is OVS/VLAN.
		<b>Enable QoS Policy</b> optional checkbox	Visible only when UCSM Plugin is enabled. If UCSM Plugin is disabled then this option is set to False.
		<b>Enable QOS for Port Profile</b> optional checkbox	Visible only when UCSM Plugin is enabled.
		<b>SRIOV Multi VLAN Trunk</b> optional grid	Visible when UCSM Plugin is enabled. Enter the values for network and vlans ranges. Grid can handle all CRUD operations such as Add, Delete, Edit and, Multiple Delete.

	Command or Action	Purpose										
		<p>4. Click <b>Networking</b> to advance to the networking section of the Blueprint:</p>  <table border="1" data-bbox="927 1245 1487 1774"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td><b>Domain Name</b> field</td> <td>Enter the domain name <b>(Mandatory)</b>.</td> </tr> <tr> <td><b>HTTP Proxy Server</b> field</td> <td>If your configuration uses an HTTP proxy server, enter the IP address of the server.</td> </tr> <tr> <td><b>HTTPS Proxy Server</b> field</td> <td>If your configuration uses an HTTPS proxy server, enter the IP address of the server.</td> </tr> <tr> <td><b>IP Tables on Management Pods</b></td> <td>Specifies the list of IP Address with Mask.</td> </tr> </tbody> </table>	Name	Description	<b>Domain Name</b> field	Enter the domain name <b>(Mandatory)</b> .	<b>HTTP Proxy Server</b> field	If your configuration uses an HTTP proxy server, enter the IP address of the server.	<b>HTTPS Proxy Server</b> field	If your configuration uses an HTTPS proxy server, enter the IP address of the server.	<b>IP Tables on Management Pods</b>	Specifies the list of IP Address with Mask.
Name	Description											
<b>Domain Name</b> field	Enter the domain name <b>(Mandatory)</b> .											
<b>HTTP Proxy Server</b> field	If your configuration uses an HTTP proxy server, enter the IP address of the server.											
<b>HTTPS Proxy Server</b> field	If your configuration uses an HTTPS proxy server, enter the IP address of the server.											
<b>IP Tables on Management Pods</b>	Specifies the list of IP Address with Mask.											

	Command or Action	Purpose	
		<b>Name</b>	<b>Description</b>
		<b>NTP Server</b>	Enter a maximum of four and minimum of one IPv4 and /or IPv6 addresses in the table.
		<b>Domain Name Server</b>	Enter a maximum of three and minimum of one IPv4 and/or IPv6 addresses.

	Command or Action	Purpose	
		Name	Description
		Network table	

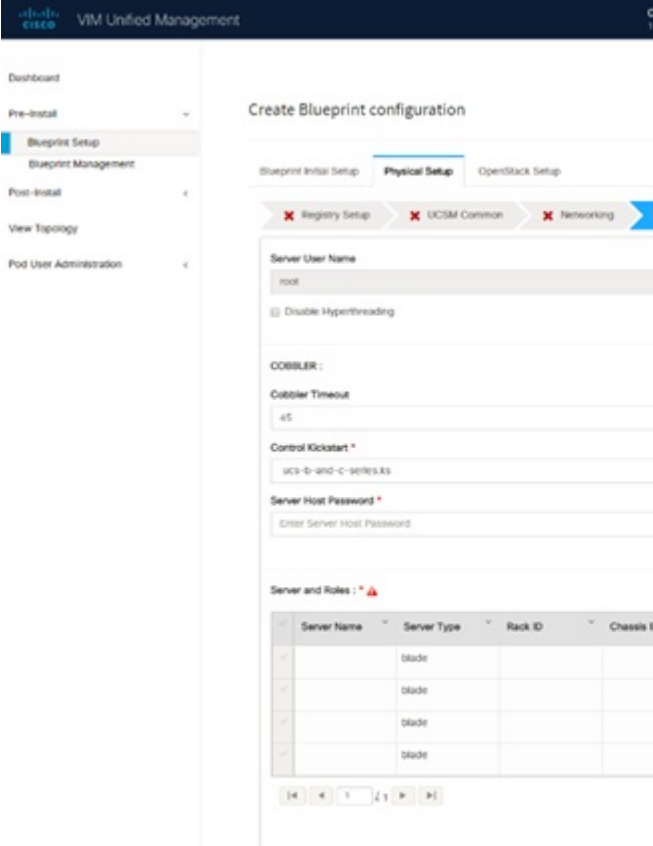
	Command or Action	Purpose								
		<table border="1"> <thead> <tr> <th data-bbox="885 273 1242 325">Name</th> <th data-bbox="1242 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="885 325 1242 1852"></td> <td data-bbox="1242 325 1534 1852"> <p>Network table is pre-populated with segments. To add Networks you can either clear all the table using <b>Delete All</b> or click <b>Edit</b> icon for each segment and fill in the details.</p> <p>You can add, edit, or delete network information in the table:</p>  <ul style="list-style-type: none"> <li>• Click + to enter new entries (networks) to the table.</li> <li>• Specify the following fields in the <b>Edit Entry to Networks</b> dialog box.</li> </ul> <table border="1"> <thead> <tr> <th data-bbox="1258 1585 1388 1638">Name</th> <th data-bbox="1388 1585 1534 1638">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1258 1638 1388 1852">VLAN field</td> <td data-bbox="1388 1638 1534 1852">Enter the VLAN ID.  For Segment - Provider, the VLAN</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description		<p>Network table is pre-populated with segments. To add Networks you can either clear all the table using <b>Delete All</b> or click <b>Edit</b> icon for each segment and fill in the details.</p> <p>You can add, edit, or delete network information in the table:</p>  <ul style="list-style-type: none"> <li>• Click + to enter new entries (networks) to the table.</li> <li>• Specify the following fields in the <b>Edit Entry to Networks</b> dialog box.</li> </ul> <table border="1"> <thead> <tr> <th data-bbox="1258 1585 1388 1638">Name</th> <th data-bbox="1388 1585 1534 1638">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1258 1638 1388 1852">VLAN field</td> <td data-bbox="1388 1638 1534 1852">Enter the VLAN ID.  For Segment - Provider, the VLAN</td> </tr> </tbody> </table>	Name	Description	VLAN field	Enter the VLAN ID.  For Segment - Provider, the VLAN
Name	Description									
	<p>Network table is pre-populated with segments. To add Networks you can either clear all the table using <b>Delete All</b> or click <b>Edit</b> icon for each segment and fill in the details.</p> <p>You can add, edit, or delete network information in the table:</p>  <ul style="list-style-type: none"> <li>• Click + to enter new entries (networks) to the table.</li> <li>• Specify the following fields in the <b>Edit Entry to Networks</b> dialog box.</li> </ul> <table border="1"> <thead> <tr> <th data-bbox="1258 1585 1388 1638">Name</th> <th data-bbox="1388 1585 1534 1638">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1258 1638 1388 1852">VLAN field</td> <td data-bbox="1388 1638 1534 1852">Enter the VLAN ID.  For Segment - Provider, the VLAN</td> </tr> </tbody> </table>	Name	Description	VLAN field	Enter the VLAN ID.  For Segment - Provider, the VLAN					
Name	Description									
VLAN field	Enter the VLAN ID.  For Segment - Provider, the VLAN									

	Command or Action	Purpose		
		Name	Description	
			Name	Description
				ID value is always <i>none</i> .
			<b>Segment drop-down list</b>	You can select any one segment from the drop-down list. <ul style="list-style-type: none"> <li>• API</li> <li>• <del>Management</del></li> <li>• Tenant</li> <li>• CIMC</li> <li>• Storage</li> <li>• External</li> <li>• Provider (optional)</li> </ul> <p><b>Note</b> Some segments do not need some of the values listed in the preceding points.</p>
			<b>Subnet field</b>	Enter the IPv4 address for the subnet.
			<b>IPv6 Subnet field</b>	



	Command or Action	Purpose		
		Name	Description	
			Name	Description
				Enter IPv6 address. This field is available only for Management provision and API.
			<b>Gateway field</b>	Enter the IPv4 address for the Gateway.
			<b>IPv6 Gateway field</b>	Enter IPv6 gateway. This field is available only for Management provision and API network.
			<b>Pool field</b>	Enter the pool information in the following format. For example: 10.30.1.1 or 10.30.1.1 to 10.30.1.12
			<b>IPv6 Pool field</b>	

	Command or Action	Purpose											
		<table border="1"> <thead> <tr> <th data-bbox="927 275 1208 327">Name</th> <th colspan="2" data-bbox="1208 275 1485 327">Description</th> </tr> <tr> <td data-bbox="927 327 1208 884" rowspan="2"></td> <th data-bbox="1208 327 1352 380">Name</th> <th data-bbox="1352 327 1485 380">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1208 380 1352 821"></td> <td data-bbox="1352 380 1485 821">                     Enter the pool information in the following format. For example:                      15311025210                      This field is only available for the Mgmt Provision                 </td> </tr> <tr> <td colspan="3" data-bbox="1208 821 1485 884">Click <b>Save</b>.</td> </tr> </tbody> </table> <p data-bbox="862 905 1485 1033">5. On the <b>Servers and Roles</b> page of the Cisco VIM Suite wizard, you see a pre-populated table filled with Roles: Control, Compute and Block Storage (Only if CEPH Dedicated is selected in Blueprint Initial Setup.</p>	Name	Description			Name	Description		Enter the pool information in the following format. For example: 15311025210 This field is only available for the Mgmt Provision	Click <b>Save</b> .		
Name	Description												
	Name	Description											
		Enter the pool information in the following format. For example: 15311025210 This field is only available for the Mgmt Provision											
Click <b>Save</b> .													

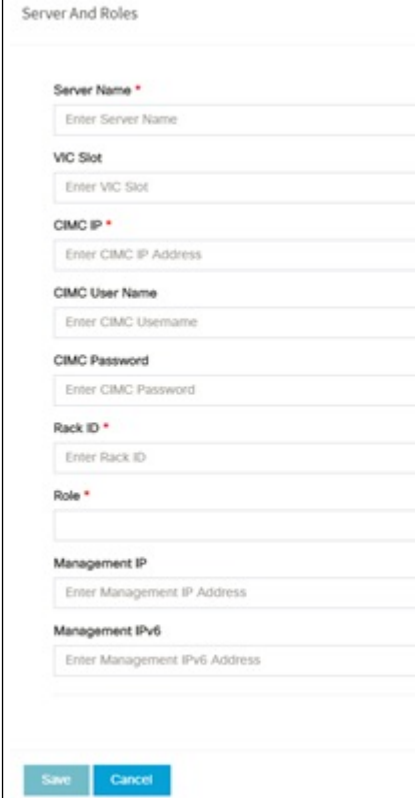
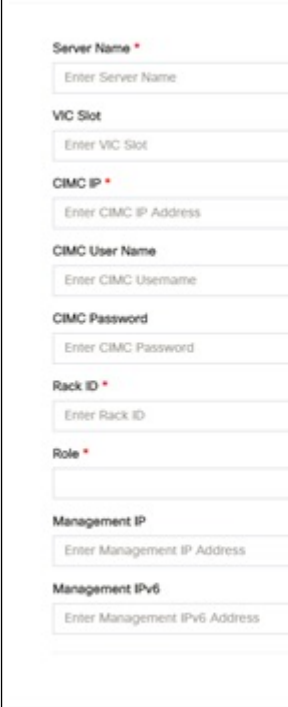
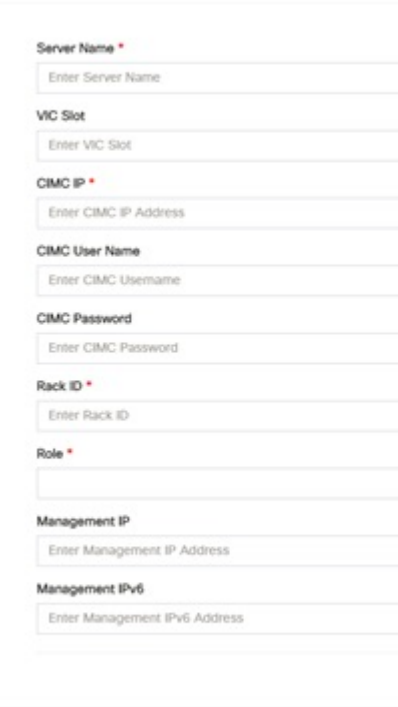
	Command or Action	Purpose																				
		 <p>The screenshot shows the 'Create Blueprint configuration' page in the Cisco VIM Unified Management interface. The 'Physical Setup' tab is selected, and the 'Server User Name' field is highlighted. Below the form is a table for 'Server and Roles'.</p> <table border="1" data-bbox="1226 892 1615 1060"> <thead> <tr> <th>Server Name</th> <th>Server Type</th> <th>Rack ID</th> <th>Chassis ID</th> </tr> </thead> <tbody> <tr> <td></td> <td>blade</td> <td></td> <td></td> </tr> <tr> <td></td> <td>blade</td> <td></td> <td></td> </tr> <tr> <td></td> <td>blade</td> <td></td> <td></td> </tr> <tr> <td></td> <td>blade</td> <td></td> <td></td> </tr> </tbody> </table>	Server Name	Server Type	Rack ID	Chassis ID		blade				blade				blade				blade		
Server Name	Server Type	Rack ID	Chassis ID																			
	blade																					
	blade																					
	blade																					
	blade																					
		<table border="1"> <thead> <tr> <th data-bbox="966 1197 1242 1249">Name</th> <th data-bbox="1242 1197 1534 1249">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="966 1249 1242 1333">Server User Name field</td> <td data-bbox="1242 1249 1534 1333">Enter the username of the server.</td> </tr> <tr> <td data-bbox="966 1333 1242 1459">Disable Hyperthreading</td> <td data-bbox="1242 1333 1534 1459">Default value is false. You can set it as true or false.</td> </tr> </tbody> </table>	Name	Description	Server User Name field	Enter the username of the server.	Disable Hyperthreading	Default value is false. You can set it as true or false.														
Name	Description																					
Server User Name field	Enter the username of the server.																					
Disable Hyperthreading	Default value is false. You can set it as true or false.																					

	Command or Action	Purpose	
		Name	Description
		Cobbler	

	Command or Action	Purpose																			
		<table border="1"> <thead> <tr> <th data-bbox="893 273 1250 325">Name</th> <th data-bbox="1250 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="893 325 1250 1860"></td> <td data-bbox="1250 325 1534 409">                     Enter the Cobbler details in the following fields:                 </td> </tr> <tr> <td data-bbox="893 409 1250 462"></td> <td data-bbox="1250 409 1534 462"> <table border="1"> <thead> <tr> <th data-bbox="1250 409 1388 462">Name</th> <th data-bbox="1388 409 1534 462">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1250 462 1388 955"> <b>Cobbler Timeout</b> field                 </td> <td data-bbox="1388 462 1534 955">                     The default value is 45 min.                       This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.                 </td> </tr> <tr> <td data-bbox="1250 955 1388 1102"> <b>Block Storage Kickstart</b> field                 </td> <td data-bbox="1388 955 1534 1102">                     Kickstart file for Storage Node.                 </td> </tr> <tr> <td data-bbox="1250 1102 1388 1606"> <b>Admin Password Hash</b> field                 </td> <td data-bbox="1388 1102 1534 1606">                     Enter the Admin Password. Password must be alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.                 </td> </tr> <tr> <td data-bbox="1250 1606 1388 1816"> <b>Cobbler Username</b> field                 </td> <td data-bbox="1388 1606 1534 1816">                     Enter the cobbler username to access the cobbler server.                 </td> </tr> <tr> <td data-bbox="1250 1816 1388 1860"> <b>Control</b> </td> <td data-bbox="1388 1816 1534 1860">                     Kickstart                 </td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description		Enter the Cobbler details in the following fields:		<table border="1"> <thead> <tr> <th data-bbox="1250 409 1388 462">Name</th> <th data-bbox="1388 409 1534 462">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1250 462 1388 955"> <b>Cobbler Timeout</b> field                 </td> <td data-bbox="1388 462 1534 955">                     The default value is 45 min.                       This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.                 </td> </tr> <tr> <td data-bbox="1250 955 1388 1102"> <b>Block Storage Kickstart</b> field                 </td> <td data-bbox="1388 955 1534 1102">                     Kickstart file for Storage Node.                 </td> </tr> <tr> <td data-bbox="1250 1102 1388 1606"> <b>Admin Password Hash</b> field                 </td> <td data-bbox="1388 1102 1534 1606">                     Enter the Admin Password. Password must be alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.                 </td> </tr> <tr> <td data-bbox="1250 1606 1388 1816"> <b>Cobbler Username</b> field                 </td> <td data-bbox="1388 1606 1534 1816">                     Enter the cobbler username to access the cobbler server.                 </td> </tr> <tr> <td data-bbox="1250 1816 1388 1860"> <b>Control</b> </td> <td data-bbox="1388 1816 1534 1860">                     Kickstart                 </td> </tr> </tbody> </table>	Name	Description	<b>Cobbler Timeout</b> field	The default value is 45 min.  This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.	<b>Block Storage Kickstart</b> field	Kickstart file for Storage Node.	<b>Admin Password Hash</b> field	Enter the Admin Password. Password must be alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.	<b>Cobbler Username</b> field	Enter the cobbler username to access the cobbler server.	<b>Control</b>	Kickstart	
Name	Description																				
	Enter the Cobbler details in the following fields:																				
	<table border="1"> <thead> <tr> <th data-bbox="1250 409 1388 462">Name</th> <th data-bbox="1388 409 1534 462">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1250 462 1388 955"> <b>Cobbler Timeout</b> field                 </td> <td data-bbox="1388 462 1534 955">                     The default value is 45 min.                       This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.                 </td> </tr> <tr> <td data-bbox="1250 955 1388 1102"> <b>Block Storage Kickstart</b> field                 </td> <td data-bbox="1388 955 1534 1102">                     Kickstart file for Storage Node.                 </td> </tr> <tr> <td data-bbox="1250 1102 1388 1606"> <b>Admin Password Hash</b> field                 </td> <td data-bbox="1388 1102 1534 1606">                     Enter the Admin Password. Password must be alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.                 </td> </tr> <tr> <td data-bbox="1250 1606 1388 1816"> <b>Cobbler Username</b> field                 </td> <td data-bbox="1388 1606 1534 1816">                     Enter the cobbler username to access the cobbler server.                 </td> </tr> <tr> <td data-bbox="1250 1816 1388 1860"> <b>Control</b> </td> <td data-bbox="1388 1816 1534 1860">                     Kickstart                 </td> </tr> </tbody> </table>	Name	Description	<b>Cobbler Timeout</b> field	The default value is 45 min.  This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.	<b>Block Storage Kickstart</b> field	Kickstart file for Storage Node.	<b>Admin Password Hash</b> field	Enter the Admin Password. Password must be alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.	<b>Cobbler Username</b> field	Enter the cobbler username to access the cobbler server.	<b>Control</b>	Kickstart								
Name	Description																				
<b>Cobbler Timeout</b> field	The default value is 45 min.  This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.																				
<b>Block Storage Kickstart</b> field	Kickstart file for Storage Node.																				
<b>Admin Password Hash</b> field	Enter the Admin Password. Password must be alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.																				
<b>Cobbler Username</b> field	Enter the cobbler username to access the cobbler server.																				
<b>Control</b>	Kickstart																				

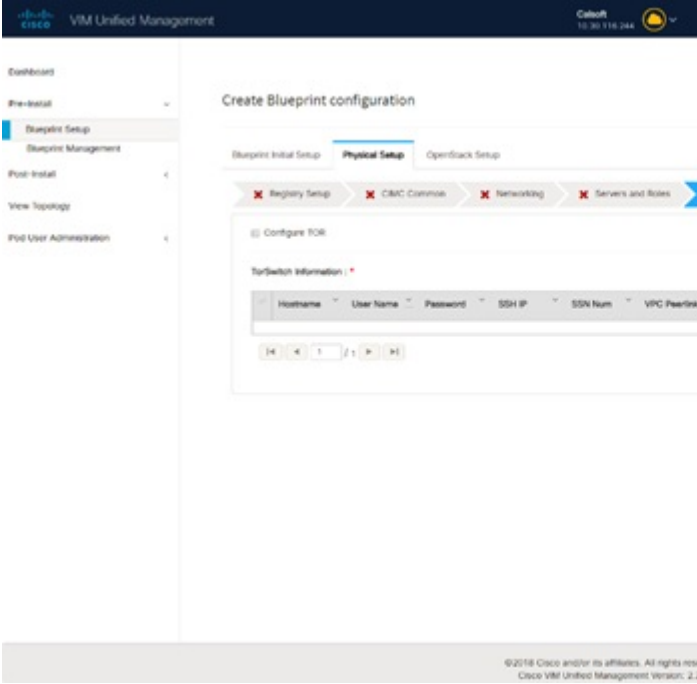
	Command or Action	Purpose															
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1208 329">Name</th> <th colspan="2" data-bbox="1208 275 1494 329">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 329 1208 497"></td> <td data-bbox="1208 329 1352 384"> <table border="1"> <thead> <tr> <th data-bbox="1208 329 1352 384">Name</th> <th data-bbox="1352 329 1494 384">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1208 384 1352 497"><b>Kickstart field</b></td> <td data-bbox="1352 384 1494 497">file for Control Node.</td> </tr> <tr> <td data-bbox="1208 497 1352 651"><b>Compute Kickstart field</b></td> <td data-bbox="1352 497 1494 651">Kickstart file for Compute Node.</td> </tr> <tr> <td data-bbox="1208 651 1352 848"><b>Cobbler Admin Username field</b></td> <td data-bbox="1352 651 1494 848">Enter the admin username of the Cobbler.</td> </tr> </tbody> </table> </td> <td data-bbox="1352 384 1494 497"></td> </tr> </tbody> </table>	Name	Description			<table border="1"> <thead> <tr> <th data-bbox="1208 329 1352 384">Name</th> <th data-bbox="1352 329 1494 384">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1208 384 1352 497"><b>Kickstart field</b></td> <td data-bbox="1352 384 1494 497">file for Control Node.</td> </tr> <tr> <td data-bbox="1208 497 1352 651"><b>Compute Kickstart field</b></td> <td data-bbox="1352 497 1494 651">Kickstart file for Compute Node.</td> </tr> <tr> <td data-bbox="1208 651 1352 848"><b>Cobbler Admin Username field</b></td> <td data-bbox="1352 651 1494 848">Enter the admin username of the Cobbler.</td> </tr> </tbody> </table>	Name	Description	<b>Kickstart field</b>	file for Control Node.	<b>Compute Kickstart field</b>	Kickstart file for Compute Node.	<b>Cobbler Admin Username field</b>	Enter the admin username of the Cobbler.		
Name	Description																
	<table border="1"> <thead> <tr> <th data-bbox="1208 329 1352 384">Name</th> <th data-bbox="1352 329 1494 384">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1208 384 1352 497"><b>Kickstart field</b></td> <td data-bbox="1352 384 1494 497">file for Control Node.</td> </tr> <tr> <td data-bbox="1208 497 1352 651"><b>Compute Kickstart field</b></td> <td data-bbox="1352 497 1494 651">Kickstart file for Compute Node.</td> </tr> <tr> <td data-bbox="1208 651 1352 848"><b>Cobbler Admin Username field</b></td> <td data-bbox="1352 651 1494 848">Enter the admin username of the Cobbler.</td> </tr> </tbody> </table>	Name	Description	<b>Kickstart field</b>	file for Control Node.	<b>Compute Kickstart field</b>	Kickstart file for Compute Node.	<b>Cobbler Admin Username field</b>	Enter the admin username of the Cobbler.								
Name	Description																
<b>Kickstart field</b>	file for Control Node.																
<b>Compute Kickstart field</b>	Kickstart file for Compute Node.																
<b>Cobbler Admin Username field</b>	Enter the admin username of the Cobbler.																

	Command or Action	Purpose	
		Name	Description
		Add Entry to Servers and Roles	

	Command or Action	Purpose														
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1208 323">Name</th> <th data-bbox="1208 275 1494 323">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 323 1208 1869"></td> <td data-bbox="1208 323 1494 1869"> <p>Click <b>Edit</b> or + to add a new server and role to the table.</p> <p>Server And Roles</p>  <p><b>Server Name *</b> Enter Server Name</p> <p><b>VIC Slot</b> Enter VIC Slot</p> <p><b>CIMC IP *</b> Enter CIMC IP Address</p> <p><b>CIMC User Name</b> Enter CIMC Username</p> <p><b>CIMC Password</b> Enter CIMC Password</p> <p><b>Rack ID *</b> Enter Rack ID</p> <p><b>Role *</b></p> <p><b>Management IP</b> Enter Management IP Address</p> <p><b>Management IPv6</b> Enter Management IPv6 Address</p> <p>Save Cancel</p> <table border="1"> <tbody> <tr> <td data-bbox="1208 1276 1354 1402"><b>Server Name</b></td> <td data-bbox="1354 1276 1494 1402">Enter a server name.</td> </tr> <tr> <td data-bbox="1208 1402 1354 1621"><b>Server Type</b> drop-down list</td> <td data-bbox="1354 1402 1494 1621">Choose Blade or Rack from the drop-down list.</td> </tr> <tr> <td data-bbox="1208 1621 1354 1738"><b>Rack ID</b></td> <td data-bbox="1354 1621 1494 1738">The Rack ID for the server.</td> </tr> <tr> <td data-bbox="1208 1738 1354 1831"><b>Chassis ID</b></td> <td data-bbox="1354 1738 1494 1831">Enter a Chassis ID.</td> </tr> <tr> <td data-bbox="1208 1831 1354 1869">If Rack is</td> <td data-bbox="1354 1831 1494 1869">Enter a</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description		<p>Click <b>Edit</b> or + to add a new server and role to the table.</p> <p>Server And Roles</p>  <p><b>Server Name *</b> Enter Server Name</p> <p><b>VIC Slot</b> Enter VIC Slot</p> <p><b>CIMC IP *</b> Enter CIMC IP Address</p> <p><b>CIMC User Name</b> Enter CIMC Username</p> <p><b>CIMC Password</b> Enter CIMC Password</p> <p><b>Rack ID *</b> Enter Rack ID</p> <p><b>Role *</b></p> <p><b>Management IP</b> Enter Management IP Address</p> <p><b>Management IPv6</b> Enter Management IPv6 Address</p> <p>Save Cancel</p> <table border="1"> <tbody> <tr> <td data-bbox="1208 1276 1354 1402"><b>Server Name</b></td> <td data-bbox="1354 1276 1494 1402">Enter a server name.</td> </tr> <tr> <td data-bbox="1208 1402 1354 1621"><b>Server Type</b> drop-down list</td> <td data-bbox="1354 1402 1494 1621">Choose Blade or Rack from the drop-down list.</td> </tr> <tr> <td data-bbox="1208 1621 1354 1738"><b>Rack ID</b></td> <td data-bbox="1354 1621 1494 1738">The Rack ID for the server.</td> </tr> <tr> <td data-bbox="1208 1738 1354 1831"><b>Chassis ID</b></td> <td data-bbox="1354 1738 1494 1831">Enter a Chassis ID.</td> </tr> <tr> <td data-bbox="1208 1831 1354 1869">If Rack is</td> <td data-bbox="1354 1831 1494 1869">Enter a</td> </tr> </tbody> </table>	<b>Server Name</b>	Enter a server name.	<b>Server Type</b> drop-down list	Choose Blade or Rack from the drop-down list.	<b>Rack ID</b>	The Rack ID for the server.	<b>Chassis ID</b>	Enter a Chassis ID.	If Rack is	Enter a
Name	Description															
	<p>Click <b>Edit</b> or + to add a new server and role to the table.</p> <p>Server And Roles</p>  <p><b>Server Name *</b> Enter Server Name</p> <p><b>VIC Slot</b> Enter VIC Slot</p> <p><b>CIMC IP *</b> Enter CIMC IP Address</p> <p><b>CIMC User Name</b> Enter CIMC Username</p> <p><b>CIMC Password</b> Enter CIMC Password</p> <p><b>Rack ID *</b> Enter Rack ID</p> <p><b>Role *</b></p> <p><b>Management IP</b> Enter Management IP Address</p> <p><b>Management IPv6</b> Enter Management IPv6 Address</p> <p>Save Cancel</p> <table border="1"> <tbody> <tr> <td data-bbox="1208 1276 1354 1402"><b>Server Name</b></td> <td data-bbox="1354 1276 1494 1402">Enter a server name.</td> </tr> <tr> <td data-bbox="1208 1402 1354 1621"><b>Server Type</b> drop-down list</td> <td data-bbox="1354 1402 1494 1621">Choose Blade or Rack from the drop-down list.</td> </tr> <tr> <td data-bbox="1208 1621 1354 1738"><b>Rack ID</b></td> <td data-bbox="1354 1621 1494 1738">The Rack ID for the server.</td> </tr> <tr> <td data-bbox="1208 1738 1354 1831"><b>Chassis ID</b></td> <td data-bbox="1354 1738 1494 1831">Enter a Chassis ID.</td> </tr> <tr> <td data-bbox="1208 1831 1354 1869">If Rack is</td> <td data-bbox="1354 1831 1494 1869">Enter a</td> </tr> </tbody> </table>	<b>Server Name</b>	Enter a server name.	<b>Server Type</b> drop-down list	Choose Blade or Rack from the drop-down list.	<b>Rack ID</b>	The Rack ID for the server.	<b>Chassis ID</b>	Enter a Chassis ID.	If Rack is	Enter a					
<b>Server Name</b>	Enter a server name.															
<b>Server Type</b> drop-down list	Choose Blade or Rack from the drop-down list.															
<b>Rack ID</b>	The Rack ID for the server.															
<b>Chassis ID</b>	Enter a Chassis ID.															
If Rack is	Enter a															



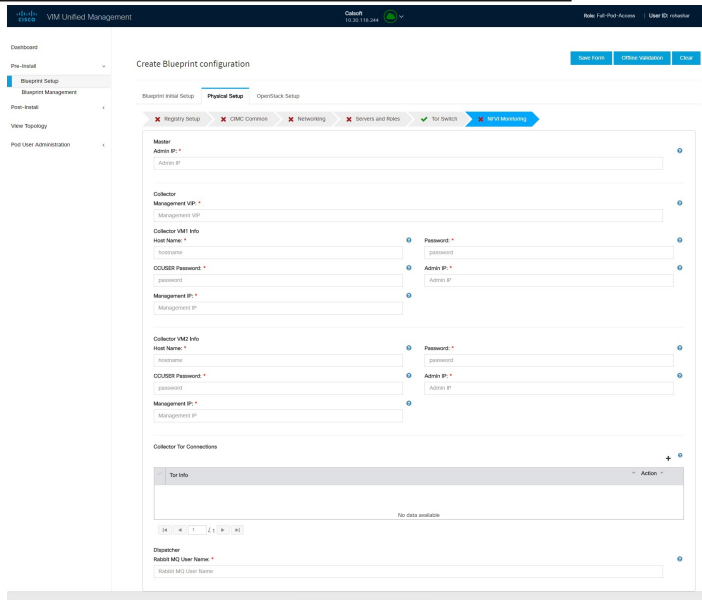
	Command or Action	Purpose																						
		<table border="1"> <thead> <tr> <th data-bbox="893 273 1250 325">Name</th> <th data-bbox="1250 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="893 325 1250 472"></td> <td data-bbox="1250 325 1534 472">                     chosen, the <b>Rack Unit ID</b> field is displayed.                     <table border="1"> <tr> <td data-bbox="1250 325 1388 472">Rack Unit ID.</td> </tr> </table> </td> </tr> <tr> <td data-bbox="893 472 1250 655"></td> <td data-bbox="1250 472 1534 655">                     If Blade is chosen, the <b>Blade ID</b> field is displayed.                     <table border="1"> <tr> <td data-bbox="1250 472 1388 655">Enter a Blade ID.</td> </tr> </table> </td> </tr> <tr> <td data-bbox="893 655 1250 1066"></td> <td data-bbox="1250 655 1534 1066">                     Select the <b>Role</b> from the drop-down list.                     <table border="1"> <tr> <td data-bbox="1250 655 1388 1066">                         If Server type is Blade then select <b>Control and Compute</b>. If server is Rack then select <b>Block Storage</b>.                     </td> </tr> </table> </td> </tr> <tr> <td data-bbox="893 1066 1250 1507"></td> <td data-bbox="1250 1066 1534 1507"> <table border="1"> <tr> <td data-bbox="1250 1066 1388 1507"><b>Management IP</b></td> <td data-bbox="1388 1066 1534 1507">It is an optional field but if provided for one server then it is mandatory to provide details for other Servers as well.</td> </tr> </table> </td> </tr> <tr> <td data-bbox="893 1507 1250 1654"></td> <td data-bbox="1250 1507 1534 1654"> <table border="1"> <tr> <td data-bbox="1250 1507 1388 1654"><b>Management IPv6</b></td> <td data-bbox="1388 1507 1534 1654">Enter the Management IPv6 Address.</td> </tr> </table> </td> </tr> <tr> <td data-bbox="893 1654 1250 1717"></td> <td data-bbox="1250 1654 1534 1717">Click <b>Save</b>.</td> </tr> </tbody> </table>	Name	Description		chosen, the <b>Rack Unit ID</b> field is displayed. <table border="1"> <tr> <td data-bbox="1250 325 1388 472">Rack Unit ID.</td> </tr> </table>	Rack Unit ID.		If Blade is chosen, the <b>Blade ID</b> field is displayed. <table border="1"> <tr> <td data-bbox="1250 472 1388 655">Enter a Blade ID.</td> </tr> </table>	Enter a Blade ID.		Select the <b>Role</b> from the drop-down list. <table border="1"> <tr> <td data-bbox="1250 655 1388 1066">                         If Server type is Blade then select <b>Control and Compute</b>. If server is Rack then select <b>Block Storage</b>.                     </td> </tr> </table>	If Server type is Blade then select <b>Control and Compute</b> . If server is Rack then select <b>Block Storage</b> .		<table border="1"> <tr> <td data-bbox="1250 1066 1388 1507"><b>Management IP</b></td> <td data-bbox="1388 1066 1534 1507">It is an optional field but if provided for one server then it is mandatory to provide details for other Servers as well.</td> </tr> </table>	<b>Management IP</b>	It is an optional field but if provided for one server then it is mandatory to provide details for other Servers as well.		<table border="1"> <tr> <td data-bbox="1250 1507 1388 1654"><b>Management IPv6</b></td> <td data-bbox="1388 1507 1534 1654">Enter the Management IPv6 Address.</td> </tr> </table>	<b>Management IPv6</b>	Enter the Management IPv6 Address.		Click <b>Save</b> .	<p>6. Click <b>ToR Switch</b> checkbox in <b>Blueprint Initial Setup</b> to enable the <b>TOR SWITCH</b> configuration page. It is an <b>Optional</b> section in Blueprint Setup,</p>
Name	Description																							
	chosen, the <b>Rack Unit ID</b> field is displayed. <table border="1"> <tr> <td data-bbox="1250 325 1388 472">Rack Unit ID.</td> </tr> </table>	Rack Unit ID.																						
Rack Unit ID.																								
	If Blade is chosen, the <b>Blade ID</b> field is displayed. <table border="1"> <tr> <td data-bbox="1250 472 1388 655">Enter a Blade ID.</td> </tr> </table>	Enter a Blade ID.																						
Enter a Blade ID.																								
	Select the <b>Role</b> from the drop-down list. <table border="1"> <tr> <td data-bbox="1250 655 1388 1066">                         If Server type is Blade then select <b>Control and Compute</b>. If server is Rack then select <b>Block Storage</b>.                     </td> </tr> </table>	If Server type is Blade then select <b>Control and Compute</b> . If server is Rack then select <b>Block Storage</b> .																						
If Server type is Blade then select <b>Control and Compute</b> . If server is Rack then select <b>Block Storage</b> .																								
	<table border="1"> <tr> <td data-bbox="1250 1066 1388 1507"><b>Management IP</b></td> <td data-bbox="1388 1066 1534 1507">It is an optional field but if provided for one server then it is mandatory to provide details for other Servers as well.</td> </tr> </table>	<b>Management IP</b>	It is an optional field but if provided for one server then it is mandatory to provide details for other Servers as well.																					
<b>Management IP</b>	It is an optional field but if provided for one server then it is mandatory to provide details for other Servers as well.																							
	<table border="1"> <tr> <td data-bbox="1250 1507 1388 1654"><b>Management IPv6</b></td> <td data-bbox="1388 1507 1534 1654">Enter the Management IPv6 Address.</td> </tr> </table>	<b>Management IPv6</b>	Enter the Management IPv6 Address.																					
<b>Management IPv6</b>	Enter the Management IPv6 Address.																							
	Click <b>Save</b> .																							

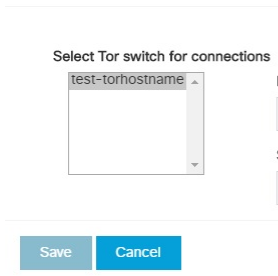
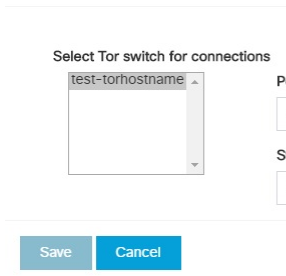
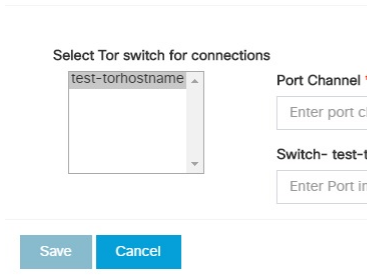
	Command or Action	Purpose				
		<p>but when all the fields are filled it is a part of the Blueprint.</p>  <table border="1" data-bbox="927 1062 1490 1232"> <thead> <tr> <th data-bbox="927 1062 1187 1115">Name</th> <th data-bbox="1187 1062 1490 1115">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="927 1115 1187 1232"><b>Configure ToR</b> optional checkbox.</td> <td data-bbox="1187 1115 1490 1232">Enabling this checkbox, changes the configure ToR section from false to true.</td> </tr> </tbody> </table>	Name	Description	<b>Configure ToR</b> optional checkbox.	Enabling this checkbox, changes the configure ToR section from false to true.
Name	Description					
<b>Configure ToR</b> optional checkbox.	Enabling this checkbox, changes the configure ToR section from false to true.					

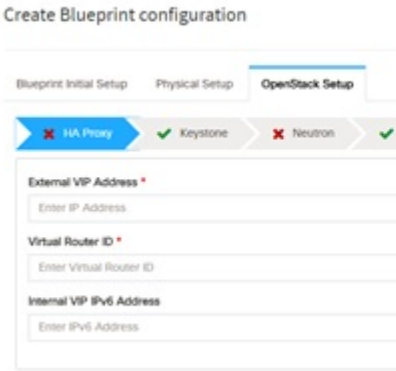
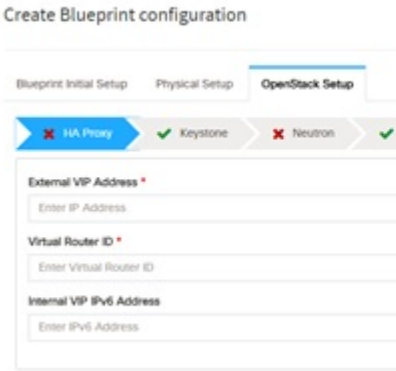
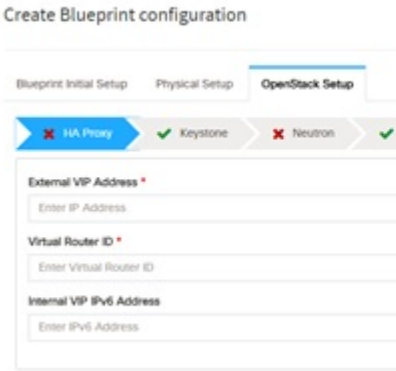
	Command or Action	Purpose	
		<b>Name</b>	<b>Description</b>
		<b>ToR Switch Information</b> mandatory table.	

	Command or Action	Purpose															
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1187 323">Name</th> <th data-bbox="1187 275 1492 323">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 323 1187 1858"></td> <td data-bbox="1187 323 1492 1858"> <p>Click (+) to add information for ToR Switch.</p> <p>Switch Details</p> <p>Hostname *</p> <input type="text" value="Enter Switch Hostname"/> <p>Username *</p> <input type="text" value="Enter Switch Username"/> <p>Password *</p> <input type="text" value="Enter Password"/> <p>SSH-IP *</p> <input type="text" value="Enter IP Address"/> <p>SSN Num</p> <input type="text" value="Enter SSN Num"/> <p>VPC Peer Keepalive</p> <input type="text" value="Enter IP Address"/> <p>VPC Domain</p> <input type="text" value="Enter VPC Domain"/> <p>VPC Peer Port Info</p> <input type="text" value="Enter VPC Port"/> <p>VPC Peer VLAN Info</p> <input type="text" value="Enter VPC VLAN Info"/> <p>BR Management Port Info</p> <input type="text" value="Enter BR Port Info"/> <p>BR Management PO Info</p> <input type="text" value="Enter BR PO Info"/> <p>Save Cancel</p> <table border="1"> <thead> <tr> <th data-bbox="1187 1478 1341 1535">Name</th> <th data-bbox="1341 1478 1492 1535">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1187 1535 1341 1625">Hostname</td> <td data-bbox="1341 1535 1492 1625">ToR switch hostname.</td> </tr> <tr> <td data-bbox="1187 1625 1341 1715">Username</td> <td data-bbox="1341 1625 1492 1715">ToR switch username.</td> </tr> <tr> <td data-bbox="1187 1715 1341 1806">Password</td> <td data-bbox="1341 1715 1492 1806">ToR switch password.</td> </tr> <tr> <td data-bbox="1187 1806 1341 1858">SSH IP</td> <td data-bbox="1341 1806 1492 1858">ToR switch</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description		<p>Click (+) to add information for ToR Switch.</p> <p>Switch Details</p> <p>Hostname *</p> <input type="text" value="Enter Switch Hostname"/> <p>Username *</p> <input type="text" value="Enter Switch Username"/> <p>Password *</p> <input type="text" value="Enter Password"/> <p>SSH-IP *</p> <input type="text" value="Enter IP Address"/> <p>SSN Num</p> <input type="text" value="Enter SSN Num"/> <p>VPC Peer Keepalive</p> <input type="text" value="Enter IP Address"/> <p>VPC Domain</p> <input type="text" value="Enter VPC Domain"/> <p>VPC Peer Port Info</p> <input type="text" value="Enter VPC Port"/> <p>VPC Peer VLAN Info</p> <input type="text" value="Enter VPC VLAN Info"/> <p>BR Management Port Info</p> <input type="text" value="Enter BR Port Info"/> <p>BR Management PO Info</p> <input type="text" value="Enter BR PO Info"/> <p>Save Cancel</p> <table border="1"> <thead> <tr> <th data-bbox="1187 1478 1341 1535">Name</th> <th data-bbox="1341 1478 1492 1535">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1187 1535 1341 1625">Hostname</td> <td data-bbox="1341 1535 1492 1625">ToR switch hostname.</td> </tr> <tr> <td data-bbox="1187 1625 1341 1715">Username</td> <td data-bbox="1341 1625 1492 1715">ToR switch username.</td> </tr> <tr> <td data-bbox="1187 1715 1341 1806">Password</td> <td data-bbox="1341 1715 1492 1806">ToR switch password.</td> </tr> <tr> <td data-bbox="1187 1806 1341 1858">SSH IP</td> <td data-bbox="1341 1806 1492 1858">ToR switch</td> </tr> </tbody> </table>	Name	Description	Hostname	ToR switch hostname.	Username	ToR switch username.	Password	ToR switch password.	SSH IP	ToR switch	
Name	Description																
	<p>Click (+) to add information for ToR Switch.</p> <p>Switch Details</p> <p>Hostname *</p> <input type="text" value="Enter Switch Hostname"/> <p>Username *</p> <input type="text" value="Enter Switch Username"/> <p>Password *</p> <input type="text" value="Enter Password"/> <p>SSH-IP *</p> <input type="text" value="Enter IP Address"/> <p>SSN Num</p> <input type="text" value="Enter SSN Num"/> <p>VPC Peer Keepalive</p> <input type="text" value="Enter IP Address"/> <p>VPC Domain</p> <input type="text" value="Enter VPC Domain"/> <p>VPC Peer Port Info</p> <input type="text" value="Enter VPC Port"/> <p>VPC Peer VLAN Info</p> <input type="text" value="Enter VPC VLAN Info"/> <p>BR Management Port Info</p> <input type="text" value="Enter BR Port Info"/> <p>BR Management PO Info</p> <input type="text" value="Enter BR PO Info"/> <p>Save Cancel</p> <table border="1"> <thead> <tr> <th data-bbox="1187 1478 1341 1535">Name</th> <th data-bbox="1341 1478 1492 1535">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="1187 1535 1341 1625">Hostname</td> <td data-bbox="1341 1535 1492 1625">ToR switch hostname.</td> </tr> <tr> <td data-bbox="1187 1625 1341 1715">Username</td> <td data-bbox="1341 1625 1492 1715">ToR switch username.</td> </tr> <tr> <td data-bbox="1187 1715 1341 1806">Password</td> <td data-bbox="1341 1715 1492 1806">ToR switch password.</td> </tr> <tr> <td data-bbox="1187 1806 1341 1858">SSH IP</td> <td data-bbox="1341 1806 1492 1858">ToR switch</td> </tr> </tbody> </table>	Name	Description	Hostname	ToR switch hostname.	Username	ToR switch username.	Password	ToR switch password.	SSH IP	ToR switch						
Name	Description																
Hostname	ToR switch hostname.																
Username	ToR switch username.																
Password	ToR switch password.																
SSH IP	ToR switch																

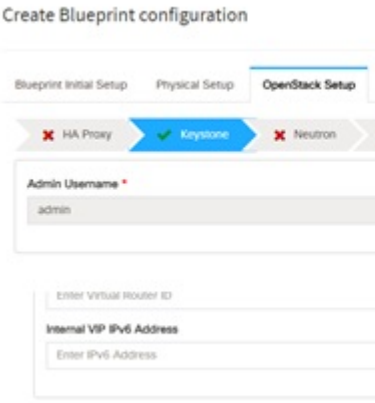
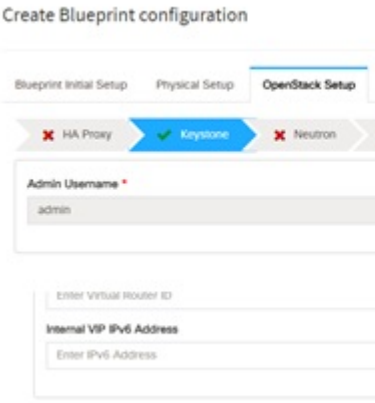
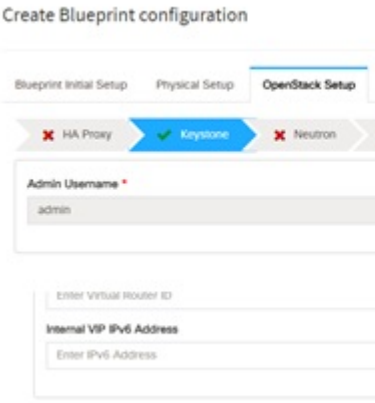
	Command or Action	Purpose																																										
		<table border="1"> <thead> <tr> <th data-bbox="889 275 1224 323">Name</th> <th colspan="2" data-bbox="1224 275 1534 323">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="889 323 1224 407"></td> <td data-bbox="1224 323 1377 407"></td> <td data-bbox="1377 323 1534 407">SSH IP Address.</td> </tr> <tr> <td data-bbox="889 407 1224 491"></td> <td data-bbox="1224 407 1377 491"><b>SSN Num</b></td> <td data-bbox="1377 407 1534 491">ToR switch ssn num.</td> </tr> <tr> <td data-bbox="889 491 1224 711"></td> <td data-bbox="1224 491 1377 711"><b>VPC Peer Keepalive</b></td> <td data-bbox="1377 491 1534 711">Peer Management IP. You do not define if there is no peer.</td> </tr> <tr> <td data-bbox="889 711 1224 863"></td> <td data-bbox="1224 711 1377 863"><b>VPC Domain</b></td> <td data-bbox="1377 711 1534 863">Do not define if peer is absent.</td> </tr> <tr> <td data-bbox="889 863 1224 984"></td> <td data-bbox="1224 863 1377 984"><b>VPC Peer Port Info</b></td> <td data-bbox="1377 863 1534 984">Interface for vpc peer ports.</td> </tr> <tr> <td data-bbox="889 984 1224 1169"></td> <td data-bbox="1224 984 1377 1169"><b>BR Management Port Info</b></td> <td data-bbox="1377 984 1534 1169">Management interface of the management node.</td> </tr> <tr> <td data-bbox="889 1169 1224 1415"></td> <td data-bbox="1224 1169 1377 1415"><b>BR Management PO Info</b></td> <td data-bbox="1377 1169 1534 1415">Port channel number for management interface of the management node.</td> </tr> <tr> <td data-bbox="889 1415 1224 1480"></td> <td colspan="2" data-bbox="1224 1415 1534 1480">ClickSave.</td> </tr> <tr> <td data-bbox="889 1480 1224 1633"></td> <td data-bbox="1224 1480 1377 1633">On clicking save button, <b>Add ToR Info Connected to Fabric</b> field is visible.</td> <td data-bbox="1377 1480 1534 1633"> <table border="1"> <thead> <tr> <th data-bbox="1377 1480 1534 1633"><b>Port Channel</b> field.</th> <th data-bbox="1534 1480 1534 1633"></th> </tr> </thead> <tbody> <tr> <td data-bbox="1377 1480 1534 1633"></td> <td data-bbox="1534 1480 1534 1633">Enter the Port Channel input.</td> </tr> </tbody> </table> </td> </tr> <tr> <td data-bbox="889 1633 1224 1755"></td> <td data-bbox="1224 1633 1377 1755"></td> <td data-bbox="1377 1633 1534 1755"> <table border="1"> <thead> <tr> <th data-bbox="1377 1633 1534 1755"><b>Switch Name</b> field.</th> <th data-bbox="1534 1633 1534 1755"></th> </tr> </thead> <tbody> <tr> <td data-bbox="1377 1633 1534 1755"></td> <td data-bbox="1534 1633 1534 1755">Enter the name of the Switch.</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description				SSH IP Address.		<b>SSN Num</b>	ToR switch ssn num.		<b>VPC Peer Keepalive</b>	Peer Management IP. You do not define if there is no peer.		<b>VPC Domain</b>	Do not define if peer is absent.		<b>VPC Peer Port Info</b>	Interface for vpc peer ports.		<b>BR Management Port Info</b>	Management interface of the management node.		<b>BR Management PO Info</b>	Port channel number for management interface of the management node.		ClickSave.			On clicking save button, <b>Add ToR Info Connected to Fabric</b> field is visible.	<table border="1"> <thead> <tr> <th data-bbox="1377 1480 1534 1633"><b>Port Channel</b> field.</th> <th data-bbox="1534 1480 1534 1633"></th> </tr> </thead> <tbody> <tr> <td data-bbox="1377 1480 1534 1633"></td> <td data-bbox="1534 1480 1534 1633">Enter the Port Channel input.</td> </tr> </tbody> </table>	<b>Port Channel</b> field.			Enter the Port Channel input.			<table border="1"> <thead> <tr> <th data-bbox="1377 1633 1534 1755"><b>Switch Name</b> field.</th> <th data-bbox="1534 1633 1534 1755"></th> </tr> </thead> <tbody> <tr> <td data-bbox="1377 1633 1534 1755"></td> <td data-bbox="1534 1633 1534 1755">Enter the name of the Switch.</td> </tr> </tbody> </table>	<b>Switch Name</b> field.			Enter the name of the Switch.	<p>7. Click <b>NFVI Monitoring</b> checkbox in Blueprint Initial Setup to enable the NFVI Monitoring configuration tab.</p>
Name	Description																																											
		SSH IP Address.																																										
	<b>SSN Num</b>	ToR switch ssn num.																																										
	<b>VPC Peer Keepalive</b>	Peer Management IP. You do not define if there is no peer.																																										
	<b>VPC Domain</b>	Do not define if peer is absent.																																										
	<b>VPC Peer Port Info</b>	Interface for vpc peer ports.																																										
	<b>BR Management Port Info</b>	Management interface of the management node.																																										
	<b>BR Management PO Info</b>	Port channel number for management interface of the management node.																																										
	ClickSave.																																											
	On clicking save button, <b>Add ToR Info Connected to Fabric</b> field is visible.	<table border="1"> <thead> <tr> <th data-bbox="1377 1480 1534 1633"><b>Port Channel</b> field.</th> <th data-bbox="1534 1480 1534 1633"></th> </tr> </thead> <tbody> <tr> <td data-bbox="1377 1480 1534 1633"></td> <td data-bbox="1534 1480 1534 1633">Enter the Port Channel input.</td> </tr> </tbody> </table>	<b>Port Channel</b> field.			Enter the Port Channel input.																																						
<b>Port Channel</b> field.																																												
	Enter the Port Channel input.																																											
		<table border="1"> <thead> <tr> <th data-bbox="1377 1633 1534 1755"><b>Switch Name</b> field.</th> <th data-bbox="1534 1633 1534 1755"></th> </tr> </thead> <tbody> <tr> <td data-bbox="1377 1633 1534 1755"></td> <td data-bbox="1534 1633 1534 1755">Enter the name of the Switch.</td> </tr> </tbody> </table>	<b>Switch Name</b> field.			Enter the name of the Switch.																																						
<b>Switch Name</b> field.																																												
	Enter the name of the Switch.																																											

	Command or Action	Purpose																
		 <table border="1" data-bbox="922 909 1489 1589"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Admin IP</td> <td>IP Address of Control Center VM</td> </tr> <tr> <td>Management VIP</td> <td>VIP for ceilometer/dispatcher to use, must be unique across VIM Pod</td> </tr> <tr> <td>Host Name</td> <td>Hostname of Collector VM</td> </tr> <tr> <td>Password</td> <td>Password of Collector VM</td> </tr> <tr> <td>CCUSER Password</td> <td>Password of CCUSER</td> </tr> <tr> <td>Admin IP</td> <td>SSH IP of Collector VM</td> </tr> <tr> <td>Management IP</td> <td>Management IP of Collector VM</td> </tr> </tbody> </table>	Name	Description	Admin IP	IP Address of Control Center VM	Management VIP	VIP for ceilometer/dispatcher to use, must be unique across VIM Pod	Host Name	Hostname of Collector VM	Password	Password of Collector VM	CCUSER Password	Password of CCUSER	Admin IP	SSH IP of Collector VM	Management IP	Management IP of Collector VM
Name	Description																	
Admin IP	IP Address of Control Center VM																	
Management VIP	VIP for ceilometer/dispatcher to use, must be unique across VIM Pod																	
Host Name	Hostname of Collector VM																	
Password	Password of Collector VM																	
CCUSER Password	Password of CCUSER																	
Admin IP	SSH IP of Collector VM																	
Management IP	Management IP of Collector VM																	

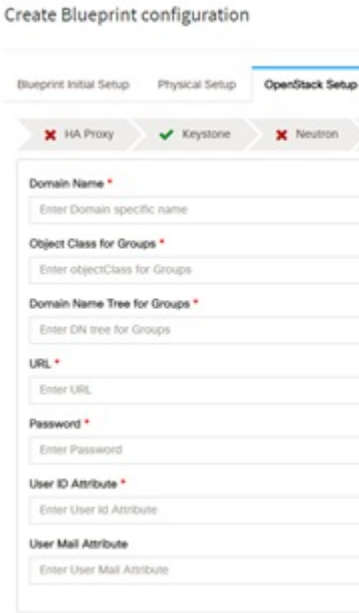
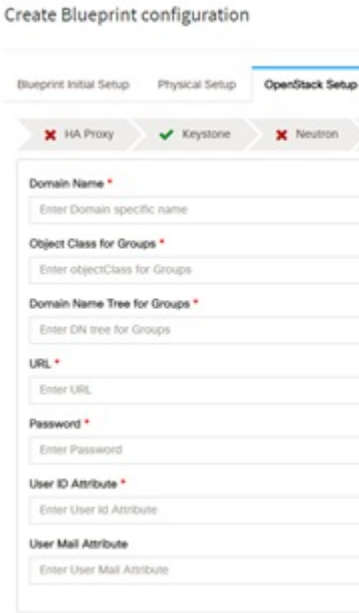
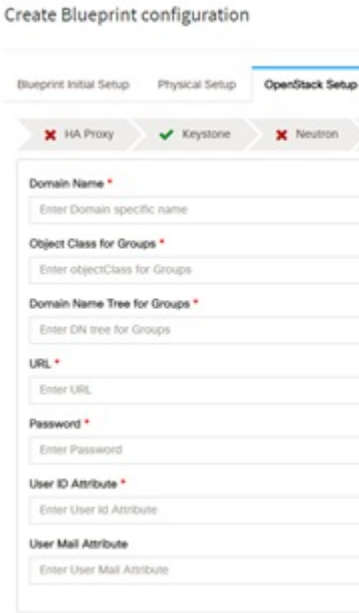
	Command or Action	Purpose										
		<table border="1"> <thead> <tr> <th data-bbox="966 273 1242 325">Name</th> <th data-bbox="1242 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="966 325 1242 1480"> <b>Collector ToR Connections</b> </td> <td data-bbox="1242 325 1534 1480"> <ol style="list-style-type: none"> <li>Click on (+) icon to Add Collector ToR Connections.</li> <li>Select the ToR switches from list to add the information.</li> <li>It is optional and available for ToR type NCS-5500</li> <li>For now, it supports adding only one Collector ToR Connection</li> </ol> <p>Add Collector Tor Connections</p>  <table border="1"> <tr> <td data-bbox="1250 1218 1388 1291"><b>Port Channel</b></td> <td data-bbox="1388 1218 1534 1291">Enter port channel.</td> </tr> <tr> <td data-bbox="1250 1291 1388 1407"><b>Switch - <del>test-to</del></b></td> <td data-bbox="1388 1291 1534 1407">Enter port number, E.g:eth1/15.</td> </tr> </table> <p>Click <b>Save</b></p> </td> </tr> <tr> <td data-bbox="966 1480 1242 1564"><b>Rabbit MQ User Name</b></td> <td data-bbox="1242 1480 1534 1564">Enter Rabbit MQ username.</td> </tr> </tbody> </table> <p>8. Click <b>OpenStack Setup</b> tab to advance to the OpenStack Setup Configuration page. On the <b>OpenStack Setup</b> page of the Cisco VIM Insight wizard, complete the following fields:</p>	Name	Description	<b>Collector ToR Connections</b>	<ol style="list-style-type: none"> <li>Click on (+) icon to Add Collector ToR Connections.</li> <li>Select the ToR switches from list to add the information.</li> <li>It is optional and available for ToR type NCS-5500</li> <li>For now, it supports adding only one Collector ToR Connection</li> </ol> <p>Add Collector Tor Connections</p>  <table border="1"> <tr> <td data-bbox="1250 1218 1388 1291"><b>Port Channel</b></td> <td data-bbox="1388 1218 1534 1291">Enter port channel.</td> </tr> <tr> <td data-bbox="1250 1291 1388 1407"><b>Switch - <del>test-to</del></b></td> <td data-bbox="1388 1291 1534 1407">Enter port number, E.g:eth1/15.</td> </tr> </table> <p>Click <b>Save</b></p>	<b>Port Channel</b>	Enter port channel.	<b>Switch - <del>test-to</del></b>	Enter port number, E.g:eth1/15.	<b>Rabbit MQ User Name</b>	Enter Rabbit MQ username.
Name	Description											
<b>Collector ToR Connections</b>	<ol style="list-style-type: none"> <li>Click on (+) icon to Add Collector ToR Connections.</li> <li>Select the ToR switches from list to add the information.</li> <li>It is optional and available for ToR type NCS-5500</li> <li>For now, it supports adding only one Collector ToR Connection</li> </ol> <p>Add Collector Tor Connections</p>  <table border="1"> <tr> <td data-bbox="1250 1218 1388 1291"><b>Port Channel</b></td> <td data-bbox="1388 1218 1534 1291">Enter port channel.</td> </tr> <tr> <td data-bbox="1250 1291 1388 1407"><b>Switch - <del>test-to</del></b></td> <td data-bbox="1388 1291 1534 1407">Enter port number, E.g:eth1/15.</td> </tr> </table> <p>Click <b>Save</b></p>	<b>Port Channel</b>	Enter port channel.	<b>Switch - <del>test-to</del></b>	Enter port number, E.g:eth1/15.							
<b>Port Channel</b>	Enter port channel.											
<b>Switch - <del>test-to</del></b>	Enter port number, E.g:eth1/15.											
<b>Rabbit MQ User Name</b>	Enter Rabbit MQ username.											

	Command or Action	Purpose														
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1190 331">Name</th> <th data-bbox="1190 275 1492 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 331 1190 1719">HA Proxy</td> <td data-bbox="1190 331 1492 1719"> <p>Fill in the following details:</p>  <table border="1"> <tbody> <tr> <td data-bbox="1190 909 1344 1066"><b>External VIP Address</b> field</td> <td data-bbox="1344 909 1492 1066">Enter the IP address of the External VIP.</td> </tr> <tr> <td data-bbox="1190 1066 1344 1251"><b>External VIP Address IPv6</b> field</td> <td data-bbox="1344 1066 1492 1251">Enter the IPv6 address of the External VIP.</td> </tr> <tr> <td data-bbox="1190 1251 1344 1371"><b>Virtual Router ID</b> field</td> <td data-bbox="1344 1251 1492 1371">Enter the Router ID for the HA.</td> </tr> <tr> <td data-bbox="1190 1371 1344 1556"><b>Internal VIP Address IPv6</b> field</td> <td data-bbox="1344 1371 1492 1556">Enter the IPv6 address of the Internal IP.</td> </tr> <tr> <td data-bbox="1190 1556 1344 1719"><b>Internal VIP Address</b> field</td> <td data-bbox="1344 1556 1492 1719">Enter the IP address of the Internal VIP.</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description	HA Proxy	<p>Fill in the following details:</p>  <table border="1"> <tbody> <tr> <td data-bbox="1190 909 1344 1066"><b>External VIP Address</b> field</td> <td data-bbox="1344 909 1492 1066">Enter the IP address of the External VIP.</td> </tr> <tr> <td data-bbox="1190 1066 1344 1251"><b>External VIP Address IPv6</b> field</td> <td data-bbox="1344 1066 1492 1251">Enter the IPv6 address of the External VIP.</td> </tr> <tr> <td data-bbox="1190 1251 1344 1371"><b>Virtual Router ID</b> field</td> <td data-bbox="1344 1251 1492 1371">Enter the Router ID for the HA.</td> </tr> <tr> <td data-bbox="1190 1371 1344 1556"><b>Internal VIP Address IPv6</b> field</td> <td data-bbox="1344 1371 1492 1556">Enter the IPv6 address of the Internal IP.</td> </tr> <tr> <td data-bbox="1190 1556 1344 1719"><b>Internal VIP Address</b> field</td> <td data-bbox="1344 1556 1492 1719">Enter the IP address of the Internal VIP.</td> </tr> </tbody> </table>	<b>External VIP Address</b> field	Enter the IP address of the External VIP.	<b>External VIP Address IPv6</b> field	Enter the IPv6 address of the External VIP.	<b>Virtual Router ID</b> field	Enter the Router ID for the HA.	<b>Internal VIP Address IPv6</b> field	Enter the IPv6 address of the Internal IP.	<b>Internal VIP Address</b> field	Enter the IP address of the Internal VIP.
Name	Description															
HA Proxy	<p>Fill in the following details:</p>  <table border="1"> <tbody> <tr> <td data-bbox="1190 909 1344 1066"><b>External VIP Address</b> field</td> <td data-bbox="1344 909 1492 1066">Enter the IP address of the External VIP.</td> </tr> <tr> <td data-bbox="1190 1066 1344 1251"><b>External VIP Address IPv6</b> field</td> <td data-bbox="1344 1066 1492 1251">Enter the IPv6 address of the External VIP.</td> </tr> <tr> <td data-bbox="1190 1251 1344 1371"><b>Virtual Router ID</b> field</td> <td data-bbox="1344 1251 1492 1371">Enter the Router ID for the HA.</td> </tr> <tr> <td data-bbox="1190 1371 1344 1556"><b>Internal VIP Address IPv6</b> field</td> <td data-bbox="1344 1371 1492 1556">Enter the IPv6 address of the Internal IP.</td> </tr> <tr> <td data-bbox="1190 1556 1344 1719"><b>Internal VIP Address</b> field</td> <td data-bbox="1344 1556 1492 1719">Enter the IP address of the Internal VIP.</td> </tr> </tbody> </table>	<b>External VIP Address</b> field	Enter the IP address of the External VIP.	<b>External VIP Address IPv6</b> field	Enter the IPv6 address of the External VIP.	<b>Virtual Router ID</b> field	Enter the Router ID for the HA.	<b>Internal VIP Address IPv6</b> field	Enter the IPv6 address of the Internal IP.	<b>Internal VIP Address</b> field	Enter the IP address of the Internal VIP.					
<b>External VIP Address</b> field	Enter the IP address of the External VIP.															
<b>External VIP Address IPv6</b> field	Enter the IPv6 address of the External VIP.															
<b>Virtual Router ID</b> field	Enter the Router ID for the HA.															
<b>Internal VIP Address IPv6</b> field	Enter the IPv6 address of the Internal IP.															
<b>Internal VIP Address</b> field	Enter the IP address of the Internal VIP.															



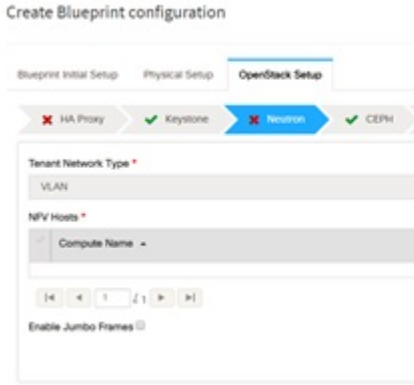
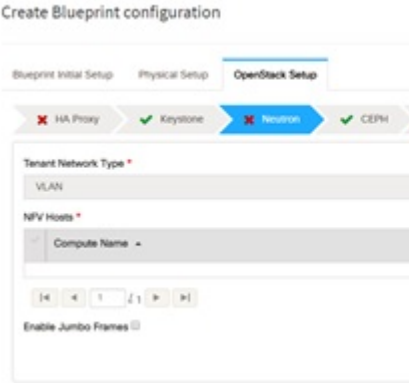
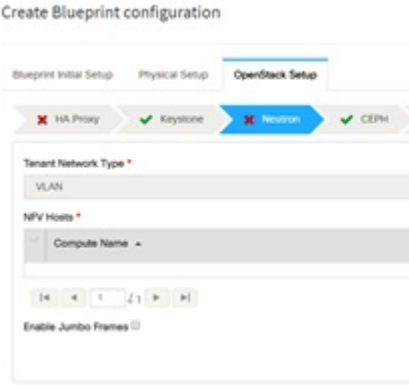
	Command or Action	Purpose								
		<table border="1"> <thead> <tr> <th data-bbox="889 273 1227 331">Name</th> <th data-bbox="1227 273 1534 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="889 331 1227 1218">Keystone</td> <td data-bbox="1227 331 1534 1218"> <p>The following are the Pre-populated field values. This option is always set to be true.</p>  <table border="1" data-bbox="1234 976 1526 1207"> <tbody> <tr> <td data-bbox="1234 976 1380 1087"><b>Admin Username</b> field</td> <td data-bbox="1380 976 1526 1087">admin</td> </tr> <tr> <td data-bbox="1234 1087 1380 1207"><b>Admin Tenant Name</b> field</td> <td data-bbox="1380 1087 1526 1207">admin</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description	Keystone	<p>The following are the Pre-populated field values. This option is always set to be true.</p>  <table border="1" data-bbox="1234 976 1526 1207"> <tbody> <tr> <td data-bbox="1234 976 1380 1087"><b>Admin Username</b> field</td> <td data-bbox="1380 976 1526 1087">admin</td> </tr> <tr> <td data-bbox="1234 1087 1380 1207"><b>Admin Tenant Name</b> field</td> <td data-bbox="1380 1087 1526 1207">admin</td> </tr> </tbody> </table>	<b>Admin Username</b> field	admin	<b>Admin Tenant Name</b> field	admin
Name	Description									
Keystone	<p>The following are the Pre-populated field values. This option is always set to be true.</p>  <table border="1" data-bbox="1234 976 1526 1207"> <tbody> <tr> <td data-bbox="1234 976 1380 1087"><b>Admin Username</b> field</td> <td data-bbox="1380 976 1526 1087">admin</td> </tr> <tr> <td data-bbox="1234 1087 1380 1207"><b>Admin Tenant Name</b> field</td> <td data-bbox="1380 1087 1526 1207">admin</td> </tr> </tbody> </table>	<b>Admin Username</b> field	admin	<b>Admin Tenant Name</b> field	admin					
<b>Admin Username</b> field	admin									
<b>Admin Tenant Name</b> field	admin									

Command or Action	Purpose	
	Name	Description
	<b>LDAP (Only if Keystonev3 is enabled)</b> <b>Note</b> This option is only available with Keystone v3	

	Command or Action	Purpose														
		<table border="1"> <thead> <tr> <th data-bbox="885 273 1226 325">Name</th> <th data-bbox="1226 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="885 325 1226 1837"></td> <td data-bbox="1226 325 1534 1837"> <p>This is available only when Keystone v3 and LDAP both are enabled under <i>Optional Features and Services</i> in Blueprint Initial Setup.</p>  <table border="1"> <tbody> <tr> <td data-bbox="1226 1218 1380 1333"><b>Domain Name field</b></td> <td data-bbox="1380 1218 1534 1333">Enter the Domain name.</td> </tr> <tr> <td data-bbox="1226 1333 1380 1459"><b>Object Class for Users field</b></td> <td data-bbox="1380 1333 1534 1459">Enter a string as input.</td> </tr> <tr> <td data-bbox="1226 1459 1380 1585"><b>Object Class for Groups field</b></td> <td data-bbox="1380 1459 1534 1585">Enter a string.</td> </tr> <tr> <td data-bbox="1226 1585 1380 1732"><b>Domain Name Tree for Users field</b></td> <td data-bbox="1380 1585 1534 1732">Enter a string.</td> </tr> <tr> <td data-bbox="1226 1732 1380 1837"><b>Domain Name Tree for Groups</b></td> <td data-bbox="1380 1732 1534 1837">Enter a string.</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description		<p>This is available only when Keystone v3 and LDAP both are enabled under <i>Optional Features and Services</i> in Blueprint Initial Setup.</p>  <table border="1"> <tbody> <tr> <td data-bbox="1226 1218 1380 1333"><b>Domain Name field</b></td> <td data-bbox="1380 1218 1534 1333">Enter the Domain name.</td> </tr> <tr> <td data-bbox="1226 1333 1380 1459"><b>Object Class for Users field</b></td> <td data-bbox="1380 1333 1534 1459">Enter a string as input.</td> </tr> <tr> <td data-bbox="1226 1459 1380 1585"><b>Object Class for Groups field</b></td> <td data-bbox="1380 1459 1534 1585">Enter a string.</td> </tr> <tr> <td data-bbox="1226 1585 1380 1732"><b>Domain Name Tree for Users field</b></td> <td data-bbox="1380 1585 1534 1732">Enter a string.</td> </tr> <tr> <td data-bbox="1226 1732 1380 1837"><b>Domain Name Tree for Groups</b></td> <td data-bbox="1380 1732 1534 1837">Enter a string.</td> </tr> </tbody> </table>	<b>Domain Name field</b>	Enter the Domain name.	<b>Object Class for Users field</b>	Enter a string as input.	<b>Object Class for Groups field</b>	Enter a string.	<b>Domain Name Tree for Users field</b>	Enter a string.	<b>Domain Name Tree for Groups</b>	Enter a string.
Name	Description															
	<p>This is available only when Keystone v3 and LDAP both are enabled under <i>Optional Features and Services</i> in Blueprint Initial Setup.</p>  <table border="1"> <tbody> <tr> <td data-bbox="1226 1218 1380 1333"><b>Domain Name field</b></td> <td data-bbox="1380 1218 1534 1333">Enter the Domain name.</td> </tr> <tr> <td data-bbox="1226 1333 1380 1459"><b>Object Class for Users field</b></td> <td data-bbox="1380 1333 1534 1459">Enter a string as input.</td> </tr> <tr> <td data-bbox="1226 1459 1380 1585"><b>Object Class for Groups field</b></td> <td data-bbox="1380 1459 1534 1585">Enter a string.</td> </tr> <tr> <td data-bbox="1226 1585 1380 1732"><b>Domain Name Tree for Users field</b></td> <td data-bbox="1380 1585 1534 1732">Enter a string.</td> </tr> <tr> <td data-bbox="1226 1732 1380 1837"><b>Domain Name Tree for Groups</b></td> <td data-bbox="1380 1732 1534 1837">Enter a string.</td> </tr> </tbody> </table>	<b>Domain Name field</b>	Enter the Domain name.	<b>Object Class for Users field</b>	Enter a string as input.	<b>Object Class for Groups field</b>	Enter a string.	<b>Domain Name Tree for Users field</b>	Enter a string.	<b>Domain Name Tree for Groups</b>	Enter a string.					
<b>Domain Name field</b>	Enter the Domain name.															
<b>Object Class for Users field</b>	Enter a string as input.															
<b>Object Class for Groups field</b>	Enter a string.															
<b>Domain Name Tree for Users field</b>	Enter a string.															
<b>Domain Name Tree for Groups</b>	Enter a string.															

	Command or Action	Purpose																						
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1192 329">Name</th> <th data-bbox="1192 275 1494 329">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 329 1192 384">field</td> <td data-bbox="1192 329 1494 384"></td> </tr> <tr> <td data-bbox="854 384 1192 506"><b>Suffix for Domain Name</b> field</td> <td data-bbox="1192 384 1494 506">Enter a string.</td> </tr> <tr> <td data-bbox="854 506 1192 657">URL field</td> <td data-bbox="1192 506 1494 657">Enter a URL with ending port number.</td> </tr> <tr> <td data-bbox="854 657 1192 808"><b>Domain Name of bind user</b> field</td> <td data-bbox="1192 657 1494 808">Enter a string.</td> </tr> <tr> <td data-bbox="854 808 1192 959"><b>Password</b> field</td> <td data-bbox="1192 808 1494 959">Enter Password as string format.</td> </tr> <tr> <td data-bbox="854 959 1192 1081"><b>User Filter</b> field</td> <td data-bbox="1192 959 1494 1081">Enter filter name as string.</td> </tr> <tr> <td data-bbox="854 1081 1192 1203"><b>User ID Attribute</b> field</td> <td data-bbox="1192 1081 1494 1203">Enter a string.</td> </tr> <tr> <td data-bbox="854 1203 1192 1325"><b>User Name Attribute</b> field</td> <td data-bbox="1192 1203 1494 1325">Enter a string.</td> </tr> <tr> <td data-bbox="854 1325 1192 1446"><b>User Mail Attribute</b> field</td> <td data-bbox="1192 1325 1494 1446">Enter a string.</td> </tr> <tr> <td data-bbox="854 1446 1192 1610"><b>Group Name Attribute</b> field</td> <td data-bbox="1192 1446 1494 1610">Enter a string.</td> </tr> </tbody> </table>	Name	Description	field		<b>Suffix for Domain Name</b> field	Enter a string.	URL field	Enter a URL with ending port number.	<b>Domain Name of bind user</b> field	Enter a string.	<b>Password</b> field	Enter Password as string format.	<b>User Filter</b> field	Enter filter name as string.	<b>User ID Attribute</b> field	Enter a string.	<b>User Name Attribute</b> field	Enter a string.	<b>User Mail Attribute</b> field	Enter a string.	<b>Group Name Attribute</b> field	Enter a string.
Name	Description																							
field																								
<b>Suffix for Domain Name</b> field	Enter a string.																							
URL field	Enter a URL with ending port number.																							
<b>Domain Name of bind user</b> field	Enter a string.																							
<b>Password</b> field	Enter Password as string format.																							
<b>User Filter</b> field	Enter filter name as string.																							
<b>User ID Attribute</b> field	Enter a string.																							
<b>User Name Attribute</b> field	Enter a string.																							
<b>User Mail Attribute</b> field	Enter a string.																							
<b>Group Name Attribute</b> field	Enter a string.																							

	Command or Action	Purpose	
		Name	Description
		Neutron	

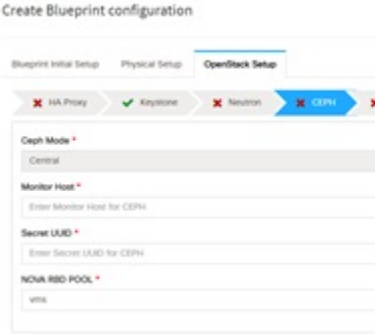
	Command or Action	Purpose										
		<table border="1"> <thead> <tr> <th data-bbox="927 275 1192 331">Name</th> <th data-bbox="1192 275 1492 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="927 331 1192 1003"></td> <td data-bbox="1192 331 1492 1003"> <p>Neutron fields change on the basis of <i>Tenant Network Type</i> selection from <b>Blueprint Initial Setup</b>. Following are the options available for Neutron for OVS/VLAN:</p>  </td> </tr> <tr> <td data-bbox="1192 1003 1341 1350"><b>Tenant Network Type</b> field</td> <td data-bbox="1341 1003 1492 1350">It is Auto-filled based on the <i>Tenant Network Type</i> selected in the Blueprint Initial Setup page.</td> </tr> <tr> <td data-bbox="1192 1350 1341 1696"><b>Mechanism Drivers</b> field</td> <td data-bbox="1341 1350 1492 1696">It is Auto-filled based on the <i>Tenant Network Type</i> selected in Blueprint Initial Setup page.</td> </tr> <tr> <td data-bbox="1192 1696 1341 1862"><b>NFV Hosts</b> field</td> <td data-bbox="1341 1696 1492 1862">It is Auto-filled with the Compute you added</td> </tr> </tbody> </table>	Name	Description		<p>Neutron fields change on the basis of <i>Tenant Network Type</i> selection from <b>Blueprint Initial Setup</b>. Following are the options available for Neutron for OVS/VLAN:</p> 	<b>Tenant Network Type</b> field	It is Auto-filled based on the <i>Tenant Network Type</i> selected in the Blueprint Initial Setup page.	<b>Mechanism Drivers</b> field	It is Auto-filled based on the <i>Tenant Network Type</i> selected in Blueprint Initial Setup page.	<b>NFV Hosts</b> field	It is Auto-filled with the Compute you added
Name	Description											
	<p>Neutron fields change on the basis of <i>Tenant Network Type</i> selection from <b>Blueprint Initial Setup</b>. Following are the options available for Neutron for OVS/VLAN:</p> 											
<b>Tenant Network Type</b> field	It is Auto-filled based on the <i>Tenant Network Type</i> selected in the Blueprint Initial Setup page.											
<b>Mechanism Drivers</b> field	It is Auto-filled based on the <i>Tenant Network Type</i> selected in Blueprint Initial Setup page.											
<b>NFV Hosts</b> field	It is Auto-filled with the Compute you added											

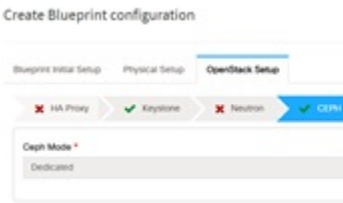
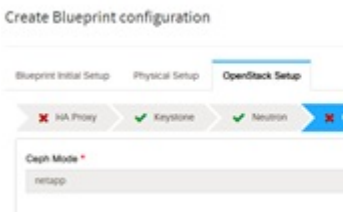
	Command or Action	Purpose	
		Name	Description
			<p>in Server and Roles.</p> <p>If you select All in this section NFV_HOSTS: ALL is added to the Blueprint or you can select one particular compute. For Example: NFV_HOSTS: <del>compute-1</del>, <del>compute-2</del></p>
		<p><b>Tenant VLAN Ranges</b> field</p>	<p>List of ranges separated by comma form start:end.</p>
		<p><b>Provider VLAN Ranges</b> field</p>	<p>List of ranges separated by comma form start:end.</p>
		<p><b>VM High Page Size (available for NFV_HOSTS option)</b> field</p>	<p>2M or 1G</p>
		<p><b>Enable Jumbo Frames</b> field</p>	<p>Enable the checkbox.</p>

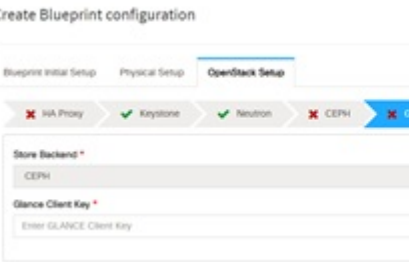
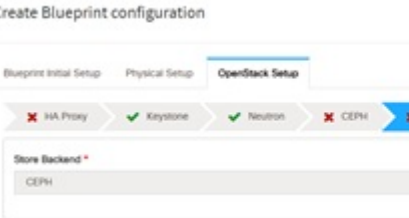
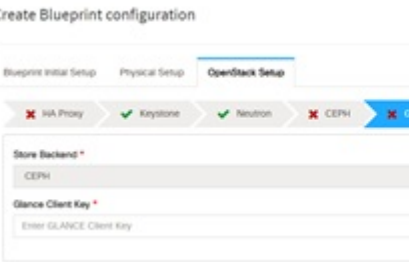
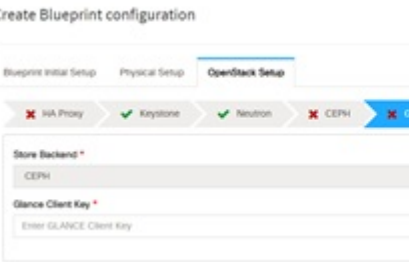
	Command or Action	Purpose	
		Name	Description
			For Tenant Network Type, Linux Bridge everything remains the same but <b>Tenant VLAN Ranges</b> is removed.

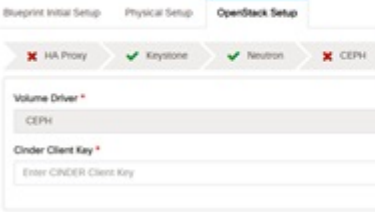
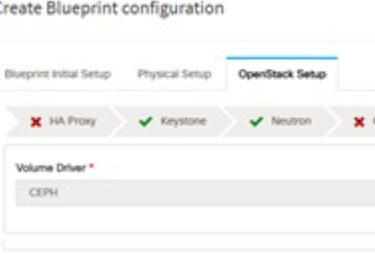
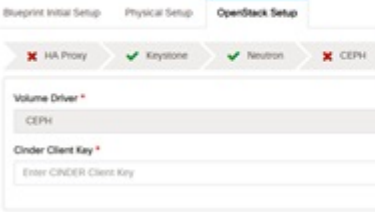
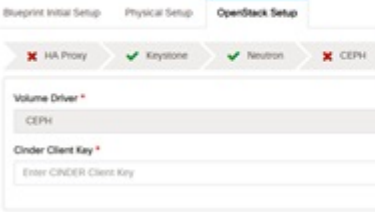


	Command or Action	Purpose	
		Name	Description
		CEPH	

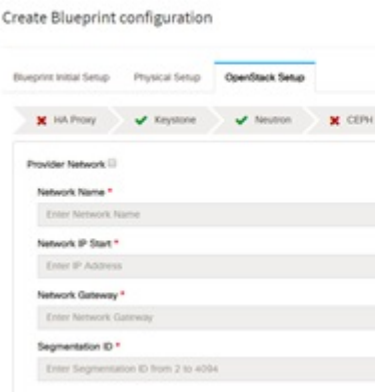
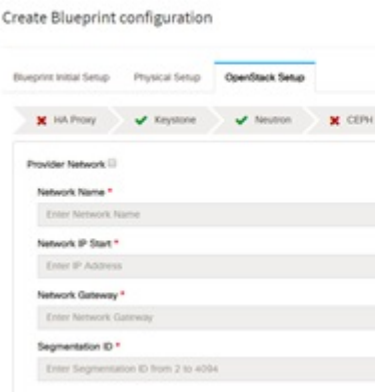
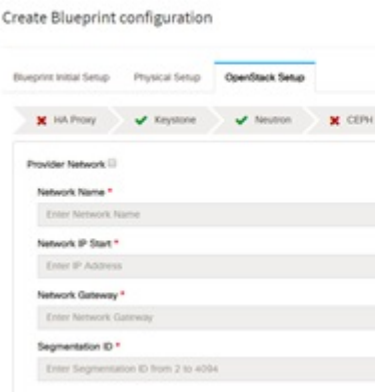
	Command or Action	Purpose															
		Name	Description														
			<p>1. 1. When Object Storage Backend is selected as <i>Central</i> in the blueprint initial setup.</p>  <table border="1" data-bbox="1247 898 1492 1839"> <tr> <td>CEPH Mode</td> <td>By default Ceph Mode is Central.</td> </tr> <tr> <td>Cluster ID</td> <td>Enter the Cluster ID.</td> </tr> <tr> <td>Monitor Host</td> <td>Enter the Monitor Host for CEPH</td> </tr> <tr> <td>Monitor Members</td> <td>Enter the Monitor Members for CEPH</td> </tr> <tr> <td>Secret UUID</td> <td>Enter the Secret UUID for CEPH</td> </tr> <tr> <td>NOVA Boot from</td> <td>You can choose CEPH or local from the drop-down list.</td> </tr> <tr> <td>NOVA RBD</td> <td>Enter the NOVA</td> </tr> </table>	CEPH Mode	By default Ceph Mode is Central.	Cluster ID	Enter the Cluster ID.	Monitor Host	Enter the Monitor Host for CEPH	Monitor Members	Enter the Monitor Members for CEPH	Secret UUID	Enter the Secret UUID for CEPH	NOVA Boot from	You can choose CEPH or local from the drop-down list.	NOVA RBD	Enter the NOVA
CEPH Mode	By default Ceph Mode is Central.																
Cluster ID	Enter the Cluster ID.																
Monitor Host	Enter the Monitor Host for CEPH																
Monitor Members	Enter the Monitor Members for CEPH																
Secret UUID	Enter the Secret UUID for CEPH																
NOVA Boot from	You can choose CEPH or local from the drop-down list.																
NOVA RBD	Enter the NOVA																

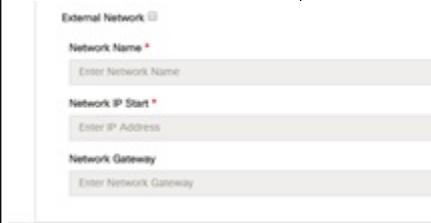
	Command or Action	Purpose					
		Name	Description				
			<table border="1"> <tr> <td data-bbox="1279 331 1378 449">POOL</td> <td data-bbox="1378 331 1534 449">RBD Pool (default's to vms)</td> </tr> <tr> <td data-bbox="1279 449 1378 695">CEPH NAT</td> <td data-bbox="1378 449 1534 695">CEPH NAT is required for Central Ceph and when mgmt network is not routable.</td> </tr> </table>	POOL	RBD Pool (default's to vms)	CEPH NAT	CEPH NAT is required for Central Ceph and when mgmt network is not routable.
POOL	RBD Pool (default's to vms)						
CEPH NAT	CEPH NAT is required for Central Ceph and when mgmt network is not routable.						
			<p>2. When Object Storage Backend is selected as <i>Dedicated</i> in the blueprint initial setup.</p>  <p>Create Blueprint configuration</p> <p>Blueprint Initial Setup Physical Setup <b>OpenStack Setup</b></p> <p>HA Proxy X Keystone ✓ Neutron X <b>CEPH ✓</b></p> <p>Ceph Mode + Dedicated</p> <ul style="list-style-type: none"> <li>• CEPH Mode: By default Dedicated.</li> <li>• NOVA Boot: From drop-down selection you can choose CEPH or local.</li> </ul> <p>3. When Object Storage Backend is selected as <i>NetApp</i> in the blueprint initial setup.</p>  <p>Create Blueprint configuration</p> <p>Blueprint Initial Setup Physical Setup <b>OpenStack Setup</b></p> <p>HA Proxy X Keystone ✓ Neutron X <b>CEPH ✓</b></p> <p>Ceph Mode + netapp</p>				

	Command or Action	Purpose										
		<table border="1"> <thead> <tr> <th data-bbox="927 275 1190 331">Name</th> <th data-bbox="1190 275 1492 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="927 331 1190 758">GLANCE</td> <td data-bbox="1190 331 1492 758"> <p>1. When Object Storage Backend is selected as <i>Central</i> in the blueprint initial setup.</p>  </td> </tr> <tr> <td data-bbox="1190 758 1344 867">Store Backend</td> <td data-bbox="1344 758 1492 867">By default CEPH.</td> </tr> <tr> <td data-bbox="1190 867 1344 976">Glance RBD Pool field</td> <td data-bbox="1344 867 1492 976">By default images.</td> </tr> <tr> <td data-bbox="1190 976 1344 1098">Glance Client Key</td> <td data-bbox="1344 976 1492 1098">Enter GLANCE Client Key</td> </tr> </tbody> </table> <p>2. When Object Storage Backend is selected as <i>Dedicated</i> in the blueprint initial setup.</p>  <p>By default Populated for CEPH Dedicated with Store Backend value as CEPH.</p>	Name	Description	GLANCE	<p>1. When Object Storage Backend is selected as <i>Central</i> in the blueprint initial setup.</p> 	Store Backend	By default CEPH.	Glance RBD Pool field	By default images.	Glance Client Key	Enter GLANCE Client Key
Name	Description											
GLANCE	<p>1. When Object Storage Backend is selected as <i>Central</i> in the blueprint initial setup.</p> 											
Store Backend	By default CEPH.											
Glance RBD Pool field	By default images.											
Glance Client Key	Enter GLANCE Client Key											

	Command or Action	Purpose										
		<table border="1"> <thead> <tr> <th data-bbox="966 275 1227 331">Name</th> <th data-bbox="1227 275 1534 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="966 331 1227 800">CINDER</td> <td data-bbox="1227 331 1534 800">                     By default Populated for <i>CEPH Dedicated</i> with Volume Driver value as <b>CEPH</b>.                       Create Blueprint configuration    </td> </tr> <tr> <td data-bbox="966 800 1227 884">Volume Driver</td> <td data-bbox="1227 800 1534 884">By default CEPH.</td> </tr> <tr> <td data-bbox="966 884 1227 999">Cinder RBD Pool field</td> <td data-bbox="1227 884 1534 999">By default volumes.</td> </tr> <tr> <td data-bbox="966 999 1227 1115">Cinder Client Key</td> <td data-bbox="1227 999 1534 1115">Enter Cinder Client Key</td> </tr> </tbody> </table> 	Name	Description	CINDER	By default Populated for <i>CEPH Dedicated</i> with Volume Driver value as <b>CEPH</b> .  Create Blueprint configuration  	Volume Driver	By default CEPH.	Cinder RBD Pool field	By default volumes.	Cinder Client Key	Enter Cinder Client Key
Name	Description											
CINDER	By default Populated for <i>CEPH Dedicated</i> with Volume Driver value as <b>CEPH</b> .  Create Blueprint configuration  											
Volume Driver	By default CEPH.											
Cinder RBD Pool field	By default volumes.											
Cinder Client Key	Enter Cinder Client Key											

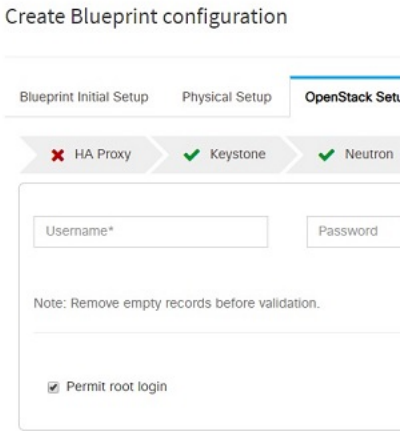
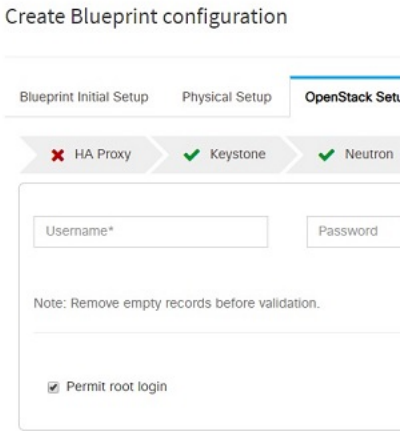
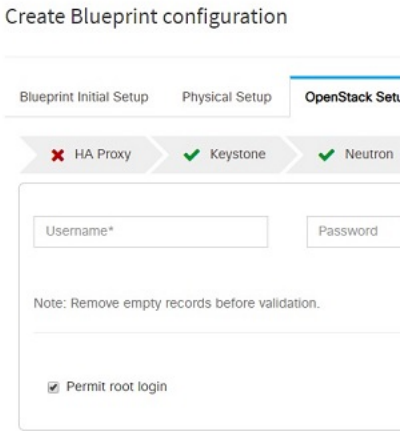
	Command or Action	Purpose	
		Name	Description
		<b>VMTP</b> VMTP optional section will only be visible once VMTP is selected from Blueprint Initial Setup.	

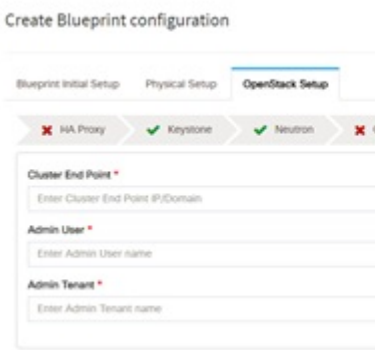
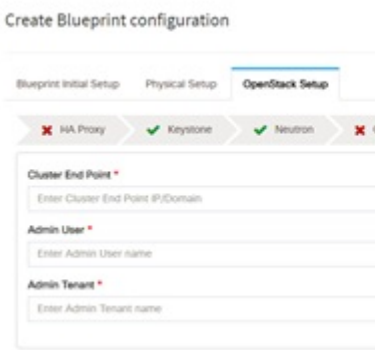
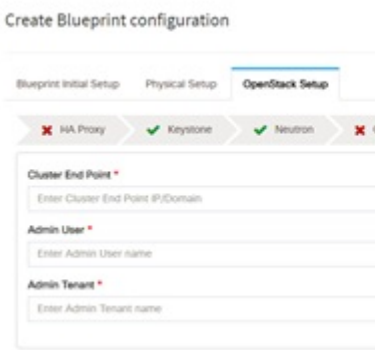
	Command or Action	Purpose														
		<table border="1"> <thead> <tr> <th data-bbox="885 273 1226 325">Name</th> <th data-bbox="1226 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="885 325 1226 1852"></td> <td data-bbox="1226 325 1534 1852"> <p>Check one of the check boxes to specify a VMTP network:</p> <ul style="list-style-type: none"> <li>• Provider Network</li> <li>• External Network</li> </ul> <p>For the <b>Provider Network</b> complete the following:</p> <p>Create Blueprint configuration</p>  <table border="1"> <tbody> <tr> <td data-bbox="1242 1071 1372 1218"><b>Network Name</b> field</td> <td data-bbox="1372 1071 1534 1218">Enter the name for the external network.</td> </tr> <tr> <td data-bbox="1242 1228 1372 1375"><b>Subnet</b> field</td> <td data-bbox="1372 1228 1534 1375">Enter the Subnet for Provider Network.</td> </tr> <tr> <td data-bbox="1242 1386 1372 1554"><b>Network IP Start</b> field</td> <td data-bbox="1372 1386 1534 1554">Enter the start of the floating IPv4 address.</td> </tr> <tr> <td data-bbox="1242 1564 1372 1732"><b>Network IP End</b> field</td> <td data-bbox="1372 1564 1534 1732">Enter the end of the floating IPv4 address.</td> </tr> <tr> <td data-bbox="1242 1743 1372 1852"><b>Network Gateway</b> field</td> <td data-bbox="1372 1743 1534 1852">Enter the IPv4 address for</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description		<p>Check one of the check boxes to specify a VMTP network:</p> <ul style="list-style-type: none"> <li>• Provider Network</li> <li>• External Network</li> </ul> <p>For the <b>Provider Network</b> complete the following:</p> <p>Create Blueprint configuration</p>  <table border="1"> <tbody> <tr> <td data-bbox="1242 1071 1372 1218"><b>Network Name</b> field</td> <td data-bbox="1372 1071 1534 1218">Enter the name for the external network.</td> </tr> <tr> <td data-bbox="1242 1228 1372 1375"><b>Subnet</b> field</td> <td data-bbox="1372 1228 1534 1375">Enter the Subnet for Provider Network.</td> </tr> <tr> <td data-bbox="1242 1386 1372 1554"><b>Network IP Start</b> field</td> <td data-bbox="1372 1386 1534 1554">Enter the start of the floating IPv4 address.</td> </tr> <tr> <td data-bbox="1242 1564 1372 1732"><b>Network IP End</b> field</td> <td data-bbox="1372 1564 1534 1732">Enter the end of the floating IPv4 address.</td> </tr> <tr> <td data-bbox="1242 1743 1372 1852"><b>Network Gateway</b> field</td> <td data-bbox="1372 1743 1534 1852">Enter the IPv4 address for</td> </tr> </tbody> </table>	<b>Network Name</b> field	Enter the name for the external network.	<b>Subnet</b> field	Enter the Subnet for Provider Network.	<b>Network IP Start</b> field	Enter the start of the floating IPv4 address.	<b>Network IP End</b> field	Enter the end of the floating IPv4 address.	<b>Network Gateway</b> field	Enter the IPv4 address for
Name	Description															
	<p>Check one of the check boxes to specify a VMTP network:</p> <ul style="list-style-type: none"> <li>• Provider Network</li> <li>• External Network</li> </ul> <p>For the <b>Provider Network</b> complete the following:</p> <p>Create Blueprint configuration</p>  <table border="1"> <tbody> <tr> <td data-bbox="1242 1071 1372 1218"><b>Network Name</b> field</td> <td data-bbox="1372 1071 1534 1218">Enter the name for the external network.</td> </tr> <tr> <td data-bbox="1242 1228 1372 1375"><b>Subnet</b> field</td> <td data-bbox="1372 1228 1534 1375">Enter the Subnet for Provider Network.</td> </tr> <tr> <td data-bbox="1242 1386 1372 1554"><b>Network IP Start</b> field</td> <td data-bbox="1372 1386 1534 1554">Enter the start of the floating IPv4 address.</td> </tr> <tr> <td data-bbox="1242 1564 1372 1732"><b>Network IP End</b> field</td> <td data-bbox="1372 1564 1534 1732">Enter the end of the floating IPv4 address.</td> </tr> <tr> <td data-bbox="1242 1743 1372 1852"><b>Network Gateway</b> field</td> <td data-bbox="1372 1743 1534 1852">Enter the IPv4 address for</td> </tr> </tbody> </table>	<b>Network Name</b> field	Enter the name for the external network.	<b>Subnet</b> field	Enter the Subnet for Provider Network.	<b>Network IP Start</b> field	Enter the start of the floating IPv4 address.	<b>Network IP End</b> field	Enter the end of the floating IPv4 address.	<b>Network Gateway</b> field	Enter the IPv4 address for					
<b>Network Name</b> field	Enter the name for the external network.															
<b>Subnet</b> field	Enter the Subnet for Provider Network.															
<b>Network IP Start</b> field	Enter the start of the floating IPv4 address.															
<b>Network IP End</b> field	Enter the end of the floating IPv4 address.															
<b>Network Gateway</b> field	Enter the IPv4 address for															

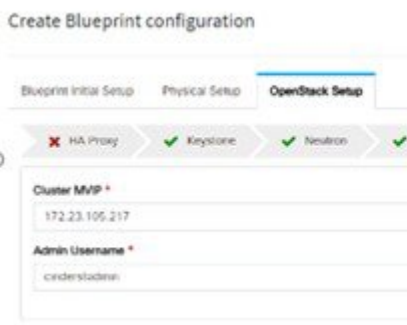
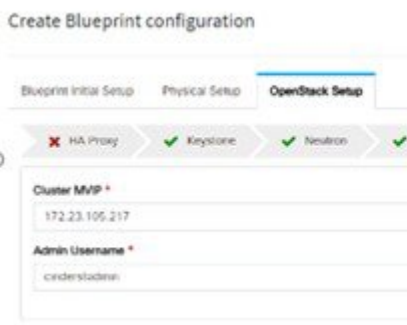
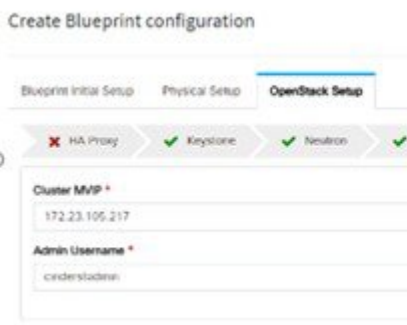
	Command or Action	Purpose									
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1192 331">Name</th> <th data-bbox="1192 275 1494 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 331 1192 415"></td> <td data-bbox="1192 331 1494 415">the Gateway.</td> </tr> <tr> <td data-bbox="854 415 1192 569">DNS Server field</td> <td data-bbox="1192 415 1494 569">Enter the DNS server IPv4 address.</td> </tr> <tr> <td data-bbox="854 569 1192 688">Segmentation ID field</td> <td data-bbox="1192 569 1494 688">Enter the segmentation ID.</td> </tr> </tbody> </table>	Name	Description		the Gateway.	DNS Server field	Enter the DNS server IPv4 address.	Segmentation ID field	Enter the segmentation ID.	<p>For <b>External Network</b> fill in the following details:</p> 
Name	Description										
	the Gateway.										
DNS Server field	Enter the DNS server IPv4 address.										
Segmentation ID field	Enter the segmentation ID.										



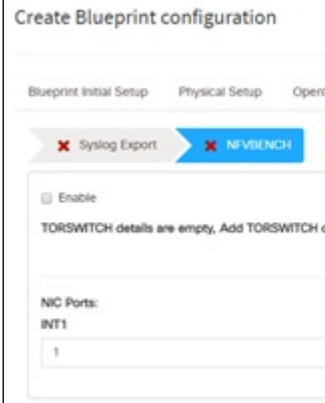
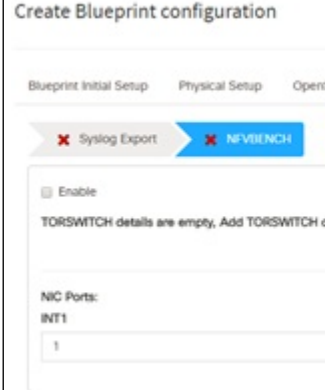
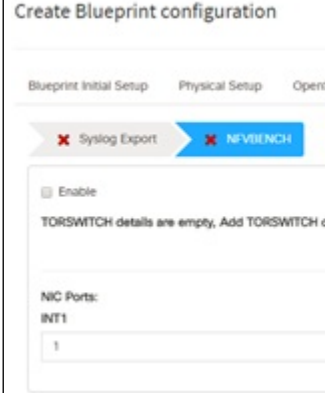
	Command or Action	Purpose			
		<table border="1"> <thead> <tr> <th data-bbox="889 273 1226 325">Name</th> <th data-bbox="1226 273 1534 325">Description</th> </tr> </thead> </table>	Name	Description	
Name	Description				
			<table border="1"> <tr> <td data-bbox="1226 325 1380 483"><b>Network Name</b> field</td> <td data-bbox="1380 325 1534 483">Enter the name for the external network.</td> </tr> </table>	<b>Network Name</b> field	Enter the name for the external network.
<b>Network Name</b> field	Enter the name for the external network.				
			<table border="1"> <tr> <td data-bbox="1226 483 1380 640"><b>Subnet</b> field</td> <td data-bbox="1380 483 1534 640">Enter the Subnet for the external Network.</td> </tr> </table>	<b>Subnet</b> field	Enter the Subnet for the external Network.
<b>Subnet</b> field	Enter the Subnet for the external Network.				
			<table border="1"> <tr> <td data-bbox="1226 640 1380 819"><b>Network IP Start</b> field</td> <td data-bbox="1380 640 1534 819">Enter the start of the floating IPv4 address.</td> </tr> </table>	<b>Network IP Start</b> field	Enter the start of the floating IPv4 address.
<b>Network IP Start</b> field	Enter the start of the floating IPv4 address.				
			<table border="1"> <tr> <td data-bbox="1226 819 1380 997"><b>Network IP End</b> field</td> <td data-bbox="1380 819 1534 997">Enter the end of the floating IPv4 address.</td> </tr> </table>	<b>Network IP End</b> field	Enter the end of the floating IPv4 address.
<b>Network IP End</b> field	Enter the end of the floating IPv4 address.				
			<table border="1"> <tr> <td data-bbox="1226 997 1380 1176"><b>Network Gateway</b> field</td> <td data-bbox="1380 997 1534 1176">Enter the IPv4 address for the Gateway.</td> </tr> </table>	<b>Network Gateway</b> field	Enter the IPv4 address for the Gateway.
<b>Network Gateway</b> field	Enter the IPv4 address for the Gateway.				
			<table border="1"> <tr> <td data-bbox="1226 1176 1380 1354"><b>DNS Server</b> field</td> <td data-bbox="1380 1176 1534 1354">Enter the DNS server IPv4 address.</td> </tr> </table>	<b>DNS Server</b> field	Enter the DNS server IPv4 address.
<b>DNS Server</b> field	Enter the DNS server IPv4 address.				
		<p><b>TLS</b> This optional section will only be visible once TLS is selected from Blueprint Initial Setup Page.</p>	<p><b>TLS</b> has two options:</p> <ul style="list-style-type: none"> <li>• <b>External LB VIP FQDN</b> - -Text field.</li> <li>• <b>External LB VIP TLS</b> True/False. By default this option is false.</li> </ul>		

	Command or Action	Purpose				
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1188 331">Name</th> <th data-bbox="1188 275 1490 331">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 331 1188 1230"> <p>Under the OpenStack setup tab, <b>Vim_admins</b> tab will be visible only when Vim_admins is selected from the <b>Optional Features &amp; Services</b> under the Blueprint Initial setup tab</p> </td> <td data-bbox="1188 331 1490 1230"> <p>Following are the field descriptions for VIM Admins:</p>  <ul style="list-style-type: none"> <li>• <b>User Name</b> - Text field.</li> <li>• <b>Password</b> -Password field. Admin hash password should always start with \$6.</li> </ul> </td> </tr> </tbody> </table>	Name	Description	<p>Under the OpenStack setup tab, <b>Vim_admins</b> tab will be visible only when Vim_admins is selected from the <b>Optional Features &amp; Services</b> under the Blueprint Initial setup tab</p>	<p>Following are the field descriptions for VIM Admins:</p>  <ul style="list-style-type: none"> <li>• <b>User Name</b> - Text field.</li> <li>• <b>Password</b> -Password field. Admin hash password should always start with \$6.</li> </ul>
Name	Description					
<p>Under the OpenStack setup tab, <b>Vim_admins</b> tab will be visible only when Vim_admins is selected from the <b>Optional Features &amp; Services</b> under the Blueprint Initial setup tab</p>	<p>Following are the field descriptions for VIM Admins:</p>  <ul style="list-style-type: none"> <li>• <b>User Name</b> - Text field.</li> <li>• <b>Password</b> -Password field. Admin hash password should always start with \$6.</li> </ul>					

	Command or Action	Purpose																
		<table border="1"> <thead> <tr> <th data-bbox="966 273 1226 325">Name</th> <th data-bbox="1226 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="966 325 1226 829"> <p><b>SwiftStack</b> optional section will be visible once SwiftStack is selected from <b>Blueprint Initial Setup</b> Page. SwiftStack is only supported with KeyStonev2 . If you select Keystonev3, swiftstack will not be available for configuration.</p> </td> <td data-bbox="1226 325 1534 829"> <p>Following are the options that needs to be filled for SwiftStack:</p>  </td> </tr> <tr> <td data-bbox="966 829 1226 997"> <p><b>Cluster End Point</b> field</p> </td> <td data-bbox="1226 829 1534 997"> <p>IP address of PAC <del>(By Account)</del> endpoint.</p> </td> </tr> <tr> <td data-bbox="966 997 1226 1144"> <p><b>Admin User</b> field</p> </td> <td data-bbox="1226 997 1534 1144"> <p>Admin user for swift to authenticate in keystone.</p> </td> </tr> <tr> <td data-bbox="966 1144 1226 1375"> <p><b>Admin Tenant</b> field</p> </td> <td data-bbox="1226 1144 1534 1375"> <p>The service tenant corresponding to the <del>Account</del> <b>Account</b> used by the Swiftstack.</p> </td> </tr> <tr> <td data-bbox="966 1375 1226 1690"> <p><b>Reseller Prefix</b> field</p> </td> <td data-bbox="1226 1375 1534 1690"> <p>Reseller_prefix as configured for Keysone <del>Auth</del> <b>Auth</b> support in Swiftstack. Example: KEY_</p> </td> </tr> <tr> <td data-bbox="966 1690 1226 1795"> <p><b>Admin Password</b> field</p> </td> <td data-bbox="1226 1690 1534 1795"> <p><del>swiftadmin</del> <b>swiftadmin</b></p> </td> </tr> <tr> <td data-bbox="966 1795 1226 1869"> <p><b>Protocol</b></p> </td> <td data-bbox="1226 1795 1534 1869"> <p>http or https</p> </td> </tr> </tbody> </table>	Name	Description	<p><b>SwiftStack</b> optional section will be visible once SwiftStack is selected from <b>Blueprint Initial Setup</b> Page. SwiftStack is only supported with KeyStonev2 . If you select Keystonev3, swiftstack will not be available for configuration.</p>	<p>Following are the options that needs to be filled for SwiftStack:</p> 	<p><b>Cluster End Point</b> field</p>	<p>IP address of PAC <del>(By Account)</del> endpoint.</p>	<p><b>Admin User</b> field</p>	<p>Admin user for swift to authenticate in keystone.</p>	<p><b>Admin Tenant</b> field</p>	<p>The service tenant corresponding to the <del>Account</del> <b>Account</b> used by the Swiftstack.</p>	<p><b>Reseller Prefix</b> field</p>	<p>Reseller_prefix as configured for Keysone <del>Auth</del> <b>Auth</b> support in Swiftstack. Example: KEY_</p>	<p><b>Admin Password</b> field</p>	<p><del>swiftadmin</del> <b>swiftadmin</b></p>	<p><b>Protocol</b></p>	<p>http or https</p>
Name	Description																	
<p><b>SwiftStack</b> optional section will be visible once SwiftStack is selected from <b>Blueprint Initial Setup</b> Page. SwiftStack is only supported with KeyStonev2 . If you select Keystonev3, swiftstack will not be available for configuration.</p>	<p>Following are the options that needs to be filled for SwiftStack:</p> 																	
<p><b>Cluster End Point</b> field</p>	<p>IP address of PAC <del>(By Account)</del> endpoint.</p>																	
<p><b>Admin User</b> field</p>	<p>Admin user for swift to authenticate in keystone.</p>																	
<p><b>Admin Tenant</b> field</p>	<p>The service tenant corresponding to the <del>Account</del> <b>Account</b> used by the Swiftstack.</p>																	
<p><b>Reseller Prefix</b> field</p>	<p>Reseller_prefix as configured for Keysone <del>Auth</del> <b>Auth</b> support in Swiftstack. Example: KEY_</p>																	
<p><b>Admin Password</b> field</p>	<p><del>swiftadmin</del> <b>swiftadmin</b></p>																	
<p><b>Protocol</b></p>	<p>http or https</p>																	

	Command or Action	Purpose												
		<p>9. For SolidFire, enter the following:</p> <table border="1" data-bbox="927 323 1492 1344"> <thead> <tr> <th data-bbox="927 323 1208 380">Name</th> <th data-bbox="1208 323 1492 380">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="927 380 1208 766">                     SolidFire is visible for configuration on day0                       SolidFire is not allowed as a day-2 deployment option                       SolidFire is always available with CEPH.                 </td> <td data-bbox="1208 380 1492 1344">  <table border="1" data-bbox="1214 766 1492 1323"> <tbody> <tr> <td data-bbox="1214 766 1333 926"><b>Cluster MVIP field</b></td> <td data-bbox="1333 766 1492 926">Management IP of SolidFire cluster.</td> </tr> <tr> <td data-bbox="1214 926 1333 1052"><b>Cluster SVIP field</b></td> <td data-bbox="1333 926 1492 1052">Storage VIP of SolidFire cluster.</td> </tr> <tr> <td data-bbox="1214 1052 1333 1167"><b>Admin Username</b></td> <td data-bbox="1333 1052 1492 1167">Admin user on SolidFire cluster</td> </tr> <tr> <td data-bbox="1214 1167 1333 1323"><b>Admin Password</b></td> <td data-bbox="1333 1167 1492 1323">Admin password on SolidFire cluster.</td> </tr> </tbody> </table> </td> </tr> </tbody> </table> <p>10. If <b>Syslog Export</b> or <b>NFVBENCH</b> is selected in <b>Blueprint Initial Setup</b>, the <b>Services Setup</b> pane is enabled for the user to view.</p> <p>Following are the options under <b>Services Setup</b> Tab:</p>	Name	Description	SolidFire is visible for configuration on day0  SolidFire is not allowed as a day-2 deployment option  SolidFire is always available with CEPH.	 <table border="1" data-bbox="1214 766 1492 1323"> <tbody> <tr> <td data-bbox="1214 766 1333 926"><b>Cluster MVIP field</b></td> <td data-bbox="1333 766 1492 926">Management IP of SolidFire cluster.</td> </tr> <tr> <td data-bbox="1214 926 1333 1052"><b>Cluster SVIP field</b></td> <td data-bbox="1333 926 1492 1052">Storage VIP of SolidFire cluster.</td> </tr> <tr> <td data-bbox="1214 1052 1333 1167"><b>Admin Username</b></td> <td data-bbox="1333 1052 1492 1167">Admin user on SolidFire cluster</td> </tr> <tr> <td data-bbox="1214 1167 1333 1323"><b>Admin Password</b></td> <td data-bbox="1333 1167 1492 1323">Admin password on SolidFire cluster.</td> </tr> </tbody> </table>	<b>Cluster MVIP field</b>	Management IP of SolidFire cluster.	<b>Cluster SVIP field</b>	Storage VIP of SolidFire cluster.	<b>Admin Username</b>	Admin user on SolidFire cluster	<b>Admin Password</b>	Admin password on SolidFire cluster.
Name	Description													
SolidFire is visible for configuration on day0  SolidFire is not allowed as a day-2 deployment option  SolidFire is always available with CEPH.	 <table border="1" data-bbox="1214 766 1492 1323"> <tbody> <tr> <td data-bbox="1214 766 1333 926"><b>Cluster MVIP field</b></td> <td data-bbox="1333 766 1492 926">Management IP of SolidFire cluster.</td> </tr> <tr> <td data-bbox="1214 926 1333 1052"><b>Cluster SVIP field</b></td> <td data-bbox="1333 926 1492 1052">Storage VIP of SolidFire cluster.</td> </tr> <tr> <td data-bbox="1214 1052 1333 1167"><b>Admin Username</b></td> <td data-bbox="1333 1052 1492 1167">Admin user on SolidFire cluster</td> </tr> <tr> <td data-bbox="1214 1167 1333 1323"><b>Admin Password</b></td> <td data-bbox="1333 1167 1492 1323">Admin password on SolidFire cluster.</td> </tr> </tbody> </table>	<b>Cluster MVIP field</b>	Management IP of SolidFire cluster.	<b>Cluster SVIP field</b>	Storage VIP of SolidFire cluster.	<b>Admin Username</b>	Admin user on SolidFire cluster	<b>Admin Password</b>	Admin password on SolidFire cluster.					
<b>Cluster MVIP field</b>	Management IP of SolidFire cluster.													
<b>Cluster SVIP field</b>	Storage VIP of SolidFire cluster.													
<b>Admin Username</b>	Admin user on SolidFire cluster													
<b>Admin Password</b>	Admin password on SolidFire cluster.													

	Command or Action	Purpose																
		<table border="1"> <thead> <tr> <th data-bbox="889 273 1209 325">Name</th> <th data-bbox="1209 273 1534 325">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="889 325 1209 1386">Syslog Export</td> <td data-bbox="1209 325 1534 1386"> <p>Following are the options for Syslog Settings:</p> <table border="1"> <tbody> <tr> <td data-bbox="1209 766 1372 861"><b>Remote Host</b></td> <td data-bbox="1372 766 1534 861">Enter Syslog IP address.</td> </tr> <tr> <td data-bbox="1209 861 1372 955"><b>Protocol</b></td> <td data-bbox="1372 861 1534 955">Only UDP is supported.</td> </tr> <tr> <td data-bbox="1209 955 1372 1039"><b>Facility</b></td> <td data-bbox="1372 955 1534 1039">Defaults to local5.</td> </tr> <tr> <td data-bbox="1209 1039 1372 1123"><b>Severity</b></td> <td data-bbox="1372 1039 1534 1123">Defaults to debug.</td> </tr> <tr> <td data-bbox="1209 1123 1372 1207"><b>Clients</b></td> <td data-bbox="1372 1123 1534 1207">Defaults to ELK.</td> </tr> <tr> <td data-bbox="1209 1207 1372 1386"><b>Port</b></td> <td data-bbox="1372 1207 1534 1386">Defaults to 514 but can be modified by the User.</td> </tr> </tbody> </table> </td> </tr> </tbody> </table>	Name	Description	Syslog Export	<p>Following are the options for Syslog Settings:</p> <table border="1"> <tbody> <tr> <td data-bbox="1209 766 1372 861"><b>Remote Host</b></td> <td data-bbox="1372 766 1534 861">Enter Syslog IP address.</td> </tr> <tr> <td data-bbox="1209 861 1372 955"><b>Protocol</b></td> <td data-bbox="1372 861 1534 955">Only UDP is supported.</td> </tr> <tr> <td data-bbox="1209 955 1372 1039"><b>Facility</b></td> <td data-bbox="1372 955 1534 1039">Defaults to local5.</td> </tr> <tr> <td data-bbox="1209 1039 1372 1123"><b>Severity</b></td> <td data-bbox="1372 1039 1534 1123">Defaults to debug.</td> </tr> <tr> <td data-bbox="1209 1123 1372 1207"><b>Clients</b></td> <td data-bbox="1372 1123 1534 1207">Defaults to ELK.</td> </tr> <tr> <td data-bbox="1209 1207 1372 1386"><b>Port</b></td> <td data-bbox="1372 1207 1534 1386">Defaults to 514 but can be modified by the User.</td> </tr> </tbody> </table>	<b>Remote Host</b>	Enter Syslog IP address.	<b>Protocol</b>	Only UDP is supported.	<b>Facility</b>	Defaults to local5.	<b>Severity</b>	Defaults to debug.	<b>Clients</b>	Defaults to ELK.	<b>Port</b>	Defaults to 514 but can be modified by the User.
Name	Description																	
Syslog Export	<p>Following are the options for Syslog Settings:</p> <table border="1"> <tbody> <tr> <td data-bbox="1209 766 1372 861"><b>Remote Host</b></td> <td data-bbox="1372 766 1534 861">Enter Syslog IP address.</td> </tr> <tr> <td data-bbox="1209 861 1372 955"><b>Protocol</b></td> <td data-bbox="1372 861 1534 955">Only UDP is supported.</td> </tr> <tr> <td data-bbox="1209 955 1372 1039"><b>Facility</b></td> <td data-bbox="1372 955 1534 1039">Defaults to local5.</td> </tr> <tr> <td data-bbox="1209 1039 1372 1123"><b>Severity</b></td> <td data-bbox="1372 1039 1534 1123">Defaults to debug.</td> </tr> <tr> <td data-bbox="1209 1123 1372 1207"><b>Clients</b></td> <td data-bbox="1372 1123 1534 1207">Defaults to ELK.</td> </tr> <tr> <td data-bbox="1209 1207 1372 1386"><b>Port</b></td> <td data-bbox="1372 1207 1534 1386">Defaults to 514 but can be modified by the User.</td> </tr> </tbody> </table>	<b>Remote Host</b>	Enter Syslog IP address.	<b>Protocol</b>	Only UDP is supported.	<b>Facility</b>	Defaults to local5.	<b>Severity</b>	Defaults to debug.	<b>Clients</b>	Defaults to ELK.	<b>Port</b>	Defaults to 514 but can be modified by the User.					
<b>Remote Host</b>	Enter Syslog IP address.																	
<b>Protocol</b>	Only UDP is supported.																	
<b>Facility</b>	Defaults to local5.																	
<b>Severity</b>	Defaults to debug.																	
<b>Clients</b>	Defaults to ELK.																	
<b>Port</b>	Defaults to 514 but can be modified by the User.																	

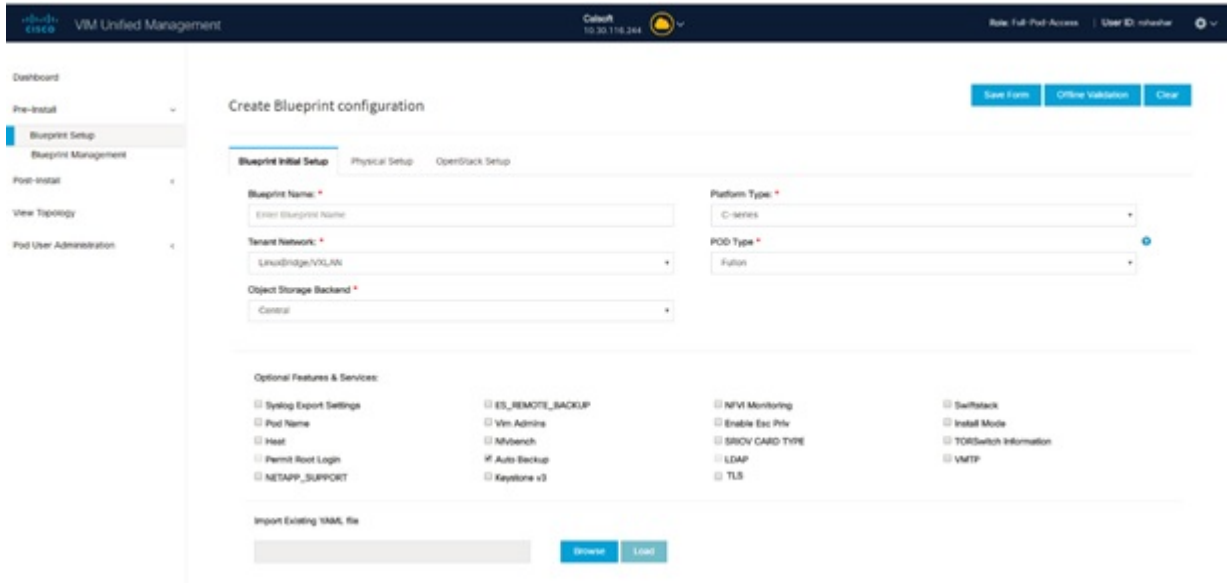
	Command or Action	Purpose					
		<table border="1"> <thead> <tr> <th data-bbox="854 275 1170 327">Name</th> <th data-bbox="1170 275 1492 327">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="854 327 1170 1629">NFVBENCH</td> <td data-bbox="1170 327 1492 1629"> <p>NFVBENCH enable checkbox which by default is <i>False</i>.</p>  <p>Add ToR information connected to switch:</p> <ul style="list-style-type: none"> <li>• Select a TOR Switch and enter the Switch name.</li> <li>• Enter the port number. For example: eth1/5. VTEP VLANS (mandatory and needed only for VXLAN): Enter 2 different VLANs for VLAN1 and VLAN2</li> <li>• NIC Ports: INT1 and INT2 optional input. Enter the 2 port numbers of the 4-port 10G Intel NIC at the management node used for the NFVBench.</li> </ul> </td> </tr> </tbody> </table>	Name	Description	NFVBENCH	<p>NFVBENCH enable checkbox which by default is <i>False</i>.</p>  <p>Add ToR information connected to switch:</p> <ul style="list-style-type: none"> <li>• Select a TOR Switch and enter the Switch name.</li> <li>• Enter the port number. For example: eth1/5. VTEP VLANS (mandatory and needed only for VXLAN): Enter 2 different VLANs for VLAN1 and VLAN2</li> <li>• NIC Ports: INT1 and INT2 optional input. Enter the 2 port numbers of the 4-port 10G Intel NIC at the management node used for the NFVBench.</li> </ul>	
Name	Description						
NFVBENCH	<p>NFVBENCH enable checkbox which by default is <i>False</i>.</p>  <p>Add ToR information connected to switch:</p> <ul style="list-style-type: none"> <li>• Select a TOR Switch and enter the Switch name.</li> <li>• Enter the port number. For example: eth1/5. VTEP VLANS (mandatory and needed only for VXLAN): Enter 2 different VLANs for VLAN1 and VLAN2</li> <li>• NIC Ports: INT1 and INT2 optional input. Enter the 2 port numbers of the 4-port 10G Intel NIC at the management node used for the NFVBench.</li> </ul>						
		ENABLE_ESC_PRIV	<p>Enable the checkbox to set it as True. By default it is <i>False</i>.</p>				

# Creating a Blueprint for C-Series Server Platform

Create a Cisco VIM Insight User Account and register the respective Pod.

- Step 1** Log-in to **CISCO VIM Insight**.
- Step 2** In the **Navigation** pane, expand the **Pre-Install Section**.
- Step 3** Click **Blueprint Setup**.
- Step 4** To create a **C Series Blueprint**:

1. On the **Blueprint Initial Setup** page of the Cisco VIM Insight, complete the following fields:



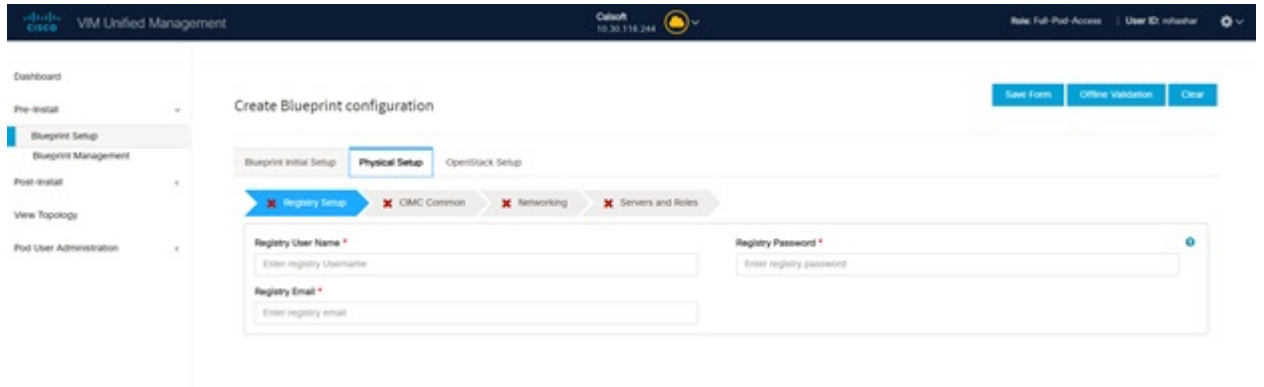
Name	Description
Blueprint Name field.	Enter the name for the blueprint configuration.
Platform Type drop-down list	Choose one of the following platform types: <ul style="list-style-type: none"> <li>• B-Series (By default)</li> <li>• C-Series ( Select C Series)</li> </ul>

Name	Description
<b>Tenant Network</b> drop-down list	<p>Choose one of the following tenant network types:</p> <ul style="list-style-type: none"> <li>• Linux Bridge/VXLAN</li> <li>• OVS/VLAN</li> <li>• VTS/VLAN</li> <li>• VPP/VLAN</li> <li>• ACI/VLAN</li> </ul> <p><b>Note</b> when VTS/VLAN or ACI/VLAN is selected then respective tabs are available on Blueprint setup. When Mechanism driver OVS or ACI is selected, VM_HUGEPAGE_PERCENTAGE field is enabled for all standalone compute nodes, when NFV_HOSTS is enabled.</p>
<b>Pod Type</b> drop-down list	<p>Choose one of the following pod type :</p> <ul style="list-style-type: none"> <li>• Fullon(By Default)</li> <li>• Micro</li> <li>• UMHC</li> <li>• NGENAHC</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• UMHC pod type is only supported for OVS/VLAN tenant type.</li> <li>• NGENAHC is supported for VPP/VLAN tenant type with no SRIOV</li> <li>• Pod type micro is supported for OVS/VLAN, ACI/VLAN,VPP/VLAN.</li> </ul>
<b>Ceph Mode</b> drop-down list	<p>Choose one of the following Ceph types:</p> <ul style="list-style-type: none"> <li>• Dedicated (By Default)</li> <li>• Central. Central is not supported in Production</li> </ul>
<b>Optional and Services Features</b> checkbox	<p>Swiftstack, LDAP, Syslog Export Settings, Install Mode, TorSwitch Information, TLS, NFVMON, Pod Name, VMTP, NFVBench, Autbackup, Heat, Keystone v3, Enable Esc Priv.</p> <p>If any one is selected, the corresponding section is visible in various Blueprint sections.</p> <p>By default all features are disabled except Auto Backup.</p>



Name	Description
<b>Import Existing YAML file</b>	If you have an existing C Series YAML file you can use this feature to upload the file.  Insight will automatically fill in the fields and any missed mandatory field will be highlighted in the respective section.

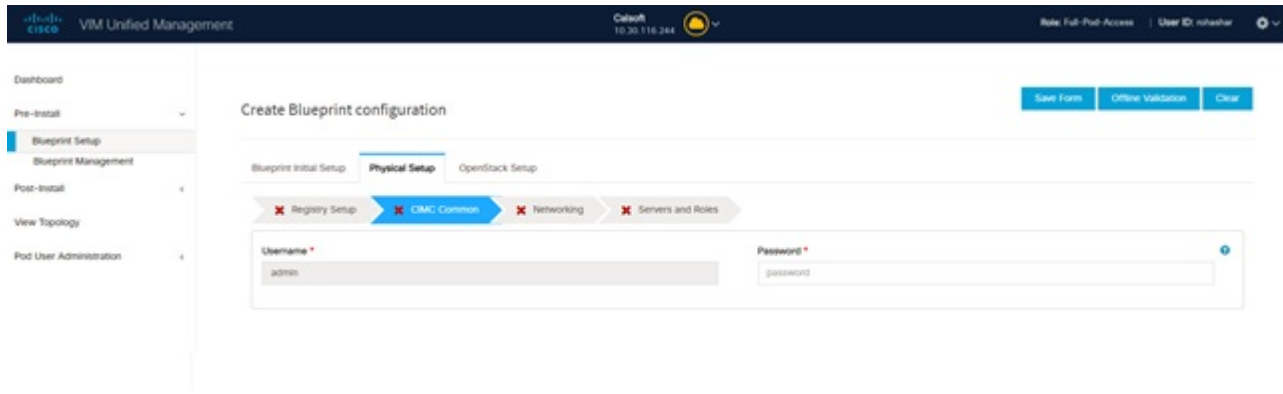
- Click **Physical Setup** to advance to the **Registry Setup** configuration page. Fill in the following details for Registry Setup:



Name	Description
<b>Registry User Name</b> text field	User-Name for Registry ( <b>Mandatory</b> ).
<b>Registry Password</b> text field	Password for Registry ( <b>Mandatory</b> ).
<b>Registry Email</b> text field	Email ID for Registry ( <b>Mandatory</b> ).

Once all the mandatory fields are filled the **Validation Check Registry Page** will be changed to a Green Tick.

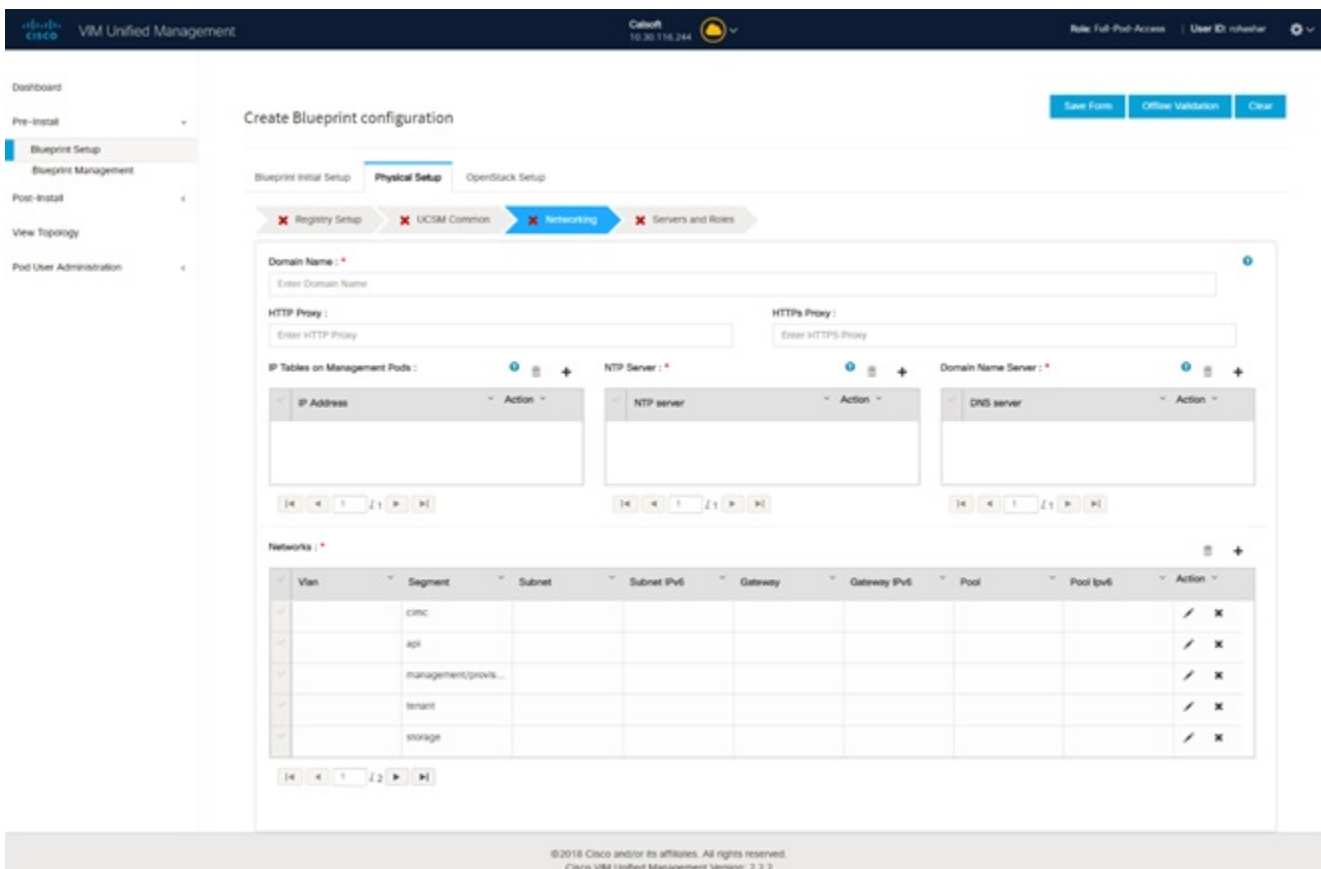
- Click **CIMC Common Tab** and complete the following fields:



Name	Description
<b>User Name</b> disabled field	By default value is Admin.

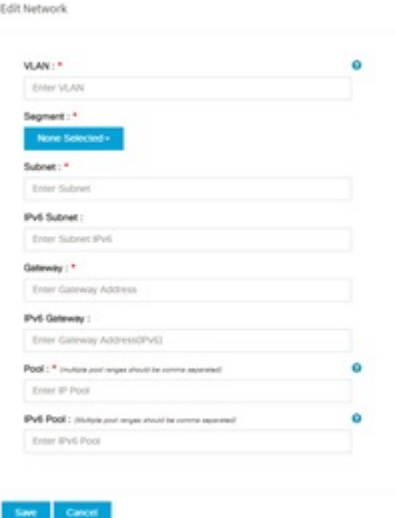
<b>Password</b> text field	Enter Password for UCSM Common ( <b>Mandatory</b> ).
----------------------------	--

4. Click **Networking** to advance to the networking section of the Blueprint.



Name	Description
<b>Domain Name</b> field	Enter the domain name. ( <b>Mandatory</b> )
<b>HTTP Proxy Server</b> field	If your configuration uses an HTTP proxy server, enter the IP address of the server.
<b>HTTPS Proxy Server</b> field	If your configuration uses an HTTPS proxy server, enter the IP address of the server.
<b>IP Tables on Management Pods</b>	Specifies the list of IP Address with Mask.
<b>NTP Servers</b> field	Enter a maximum of four and minimum of one IPv4 and/or IPv6 addresses in the table.
<b>Domain Name Servers</b> field	Enter a maximum of three and minimum of one IPv4 and/or IPV6 addresses.

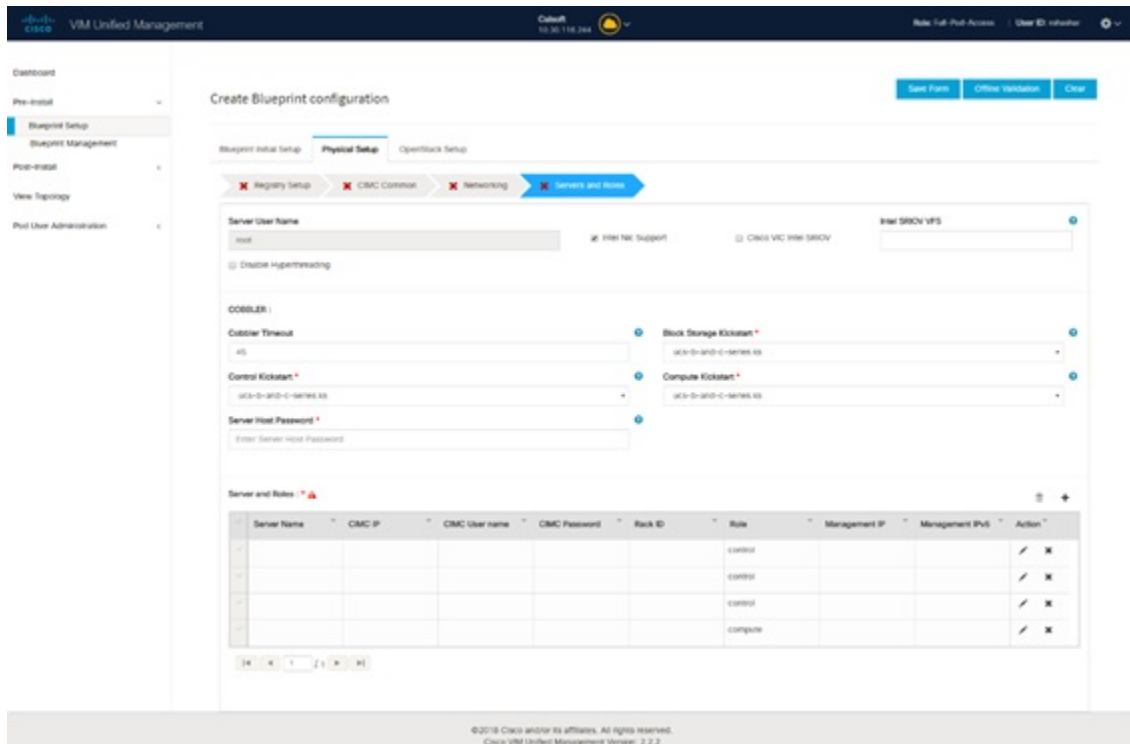
Name	Description
Networks table	

Name	Description
	<p>Network table is pre-populated with Segments. To add Networks you can either clear all the table with <b>Delete all</b> or click <b>edit</b> icon for each segment and fill in the details.</p> <p>You can add, edit, or delete network information in the table.</p>  <ul style="list-style-type: none"> <li>• Click <b>Add (+)</b> to add new entries (networks) to the table.</li> <li>• Specify the following fields in the Edit Entry to Networks dialog:</li> </ul>
<b>Name</b>	<b>Description</b>
VLAN field	Enter the <b>VLAN ID</b> . For Segment - Provider, the VLAN ID value is 'none'.
Segment drop-down list	When you add/edit new segment then following segments types are available in the form of dropdown list and you can select only one. <ul style="list-style-type: none"> <li>• API</li> <li>• Management/provision</li> <li>• Tenant</li> </ul>

Name	Description	
		<ul style="list-style-type: none"> <li>• Storage</li> <li>• External</li> <li>• Provider</li> <li>• ACIINFRA</li> </ul> <p><b>Note</b>     <b>Acinfra</b> segment is available only when ACI/VLAN tenant type is selected) Depending upon the segment some of the entries below are not needed. Please refer to the example file in openstack-configs dir for details.</p>
	<b>Subnet</b> field	Enter the IPv4 address for the subnet.
	<b>IPv6 Subnet</b> field	Enter IPv6 Address. This field will be available only for Management provision and API
	<b>Gateway</b> field	Enter the IPv4 address for the Gateway.
	<b>Gateway IPv6</b> field	Enter the IPv6 address for the gateway. This will support for API and management provision.
	<b>Pool</b> field	Enter the pool information in the required format, for example: 10.1.15-10.1.1.10,102.15-102.1.10  This field is available only for the Mgmt/Provision, Storage, and Tenant segments.
	<b>IPv6 Pool</b> field	

Name	Description
	Enter the pool information in the required format. For example: 10.1.15-10.1.1.10,10.2.15-10.2.1.10
	Click <b>Save</b> .

- On the **Servers and Roles** page of the Cisco VIM Suite wizard, a pre-populated table filled with Roles : Control, Compute and Block Storage (Only if CEPH Dedicated is selected in Blueprint Initial Setup is available).



**Note** If you choose mechanism driver as OVS or ACI, VM\_HUGEPAGE\_PERCENTAGE field column is available for compute nodes, where you can fill values from 0 to 100%, when NFV\_HOSTS: ALL is chosen.

Name	Description
Server User Name field	Enter the username of the Server.
Disable Hyperthreading	Default value is false. You can set it as true or false.

Name	Description	
Cobbler	Enter the Cobbler details in the following fields:	
	Name	Description
	Cobbler Timeout field	The default value is 45 min. This is an optional parameter. Timeout is displayed in minutes, and its value ranges from 30 to 120.
	Block Storage Kickstart field	Kickstart file for Storage Node.
	Admin Password Hash field	Enter the Admin Password. Password should be Alphanumeric. Password should contain minimum 8 characters and maximum of 32 characters.
	Cobbler Username field	Enter the cobbler username to access the cobbler server.
	Control Kickstart field	Kickstart file for Control Node.
	Compute Kickstart field	Kickstart file for Compute Node.
Cobbler Admin Username field	Enter the admin username of the Cobbler.	

Name	Description
<p><b>Add Entry to Servers and Roles</b></p> <p><b>Note</b> when Pod type micro is selected then all the three servers will be associated with control, compute and block storage role.</p> <p>For Example:</p> <p>Roles</p> <ul style="list-style-type: none"> <li>• Block Storage                             <ul style="list-style-type: none"> <li>• -Server 1</li> <li>• -Server 2</li> <li>• -Server 3</li> </ul> </li> <li>• Control                             <ul style="list-style-type: none"> <li>• -Server 1</li> <li>• -Server 2</li> <li>• -Server 3</li> </ul> </li> <li>• Compute                             <ul style="list-style-type: none"> <li>• -Server 1</li> <li>• -Server 2</li> <li>• -Server 3</li> </ul> </li> </ul> <p><b>Note</b> When Pod type UMHC is selected then auto ToR configuration is not supported and the ToR info at server and roles level is not allowed to be entered.</p>	



Name	Description																
	<p>Click <b>Edit</b> or + to add a new server and role to the table.</p> <p>If mechanism driver is either OVS or ACI, an additional optional field VM_HUGEPAGE_PERCENTAGE is shown when compute role is chosen; This option is only valid when NFV_HOSTS is set to ALL; If no value is entered then the global value of VM_HUGEPAGE_PERCENTAGE is used.</p> <div data-bbox="906 527 1437 1323"> <p>Server And Roles</p> </div> <table border="1" data-bbox="898 1352 1526 1869"> <tbody> <tr> <td><b>Server Name</b></td> <td>Entry the name of the server.</td> </tr> <tr> <td><b>Rack ID</b> field</td> <td>The rack ID for the server.</td> </tr> <tr> <td><b>VIC Slot</b> field</td> <td>Enter a VIC Slot.</td> </tr> <tr> <td><b>CIMC IP</b> field</td> <td>Enter a IP address.</td> </tr> <tr> <td><b>CIMC Username</b> field</td> <td>Enter a Username.</td> </tr> <tr> <td><b>CIMC Password</b> field</td> <td>Enter a Password for CIMC.</td> </tr> <tr> <td>Select the <b>Role</b> from the drop down list</td> <td>Choose Control or Compute or Block Storage from the drop-down list.</td> </tr> <tr> <td><b>Management IP</b></td> <td>It is an optional field but if</td> </tr> </tbody> </table>	<b>Server Name</b>	Entry the name of the server.	<b>Rack ID</b> field	The rack ID for the server.	<b>VIC Slot</b> field	Enter a VIC Slot.	<b>CIMC IP</b> field	Enter a IP address.	<b>CIMC Username</b> field	Enter a Username.	<b>CIMC Password</b> field	Enter a Password for CIMC.	Select the <b>Role</b> from the drop down list	Choose Control or Compute or Block Storage from the drop-down list.	<b>Management IP</b>	It is an optional field but if
<b>Server Name</b>	Entry the name of the server.																
<b>Rack ID</b> field	The rack ID for the server.																
<b>VIC Slot</b> field	Enter a VIC Slot.																
<b>CIMC IP</b> field	Enter a IP address.																
<b>CIMC Username</b> field	Enter a Username.																
<b>CIMC Password</b> field	Enter a Password for CIMC.																
Select the <b>Role</b> from the drop down list	Choose Control or Compute or Block Storage from the drop-down list.																
<b>Management IP</b>	It is an optional field but if																

Name	Description	
		provided for one Server then it is mandatory to provide it for other Servers as well.
	<b>Management IPv6</b>	Routable and valid IPv6 address. It is an optional field but if provided for one server then it is mandatory for all other servers as well.
Click <b>Save or Add</b> .	On clicking <b>Save or Add</b> all information related to Servers and Roles gets saved.	
If <b>Configure ToR</b> checkbox is <b>True</b> with at-least one switch detail, these fields will be displayed for each server and this is similar to DP Tor: <b>Port Channel and Switch Name (Mandatory if Configure ToR is true)</b>	<ul style="list-style-type: none"> <li>• <b>Port Channel</b> field</li> <li>• <b>Switch Name</b> field</li> <li>• <b>Switch Port Info</b> field</li> </ul>	<ul style="list-style-type: none"> <li>• Enter the port channel input.</li> <li>• Enter the switch name.</li> <li>• Enter the switch port information.</li> </ul>
DP ToR (Only for Control and Compute) : Mandatory if Intel NIC and Configure TOR is True.	<ul style="list-style-type: none"> <li>• <b>Port Channel</b> field</li> <li>• <b>Switch Name</b> field</li> <li>• <b>Switch Port Info</b> field</li> </ul>	<ul style="list-style-type: none"> <li>• Enter the port channel input.</li> <li>• Enter the switch name.</li> <li>• Enter the switch port information.</li> </ul>
<b>SRIOV TOR INFO</b> (Only for Compute Nodes). It is mandatory in server and roles if Intel NIC and Configure TOR is True. with TOR TYPE Nexus. For TOR TYPE NCS-5500 these fields are optional <b>Switch Name (Mandatory if Configure ToR is true)</b> . This field appears only when Intel NIC support is true, as Auto TOR config is not supported in VIC_NIC combo	<ul style="list-style-type: none"> <li>• <b>Switch Name</b> field</li> <li>• <b>Switch Port Info</b> field</li> </ul>	<ul style="list-style-type: none"> <li>• Enter the switch name.</li> <li>• Enter the switch port information.</li> </ul>
<b>Intel SRIOV VFS</b> (valid for Intel NIC testbeds) and can be integer.	For SRIOV support for Intel NIC. By Default, SRIOV support is disabled. To enable, define a value in the range # * 1-32 when INTEL_NIC_SUPPORT is set True (X710 Max VFs = 32) # * 1-63 when CISCO_VIC_INTEL_SRIOV is set True (X520 Max VFs = 63)	
INTEL_SRIOV_PHYS_PORTS (valid for Intel NIC test beds) and can be of value 2 or 4 (default is 2)	In some cases the # of Physical SRIOV port needed is 4; to meet that requirement, define the following: # this is optional, if nothing is defined code will assume it to be 2; the only 2 integer values this parameter # takes is 2 or 4 and is true when INTEL_NIC_SUPPORT is True and INTEL_SRIOV_VFS is valid.. For NCS-5500 this value is set to 4 and is non-editable.	

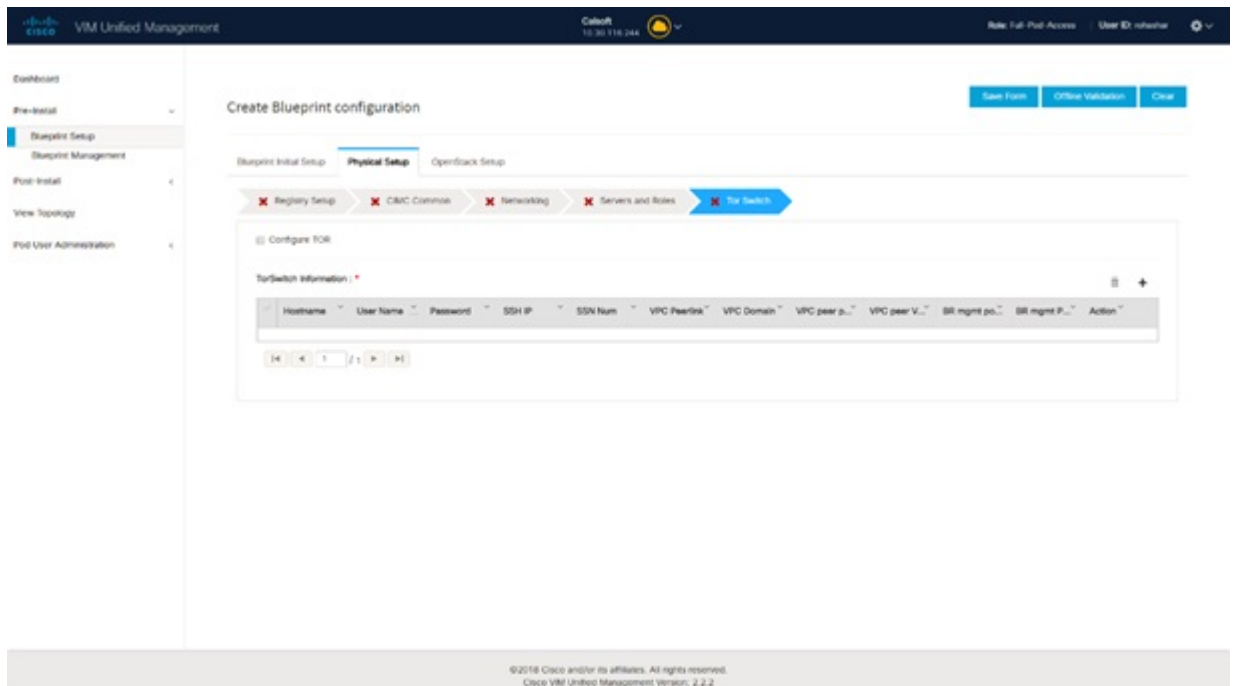
Name	Description
Click <b>Save or Add</b> .	If all mandatory fields are filled click <b>Save or Add</b> to add information on Servers and Roles.
Disable Hyperthreading	Default value is false. You can set it as true or false.
Click <b>Save</b>	

**Note** Maximum two ToR info needs to be configured for each connection type on each node (control, compute and block\_storage node).

**Note** If pod type UMHC is selected then CISCO\_VIC\_INTEL\_SRIOV is enabled to be TRUE. CISCO\_VIC\_INTEL\_SRIOV is also supported on Micro pod with expanded computes

**Note** For Tenant type **ACI/VLAN**, port channel for each ToR port will not be available in servers and roles, as APIC will automatically assign port-channel numbers. Also, for ACI in full on mode you can select Intel NIC Support in the “Servers and Roles” section.

- Click **ToR Switch** checkbox in **Blueprint Initial Setup** to enable the **TOR SWITCH** configuration page. It is an **Optional** section in Blueprint Setup but once all the fields are filled in then it will become a part of the Blueprint.



Name	Description
<b>Configure ToR</b> optional checkbox.	Enabling this checkbox, changes the configure ToR section from false to true.
<b>Note</b> If UMHC is selected as podtype, configure TOR is not allowed.	<b>Note</b> Configure tor is true then ToR switch info maps in servers

Name	Description
<b>ToR Switch Information</b> mandatory table if you want to enter ToR information.	

Name	Description														
	<p>Click (+) to add information for ToR Switch.</p> <p>Switch Details</p> <div style="border: 1px solid #ccc; padding: 10px;"> <p><b>Hostname *</b> ⓘ</p> <input type="text" value="Enter Switch Hostname"/> <p><b>Username *</b> ⓘ</p> <input type="text" value="Enter Switch Username"/> <p><b>Password *</b> ⓘ</p> <input type="text" value="Enter Password"/> <p><b>SSH-IP *</b> ⓘ</p> <input type="text" value="Enter IP Address"/> <p><b>SSN Num</b> ⓘ</p> <input type="text" value="Enter SSN Num"/> <p><b>VPC Peer Keepalive</b> ⓘ</p> <input type="text" value="Enter IP Address"/> <p><b>VPC Domain</b> ⓘ</p> <input type="text" value="Enter VPC Domain"/> <p><b>VPC Peer Port Info</b> ⓘ</p> <input type="text" value="Enter VPC Port"/> <p><b>VPC Peer VLAN Info</b> ⓘ</p> <input type="text" value="Enter VPC VLAN Info"/> <p><b>BR Management Port Info</b> ⓘ</p> <input type="text" value="Enter BR Port Info"/> <p><b>BR Management PO Info</b> ⓘ</p> <input type="text" value="Enter BR PO Info"/> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p> </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th data-bbox="846 1373 1187 1428">Name</th> <th data-bbox="1187 1373 1515 1428">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="846 1428 1187 1482"><b>Name</b></td> <td data-bbox="1187 1428 1515 1482">ToR switch name.</td> </tr> <tr> <td data-bbox="846 1482 1187 1537"><b>Username</b></td> <td data-bbox="1187 1482 1515 1537">ToR switch username.</td> </tr> <tr> <td data-bbox="846 1537 1187 1591"><b>Password</b></td> <td data-bbox="1187 1537 1515 1591">ToR switch password.</td> </tr> <tr> <td data-bbox="846 1591 1187 1646"><b>SSH IP</b></td> <td data-bbox="1187 1591 1515 1646">ToR switch SSH IP.</td> </tr> <tr> <td data-bbox="846 1646 1187 1701"><b>SSN Num</b></td> <td data-bbox="1187 1646 1515 1701">ToR switch ssn num.</td> </tr> <tr> <td data-bbox="846 1701 1187 1841"><b>VPC Peer Keepalive</b></td> <td data-bbox="1187 1701 1515 1841">Peer Management IP. You cannot define if there is no peer.</td> </tr> </tbody> </table>	Name	Description	<b>Name</b>	ToR switch name.	<b>Username</b>	ToR switch username.	<b>Password</b>	ToR switch password.	<b>SSH IP</b>	ToR switch SSH IP.	<b>SSN Num</b>	ToR switch ssn num.	<b>VPC Peer Keepalive</b>	Peer Management IP. You cannot define if there is no peer.
Name	Description														
<b>Name</b>	ToR switch name.														
<b>Username</b>	ToR switch username.														
<b>Password</b>	ToR switch password.														
<b>SSH IP</b>	ToR switch SSH IP.														
<b>SSN Num</b>	ToR switch ssn num.														
<b>VPC Peer Keepalive</b>	Peer Management IP. You cannot define if there is no peer.														

Name	Description	
	<b>VPC Domain</b>	Cannot define if there is no peer.
	<b>VPC Peer Port Info</b>	Interface for vpc peer ports.
	<b>VPC Peer VLAN Info</b>	VLAN ids for vpc peer ports (optional).
	<b>BR Management Port Info</b>	Management interface of build node.
	<b>BR Management PO Info</b>	Port channel number for management interface of build node.
	<b>BR Management VLAN info</b>	VLAN id for management interface of build node (access).
Click <b>Save</b> .		

**Note** When tenant type ACI/VLAN is selected, the TOR switch information table differs and is mandatory.

Name	Description	
<b>Configure ToR</b> optional checkbox. <b>Note</b> If UMHC is selected as podtype, configure TOR is not allowed.	Enabling this checkbox, changes the configure ToR section from false to true. <b>Note</b> Configure tor is true then ToR switch info maps in servers	

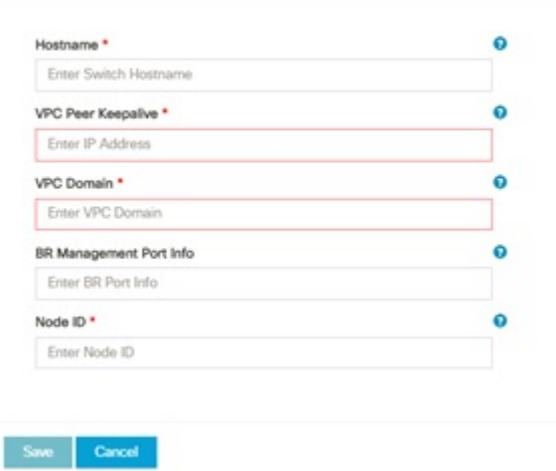
Name	Description
<b>ToR Switch Information</b> mandatory table if you want to enter ToR information.	

Name	Description														
	<p>Click (+) to add information for ToR Switch.</p> <p>Switch Details</p> <div style="border: 1px solid #ccc; padding: 10px;"> <p><b>Hostname *</b> ⓘ</p> <input type="text" value="Enter Switch Hostname"/> <p><b>Username *</b> ⓘ</p> <input type="text" value="Enter Switch Username"/> <p><b>Password *</b> ⓘ</p> <input type="text" value="Enter Password"/> <p><b>SSH-IP *</b> ⓘ</p> <input type="text" value="Enter IP Address"/> <p><b>SSN Num</b> ⓘ</p> <input type="text" value="Enter SSN Num"/> <p><b>VPC Peer Keepalive</b> ⓘ</p> <input type="text" value="Enter IP Address"/> <p><b>VPC Domain</b> ⓘ</p> <input type="text" value="Enter VPC Domain"/> <p><b>VPC Peer Port Info</b> ⓘ</p> <input type="text" value="Enter VPC Port"/> <p><b>VPC Peer VLAN Info</b> ⓘ</p> <input type="text" value="Enter VPC VLAN Info"/> <p><b>BR Management Port Info</b> ⓘ</p> <input type="text" value="Enter BR Port Info"/> <p><b>BR Management PO Info</b> ⓘ</p> <input type="text" value="Enter BR PO Info"/> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p> </div> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th data-bbox="797 1373 1146 1430">Name</th> <th data-bbox="1146 1373 1489 1430">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="797 1430 1146 1486"><b>Name</b></td> <td data-bbox="1146 1430 1489 1486">ToR switch name.</td> </tr> <tr> <td data-bbox="797 1486 1146 1543"><b>Username</b></td> <td data-bbox="1146 1486 1489 1543">ToR switch username.</td> </tr> <tr> <td data-bbox="797 1543 1146 1600"><b>Password</b></td> <td data-bbox="1146 1543 1489 1600">ToR switch password.</td> </tr> <tr> <td data-bbox="797 1600 1146 1656"><b>SSH IP</b></td> <td data-bbox="1146 1600 1489 1656">ToR switch SSH IP.</td> </tr> <tr> <td data-bbox="797 1656 1146 1713"><b>SSN Num</b></td> <td data-bbox="1146 1656 1489 1713">ToR switch ssn num.</td> </tr> <tr> <td data-bbox="797 1713 1146 1843"><b>VPC Peer Keepalive</b></td> <td data-bbox="1146 1713 1489 1843">Peer Management IP. You cannot define if there is no peer.</td> </tr> </tbody> </table>	Name	Description	<b>Name</b>	ToR switch name.	<b>Username</b>	ToR switch username.	<b>Password</b>	ToR switch password.	<b>SSH IP</b>	ToR switch SSH IP.	<b>SSN Num</b>	ToR switch ssn num.	<b>VPC Peer Keepalive</b>	Peer Management IP. You cannot define if there is no peer.
Name	Description														
<b>Name</b>	ToR switch name.														
<b>Username</b>	ToR switch username.														
<b>Password</b>	ToR switch password.														
<b>SSH IP</b>	ToR switch SSH IP.														
<b>SSN Num</b>	ToR switch ssn num.														
<b>VPC Peer Keepalive</b>	Peer Management IP. You cannot define if there is no peer.														



Name	Description	
	<b>VPC Domain</b>	Cannot define if there is no peer.
	<b>VPC Peer Port Info</b>	Interface for vpc peer ports.
	<b>VPC Peer VLAN Info</b>	VLAN ids for vpc peer ports (optional).
	<b>BR Management Port Info</b>	Management interface of build node.
	<b>BR Management PO Info</b>	Port channel number for management interface of build node.
	<b>BR Management VLAN info</b>	VLAN id for management interface of build node (access).
Click <b>Save</b> .		

**Note** When the Tenant type ACI/VLAN is selected, the ToR switch information table differs and is mandatory.

Name	Description										
<p><b>Configure ToR</b></p>	<p>Is not checked, as by default ACI will configure the ToRs</p> <p>Switch Details</p>  <table border="1" data-bbox="894 911 1484 1320"> <tbody> <tr> <td><b>Host Name</b></td> <td>ToR switch name.</td> </tr> <tr> <td><b>VPC Peer keep alive</b></td> <td>Enter Peer must be exist pair.</td> </tr> <tr> <td><b>VPC Domain</b></td> <td>Enter an integer.</td> </tr> <tr> <td><b>BR management port info</b></td> <td>Enter BR management port info eg. Eth1/19 ,atleast one pair to be exist.</td> </tr> <tr> <td><b>Enter Node ID</b></td> <td>Entered integer must be unique.</td> </tr> </tbody> </table>	<b>Host Name</b>	ToR switch name.	<b>VPC Peer keep alive</b>	Enter Peer must be exist pair.	<b>VPC Domain</b>	Enter an integer.	<b>BR management port info</b>	Enter BR management port info eg. Eth1/19 ,atleast one pair to be exist.	<b>Enter Node ID</b>	Entered integer must be unique.
<b>Host Name</b>	ToR switch name.										
<b>VPC Peer keep alive</b>	Enter Peer must be exist pair.										
<b>VPC Domain</b>	Enter an integer.										
<b>BR management port info</b>	Enter BR management port info eg. Eth1/19 ,atleast one pair to be exist.										
<b>Enter Node ID</b>	Entered integer must be unique.										

**Note** If TOR\_TYPE is selected as NCS-5500, the TOR switch information table differs and is mandatory.

Name	Description
<p><b>Configure ToR</b> optional checkbox</p> <p><b>Note</b> If NSC-5500 is selected as TOR_TYPE, configure TOR is set as mandatory.</p>	<p>Enabling this checkbox, changes the configure ToR section from false to true.</p> <p><b>Note</b> Configure TOR is true then ToR switchinfo maps in servers.</p>

Name	Description
If you want to enter NCS details fill in the <b>NCS-5500 Information</b> table.	

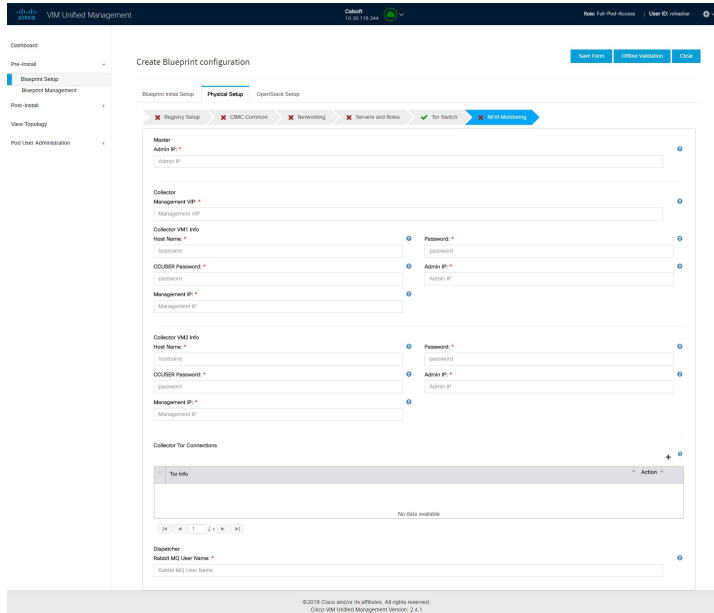
Name	Description
	<p>Click (+) to add information for NCS-500 Switch.</p> <p>Switch Details</p> <div style="border: 1px solid #ccc; padding: 10px;"> <p><b>Hostname *</b> <span style="float: right;">+</span></p> <input type="text" value="Enter Switch Hostname"/> <p><b>Username *</b> <span style="float: right;">+</span></p> <input type="text" value="Enter Switch Username"/> <p><b>Password *</b> <span style="float: right;">+</span></p> <input type="text" value="Enter Password"/> <p><b>SSH-IP *</b> <span style="float: right;">+</span></p> <input type="text" value="Enter IP Address"/> <p><b>VPC Peer Keepalive</b> <span style="float: right;">+</span></p> <input type="text" value="Enter IP Address"/> <p><b>VPC Peer Port Info</b> <span style="float: right;">+</span></p> <input type="text" value="Enter VPC Port"/> <p><b>VPC Peer Port Address</b> <span style="float: right;">+</span></p> <input type="text" value="Enter VPC Port Address"/> <p><b>ISIS Loopback Address</b> <span style="float: right;">+</span></p> <input type="text" value="Enter ISIS Loopback Address"/> <p><b>ISIS Net Entity Title</b> <span style="float: right;">+</span></p> <input type="text" value="Enter ISIS net entity title"/> <p><b>ISIS Prefix SID</b> <span style="float: right;">+</span></p> <input type="text" value="Enter ISIS Prefix SID"/> <p><b>BR Management Port Info</b> <span style="float: right;">+</span></p> <input type="text" value="Enter BR Port Info"/> <p><b>BR Management PO Info</b> <span style="float: right;">+</span></p> <input type="text" value="Enter BR PO Info"/> <p style="text-align: right;"> <input type="button" value="Save"/> <input type="button" value="Cancel"/> </p> </div>
<b>Name</b>	<b>Description</b>
<b>Name</b>	Enter the NCS-5500 hostname.
<b>User Name</b>	Enter the NCS-5500 username.
<b>Password</b>	Enter the NCS-5500 password.
<b>SSH IP</b>	Enter the NCS-5500 ssh IP Address.
<b>VPC Peer Link</b>	Peer management IP.

Name	Description	
	<b>Name</b>	<b>Description</b>
	<b>BR Management PO Info</b>	Port channel number for management interface of build node.
	<b>BR Management VLAN info</b>	VLAN id for management interface of build node (access).
	<b>VPC Peer Port Info</b>	Interface for vpc peer ports.
	<b>VPC Peer Port Address</b>	Address for ISIS exchange.
	<b>ISIS Loopback Interface address</b>	ISIS loopback IP Address.
	<b>ISIS net entity title</b>	Enter a String.
	<b>ISIS prefix SID</b>	Integer between 16000 to 1048575.

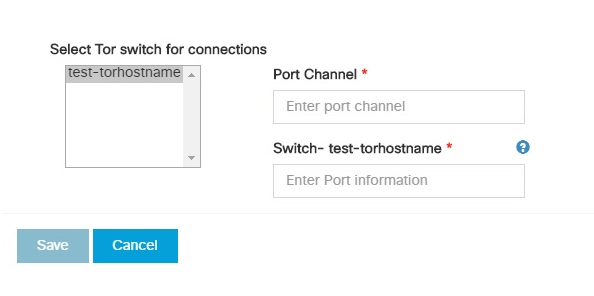
When TOR-TYPE selected as NCS-5500 and 2 NCS-5500 are configured it is mandatory to configure MULTI\_SEGMENT\_ROUTING\_INFO

Name	Description
<b>BGP AS Number</b> field	Integer between 1 to 65535.
<b>ISIS Area Tag</b> field	A valid string.
<b>Loopback Interface name</b> field	Loopback Interface name.
<b>API bundle ID</b> field	Integer between 1 to 65535.
<b>API bridge domain</b> field	String (Optional, only needed when br_api of mgmt node is also going through NCS-5500; this item and api_bundle_id are mutually exclusive).
<b>EXT bridge domain</b> field	A valid string (user pre-provisions physical, bundle interface, sub-interface and external BD for external uplink and provides external BD info setup_data).

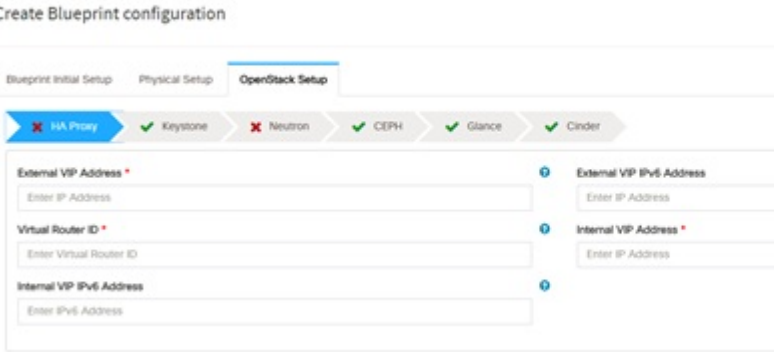

7. Click **NFVI Monitoring** checkbox in Blueprint Initial Setup to enable the NFVI Monitoring configuration tab.



Name	Description
Admin IP	IP Address of Control Center VM
Management VIP	VIP for ceilometer/dispatcher to use, must be unique across VIM Pod
Host Name	Hostname of Collector VM
Password	Password of Collector VM
CCUSER Password	Password of CCUSER
Admin IP	SSH IP of Collector VM
Management IP	Management IP of Collector VM

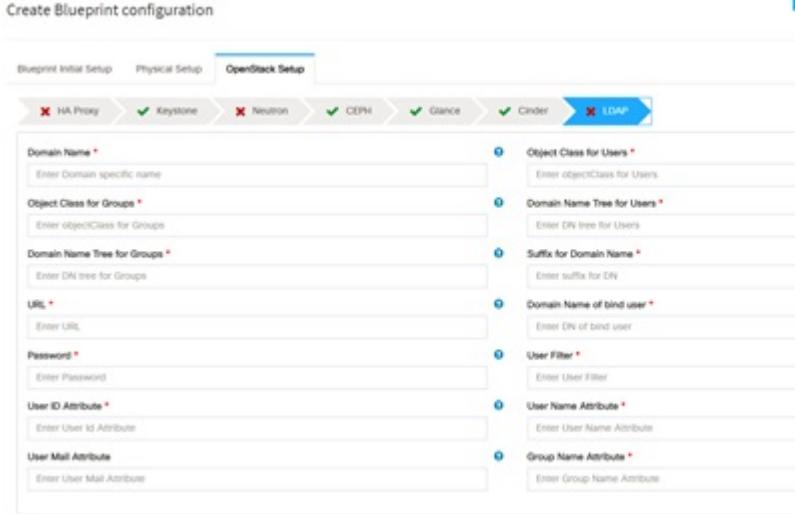
Name	Description				
<p><b>Collector ToR Connections</b></p>	<ol style="list-style-type: none"> <li>1. Click on (+) icon to Add Collector ToR Connections.</li> <li>2. Select the ToR switches from list to add the information.</li> <li>3. It is optional and available for ToR type NCS-5500</li> <li>4. For now, it supports adding only one Collector ToR Connection</li> </ol> <p>Add Collector Tor Connections</p>  <table border="1" data-bbox="933 947 1523 1073"> <tr> <td><b>Port Channel</b></td> <td>Enter port channel.</td> </tr> <tr> <td><b>Switch - {torSwitch-hostname}</b></td> <td>Enter port number, E.g:eth1/15.</td> </tr> </table> <p>Click <b>Save</b></p>	<b>Port Channel</b>	Enter port channel.	<b>Switch - {torSwitch-hostname}</b>	Enter port number, E.g:eth1/15.
<b>Port Channel</b>	Enter port channel.				
<b>Switch - {torSwitch-hostname}</b>	Enter port number, E.g:eth1/15.				
<p><b>Rabbit MQ User Name</b></p>	<p>Enter Rabbit MQ username.</p>				

8. Click **OpenStack Setup** Tab to advance to the **OpenStack Setup** Configuration page. On the **OpenStack Setup** Configuration page of the Cisco VIM Insight wizard, complete the following fields:

Name	Description										
<p><b>HA Proxy</b></p>	<p>Fill in the following details:</p>  <table border="1" data-bbox="813 806 1487 1220"> <tr> <td><b>External VIP Address</b> field</td> <td>Enter IP address of External VIP.</td> </tr> <tr> <td><b>External VIP Address IPv6</b> field</td> <td>Enter IPv6 address of External VIP.</td> </tr> <tr> <td><b>Virtual Router ID</b> field</td> <td>Enter the Router ID for HA.</td> </tr> <tr> <td><b>Internal VIP Address IPv6</b> field</td> <td>Enter IPv6 address of Internal IP.</td> </tr> <tr> <td><b>Internal VIP Address</b> field</td> <td>Enter IP address of Internal VIP.</td> </tr> </table>	<b>External VIP Address</b> field	Enter IP address of External VIP.	<b>External VIP Address IPv6</b> field	Enter IPv6 address of External VIP.	<b>Virtual Router ID</b> field	Enter the Router ID for HA.	<b>Internal VIP Address IPv6</b> field	Enter IPv6 address of Internal IP.	<b>Internal VIP Address</b> field	Enter IP address of Internal VIP.
<b>External VIP Address</b> field	Enter IP address of External VIP.										
<b>External VIP Address IPv6</b> field	Enter IPv6 address of External VIP.										
<b>Virtual Router ID</b> field	Enter the Router ID for HA.										
<b>Internal VIP Address IPv6</b> field	Enter IPv6 address of Internal IP.										
<b>Internal VIP Address</b> field	Enter IP address of Internal VIP.										
<p><b>Keystone</b></p>	<p>Mandatory fields are pre-populated.</p>  <table border="1" data-bbox="813 1591 1487 1703"> <tr> <td><b>Admin User Name</b></td> <td>admin.</td> </tr> <tr> <td><b>Admin Tenant Name</b></td> <td>admin.</td> </tr> </table>	<b>Admin User Name</b>	admin.	<b>Admin Tenant Name</b>	admin.						
<b>Admin User Name</b>	admin.										
<b>Admin Tenant Name</b>	admin.										

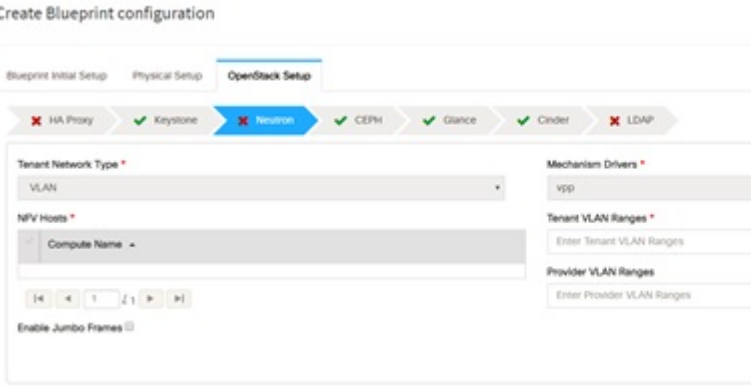


Name	Description
LDAP	

Name	Description																										
	<p><b>LDAP enable checkbox</b> which by default is <b>false</b>, if LDAP is enabled on keystone.</p>  <table border="1" data-bbox="813 940 1487 1841"> <tbody> <tr> <td><b>Domain Name</b> field</td> <td>Enter name for Domain name.</td> </tr> <tr> <td><b>Object Class for Users</b> field</td> <td>Enter a string as input.</td> </tr> <tr> <td><b>Object Class for Groups</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>Domain Name Tree for Users</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>Domain Name Tree for Groups</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>Suffix for Domain Name</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>URL</b> field</td> <td>Enter a URL with ending port number.</td> </tr> <tr> <td><b>Domain Name of Bind User</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>Password</b> field</td> <td>Enter Password as string format.</td> </tr> <tr> <td><b>User Filter</b> field</td> <td>Enter filter name as string.</td> </tr> <tr> <td><b>User ID Attribute</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>User Name Attribute</b> field</td> <td>Enter a string.</td> </tr> <tr> <td><b>User Mail Attribute</b> field</td> <td>Enter a string.</td> </tr> </tbody> </table>	<b>Domain Name</b> field	Enter name for Domain name.	<b>Object Class for Users</b> field	Enter a string as input.	<b>Object Class for Groups</b> field	Enter a string.	<b>Domain Name Tree for Users</b> field	Enter a string.	<b>Domain Name Tree for Groups</b> field	Enter a string.	<b>Suffix for Domain Name</b> field	Enter a string.	<b>URL</b> field	Enter a URL with ending port number.	<b>Domain Name of Bind User</b> field	Enter a string.	<b>Password</b> field	Enter Password as string format.	<b>User Filter</b> field	Enter filter name as string.	<b>User ID Attribute</b> field	Enter a string.	<b>User Name Attribute</b> field	Enter a string.	<b>User Mail Attribute</b> field	Enter a string.
<b>Domain Name</b> field	Enter name for Domain name.																										
<b>Object Class for Users</b> field	Enter a string as input.																										
<b>Object Class for Groups</b> field	Enter a string.																										
<b>Domain Name Tree for Users</b> field	Enter a string.																										
<b>Domain Name Tree for Groups</b> field	Enter a string.																										
<b>Suffix for Domain Name</b> field	Enter a string.																										
<b>URL</b> field	Enter a URL with ending port number.																										
<b>Domain Name of Bind User</b> field	Enter a string.																										
<b>Password</b> field	Enter Password as string format.																										
<b>User Filter</b> field	Enter filter name as string.																										
<b>User ID Attribute</b> field	Enter a string.																										
<b>User Name Attribute</b> field	Enter a string.																										
<b>User Mail Attribute</b> field	Enter a string.																										

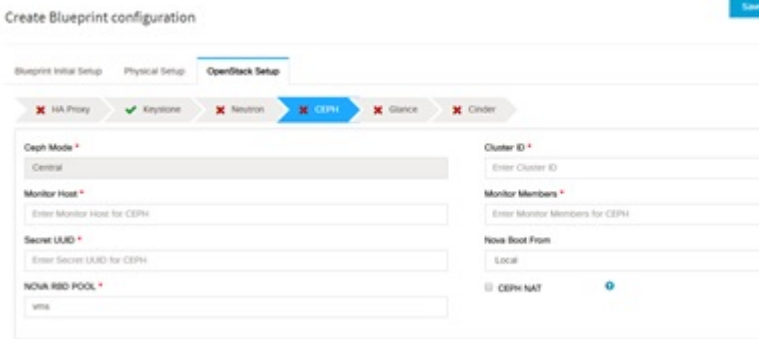

Name	Description		
	<table border="1"><tr><td data-bbox="850 281 1187 331">Group Name Attribute field</td><td data-bbox="1187 281 1524 331">Enter a string.</td></tr></table>	Group Name Attribute field	Enter a string.
Group Name Attribute field	Enter a string.		

Name	Description
Neutron	

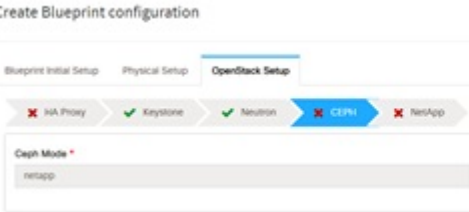
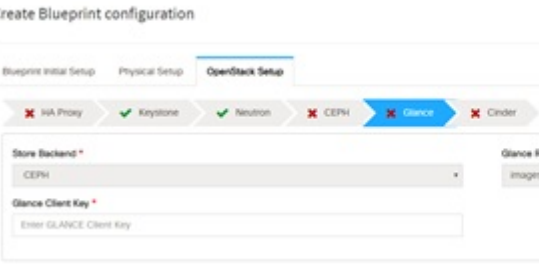
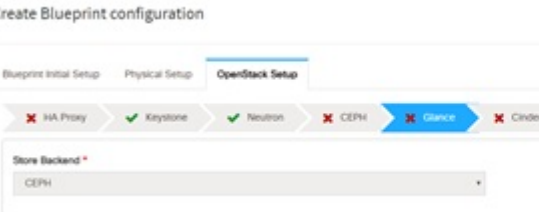
Name	Description														
	<p>Neutron fields would change on the basis of <b>Tenant Network Type</b> Selection from <b>Blueprint Initial Setup</b>. Following are the options available for Neutron for OVS/VLAN:</p>  <table border="1"> <tr> <td data-bbox="846 829 1182 982"><b>Tenant Network Type</b> field</td> <td data-bbox="1182 829 1534 982">Auto Filled based on the Tenant Network Type selected in the Blueprint Initial Setup page.</td> </tr> <tr> <td data-bbox="846 982 1182 1102"><b>Mechanism Drivers</b> field</td> <td data-bbox="1182 982 1534 1102">Auto Filled based on the Tenant Network Type selected in Blueprint Initial Setup page.</td> </tr> <tr> <td data-bbox="846 1102 1182 1480"><b>NFV Hosts</b> field</td> <td data-bbox="1182 1102 1534 1480">Auto filled with the Compute you added in Server and Roles. If you select All in this section NFV_HOSTS: <b>ALL</b> will be added to the Blueprint or you can select one particular compute. For Eg: NFV_HOSTS: compute-server-1, compute-server-2.</td> </tr> <tr> <td data-bbox="846 1480 1182 1570"><b>Tenant VLAN Ranges</b> field</td> <td data-bbox="1182 1480 1534 1570">List of ranges separated by comma form start:end.</td> </tr> <tr> <td data-bbox="846 1570 1182 1661"><b>Provider VLAN Ranges</b> field</td> <td data-bbox="1182 1570 1534 1661">List of ranges separated by comma form start:end.</td> </tr> <tr> <td data-bbox="846 1661 1182 1780"><b>VM Huhg Page Size (available for NFV_HOSTS option)</b> field</td> <td data-bbox="1182 1661 1534 1780">2M or 1G (optional, defaults to 2M)</td> </tr> <tr> <td data-bbox="846 1780 1182 1869"><b>VM_HUHPAGE_PERCENTAGE</b></td> <td data-bbox="1182 1780 1534 1869">Optional, defaults to 100%; can range between 0 and 100</td> </tr> </table>	<b>Tenant Network Type</b> field	Auto Filled based on the Tenant Network Type selected in the Blueprint Initial Setup page.	<b>Mechanism Drivers</b> field	Auto Filled based on the Tenant Network Type selected in Blueprint Initial Setup page.	<b>NFV Hosts</b> field	Auto filled with the Compute you added in Server and Roles. If you select All in this section NFV_HOSTS: <b>ALL</b> will be added to the Blueprint or you can select one particular compute. For Eg: NFV_HOSTS: compute-server-1, compute-server-2.	<b>Tenant VLAN Ranges</b> field	List of ranges separated by comma form start:end.	<b>Provider VLAN Ranges</b> field	List of ranges separated by comma form start:end.	<b>VM Huhg Page Size (available for NFV_HOSTS option)</b> field	2M or 1G (optional, defaults to 2M)	<b>VM_HUHPAGE_PERCENTAGE</b>	Optional, defaults to 100%; can range between 0 and 100
<b>Tenant Network Type</b> field	Auto Filled based on the Tenant Network Type selected in the Blueprint Initial Setup page.														
<b>Mechanism Drivers</b> field	Auto Filled based on the Tenant Network Type selected in Blueprint Initial Setup page.														
<b>NFV Hosts</b> field	Auto filled with the Compute you added in Server and Roles. If you select All in this section NFV_HOSTS: <b>ALL</b> will be added to the Blueprint or you can select one particular compute. For Eg: NFV_HOSTS: compute-server-1, compute-server-2.														
<b>Tenant VLAN Ranges</b> field	List of ranges separated by comma form start:end.														
<b>Provider VLAN Ranges</b> field	List of ranges separated by comma form start:end.														
<b>VM Huhg Page Size (available for NFV_HOSTS option)</b> field	2M or 1G (optional, defaults to 2M)														
<b>VM_HUHPAGE_PERCENTAGE</b>	Optional, defaults to 100%; can range between 0 and 100														

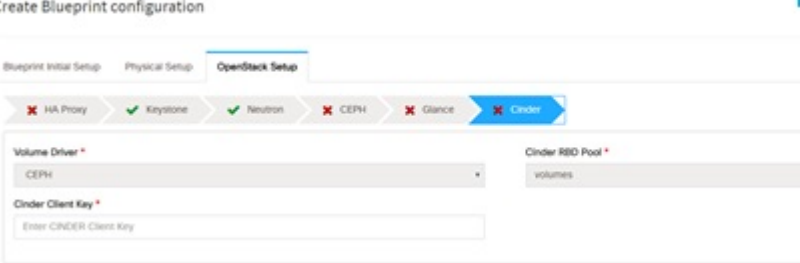
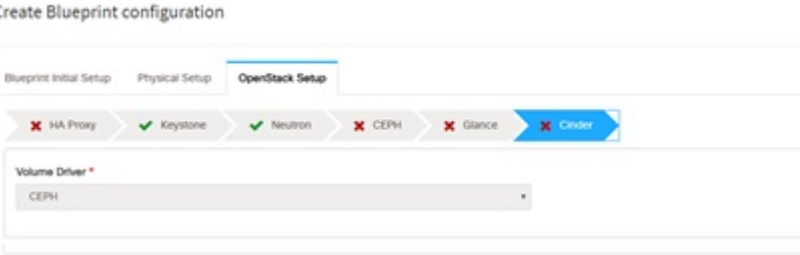
Name	Description	
	<b>NR_RESERVED_VSWITCH_CORES</b>	Allowed only for VPP Number of cores associated to VPP, defaults to 2.
	<b>Enable Jumbo Frames</b> field	Enable the checkbox
<p>For Tenant Network Type Linux Bridge everything remains the same but <b>Tenant VLAN Ranges</b> will be removed.</p>		

Name	Description
CEPH	

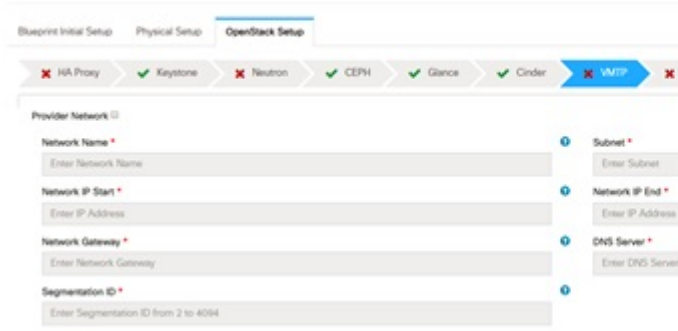

Name	Description																
	<p>1. 1. When Object Storage Backend is selected Central in blueprint initial setup.</p>  <table border="1" data-bbox="857 751 1487 1255"> <tr> <td>CEPH Mode</td> <td>By default Central.</td> </tr> <tr> <td>Cluster ID</td> <td>Enter Cluster ID.</td> </tr> <tr> <td>Monitor Host</td> <td>Enter Monitor Host for CEPH</td> </tr> <tr> <td>Monitor Members</td> <td>Enter Monitor Members for CEPH</td> </tr> <tr> <td>Secret UUID</td> <td>Enter Secret UUID for CEPH</td> </tr> <tr> <td>NOVA Boot from</td> <td>Drop down selection. You can choose CEPH or local.</td> </tr> <tr> <td>NOVA RBD POOL</td> <td>Enter NOVA RBD Pool (default's to vms)</td> </tr> <tr> <td>CEPH NAT</td> <td>Optional, needed for Central Ceph and when mgmt network is not routable</td> </tr> </table> <p>2. 2. When Object Storage Backend is selected Dedicated in blueprint initial setup.</p>  <ul style="list-style-type: none"> <li>• CEPH Mode: By default Dedicated.</li> <li>• NOVA Boot: From drop down selection you can choose CEPH or local.</li> </ul> <p>3. 3. When Object Storage Backend is selected NetApp in blueprint initial setup.</p>	CEPH Mode	By default Central.	Cluster ID	Enter Cluster ID.	Monitor Host	Enter Monitor Host for CEPH	Monitor Members	Enter Monitor Members for CEPH	Secret UUID	Enter Secret UUID for CEPH	NOVA Boot from	Drop down selection. You can choose CEPH or local.	NOVA RBD POOL	Enter NOVA RBD Pool (default's to vms)	CEPH NAT	Optional, needed for Central Ceph and when mgmt network is not routable
CEPH Mode	By default Central.																
Cluster ID	Enter Cluster ID.																
Monitor Host	Enter Monitor Host for CEPH																
Monitor Members	Enter Monitor Members for CEPH																
Secret UUID	Enter Secret UUID for CEPH																
NOVA Boot from	Drop down selection. You can choose CEPH or local.																
NOVA RBD POOL	Enter NOVA RBD Pool (default's to vms)																
CEPH NAT	Optional, needed for Central Ceph and when mgmt network is not routable																

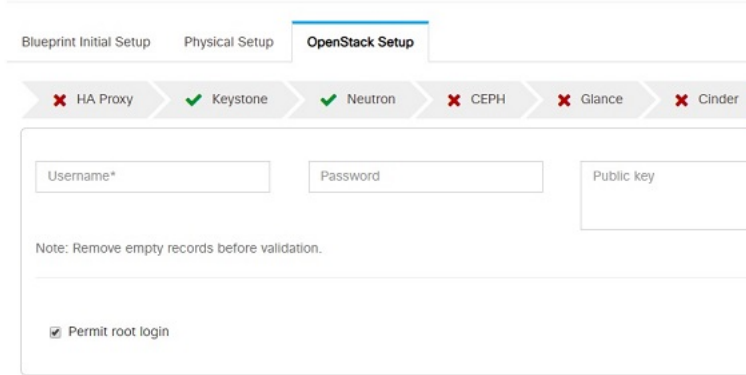


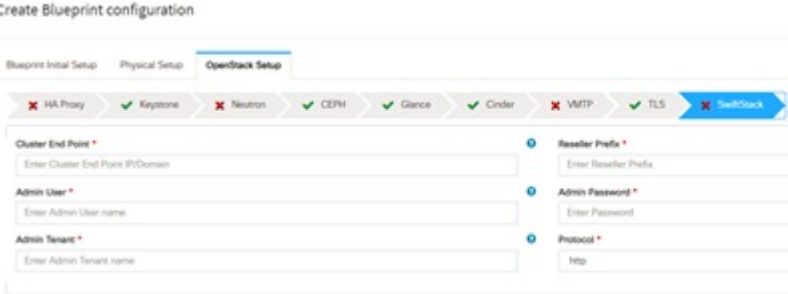
Name	Description
	<p>Create Blueprint configuration</p>  <p>The screenshot shows the 'OpenStack Setup' step of a blueprint configuration wizard. The progress bar indicates that 'HA Proxy', 'Keystone', and 'Neutron' are successfully configured (green checkmarks), while 'CEPH' and 'NetApp' are not (red X marks). The 'Ceph Mode' dropdown menu is set to 'netapp'.</p>
<p><b>GLANCE</b></p>	<p>1. When Object Storage Backend is selected Central in blueprint initial setup.</p>  <p>The screenshot shows the 'OpenStack Setup' step with 'Glance' selected as the storage backend. The progress bar shows 'HA Proxy', 'Keystone', and 'Neutron' as successful, and 'CEPH', 'Glance', and 'Cinder' as failed. The 'Store Backend' dropdown is set to 'CEPH' and the 'Glance RBD Pool' dropdown is set to 'images'.</p> <p>When Object Storage Backend is selected Dedicated in blueprint initial setup.</p>  <p>This screenshot is similar to the previous one, showing 'Glance' as the selected storage backend in the wizard.</p> <p><b>Note</b> By default Populated for CEPH Dedicated with Store Backend value as CEPH.</p>

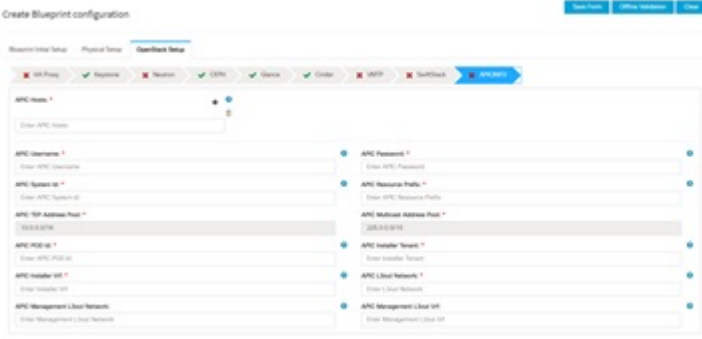
Name	Description
<p><b>CINDER</b></p>	<p>By default Populated for <b>CEPH Dedicated</b> with Volume Driver value as <b>CEPH</b>.</p>  <p>2. When Object Storage Backend is selected Dedicated in blueprint initial setup.</p>  <p><b>Note</b> By default Populated for CEPH Dedicated with Volume Driver value as CEPH.</p>


Name	Description
<b>VMTP</b> optional section, this will be visible only if VMTP is selected from Blueprint Initial Setup. For VTS tenant type Provider network is only supported.	

Name	Description		
	<p>Check one of the check boxes to specify a VMTP network:</p> <ul style="list-style-type: none"> <li>• Provider Network</li> <li>• External Network</li> </ul> <p>For the <b>Provider Network</b> complete the following:</p> <p>Create Blueprint configuration</p> 		
	<table border="1"> <tr> <td data-bbox="813 926 1149 999"><b>Network Name</b> field</td> <td data-bbox="1149 926 1482 999">Enter the name for the external network.</td> </tr> </table>	<b>Network Name</b> field	Enter the name for the external network.
<b>Network Name</b> field	Enter the name for the external network.		
	<table border="1"> <tr> <td data-bbox="813 1012 1149 1085"><b>Subnet</b> field</td> <td data-bbox="1149 1012 1482 1085">Enter the Subnet for Provider Network.</td> </tr> </table>	<b>Subnet</b> field	Enter the Subnet for Provider Network.
<b>Subnet</b> field	Enter the Subnet for Provider Network.		
	<table border="1"> <tr> <td data-bbox="813 1098 1149 1171"><b>Network IP Start</b> field</td> <td data-bbox="1149 1098 1482 1171">Enter the starting floating IPv4 address.</td> </tr> </table>	<b>Network IP Start</b> field	Enter the starting floating IPv4 address.
<b>Network IP Start</b> field	Enter the starting floating IPv4 address.		
	<table border="1"> <tr> <td data-bbox="813 1184 1149 1257"><b>Network IP End</b> field</td> <td data-bbox="1149 1184 1482 1257">Enter the ending floating IPv4 address.</td> </tr> </table>	<b>Network IP End</b> field	Enter the ending floating IPv4 address.
<b>Network IP End</b> field	Enter the ending floating IPv4 address.		
	<table border="1"> <tr> <td data-bbox="813 1270 1149 1344"><b>Network Gateway</b>field</td> <td data-bbox="1149 1270 1482 1344">Enter the IPv4 address for the Gateway.</td> </tr> </table>	<b>Network Gateway</b> field	Enter the IPv4 address for the Gateway.
<b>Network Gateway</b> field	Enter the IPv4 address for the Gateway.		
	<table border="1"> <tr> <td data-bbox="813 1356 1149 1430"><b>DNS Server</b> field</td> <td data-bbox="1149 1356 1482 1430">Enter the DNS server IPv4 address.</td> </tr> </table>	<b>DNS Server</b> field	Enter the DNS server IPv4 address.
<b>DNS Server</b> field	Enter the DNS server IPv4 address.		
	<table border="1"> <tr> <td data-bbox="813 1442 1149 1495"><b>Segmentation ID</b> field</td> <td data-bbox="1149 1442 1482 1495">Enter the segmentation ID.</td> </tr> </table>	<b>Segmentation ID</b> field	Enter the segmentation ID.
<b>Segmentation ID</b> field	Enter the segmentation ID.		
	<p>For <b>External Network</b> fill in the following details:</p> 		

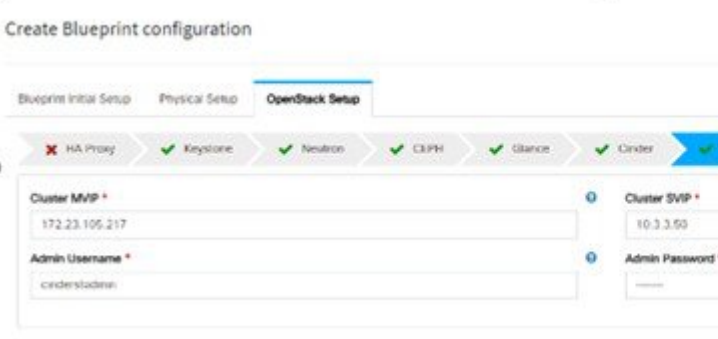
Name	Description												
	<table border="1"> <tr> <td data-bbox="850 287 1187 365"><b>Network Name</b> field</td> <td data-bbox="1192 287 1524 365">Enter the name for the external network.</td> </tr> <tr> <td data-bbox="850 371 1187 449"><b>IP Start</b> field</td> <td data-bbox="1192 371 1524 449">Enter the starting floating IPv4 address.</td> </tr> <tr> <td data-bbox="850 455 1187 533"><b>IP End</b> field</td> <td data-bbox="1192 455 1524 533">Enter the ending floating IPv4 address.</td> </tr> <tr> <td data-bbox="850 539 1187 617"><b>Gateway</b> field</td> <td data-bbox="1192 539 1524 617">Enter the IPv4 address for the Gateway.</td> </tr> <tr> <td data-bbox="850 623 1187 701"><b>DNS Server</b> field</td> <td data-bbox="1192 623 1524 701">Enter the DNS server IPv4 address.</td> </tr> <tr> <td data-bbox="850 707 1187 785"><b>Subnet</b> field</td> <td data-bbox="1192 707 1524 785">Enter the Subnet for External Network.</td> </tr> </table>	<b>Network Name</b> field	Enter the name for the external network.	<b>IP Start</b> field	Enter the starting floating IPv4 address.	<b>IP End</b> field	Enter the ending floating IPv4 address.	<b>Gateway</b> field	Enter the IPv4 address for the Gateway.	<b>DNS Server</b> field	Enter the DNS server IPv4 address.	<b>Subnet</b> field	Enter the Subnet for External Network.
<b>Network Name</b> field	Enter the name for the external network.												
<b>IP Start</b> field	Enter the starting floating IPv4 address.												
<b>IP End</b> field	Enter the ending floating IPv4 address.												
<b>Gateway</b> field	Enter the IPv4 address for the Gateway.												
<b>DNS Server</b> field	Enter the DNS server IPv4 address.												
<b>Subnet</b> field	Enter the Subnet for External Network.												
<p><b>TLS</b> optional section, this will be visible only if TLS is selected from Blueprint Initial Setup Page.</p>	<p><b>TLS</b> has two options:</p> <ul style="list-style-type: none"> <li>• <b>External LB VIP FQDN</b> - Text Field.</li> <li>• <b>External LB VIP TLS</b> - True/False. By default this option is false.</li> </ul>												
<p>Under the OpenStack setup tab, Vim_admins tab will be visible only when Vim_admins is selected from the Optional Features &amp; Services under the Blueprint Initial setup tab</p>	<p>Following are the field descriptions for VIM Admins:</p>  <table border="1"> <tr> <td data-bbox="850 1619 1187 1675"><b>User Name</b></td> <td data-bbox="1192 1619 1524 1675">Enter username</td> </tr> <tr> <td data-bbox="850 1682 1187 1797"><b>Password</b></td> <td data-bbox="1192 1682 1524 1797">Password field. Admin hash password should always start with \$6.</td> </tr> </table>	<b>User Name</b>	Enter username	<b>Password</b>	Password field. Admin hash password should always start with \$6.								
<b>User Name</b>	Enter username												
<b>Password</b>	Password field. Admin hash password should always start with \$6.												

Name	Description												
<p><b>SwiftStack</b> optional section will be visible only if SwiftStack is selected from Blueprint Initial Setup Page. SwiftStack is only supported with <b>KeyStone2</b>. If you select <b>Keystone3</b>, swiftstack will not be available to configure.</p>	<p>Following are the options that needs to be filled for SwiftStack:</p>  <table border="1" data-bbox="820 688 1484 1318"> <tr> <td><b>Cluster End Point</b></td> <td>IP address of PAC (proxy-account-container) endpoint.</td> </tr> <tr> <td><b>Admin User</b></td> <td>Admin user for swift to authenticate in keystone.</td> </tr> <tr> <td><b>Admin Tenant</b></td> <td>The service tenant corresponding to the Account-Container used by Swiftstack.</td> </tr> <tr> <td><b>Reseller Prefix</b></td> <td>Reseller_prefix as configured for Keysone Auth,AuthToken support in Swiftstack E.g KEY_</td> </tr> <tr> <td><b>Admin Password</b></td> <td>swiftstack_admin_password</td> </tr> <tr> <td><b>Protocol</b></td> <td>http or https</td> </tr> </table>	<b>Cluster End Point</b>	IP address of PAC (proxy-account-container) endpoint.	<b>Admin User</b>	Admin user for swift to authenticate in keystone.	<b>Admin Tenant</b>	The service tenant corresponding to the Account-Container used by Swiftstack.	<b>Reseller Prefix</b>	Reseller_prefix as configured for Keysone Auth,AuthToken support in Swiftstack E.g KEY_	<b>Admin Password</b>	swiftstack_admin_password	<b>Protocol</b>	http or https
<b>Cluster End Point</b>	IP address of PAC (proxy-account-container) endpoint.												
<b>Admin User</b>	Admin user for swift to authenticate in keystone.												
<b>Admin Tenant</b>	The service tenant corresponding to the Account-Container used by Swiftstack.												
<b>Reseller Prefix</b>	Reseller_prefix as configured for Keysone Auth,AuthToken support in Swiftstack E.g KEY_												
<b>Admin Password</b>	swiftstack_admin_password												
<b>Protocol</b>	http or https												

Name	Description
<p>APICINFO tab is available in Openstack setup, when the Tenant type ACI/VLAN is selected in blueprint initial setup.</p> <p><b>Note</b> When ACI/VLAN is selected then ToR switch from initial setup is mandatory.</p>	
Name	Description
<p><b>APIC Hosts</b> field</p>	<p>Enter host input. Example: &lt;ip1 host1&gt;:[port] . max of 3, min of 1, not 2;</p>
<p><b>apic_username</b> field</p>	<p>Enter a string format.</p>
<p><b>apic_password</b> field</p>	<p>Enter Password.</p>
<p><b>apic_system_id</b> field</p>	<p>Enter input as string. Max length 8.</p>
<p><b>apic_resource_prefix</b> field</p>	<p>Enter string max length 6.</p>
<p><b>apic_tep_address_pool</b> field</p>	<p>Allowed only 10.0.0.0/16</p>
<p><b>multiclass_address_pool</b> field</p>	<p>Allowed only 225.0.0.0/15</p>
<p><b>apic_pod_id</b> field</p>	<p>Enter integer(1- 65535)</p>
<p><b>apic_installer_tenant</b> field</p>	<p>Enter String, max length 32</p>
<p><b>apic_installer_vrf</b> field</p>	<p>Enter String, max length 32</p>
<p><b>api_l3out_network</b> field</p>	<p>Enter String, max length 32</p>


Name	Description														
<p>VTS tab is available in Openstack setup, when Tenant Type is VTS/VLAN selected.</p> <p>If vts day0 is enabled then SSH username and SSH password is mandatory.</p> <p>If SSH_username is input present then SSH password is mandatory vice-versa</p>	 <table border="1" data-bbox="820 556 1485 997"> <thead> <tr> <th>Name</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>VTS Day0 (checkbox)</td> <td>True or false default is false.</td> </tr> <tr> <td>VTS User name</td> <td>Enter as string does not contain special characters.</td> </tr> <tr> <td>VTS Password</td> <td>Enter password</td> </tr> <tr> <td>VTS NCS IP</td> <td>Enter IP Address format.</td> </tr> <tr> <td>VTC SSH Username</td> <td>Enter a string</td> </tr> <tr> <td>VTC SHH Password</td> <td>Enter password</td> </tr> </tbody> </table>	Name	Description	VTS Day0 (checkbox)	True or false default is false.	VTS User name	Enter as string does not contain special characters.	VTS Password	Enter password	VTS NCS IP	Enter IP Address format.	VTC SSH Username	Enter a string	VTC SHH Password	Enter password
Name	Description														
VTS Day0 (checkbox)	True or false default is false.														
VTS User name	Enter as string does not contain special characters.														
VTS Password	Enter password														
VTS NCS IP	Enter IP Address format.														
VTC SSH Username	Enter a string														
VTC SHH Password	Enter password														

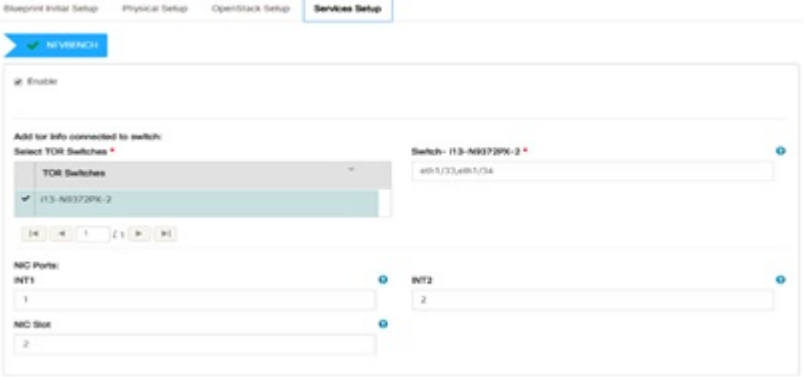
9. For SolidFire, enter the following:

Name	Description								
<p>SolidFire is visible for configuration on day0</p> <p>SolidFire is not allowed as a day-2 deployment option</p> <p>SolidFire is always available with CEPH.</p>	 <table border="1" data-bbox="901 1522 1485 1816"> <tbody> <tr> <td>Cluster MVIP field</td> <td>Management IP of SolidFire cluster.</td> </tr> <tr> <td>Cluster SVIP field</td> <td>Storage VIP of SolidFire cluster.</td> </tr> <tr> <td>Admin Username</td> <td>Admin user on SolidFire cluster</td> </tr> <tr> <td>Admin Password</td> <td>Admin password on SolidFire cluster.</td> </tr> </tbody> </table>	Cluster MVIP field	Management IP of SolidFire cluster.	Cluster SVIP field	Storage VIP of SolidFire cluster.	Admin Username	Admin user on SolidFire cluster	Admin Password	Admin password on SolidFire cluster.
Cluster MVIP field	Management IP of SolidFire cluster.								
Cluster SVIP field	Storage VIP of SolidFire cluster.								
Admin Username	Admin user on SolidFire cluster								
Admin Password	Admin password on SolidFire cluster.								



10. If **Syslog Export** or **NFVBENCH** is selected in **Blueprint Initial Setup** Page, then **Services Setup** page will be enabled for user to view. Following are the options under **Services Setup** Tab:

Name	Description												
<p><b>Syslog Export</b></p>	<p>Following are the options for Syslog Settings:</p> <p>User can add maximum of three entries.</p> <p>To add new SysLog information, click on Add SysLog button, fill all the required information listed below and hit Save button.</p>  <table border="1" data-bbox="667 877 1536 1255"> <tr> <td><b>Remote Host</b></td> <td>Enter Syslog IP address.</td> </tr> <tr> <td><b>Protocol</b></td> <td>Only UDP is supported.</td> </tr> <tr> <td><b>Facility</b></td> <td>Defaults to local5.</td> </tr> <tr> <td><b>Severity</b></td> <td>Defaults to debug.</td> </tr> <tr> <td><b>Clients</b></td> <td>Defaults to ELK.</td> </tr> <tr> <td><b>Port</b></td> <td>Defaults to 514 but can be modified by the User.</td> </tr> </table>	<b>Remote Host</b>	Enter Syslog IP address.	<b>Protocol</b>	Only UDP is supported.	<b>Facility</b>	Defaults to local5.	<b>Severity</b>	Defaults to debug.	<b>Clients</b>	Defaults to ELK.	<b>Port</b>	Defaults to 514 but can be modified by the User.
<b>Remote Host</b>	Enter Syslog IP address.												
<b>Protocol</b>	Only UDP is supported.												
<b>Facility</b>	Defaults to local5.												
<b>Severity</b>	Defaults to debug.												
<b>Clients</b>	Defaults to ELK.												
<b>Port</b>	Defaults to 514 but can be modified by the User.												

Name	Description
NFVBENCH	<p><b>NFVBENCH enable checkbox</b> by default is <b>false</b>.</p> <p>Add ToR information connect to Switch:</p>  <ul style="list-style-type: none"> <li>• Select a TOR Switch and enter the Switch name.</li> <li>• Enter the port number. For example, eth1/5 . VTEP VLANS (mandatory and needed only for VTS/VXLAN). Enter two different VLANs for VLAN1 and VLAN2.</li> <li>• NIC Ports: INT1 and INT2 optional input. Enter the two port numbers of the 4-port 10G Intel NIC at the management node used for NFVBench.</li> </ul> <p>NIC Slot: Optional input, indicates which NIC to use in case there are multiple NICs.</p> <p><b>Note</b> NIC port and slot need to be together.</p>
ENABLE_ESC_PRIV	Enable the checkbox to set it as True. By default it is <b>False</b> .

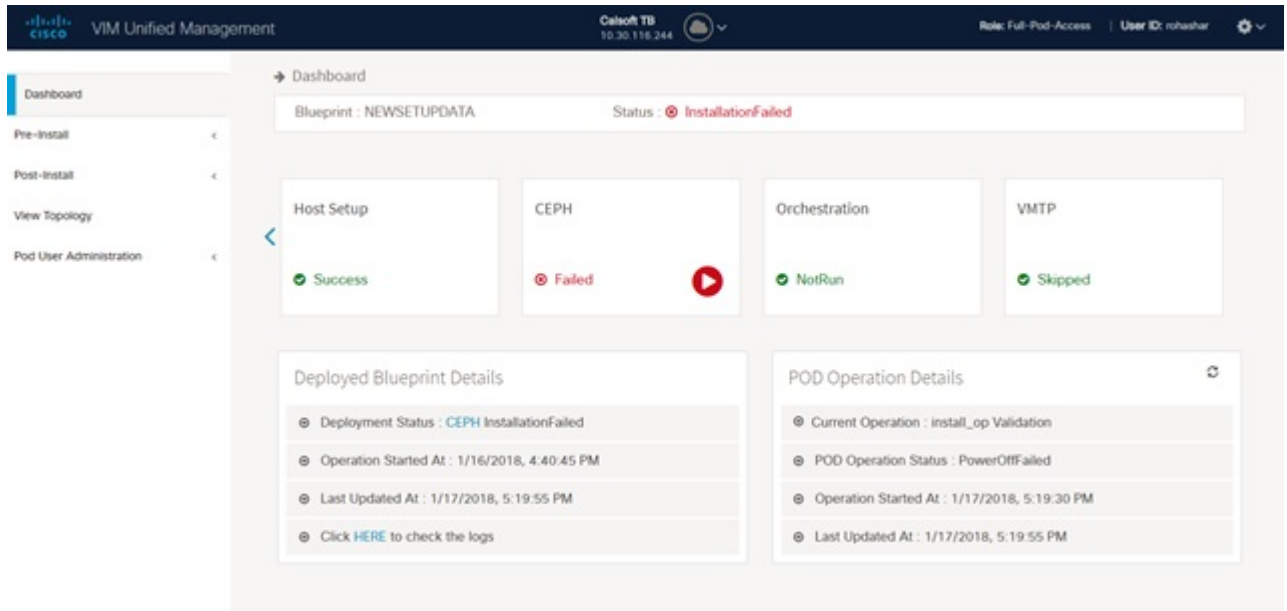
**Step 5** Click **Offline validation** button to initiate an offline validation of the Blueprint.

**Step 6** Once the **Offline validation** is successful, **Save** option will be enabled for you which when clicked would redirect you to the **Blueprint Management** Page.

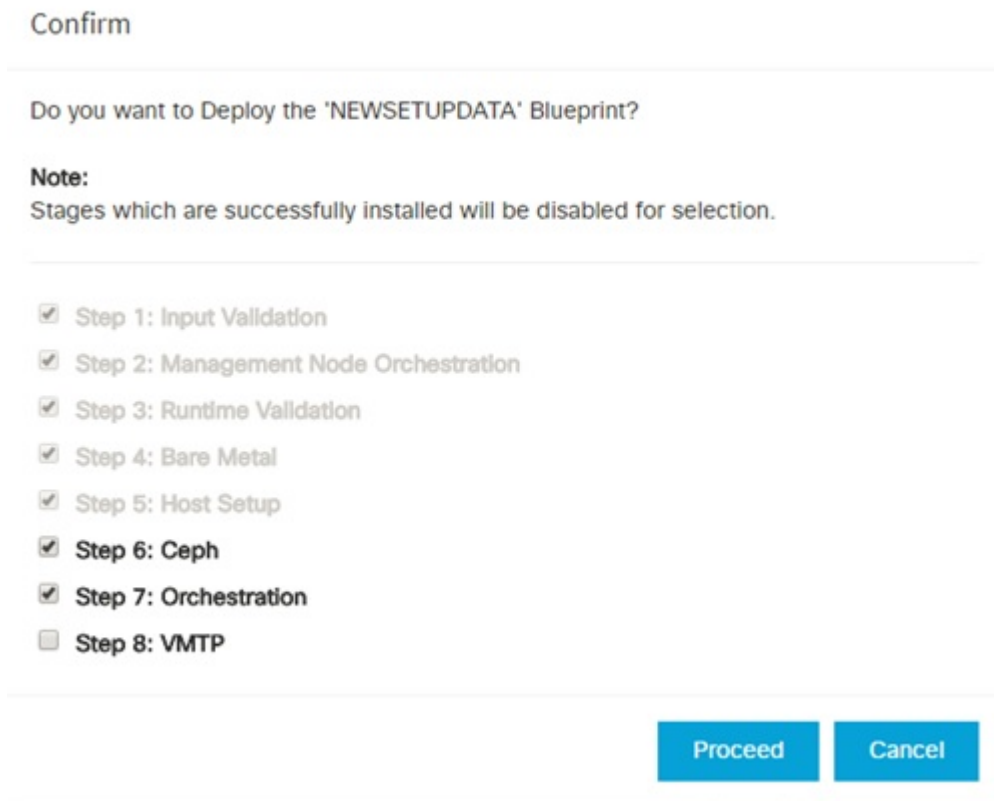
## Redeploy Multiple Install Stages during Cisco VIM Installation using Unified Management

You can redeploy Cisco VIM in multiple stages during blueprint installation using the Cisco VIM Unified Management dashboard.

**Step 1** When the blueprint installation status is in Active/failed/Installation failed and stage install status as Failed/NotRun/Skipped., the redeployed icon is displayed.



**Step 2** Click **Redeploy** icon to redeploy multiple stages during installation. A confirmation dialogue box appears.



**Step 3** Select the stages to be installed.

- Step 4** You can select the stages only in sequence. For example, you can select the VMTP stage (current) stage only if the Orchestration (previous) stage is selected for blueprint installation (assuming Orchestration was in Failed/NotRun state)
  - Step 5** Click **Proceed** to run the installation.
- 

## Downloading Blueprint

### Before you begin

You must have atleast one blueprint (In any state Active/In-Active or In-progress), in the **Blueprint Management Page**.

---

- Step 1** Log in to **CISCO VIM Insight**.
  - Step 2** In the navigation pane, expand the **Pre-Install Section**.
  - Step 3** Click **Blueprint Management**.
  - Step 4** Go-to **Download** for any Blueprint under Action title. (**Download Button** > **Downward Arrow** (with tooltip Preview & Download YAML)).
  - Step 5** Click the **Download** icon.  
A pop to view the Blueprint in the YAML format is displayed.
  - Step 6** Click the **Download** button at the bottom left of the pop-up window.  
YAML is saved locally with the same name of the Blueprint.
- 

## Validating Blueprint

- Step 1** Log in to **CISCO VIM Insight**.
  - Step 2** In the **Navigation** pane, expand the **Pre-Install Section**.
  - Step 3** Click **Blueprint Creation**.
  - Step 4** Upload an existing YAML, or create a **New Blueprint**.  
Fill all the mandatory fields so that all Red Cross changes to **Green Tick**.
  - Step 5** Enter the name of the Blueprint.
  - Step 6** Click **Offline Validation**.  
Only, if the Validation is successful, the Insight allows you to save the blueprint.
- 

### What to do next

If you see any errors, a hyperlink is created for those errors. Click the link to be navigated to the page where error has been encountered.

# Managing Post Install Features

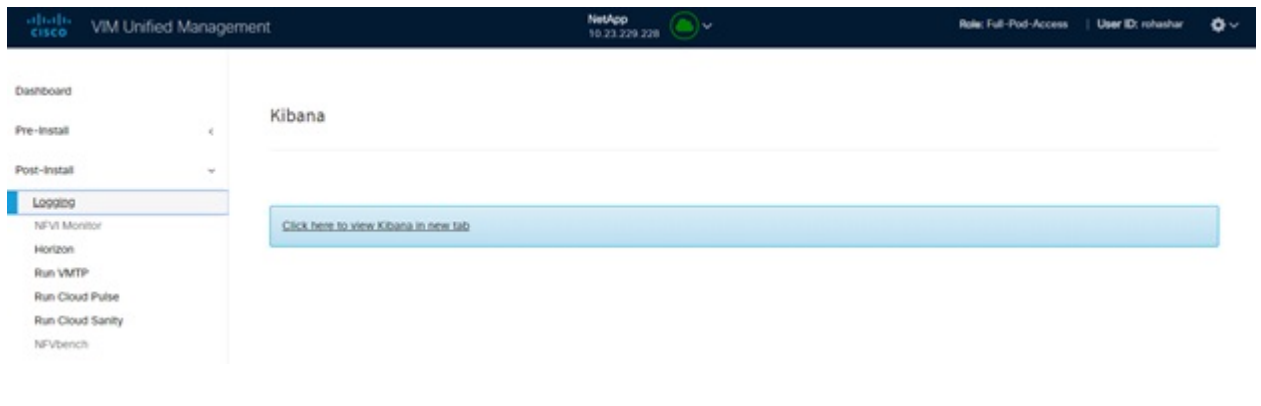
Cisco VIM provides an orchestration that helps in lifecycle management of a cloud. VIM is responsible for pod management activities which includes fixing both hardware and software issues with one-touch automation. VIM Insight provides the visualization of the stated goal. As a result, it integrates with POST install features that Cisco VIM offers through its Rest API. These features are enabled only if there is an active Blueprint deployment on the pod.

## Monitoring the Pod

Cisco VIM uses EFK (Elasticsearch, Fluentd, and Kibana) to monitor the OpenStack services, by cross-launching the Kibana dashboard.

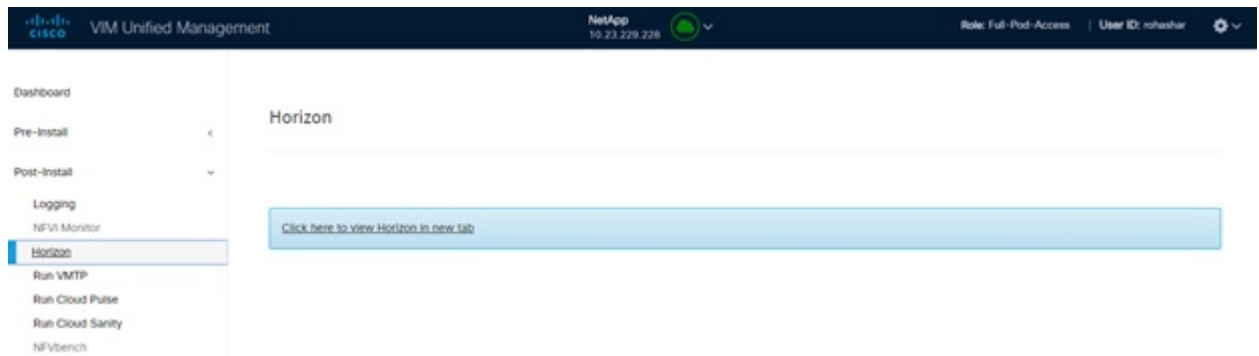
To cross launch Kibana, complete the following instructions:

- Step 1** In the navigation pane, click **Post-Install > Logging**.
- Step 2** Click **Click here to view Kibana in new tab**.
- Step 3** Enter the **Username** as Admin.
- Step 4** Enter the **Kibana\_PASSWORD** password that is obtained from `/root/installer-<tagid>/openstack-configs/secrets.yaml` in the management node.



## Cross Launching Horizon

Horizon is the canonical implementation of OpenStack's Dashboard, which provides a web-based user interface to OpenStack services including Nova, Swift and, Keystone.



- 
- Step 1** In the navigation pane, click **Post-Install > Horizon**.
- Step 2** Click the link **Click here to view Horizon logs in new tab**. You will be redirected to Horizon landing page in a new tab.
- Step 3** Enter the ADMIN\_USER\_PASSWORD obtained from /root/installer-`<tagid>/openstack-configs/secrets.yaml` in the management node.
- 

## NFVI Monitoring

NFVI monitoring is the Cross launch browser same as Horizon. NFVI monitoring link is available in the post install only if the setupdata has NFVI Monitoring configuration during the cloud deployment. NFVI Monitoring checks the status of **Collector VM1 Info** and **Collector VM2 Info**.

---

- Step 1** In the navigation pane, click **Post-Install > NFVI Monitoring**.
- Step 2** Click the link **Click here to view NFVI monitoring**.  
You will be redirected to NFVI Monitoring page.
- 

## Run VMTP

Run VMTP is divided in two sections:

- **Results for Auto Run:** This shows the results of VMTP which was run during the cloud deployment (Blueprint Installation).
- **Results for Manual Run:** Run the VMTP on demand. To run VMTP on demand, click **Run VMTP**.




---

**Note** If VMTP stage was skipped or has not-run during Blueprint Installation, this section of POST Install would be disabled for the user.

---

## Run CloudPulse

In VIM 2.0 and later, we provide an integrated tool, called Cloud Pulse, that periodically checks the cloud services endpoint. The results of these tests are reflected under the Cloud Pulse link. Also, you can run these API endpoint tests on demand, and fetch the result of these tests by refreshing the table.

OpenStack CloudPulse tool is used to verify Cisco NFVI health. CloudPulse servers are installed in containers on all Cisco NFVI control nodes and CloudPulse clients are installed on the management node.

CloudPulse has two test sets: endpoint scenario (runs as a cron or manually) and operator test (run manually).

Following are the tests which are supported in CloudPulse:

Endpoint tests include

- cinder\_endpoint
- glance\_endpoint
- keystone\_endpoint
- nova\_endpoint
- neutron\_endpoint

Operator tests include

- ceph\_check
- docker\_check
- galera\_check
- node\_check
- rabbitmq\_check

CloudPulse

Cloudpulse Monitoring for : **Fixadent-BP**

cinder\_endpoint

Name	Result	State	Test Type	Created Date	Updated Date
neutron_endpoint	success	success	periodic	05/04/2018, 11:51:28	05/04/2018, 11:51:29
docker_check	All docker containers are ...	success	periodic	05/04/2018, 11:55:17	05/04/2018, 11:55:20
nova_endpoint	success	success	periodic	05/04/2018, 11:51:29	05/04/2018, 11:51:30
cinder_endpoint	success	success	periodic	05/04/2018, 11:55:20	05/04/2018, 11:55:27
keystone_endpoint	success	success	periodic	05/04/2018, 11:55:20	05/04/2018, 11:55:28
rabbitmq_check	Running Nodes : [rabbit...	success	periodic	05/04/2018, 11:55:20	05/04/2018, 11:55:27
galera_check	Active Nodes : 10.10.35...	success	periodic	05/04/2018, 11:55:22	05/04/2018, 11:55:25
glance_endpoint	success	success	periodic	05/04/2018, 11:55:28	05/04/2018, 11:55:28
neutron_endpoint	success	success	periodic	05/04/2018, 11:55:28	05/04/2018, 11:55:29
nova_endpoint	success	success	periodic	05/04/2018, 11:55:29	05/04/2018, 11:55:30

10 items per page

To run a cloud pulse test, choose a particular test from the dropdown and click **Run Test**. Once the test is in progress, Click **(Spin/refresh)** icon to fetch the latest result. This grid does not fetch the latest result automatically.

## Run Cloud Sanity Test

You can use the cloud sanity tool to test the Cisco NFVI pod and cloud infrastructure (host connectivity, basic mraidb, rabbit, ceph cluster check, and RAID disks).

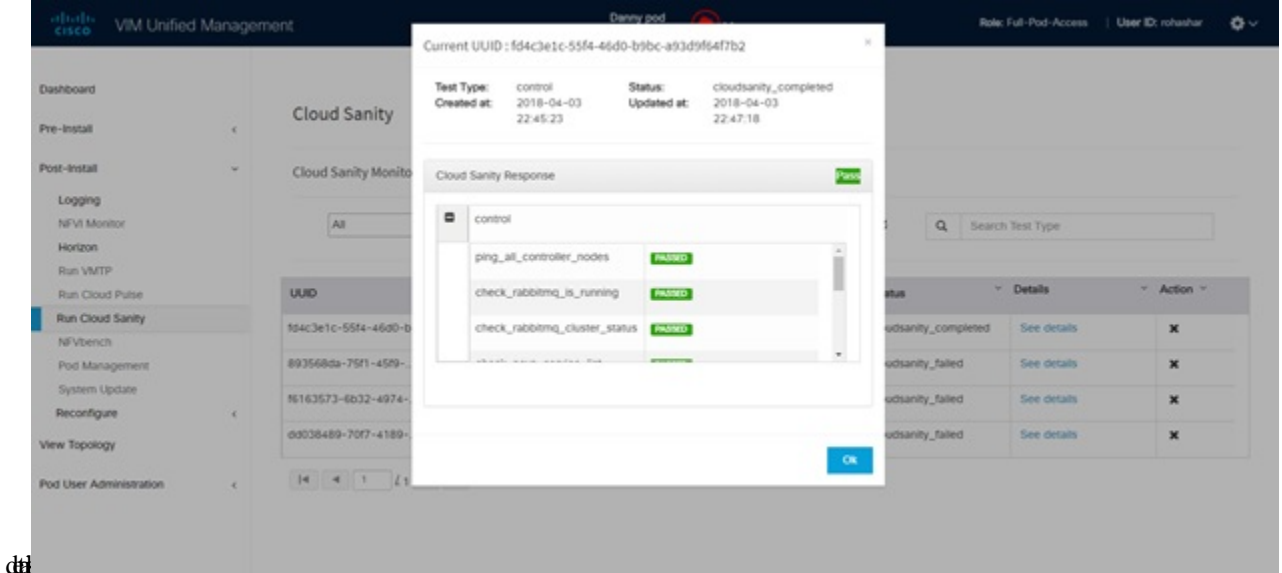
Following are the test available to run from insight.

- Control
- Compute
- Cephmon
- Cephosd
- Management
- All

**Step 1** To run a Cloud sanity test choose a particular test from the dropdown.



**Step 2** Click **Run Test** to proceed with the operation. Once the test is completed, click **See Details** for more



## Run NFV Bench

You can **Run NFV Bench** for **B** and **C** series Pod, through Cisco VIM Insight. On a pod running with CVIM, choose a *NFVbench* link on the NAV-Menu.

You can run either fixed rate test or NDR/PDR test. As the settings and results for the test types differ, the options to run these tests are presented in two tabs, with its own settings and results. To run a particular test, you can either select a particular hypervisor from the available list or allow the system to select any hypervisor.

### NDR/PDR Test

- Step 1** Log in to **CISCO VIM Insight**.
- Step 2** In the Navigation pane, click **Post-Install** > **Run NFV Bench**.
- Step 3** Click **NDR/PDR test** and complete the following fields

Name	Description
Select a hypervisor (Optional)	Select any hypervisor to run the NDR/PDR. By default, the option <b>Use any hypervisor</b> is selected.
Iteration Duration	Choose duration from 10 to 60 sec. Default is 20 sec.
Frame Size	Choose the correct frame size to run.
Run NDR/PDR test	Click <b>Run NDR/PDR test</b> . After, completion it displays each type of test with its own settings and results.

## Reconfiguring CIMC Password Through Unified Management

Update the `cimc_password` in the `CIMC-COMMON` section, or the individual `cimc_password` for each server and then run the update password option.

To update a password, you have to follow the password rules:

- Must contain at least one lower-case letter.
- Must contain at least one upper-case letter.
- Must contain at least one digit between 0 to 9.
- One of these special characters `!$#@%^_+*=&`
- Your password has to be 8 to 14 characters long.

### Before you begin

You must have a C-series pod up and running with Cisco VIM to reconfigure CIMC password.



**Note** Reconfigure CIMC password section is disabled if the pod is in failed state as indicated by `ciscovim install-status`.

**Step 1** Log in to **CISCO VIM Insight**.

**Step 2** In the navigation pane, choose **Post-Install**

**Step 3** Click **Reconfigure CIMC Password**.

**Step 4** On the Reconfigure CIMC Password page of the Cisco VIM UM, complete the following fields:

Name	Description
<code>CIMC_COMMON</code> old Password	<code>CIMC_COMMON</code> old password field cannot be edited.
<code>CIMC-COMMON</code> new Password	Enter the <code>CIMC-COMMON</code> password. Password has to be alphanumeric according to the password rule.
Click <b>Update</b>	Old <code>CIMC-COMMON</code> password can be updated with new <code>CIMC-COMMON</code> password.