



## Manage Alarms

---

This chapter provides procedures required to view and manage Cisco ONS 15600 SDH alarms and conditions.

Cisco Transport Controller (CTC) detects and reports SDH alarms generated by the ONS 15600 SDH and the larger SDH network. You can use CTC to monitor and manage alarms at a card, node, or network level. Default alarm severities conform to the Telcordia GR-474-CORE standard, but you can reset severities to customized alarm profiles or suppress CTC alarm reporting. For alarm troubleshooting information, refer to the *Cisco ONS 15600 SDH Troubleshooting Guide*.

### Before You Begin

This section lists the chapter procedures (NTPs). Turn to a procedure for applicable tasks (DLPs).

1. [NTP-F188 Document Existing Provisioning, page 9-1](#)—Complete this procedure before performing any other procedures in this chapter.
2. [NTP-F189 View Alarms, Alarm History, Events, and Conditions, page 9-2](#)—Complete as needed.
3. [NTP-F190 Enable, Modify, or Disable Alarm Severity Filtering, page 9-3](#)—Complete as needed.
4. [NTP-F191 Synchronize Alarms, page 9-3](#)—Complete as needed.
5. [NTP-F192 Delete Cleared Alarms from the Display, page 9-4](#)—Complete as needed.
6. [NTP-F193 View Alarm-Affected Circuits, page 9-4](#)—Complete as needed.
7. [NTP-F194 Create, Assign, and Delete Alarm Severity Profiles, page 9-6](#)—As needed, complete these tasks to change the default severity for certain alarms, to assign the new severities to a port, card, or node, and to delete alarm profiles.
8. [NTP-F195 Suppress and Restore Alarm Reporting, page 9-7](#)—As needed, complete these tasks to suppress reported alarms at the port, card, or node level and to disable the suppress command to resume normal alarm reporting.

### NTP-F188 Document Existing Provisioning

<b>Purpose</b>	This procedure records, copies, prints, and exports CTC information.
<b>Tools/Equipment</b>	A printer must be connected to the CTC computer.
<b>Prerequisite Procedures</b>	<a href="#">Chapter 4, “Turn Up a Node”</a>

<b>Required/As needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Retrieve or higher

- 
- Step 1** Complete the “[DLP-F181 Log into CTC](#)” task on page 16-34 at the node with the information where you want to record, print, or export. If you are already logged in, continue with Step 2.
- Step 2** As needed, manually record CTC information (typically to document existing provisioning before upgrading or troubleshooting).
- Step 3** As needed, you can copy and paste CTC text into other applications using the Microsoft Windows Copy (Ctrl+C), Cut (Ctrl+X), and Paste (Ctrl+V) commands.
- Step 4** If you want to print information within a single tab, complete the “[DLP-F336 Print CTC Data](#)” task on page 18-36.
- Step 5** If you want to save information to a word processing application such as a spreadsheet, complete the “[DLP-F379 Export CTC Data](#)” task on page 18-88.

**Stop. You have completed this procedure.**

---

## NTP-F189 View Alarms, Alarm History, Events, and Conditions

<b>Purpose</b>	This procedure views ONS 15600 SDH alarms at the card, node, or network level; view the alarm history for cleared and uncleared alarms; and view conditions at the card, node, or network level.
<b>Tools/Equipment</b>	None
<b>Prerequisite Procedures</b>	None
<b>Required/As Needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Retrieve or higher

- 
- Step 1** Complete the “[DLP-F181 Log into CTC](#)” task on page 16-34. If you are already logged in, continue with Step 2.
- Step 2** Complete the “[DLP-F195 View Alarms](#)” task on page 16-52 to review alarms for the current session.
- Step 3** Troubleshoot the alarms using the procedures in the *Cisco ONS 15600 SDH Troubleshooting Guide*.
- Step 4** Complete the “[DLP-F196 View Alarm History](#)” task on page 16-53 or the “[DLP-F197 View Conditions](#)” task on page 16-55 as needed.
- Step 5** Complete the “[DLP-F198 Display Events Using Each Node’s Time Zone](#)” task on page 16-57 as needed.

**Stop. You have completed this procedure.**

---

## NTP-F190 Enable, Modify, or Disable Alarm Severity Filtering

<b>Purpose</b>	This procedure starts, stops, or changes alarm filtering for one or more severities in the Alarms, Conditions, and History windows in all network nodes.
<b>Tools/Equipment</b>	None
<b>Prerequisite Procedures</b>	None
<b>Required/As Needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Retrieve or higher

- 
- Step 1** Complete the “[DLP-F181 Log into CTC](#)” task on page 16-34 at the node where you want to enable, modify, or disable alarm filtering. If you are already logged in, continue with [Step 2](#).
- Step 2** As necessary, complete the “[DLP-F286 Enable Alarm Filtering](#)” task on page 17-75. This task enables alarm filtering at the card, node, and network views for all nodes in the network. Alarm filtering can be enabled for alarms, conditions, or events.
- Step 3** As necessary, complete the “[DLP-F287 Modify Alarm and Condition Filtering Parameters](#)” task on page 17-77 to modify the alarm filtering for network nodes to show or hide particular alarms or conditions.
- Step 4** As necessary, complete the “[DLP-F288 Disable Alarm Filtering](#)” task on page 17-78 to disable alarm profile filtering for all network nodes.

**Stop. You have completed this procedure.**

---

## NTP-F191 Synchronize Alarms

<b>Purpose</b>	This procedure manually refreshes the CTC alarm display in the card, node, or network view so that it is aligned with the most current ONS 15600 SDH alarms.
<b>Tools/Equipment</b>	None
<b>Prerequisite Procedures</b>	None
<b>Required/As Needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Retrieve or higher

- 
- Step 1** Complete the “[DLP-F181 Log into CTC](#)” task on page 16-34. If you are already logged in, continue with Step 2.
- Step 2** Click the **Alarms** tab in the node view, card view, or network view.
- Step 3** Click **Synchronize**.



**Note** Alarms that have been raised during the session will have a check mark in the Alarms window New column. When you click Synchronize, the check mark disappears.

Although CTC displays alarms and events in real time, the Synchronize button allows you to verify the alarm display. This is particularly useful during provisioning or troubleshooting.

**Stop. You have completed this procedure.**

## NTP-F192 Delete Cleared Alarms from the Display

<b>Purpose</b>	This procedure deletes Cleared (C) status ONS 15600 SDH alarms from the alarms window. This procedure can be used to delete transient messages from the CTC History window.
<b>Tools/Equipment</b>	None
<b>Prerequisite procedures</b>	None
<b>Required/As needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Retrieve or higher

- 
- Step 1** Complete the “[DLP-F181 Log into CTC](#)” task on page 16-34. If you are already logged in, continue with Step 2.
- Step 2** Click the **Alarms** tab and then click **Delete Cleared Alarms** to delete node-level alarms.
- This action will remove any cleared ONS 15600 SDH alarms from the Alarms display. The rows of cleared alarms appear white and their status is C.
- Step 3** To delete the cleared alarms for one card at one node:
- In node view, double-click the card graphic for the card you want to open.
  - Click the **Alarms** tab and then click **Delete Cleared Alarms**.
- Step 4** To delete the cleared alarms for all the nodes in a network:
- From the View menu, choose **Go to Network View**.
  - Click the **Alarms** tab and then click **Delete Cleared Alarms**.
- Stop. You have completed this procedure.**
- 

## NTP-F193 View Alarm-Affected Circuits

<b>Purpose</b>	This procedure displays ONS 15600 SDH circuits that are affected by a specific alarm.
<b>Tools/Equipment</b>	None

- Prerequisite Procedures** Chapter 6, “Create Circuits.”
- Required/As Needed** As needed
- Onsite/Remote** Onsite or remote
- Security Level** Retrieve or higher

- Step 1** Complete the “DLP-F181 Log into CTC” task on page 16-34. If you are already logged in, go to Step 2.
- Step 2** Click the **Alarms** or **Conditions** tab and then right-click anywhere on the row of an active alarm or condition.




**Note** The node view is the default, but you can also navigate to the Alarms tab in the network view or card view to perform Step 2.



**Note** The card view is not available for the TSC or SSXC cards.


The Select Affected Circuit option shortcut menu appears (Figure 9-1).

**Figure 9-1** Selecting the Affected Circuits Shortcut Menu

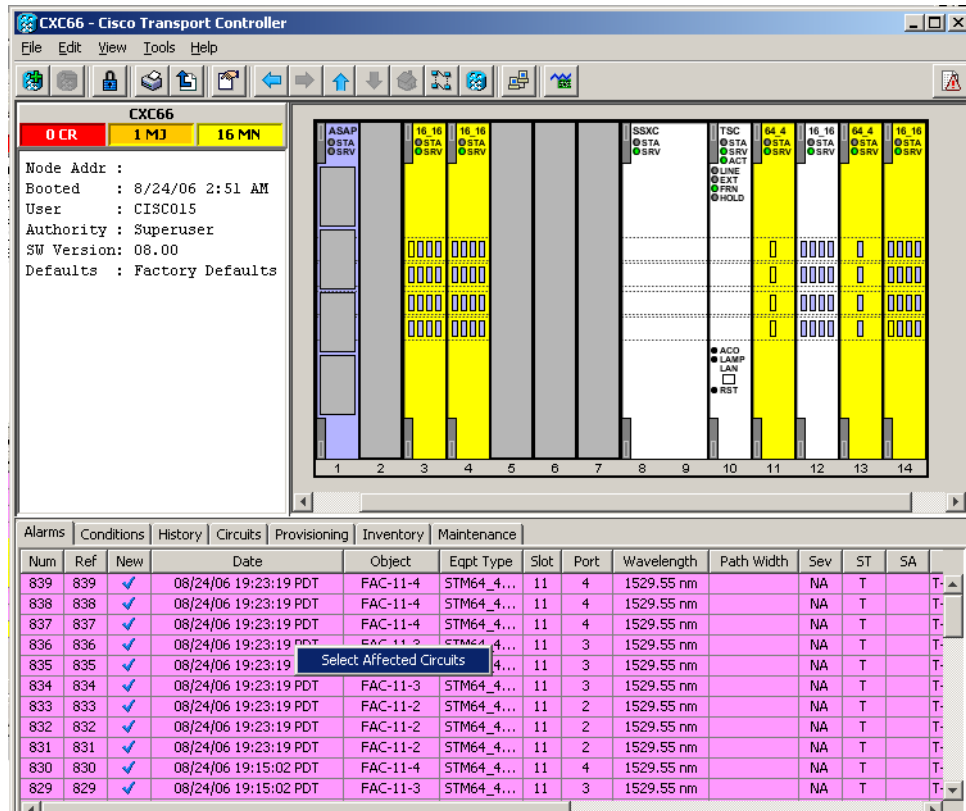

- Step 3** Click **Select Affected Circuits**.  
The Circuits window appears with affected circuits highlighted (Figure 9-2).

Figure 9-2 Affected Circuit Appears for Alarm

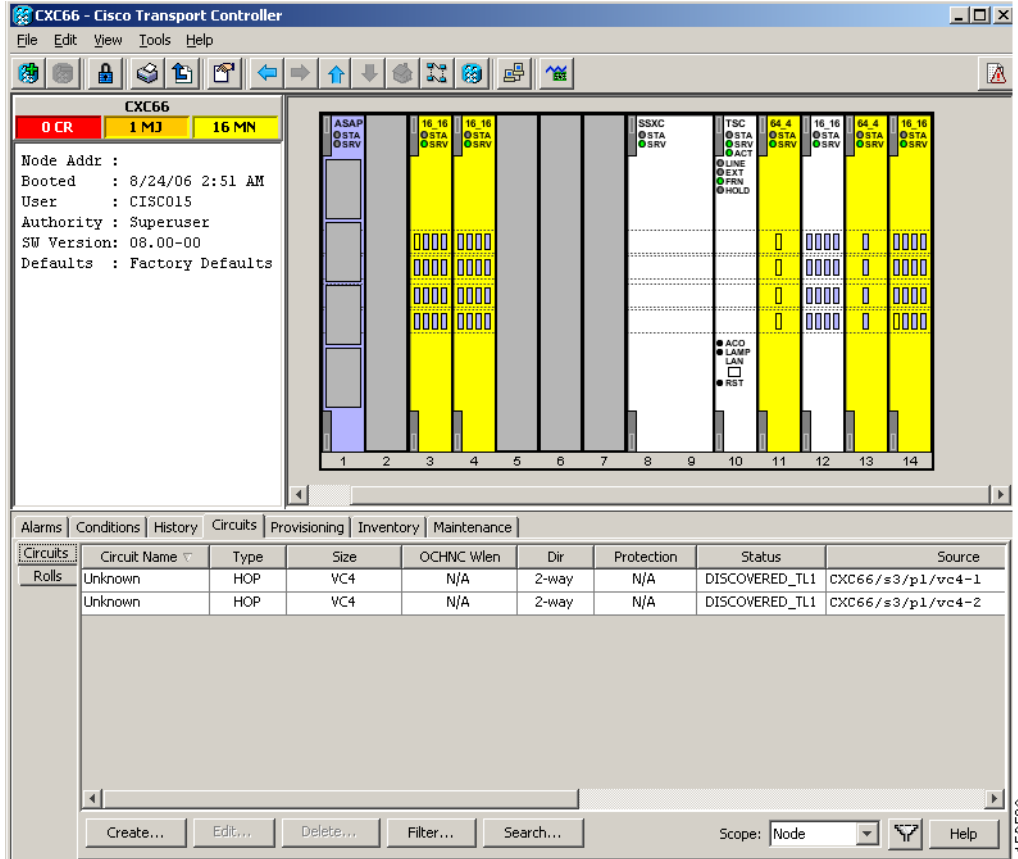

Stop. You have completed this procedure.

## NTP-F194 Create, Assign, and Delete Alarm Severity Profiles

<b>Purpose</b>	This procedure changes the default severity for certain alarms (or creates, assigns, or deletes an alarm profile).
<b>Tools/Equipment</b>	None
<b>Prerequisite Procedures</b>	None
<b>Required/As Needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Provisioning or higher

- Step 1** Complete the “DLP-F181 Log into CTC” task on page 16-34 at the node where you want to create an alarm profile. If you are already logged in, continue with Step 2 to create, clone, or modify an alarm profile, or go to STEP 3 to download an alarm profile.

- Step 2** Complete the “[DLP-F199 Create Alarm Severity Profiles](#)” task on page 16-58 task. This task clones a current alarm profile, renames the profile, and customizes the new profile.
- Step 3** Complete the “[DLP-F383 Download an Alarm Severity Profile](#)” task on page 18-94. This task downloads an alarm severity profile from a CD or a node.



**Note** After storing a created or downloaded alarm profile, you must go to the node (either by logging into it or clicking on it from the network view) and activate the profile by applying it to the shelf, one or more cards, or one or more ports.

- Step 4** As necessary, complete the “[DLP-F200 Apply Alarm Profiles for Ports and Cards](#)” task on page 17-1 or the “[DLP-F201 Apply Alarm Profiles to Cards and Nodes](#)” task on page 17-3.
- Step 5** As necessary, complete the “[DLP-F285 Delete Alarm Severity Profiles](#)” task on page 17-74.
- Stop. You have completed this procedure.**

## NTP-F195 Suppress and Restore Alarm Reporting

<b>Purpose</b>	This procedure prevents alarms from being reported on ONS 15600 SDH ports, cards, or nodes when an alarm or condition exists but you do not want it to appear in the Alarms or History windows. Also use this procedure to discontinue alarm suppression.
<b>Tools/Equipment</b>	None
<b>Prerequisite Procedures</b>	None
<b>Required/As Needed</b>	As needed
<b>Onsite/Remote</b>	Onsite or remote
<b>Security Level</b>	Provisioning or higher

- Step 1** Complete the “[DLP-F181 Log into CTC](#)” task on page 16-34. If you are already logged in, continue with Step 2.
- Step 2** Complete the “[DLP-F202 Suppress Alarm Reporting](#)” task on page 17-3 to provision the node to send out autonomous messages to clear any raised alarms.
- Step 3** Complete the “[DLP-F203 Restore Alarm Reporting](#)” task on page 17-5 to remove the suppress-alarms command and provision the node to send out autonomous messages to raise any actively suppressed alarms.

**Stop. You have completed this procedure.**

