




# Configure Devices

This chapter describes the tasks related to device configuration in Cisco Optical Site Manager.

**Figure 1: Configure Devices**

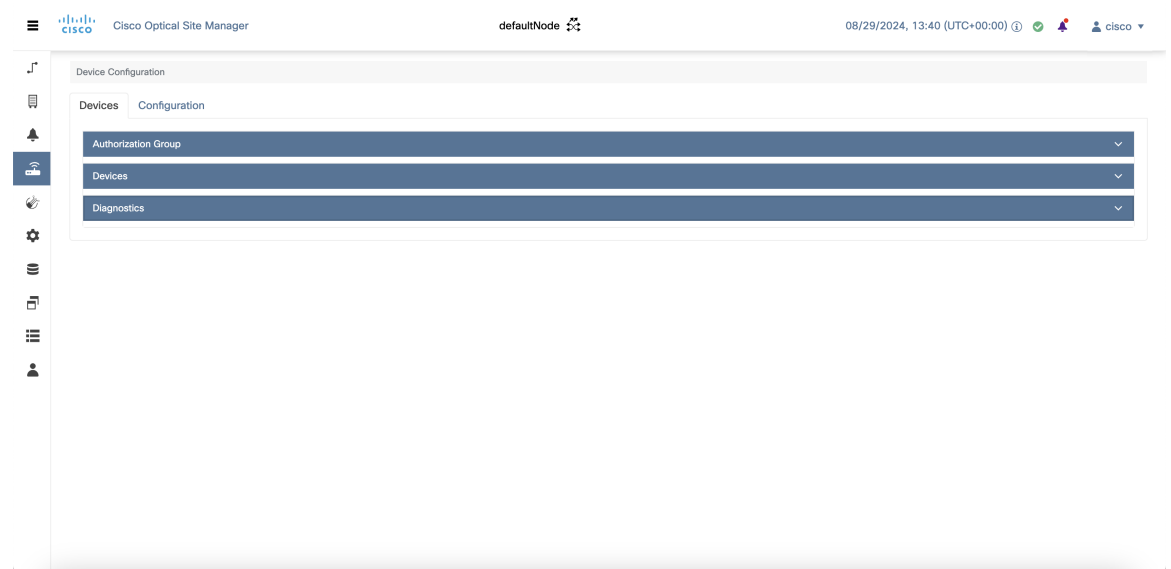

- [Manage authorization groups, on page 1](#)
- [Add a device, on page 2](#)
- [Delete devices, on page 4](#)
- [Retrieve device diagnostics, on page 5](#)

## Manage authorization groups

Authorization groups are used to manage user and group attributes for authentication and authorization processes.

Follow these steps to create, edit, or delete authorization groups for devices.

### Before you begin

[Log into Cisco Optical Site Manager](#)

Procedure

- Step 1

Click **Devices** in the left panel.  
The *Device Configuration* page appears.
- Step 2

In the **Devices** section, click the **Authorization Group** section to expand it.  
The table lists all the available groups.
- Step 3

Perform these steps, as needed:

To	perform these steps
Create a new authorization group	<div> <div>a.</div> <div>Click the <b>Add Auth Group</b> button. The <b>Add Authorization Group</b> dialog box appears.</div> </div> <div> <div>b.</div> <div>Enter the <b>Auth Group Name</b>, <b>Remote User Name</b>, and <b>Remote Password</b> in their respective fields.</div> </div> <div> <div>c.</div> <div>Click <b>Add</b>. The new auth group is added to the table.</div> </div>
Edit an authorization group	<div> <div>a.</div> <div>Click the <b>Add Auth Group</b> button. The <b>Add Authorization Group</b> dialog box appears.</div> </div> <div> <div>b.</div> <div>Enter the <b>Auth Group Name</b>, <b>Remote User Name</b>, and <b>Remote Password</b> in their respective fields.</div> </div> <div> <div>c.</div> <div>Click <b>Add</b>. The authorization group is added to the table.</div> </div>
Delete an authorization group	<div> <div>a.</div> <div>Select the check box next to the authorization group you want to edit.</div> </div> <div> <div>b.</div> <div>Click the <b>Delete Auth Group</b> button. A confirmation message appears.</div> </div> <div> <div>c.</div> <div>Click <b>OK</b>. The authorization group is deleted from the table.</div> </div>

# Add a device

Cisco Optical Site Manager automatically detects and onboards directly connected peer devices on the network. However, if you've added a new device after configuring Cisco Optical Site Manager, you can manually add the device for management using the application.

*Figure 2: Add a Device*

Follow these steps to add an NCS 1000 or NCS 2000 device to Cisco Optical Site Manager.

### Before you begin

[Log into Cisco Optical Site Manager](#)

### Procedure

- Step 1** Click **Devices** in the left panel.  
The *Device Configuration* page appears.
- Step 2** In the **Devices** tab, click the **Devices** section to expand it.  
A table appears that lists all the devices that are configured.
- Step 3** Click the **Add Device** icon.  
The **Add Device** dialog box appears.
- Step 4** Select the **Device Type** from the drop-down list.

Select	to
ncs1000	add a NCS 1000 device.
ncs2000	add a NCS 2000 device.
external-switch	add an external switch.

- Step 5** Enter the **Netconf Port**.
- Note**  
This field is displayed only if *ncs1000* is selected in the **Device Type** drop-down list.
- Step 6** Enter the **Device Name** and **IP Address**.
- Step 7** Enter the **UID**.
- Note**  
This field is displayed only if *ncs1000* or *ncs2000* is selected in the **Device Type** drop-down list.
- Step 8** Select an authorization group from the **Auth Group** drop-down list.
- Step 9** Click **Add**.

The device is added to Cisco Optical Site Manager and displayed in the **Devices** section.

## Delete devices

Delete devices that are no longer used in the network.

Follow these steps to delete an NCS 1000, NCS 2000, passive device, or an external controller.

**Before you begin**

[Log into Cisco Optical Site Manager](#)

**Procedure**

- 
- |               |   |
|---------------|---|
| <b>Step 1</b> | Click <b>Devices</b> in the left panel.<br>The <i>Device Configuration</i> page appears.                    |
| <b>Step 2</b> | Click the <b>Devices</b> section to expand it.<br>The table lists all the configured devices.               |
| <b>Step 3</b> | Select the check box next to the devices you want to delete.  |
| <b>Step 4</b> | Click the <b>Delete Device(s)</b> button to delete the selected devices.<br>A confirmation message appears. |
| <b>Step 5</b> | Click <b>Yes</b> .  |
- 

## Retrieve device diagnostics

Retrieve, download, and review diagnostics on the Diagnostics page.

Follow these steps to retrieve and download the device diagnostics:

**Before you begin**

[Log into Cisco Optical Site Manager](#)

**Procedure**

- 
- |               |  |
|---------------|--|
| <b>Step 1</b> | Click <b>Devices</b> in the left panel.  |
| <b>Step 2</b> | In the <b>Devices</b> tab, click the <b>Diagnostics</b> section to expand it.<br>The configured devices are listed in a table. |
| <b>Step 3</b> | Select the <b>Node Diagnostics</b> check box next to the device for which you want to retrieve the diagnostics.                |
| <b>Step 4</b> | Click <b>Retrieve</b> .<br>A confirmation message appears.   |
| <b>Step 5</b> | Click <b>Yes</b> to proceed.<br>A <b>Request Accepted</b> message appears.   |
| <b>Step 6</b> | Click <b>OK</b> .<br>A message appears when the diagnostic action is completed.  |
| <b>Step 7</b> | Select the check box next to the device for which you want to download the diagnostics and click <b>Download</b> .             |

The system downloads a zip file containing the logs.

---

The downloaded ZIP file contains diagnostic logs, which can be reviewed for troubleshooting, performance monitoring, or compliance purposes.