



# Configuring the Card Mode

This chapter lists the supported configurations and the procedures to configure the card mode on the line cards.



**Note** Unless otherwise specified, “line cards” refers to 1.2T and 1.2TL line cards.

- [1.2T line card, on page 1](#)
- [QXP Card, on page 17](#)
- [2-QDD-C Line Card, on page 36](#)
- [2.4T and 2.4TX Card Modes Overview, on page 43](#)

## 1.2T line card

The following section describes the supported configurations and procedures to configure the card modes on the 1.2T line card.

### Card Modes

The 1.2T line card support module and slice configurations, offering flexibility in trunk and client port setups.

#### Port details

The line cards are equipped with trunk and client ports as follows:

- **1.2T Line Card:**

- Two trunk ports (0 and 1)
- 12 client ports (2 through 13)

#### Configuration modes

You can configure the line cards in the following two modes:

- **Muxponder Mode:**

- Both trunk ports are configured with the same trunk rate.
- The client-to-trunk mapping is in a sequence.
- **Muxponder Slice Mode:** The client-to-trunk mapping is fixed.

*Table 1: Client-to-trunk mapping for muxponder slice mode*

Card	Trunk 0 Client Ports	Trunk 1 Client Ports
1.2T	2 through 7	Ports 8 through 13

## Sub 50G Configuration

You can configure the sub 50G or coupled mode on the 1.2T line card only in the muxponder mode.

This table displays the port configuration for the supported data rates in the muxponder mode.

*Table 2: Supported data rates for muxponder mode*

Trunk Data Rate (per trunk)	Total Configured Data rate	Trunk Ports	Client Ports for Trunk 0 (100G)	Shared Client Port (50G per trunk)	Client Ports for Trunk 1 (100G)
50G	100G	0, 1	-	2	-
150G	300G	0, 1	2	3	4
350G	700G	0, 1	2, 3, 4	5	6, 7, 8
450G	900G	0, 1	2, 3, 4, 5	6	7, 8, 9, 10
550G	1.1T	0, 1	2, 3, 4, 5, 6	7	8, 9, 10, 11, 12

1.2T line card supports an alternate port configuration for Sub 50G (split client port mapping) that you configure using CLI.

This table displays the port configuration for the supported data rates in the split client port mapping mode.

*Table 3: Supported data rates for split client port mapping mode*

Trunk Data Rate (per trunk)	Total Configured Data rate	Trunk Ports	Client Ports for Trunk 0 (100G)	Shared Client Port (50G per trunk)	Client Ports for Trunk 1 (100G)
50G	100G	0, 1	-	7	-
150G	300G	0, 1	2	7	8
250G	500G	0, 1	2, 3	7	8, 9
350G	700G	0, 1	2, 3, 4	7	8, 9, 10
450G	900G	0, 1	2, 3, 4, 5	7	8, 9, 10, 11

Trunk Data Rate (per trunk)	Total Configured Data rate	Trunk Ports	Client Ports for Trunk 0 (100G)	Shared Client Port (50G per trunk)	Client Ports for Trunk 1 (100G)
550G	1.1T	0, 1	2, 3, 4, 5, 6	7	8, 9, 10, 11, 12



**Note** In all x50G configurations, client traffic on the middle port is affected with ODUK-BDI and LF alarms after the **power cycle or link flap** on the trunk side. This issue is raised when the two network lanes work in coupled mode and move from low to high power. To solve this issue, create a new frame either at the near-end or far-end by performing **shut** or **no shut** of the trunk ports.

### Coupled Mode Restrictions

These restrictions apply to the coupled mode configuration:

- Both trunk ports must be configured with the same bits-per-symbol or baud rate and must be sent over same fiber and direction.
- The chromatic dispersion must be configured to the same value for both trunk ports.
- When trunk internal loopback is configured, it must be done for both trunk ports. Configuring internal loopback on only one trunk results in traffic loss.
- Fault on a trunk port of a coupled pair may cause errors on all clients including those running only on the unaffected trunk port.

## Configure Split Client Port Mapping

You can configure the trunk port of the 1.2T line card to client port mapping for sub 50G data rates in the default mode or in the split client port mapping mode.

Follow these steps to configure the split client port mapping:

### Procedure

**Step 1** Run the **configure** command to configure the card in muxponder module mode.

**Example:**

```
RP/0/RP0/CPU0:ios#configure
```

Activates the split client ports 2 and 3.

**Step 2** Run the **hw-module locationlocationmxponder** command to enter into the muxponder mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
```

**Step 3** Perform any of these steps to configure or remove the split client port mapping mode:

## Configure Split Client Port Mapping

- To configure the trunk port to client port mapping for sub 50G configuration in the split client port mapping mode, run the **split-client-port-mapping** command.

Example:

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#split-client-port-mapping
```

- To remove the split client port-mapping configuration, run the **no split-client-port-mapping** command.

Example:

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#no split-client-port-mapping
```

### Step 4 Run the **commit** and **end** commands to commit the changes and exit the configuration mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

### Step 5 Verify the port mapping using the **show hw-module location*location*mxponder** command.

**Example:**

This example shows how to verify the split client port-mapping configuration.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder
```

Location:	Mapper/Trunk Port	CoherentDSP0/1/0/0	CoherentDSP0/1/0/1
	Traffic Split Percentage		
HundredGigEController0/1/0/2	ODU40/1/0/0/1	100	0
HundredGigEController0/1/0/3	ODU40/1/0/0/2	100	0
HundredGigEController0/1/0/4	ODU40/1/0/0/3	100	0
HundredGigEController0/1/0/5	ODU40/1/0/0/4	100	0
HundredGigEController0/1/0/7	ODU40/1/0/0/5	50	50
HundredGigEController0/1/0/8	ODU40/1/0/1/1	0	100
HundredGigEController0/1/0/9	ODU40/1/0/1/2	0	100
HundredGigEController0/1/0/10	ODU40/1/0/1/3	0	100
HundredGigEController0/1/0/11	ODU40/1/0/1/4	0	100

---

The split client port mapping is configured.

**Example**

The following is a sample in which split-client-port-mapping is configured with a 450G trunk payload.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#split-client-port-mapping
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end
```

The following is a sample in which split-client-port-mapping is removed.

```

RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 muxponder
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#no split-client-port-mapping
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#end

```

## Supported Data Rates

These data rates are supported on the 1.2T line card.

This table displays the client and trunk ports that are enabled for the muxponder, muxponder slice 0, and muxponder slice 1 configurations for the 100GE and OTU4 data rates.

**Table 4: Data rates for muxponder and muxponder slice 0 and slice 1 mode configuration**

<b>Trunk Data Rate</b>	<b>Client Data Rate (100GE, OTU4)</b>	<b>Muxponder mode</b>		<b>Muxponder slice mode</b>	
		<b>Trunk Ports</b>	<b>Client Ports</b>	<b>Client ports for Trunk 1</b>	<b>Client ports for Trunk 0</b>
100	100GE, OTU4	0	2	8	2
200	100GE, OTU4	0, 1	2, 3, 4, 5	8, 9	2, 3
300	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7	8, 9, 10	2, 3, 4
400	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7, 8, 9	8, 9, 10, 11	2, 3, 4, 5
500	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7, 8, 9, 10, 11	8, 9, 10, 11, 12	2, 3, 4, 5, 6
600	100GE, OTU4	0, 1	2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13	8, 9, 10, 11, 12, 13	2, 3, 4, 5, 6, 7

All configurations can be accomplished by using appropriate values for client bitrate and trunk bitrate parameters of the **hw-module** command.

This table displays the trunk parameter ranges for the 1.2T line card.

<b>Trunk Payload</b>	<b>FEC</b>	<b>Min BPS</b>	<b>Max BPS</b>	<b>Min GBd</b>	<b>Max GBd</b>
50G	15%	1	1.3125	24.0207911	31.5272884
50G	27%	1	1.4453125	24.0207911	34.7175497
100G	15%	1	2.625	24.0207911	63.0545768
100G	27%	1	2.890625	24.0207911	69.4350994
150G	15%	1.3203125	3.9375	24.0207911	71.6359689
150G	27%	1.453125	4.3359375	24.0207911	71.6749413
200G	15%	1.7578125	5.25	24.0207911	71.7420962

## Supported Data Rates

<b>Trunk Payload</b>	<b>FEC</b>	<b>Min BPS</b>	<b>Max BPS</b>	<b>Min GBd</b>	<b>Max GBd</b>
200G	27%	2	4.40625	31.51	69.43
250G	15%	2.1953125	6	26.2727403	71.8059237
250G	27%	2.4140625	6	28.9312914	71.9068991
300G	15%	2.6328125	6	31.5272884	71.8485385
300G	27%	2.8984375	6	34.7175497	71.8681352
350G	15%	3.0703125	6	36.7818364	71.8790086
350G	27%	3.3828125	6	40.503808	71.8404724
400G	15%	3.5078125	6	42.0363845	71.9018782
400G	27%	3.8671875	6	46.2900663	71.8197392
450G	15%	3.9453125	6	47.2909326	71.9196757
450G	27%	4.34375	6	52.0763245	71.9327648
500G	15%	4.3828125	6	52.5454806	71.93392
500G	27%	4.8281250	6	57.8625828	71.9068991
550G	15%	4.8203125	6	57.8000287	71.9455787
550G	27%	5.3125	6	63.6488411	71.88575
600G	15%	5.2578125	-	-	71.9552971

<b>Trunk Payload</b>	<b>FEC</b>	<b>Min BPS</b>	<b>Max BPS</b>	<b>Min GBd</b>	<b>Max GBd</b>
100G	15%	1	2.625	24.0207911	63.0545768
100G	27%	1	2.890625	24.0207911	69.4350994
150G	15%	1.3203125	3.9375	24.0207911	71.6359689
150G	27%	1.453125	4.3359375	24.0207911	71.6749413
200G	15%	2	4	31.5272884	63.0545768
200G	27%	2	4.40625	31.51664088	69.43509943
250G	15%	2.1953125	4.5	35.0303204	71.8059237
250G	27%	2.4140625	4.5	38.5750552	71.9068991
300G	15%	2.6328125	4.5	42.0363845	71.8485385
300G	27%	2.8984375	4.5	46.2900662857142	71.86813526

Trunk Payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
350G	15%	3.0703125	4.5	49.0424486	71.8790086
350G	27%	3.3828125	4.5	54.0050773	71.8404724
400G	15%	3.5078125	4.5	56.0485127	71.9018782
400G	27%	3.8671875	4.5	61.72008838	71.81973921

## Configuring the card mode

You can configure the 1.2T line card in the module (muxponder) or slice configuration (muxponder slice).

### Configure the card in the muxponder mode

To configure the card in the muxponder mode, use these commands.

**configure**

**hw-module location *location* muxponder client-rate {100GE | OTU4}**

**hw-module location *location* muxponder trunk-rate {50G | 100G|150G | 200G | 250G | 300G | 350G | 400G | 450G | 500G | 550G | 600G }**

**commit**

### Configure the card in the muxponder slice mode

To configure the client data rates of the card in the muxponder slice mode, use these commands.

**configure hw-module location *location* muxponder-slice *muxponder-slice-number* client-rate { 100GE|OTU4}**

To configure the trunk data rates of the card in the muxponder slice mode, use these commands.

**hw-module location *location* muxponder-slice trunk-rate { 100G | 200G | 300G | 400G | 500G | 600G }**

**commit**

### Examples

This is a sample in which the card is configured in the muxponder mode with a 550G trunk payload.

```
RP/0/RP0/CPU0:ios#config
Tue Oct 15 01:24:56.355 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 muxponder client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 muxponder trunk-rate 550G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder mode with a 500G trunk payload.

```
RP/0/RP0/CPU0:ios#config
Sun Feb 24 14:09:33.989 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 muxponder client-rate OTU4
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 muxponder trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder slice 0 mode with a 500G trunk payload.

## Configuring the card mode

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 0 client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 0 trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured in the muxponder slice 1 mode with a 400G trunk payload.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 1 client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 1 trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#commit
```

This is a sample in which the card is configured with mixed client rates in the muxponder slice mode.

```
RP/0/RP0/CPU0:ios#configure
Mon Mar 23 06:10:22.227 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 0 client-rate OTU4
trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0 mxponder-slice 1 client-rate 100GE
trunk-rate 500G
RP/0/RP0/CPU0:ios(config)#commit
```

### Verify Card Configuration

Use this command to verify the card configuration:

**show hw-module location <location> mxponder**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/2/NXR0 mxponder
Fri Mar 15 11:48:48.344 IST

Location:          0/2/NXR0
Client Bitrate:   100GE
Trunk Bitrate:    500G
Status:            Provisioned
LLDP Drop Enabled: FALSE
Client Port        Mapper/Trunk Port  CoherentDSP0/2/0/0  CoherentDSP0/2/0/1
                           Traffic Split Percentage

HundredGigECtrlr0/2/0/2  ODU40/2/0/0/1      100          0
HundredGigECtrlr0/2/0/3  ODU40/2/0/0/2      100          0
HundredGigECtrlr0/2/0/4  ODU40/2/0/0/3      100          0
HundredGigECtrlr0/2/0/5  ODU40/2/0/0/4      100          0
HundredGigECtrlr0/2/0/6  ODU40/2/0/0/5      100          0
HundredGigECtrlr0/2/0/7  ODU40/2/0/1/1      0           100
HundredGigECtrlr0/2/0/8  ODU40/2/0/1/2      0           100
HundredGigECtrlr0/2/0/9  ODU40/2/0/1/3      0           100
HundredGigECtrlr0/2/0/10 ODU40/2/0/1/4      0           100
HundredGigECtrlr0/2/0/11 ODU40/2/0/1/5      0           100
```

This is a sample output of the coupled mode configuration where the shared client port is highlighted.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder
Tue Oct 15 01:25:57.358 UTC

Location:          0/1/NXR0
Client Bitrate:   100GE
Trunk Bitrate:    550G
Status:            Provisioned
LLDP Drop Enabled: FALSE
Client Port        Mapper/Trunk Port  CoherentDSP0/1/0/0  CoherentDSP0/1/0/1
                           Traffic Split Percentage
```

HundredGigEController0/1/0/2	ODU40/1/0/0/1	100	0
HundredGigEController0/1/0/3	ODU40/1/0/0/2	100	0
HundredGigEController0/1/0/4	ODU40/1/0/0/3	100	0
HundredGigEController0/1/0/5	ODU40/1/0/0/4	100	0
HundredGigEController0/1/0/6	ODU40/1/0/0/5	100	0
<b>HundredGigEController0/1/0/7</b>	<b>ODU40/1/0/0/6</b>	<b>50</b>	<b>50</b>
HundredGigEController0/1/0/8	ODU40/1/0/1/1	0	100
HundredGigEController0/1/0/9	ODU40/1/0/1/2	0	100
HundredGigEController0/1/0/10	ODU40/1/0/1/3	0	100
HundredGigEController0/1/0/11	ODU40/1/0/1/4	0	100
HundredGigEController0/1/0/12	ODU40/1/0/1/5	0	100

This is a sample output of all the muxponder slice 0 configurations.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder-slice 0
Fri Mar 15 06:04:18.348 UTC
```

Location:	Mapper/Trunk Port	CoherentDSP0/1/0/0
Slice ID:	Traffic Split Percentage	
Client Bitrate:	100GE	
Trunk Bitrate:	500G	
Status:	Provisioned	
LLDP Drop Enabled:	FALSE	
Client Port		
HundredGigEController0/1/0/2	ODU40/1/0/0/1	100
HundredGigEController0/1/0/3	ODU40/1/0/0/2	100
HundredGigEController0/1/0/4	ODU40/1/0/0/3	100
HundredGigEController0/1/0/5	ODU40/1/0/0/4	100
HundredGigEController0/1/0/6	ODU40/1/0/0/5	100

This is a sample output of all the muxponder slice 1 configurations.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder-slice 1
Fri Mar 15 06:11:50.020 UTC
```

Location:	Mapper/Trunk Port	CoherentDSP0/1/0/1
Slice ID:	Traffic Split Percentage	
Client Bitrate:	100GE	
Trunk Bitrate:	400G	
Status:	Provisioned	
LLDP Drop Enabled:	TRUE	
Client Port		
HundredGigEController0/1/0/8	ODU40/1/0/1/1	100
HundredGigEController0/1/0/9	ODU40/1/0/1/2	100
HundredGigEController0/1/0/10	ODU40/1/0/1/3	100
HundredGigEController0/1/0/11	ODU40/1/0/1/4	100

This is a sample output of the muxponder slice 1 configuration with client configured as OTU4.

```
RP/0/RP0/CPU0:ios#sh hw-module location 0/0/NXR0 mxponder-slice 1
```

Wed Mar 11 13:59:11.073 UTC

Location:	Peer/Trunk Port	CoherentDSP0/0/0/1
Slice ID:		
Client Bitrate:	OTU4	
Trunk Bitrate:	200G	
Status:	Provisioned	
Client Port		

## Configuring the card mode

	Traffic Split Percentage	
OTU40/0/0/8	ODU40/0/0/1/1	100
OTU40/0/0/9	ODU40/0/0/1/2	100

This is a sample to verify the mixed client rate configuration in the muxponder slice mode.

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 mxponder
Mon Mar 23 06:20:22.227 UTC

Location:          0/1/NXR0
Slice ID:          0
Client Bitrate:    OTU4
Trunk Bitrate:     500G
Status:             Provisioned
Client Port        Peer/Trunk Port      CoherentDSP0/1/0/0
                    Traffic Split Percentage
OTU40/1/0/2        ODU40/1/0/0/1       100
OTU40/1/0/3        ODU40/1/0/0/2       100
OTU40/1/0/4        ODU40/1/0/0/3       100
OTU40/1/0/5        ODU40/1/0/0/4       100
OTU40/1/0/6        ODU40/1/0/0/5       100

Location:          0/1/NXR0
Slice ID:          1
Client Bitrate:    100GE
Trunk Bitrate:     500G
Status:             Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port        Mapper/Trunk Port   CoherentDSP0/1/0/1
                    Traffic Split Percentage
HundredGigECtrlr0/1/0/8  ODU40/1/0/1/1       100
HundredGigECtrlr0/1/0/9  ODU40/1/0/1/2       100
HundredGigECtrlr0/1/0/10 ODU40/1/0/1/3       100
HundredGigECtrlr0/1/0/11 ODU40/1/0/1/4       100
HundredGigECtrlr0/1/0/12 ODU40/1/0/1/5       100
```

### Clear alarm statistics

Use this command to clear alarm statistics on the optics or coherent DSP controller.

**clear counters controller *controllertype R/S/I/P***

This is a sample in which the alarm statistics are cleared on the coherent DSP controller.

```
RP/0/RP0/CPU0:ios#show controller coherentDSP 0/1/0/0
Tue Jun 11 05:15:12.540 UTC

Port                      : CoherentDSP 0/1/0/0
Controller State           : Up
Inherited Secondary State : Normal
Configured Secondary State: Normal
Derived State              : In Service
Loopback mode              : None
BER Thresholds            : SF = 1.0E-5 SD = 1.0E-7
Performance Monitoring     : Enable

Alarm Information:
LOS = 1 LOF = 1 LOM = 0
OOF = 1 OOM = 1 AIS = 0
```

```

IAE = 0 BIAE = 0           SF_BER = 0
SD_BER = 2      BDI = 2 TIM = 0
FECMISMATCH = 0 FEC-UNC = 0
Detected Alarms : None

Bit Error Rate Information
PREFEC BER : 8.8E-03
POSTFEC BER : 0.0E+00

TTI :
    Remote hostname : P2B8
    Remote interface : CoherentDSP 0/1/0/0
    Remote IP addr : 0.0.0.0

FEC mode : Soft-Decision 15

AINS Soak : None
AINS Timer : 0h, 0m
AINS remaining time : 0 seconds
RP/0/RP0/CPU0:ios#clear counters controller coherentDSP 0/1/0/0
Tue Jun 11 05:17:07.271 UTC
All counters are cleared
RP/0/RP0/CPU0:ios#show controllers coherentDSP 0/1/0/1
Tue Jun 11 05:20:55.199 UTC

Port : CoherentDSP 0/1/0/1
Controller State : Up
Inherited Secondary State : Normal
Configured Secondary State : Normal
Derived State : In Service
Loopback mode : None
BER Thresholds : SF = 1.0E-5 SD = 1.0E-7
Performance Monitoring : Enable

Alarm Information:
LOS = 0 LOF = 0 LOM = 0
OOF = 0 OOM = 0 AIS = 0
IAE = 0 BIAE = 0           SF_BER = 0
SD_BER = 0      BDI = 0 TIM = 0
FECMISMATCH = 0 FEC-UNC = 0
Detected Alarms : None

Bit Error Rate Information
PREFEC BER : 1.2E-02
POSTFEC BER : 0.0E+00

TTI :
    Remote hostname : P2B8
    Remote interface : CoherentDSP 0/1/0/1
    Remote IP addr : 0.0.0.0

FEC mode : Soft-Decision 15

AINS Soak : None
AINS Timer : 0h, 0m
AINS remaining time : 0 seconds

```

## Regeneration Mode

In an optical transmission system, 3R regeneration helps extend the reach of the optical communication links by reamplifying, reshaping, and retiming the data pulses. Regeneration helps to correct any distortion of

optical signals by converting it to an electrical signal, processing that electrical signal, and then retransmitting it again as an optical signal.

In Regeneration (Regen) mode, the OTN signal is received on a trunk port and the regenerated OTN signal is sent on the other trunk port of the 1.2T line card and the other way round. In this mode, only the trunk optics controller and coherentDSP controllers are created. Regeneration can be configured only on the 1.2T line card.

## Configuring the Card in Regen Mode

You can configure the regeneration mode on the 1.2T line card. The supported trunk rates are 100G to 600G in multiples of 100G.

To configure the regeneration mode on the 1.2T card, use these commands:

**configure**

**hw-module location *location***

**regen**

**trunk-rate *trunk-rate***

**commit**

**exit**

### Example

The following is a sample to configure the regeneration mode on the 1.2T line card with the trunk-rate 300.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0/NXR0
RP/0/RP0/CPU0:ios(config-hwmod)#regen
RP/0/RP0/CPU0:ios(config-regen)#trunk-rate 300
RP/0/RP0/CPU0:ios(config-regen)#commit
RP/0/RP0/CPU0:ios(config-regen)#exit
```

## Verifying the Regen Mode

The following is a sample to verify the regen mode.

**show hw-module location *location* regen**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0 regen
Mon Mar 25 09:50:42.936 UTC

Location:          0/0/NXR0
Trunk Bitrate:    400G
Status:            Provisioned
East Port          West Port
CoherentDSP0/0/0/0 CoherentDSP0/0/0/1
```

The terms, East Port and West Port are used to represent OTN signal regeneration at the same layer.

## Configuring the BPS

The `bits-per-symbol` parameter allows you to configure the modulation format on optical interfaces. This setting directly impacts the spectral efficiency and data rate on a per-wavelength basis.

## Supported Line Cards

You can configure the Bits per Symbol (BPS) on the 1.2T and 2-QDD-C line cards to 3.4375 to support 300G trunk configurations on 75 GHz networks using these commands:

**configure**

**controller optics R/S/I/P bits-per-symbol value**

**commit**

This is a sample in which the BPS is configured to 3.4375.

```
RP/0/RP0/CPU0:ios#configure
Wed Mar 27 14:12:49.932 UTC
RP/0/RP0/CPU0:ios(config)#controller optics 0/3/0/0 bits-per-symbol 3.4375
RP/0/RP0/CPU0:ios(config)#commit
```

## Supported Baud Rates

**Table 5: Supported Baud Rates**

Traffic Rate	Minimum Baud Rate	Maximum Baud Rate
400	43.34518	130.4647
600	59.53435	148.0555
800	79.37913	148.0555
1000	99.22392	148.0555

## View BPS and Baud Rate Ranges

To view the the BPS for a specific range use these command:

**show controller optics R/S/I/P bps-range bps-range | include data-rate | include fec-type**

```
RP/0/RP0/CPU0:ios#show controllers optics 0/3/0/0 bps-range 3 3.05 | include 300G | include
SD27
Thu Mar 28 03:01:39.751 UTC
300G      SD27      3.0000000      69.4350994
300G      SD27      3.0078125      69.2547485
300G      SD27      3.0156250      69.0753320
300G      SD27      3.0234375      68.8968428
300G      SD27      3.0312500      68.7192736
300G      SD27      3.0390625      68.5426174
300G      SD27      3.0468750      68.3668671
```

To view the baud for a specific range use these command:

**show controller optics R/S/I/P baud-rate-range baud-range | include data-rate | include fec-type**

```
RP/0/RP0/CPU0:ios#show controllers optics 0/3/0/0 baud-rate-range 43 43.4 | include 300G | include
SD27
Thu Mar 28 03:12:36.521 UTC
300G      SD27      4.8046875      43.3545986
300G      SD27      4.8125000      43.2842178
300G      SD27      4.8203125      43.2140651
300G      SD27      4.8281250      43.1441394
```

## Configure the Trunk Rate for BPSK

300G	SD27	4.8359375	43.0744397
300G	SD27	4.8437500	43.0049648

## Configure the Trunk Rate for BPSK

Trunk rates on the 1.2T and 2-QDD-C line cards can be configured to 50G, 100G, and 150G to support Binary Phase-Shift Keying (BPSK) modulation, optimizing the efficiency of carrying information over radio signals.

### Configuration methods

You can configure trunk rates for BPSK modulation using these methods:

- Command-Line Interface (CLI)
- NetConf YANG
- OC Models

### Supported trunk rates and BPSK modulation

This table lists the trunk rates with the supported BPSK modulation:

*Table 6: Trunk rates with the supported BPSK modulation*

Trunk Rate	BPSK Modulation
50G	1 to 1.4453125
100G	1 to 2.890625
150G	1.453125 to 4.3359375

### Configure trunk rate

To configure the trunk rate for BPSK modulation, enter these commands:

**configure**

**hw-module location *location* mxponder**

**trunk-rate {50G | 100G | 150G}**

**commit**

This example shows how to configure trunk rate to 50G:

```
RP/0/RP0/CPU0:(config)#hw-module location 0/0/NXR0 mxponder
RP/0/RP0/CPU0:(config-hwmod-mxp)#trunk-rate 50G
RP/0/RP0/CPU0:(config-hwmod-mxp)#commit
```

## Viewing the BPSK Trunk Rate Ranges

To view the trunk rate configured for the BPSK modulation, use the following **show** commands:

```
RP/0/RP0/CPU0:ios (hwmod-mxp)#show hw-module location 0/0/NXR0 mxponder
```

Tue Feb 25 11:13:41.934 UTC

```

Location:          0/0/NXR0
Client Bitrate:   100GE
Trunk Bitrate:    50G
Status:            Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port        Mapper/Trunk Port      CoherentDSP0/0/0/0
CoherentDSP0/0/0/1                         Traffic Split Percentage

```

```

HundredGigECtrlr0/0/0/2           ODU40/0/0/0      50
      50

```

```

RP/0/RP0/CPU0:ios#show controllers optics 0/0/0/0
Thu Mar  5 07:12:55.681 UTC

```

Controller State: Up

Transport Admin State: In Service

Laser State: On

LED State: Green

#### Optics Status

```

Optics Type: DWDM optics
DWDM carrier Info: C BAND, MSA ITU Channel=61, Frequency=193.10THz,
Wavelength=1552.524nm

```

#### Alarm Status:

-----

Detected Alarms: None

#### LOS/LOL/Fault Status:

#### Alarm Statistics:

-----

HIGH-RX-PWR = 0	LOW-RX-PWR = 2
-----------------	----------------

HIGH-TX-PWR = 0	LOW-TX-PWR = 0
-----------------	----------------

HIGH-LBC = 0	HIGH-DGD = 0
--------------	--------------

OOR-CD = 0	OSNR = 0
------------	----------

WVL-OOL = 0	MEA = 0
-------------	---------

IMPROPER-REM = 0	
------------------	--

TX-POWER-PROV-MISMATCH = 0	
----------------------------	--

Laser Bias Current = 0.0 %	
----------------------------	--

Actual TX Power = 1.97 dBm	
----------------------------	--

RX Power = 1.58 dBm	
---------------------	--

RX Signal Power = 0.60 dBm	
----------------------------	--

Frequency Offset = 386 MHz	
----------------------------	--

#### Performance Monitoring: Enable

#### THRESHOLD VALUES

-----

Parameter	High Alarm	Low Alarm	High Warning	Low Warning
-----------	------------	-----------	--------------	-------------

## Viewing the BPSK Trunk Rate Ranges

Rx Power Threshold(dBm)	4.9	-12.0	0.0	0.0
Tx Power Threshold(dBm)	3.5	-10.1	0.0	0.0
LBC Threshold(mA)	N/A	N/A	0.00	0.00

Configured Tx Power = 2.00 dBm  
 Configured CD High Threshold = 180000 ps/nm  
 Configured CD lower Threshold = -180000 ps/nm  
 Configured OSNR lower Threshold = 0.00 dB  
 Configured DGD Higher Threshold = 180.00 ps  
 Baud Rate = 34.7175521851 GBd  
 Bits per Symbol = 1.0000000000 bits/symbol  
 Modulation Type: BPSK  
 Chromatic Dispersion -9 ps/nm  
 Configured CD-MIN -180000 ps/nm CD-MAX 180000 ps/nm  
 Polarization Mode Dispersion = 0.0 ps  
 Second Order Polarization Mode Dispersion = 125.00 ps^2  
 Optical Signal to Noise Ratio = 34.60 dB  
 SNR = 20.30 dB  
 Polarization Dependent Loss = 0.20 dB  
 Polarization Change Rate = 0.00 rad/s  
 Differential Group Delay = 2.00 ps  
 Filter Roll Off Factor : 0.100  
 Rx VOA Fixed Ratio : 15.00 dB  
 Enhanced Colorless Mode : 0  
 Enhanced SOP Tolerance Mode : 0  
 NLEQ Compensation Mode : 0  
 Cross Polarization Gain Mode : 0  
 Cross Polarization Weight Mode : 0  
 Carrier Phase Recovery Window : 0  
 Carrier Phase Recovery Extended Window : 0

AINS Soak	: None
AINS Timer	: 0h, 0m
AINS remaining time	: 0 seconds

# QXP Card

**Table 7: Feature History**

Feature Name	Release Information	Description
NCS1K4-QXP-K9 Line Card Support on NCS 1014	Cisco IOS XR Release 24.1.1	<p>NCS1K4-QXP-K9 line card delivers low cost 100G and 400G DWDM transmission with ZR+ optics on a router. This line card can be used in both traditional Optical Networking solution and in Routed Optical Networking solution. This line card has 16 pluggable ports with eight QSFP-DD client ports and eight QSFP-DD trunk ports.</p> <p>For more information about the NCS1K4-QXP-K9 card, see the <a href="#">datasheet</a>.</p>

The NCS1K4-QXP-K9 3.2T QSFP-DD DCO Transponder Line Card has eight client ports (QSFP-DD) and eight trunk ports (QSFP-DD ZR+). Each line card supports up to 3.2 Tbps traffic. The client rates that are supported are 400GE, 4x100GE, and 100GE Ethernet only. The modulation formats supported are 16 QAM for 400GE Txp/4x100GE Mxp.

The QXP line card provides up to 16 QSFP-DD ports (eight QSFP-DD client ports and eight QSFP-DD trunk ports). The supported operating modes are:

- 400GE-TXP
- 4X100GE MXP
- 2x100GE MXP

The QXP card has 8 slices. Each slice consists of one client and one trunk port with a slice capacity of 400G. The total capacity is 3.2T.

**Table 8: Slice and Port Mapping on the QXP Card**

Slice	Trunk Port	Client Port
0	0	1
1	2	3
2	4	5
3	6	7
4	8	9

Slice	Trunk Port	Client Port
5	10	11
6	12	13
7	14	15

**Note**

- When you use OPENROADM trunk mode by configuring the **trunk-mode OR** command, use only alternate slices on the QXP card. Either use slices 0, 2, 4, 6 or 1, 3, 5, 7.
- QDD-400G-ZR-S pluggable module supports FEC mode CFEC only.
- QDD-400G-ZR-S pluggable module operates only as an Ethernet transponder.

**Supported Data Rates for QXP Card**

The following table displays the client and trunk ports that are enabled for transponder and muxponder modes.

Operating mode	Card Support	Client Data Rate	Client Optics	Trunk Ports	Client Ports
400GE-TXP	QXP Card	400G	<ul style="list-style-type: none"> <li>QDD-400G-DR4-S</li> <li>QDD-400G-FR4-S</li> <li>QDD-400-AOCxM</li> </ul>	0,2,4,6,8,10,12,14	1,3,5,7,9,11,13,15
4X100GE MXP	QXP Card	4X100G Break out	<ul style="list-style-type: none"> <li>QDD-400G-DR4-S</li> <li>QDD-4X100G-LR-S</li> </ul>	0,2,4,6,8,10,12,14	1,3,5,7,9,11,13,15
2X100GE MXP	QXP Card	2X100G Break out	<ul style="list-style-type: none"> <li>QDD-400G-DR4-S</li> <li>QDD-4X100G-LR-S</li> </ul>	0,2,4,6,8,10,12,14	1,3,5,7,9,11,13,15

**Configure 400G Transponder Mode**

Use the following commands to configure and provision 400G TXP.

**hw-module location *location***

**mxponder-slice *slice-number***

**trunk-rate 400G**

**trunk-mode [ZR | OR]**

**client-port-rate *port-number* client-type 400GE**

The following is a sample configuration of configuring a 400G TXP.

```
RP/0/RP0/CPU0:ios#configure
Tue Apr 11 19:29:20.132 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 0
```

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 400G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 client-type 400GE
```

The following is a sample output of **show hw-module location location mxponder-slice slice-number** when configured in 400G Transponder Mode.

```
RP/0/RP0/CPU0:ios#sh hw-module location 0/0 mxponder-slice 0
Sat Jun 25 21:32:58.799 UTC

Location:          0/0
Slice ID:          0
Client Bitrate:    400GE
Trunk Bitrate:     400G
Status:             Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port        Mapper/Trunk Port      CoherentDSP0/0/0/0
                    Traffic Split Percentage

FourHundredGigECtrlr0/0/0/1           -                   100
```



**Note** The **trunk-mode** command allows you to choose between OTN and ethernet traffic on the trunk port.

### Configure 400G Muxponder Mode

Use the following commands to configure and provision 400G MXP.

**hw-module location location**

**mxponder-slice slice-number**

**trunk-rate 400G**

**client-port-rate port-number lane lane-number client-type 100GE**

The following is a sample configuration of configuring a 400G MXP.

```
RP/0/RP0/CPU0:ios#configure
Tue Apr 11 19:29:20.132 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0 mxponder-slice 0
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 400G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 2 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 3 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 4 client-type 100GE
```

The following is a sample output of **show hw-module location location mxponder-slice slice-number** when configured in 400G MXP Mode.

```
RP/0/RP0/CPU0:ios#sh hw-module location 0/3 mxponder-slice 1
Sat Jun 25 23:03:20.823 UTC

Location:          0/3
Slice ID:          1
Client Bitrate:    100GE
Trunk Bitrate:     400G
Status:             Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port        Mapper/Trunk Port      CoherentDSP0/3/0/2
                    Traffic Split Percentage
```

HundredGigECtrrlr0/3/0/3/1	-	100
HundredGigECtrrlr0/3/0/3/2	-	100
HundredGigECtrrlr0/3/0/3/3	-	100
HundredGigECtrrlr0/3/0/3/4	-	100

### Configure 2x100G Muxponder Mode

Use the following commands to configure and provision 2x100G MXP.

**hw-module location *location***

**mxponder-slice *slice-number***

**trunk-rate 200G**

**client-port-rate *port-number* lane *lane-number* client-type 100GE**

The following is a sample configuration of configuring a 2x100G MXP.

```
RP/0/RP0/CPU0:ios#configure
Tue Apr 11 19:29:20.132 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0 mxponder-slice 0
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 200G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 2 client-type 100GE
```

The following is a sample output of **show hw-module location *location* mxponder-slice *slice-number*** when configured in 2x100G MXP Mode.

```
RP/0/RP0/CPU0:ios#sh hw-module location 0/3 mxponder-slice 1
Sat Jun 25 23:03:20.823 UTC

Location:          0/3
Slice ID:          1
Client Bitrate:    100GE
Trunk Bitrate:     200G
Status:            Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port           Mapper/Trunk Port           CoherentDSP0/3/0/2
                      Traffic Split Percentage

HundredGigECtrrlr0/3/0/3/1      -                  100
HundredGigECtrrlr0/3/0/3/2      -                  100
```

### DAC Supported Modes for NCS1K4-QXP-K9 Card

DAC support is enabled on the NCS1K4-QXP-K9 card for 2x100G, 4x100G, and 400G operating modes. The following table provides the details of the respective DAC rates for the different trunk rates for NCS1K4-QXP-K9 card.

**Table 9: DAC Supported Data Rates for NCS1K4-QXP-K9 Card**

Trunk Rate	Modulation Format	Default Value	Modified DAC Supported
200G	QPSK	1x1	1x1.50
200G	8QAM	1x1.25	N/A
200G	16-QAM	1x1.25	N/A
400G	16-QAM	1x1	1x1.50

The following example changes the DAC rate to 1x1.5 on an optics controller.

```
RP/0/RP0/CPU0:ios(config)#controller optics 0/0/0/0
RP/0/RP0/CPU0:ios(config-Optics)#dac-Rate 1x1.50
RP/0/RP0/CPU0:ios(config-Optics)#commit
```



- Note**
- Changing the DAC turns the laser Off and then back on for the optics. This is a traffic impacting operation.
  - The DAC rate configuration must match on both ends of a connection.

### Cisco 400G QSFP-DD High-Power (Bright ZR+) Optical Module Support on QXP Card

QXP card supports Cisco 400G QSFP-DD High-Power (Bright) Optical Modules. DP04QSDD-HK9 operates as Ethernet or OTN transponder. DP04QSDD-HE0 operates only as an Ethernet transponder.

Use the following commands to configure OTN data path on the Bright ZR+ pluggable optical modules. The **trunk-mode OR** refers to OpenROADM.

**hw-module location** *location*

**mxponder-slice 1** *slice-number*

**trunk-mode OR**

**trunk-rate** *rate*

Use the following commands to configure Ethernet data path on the Bright ZR+ pluggable optical modules.

**hw-module location** *location*

**mxponder-slice 1** *slice-number*

**trunk-mode ZR**

**trunk-rate** *rate*



- Note**
- DP04QSDD-HK9 operates as Ethernet or OTN transponder. DP04QSDD-HE0 operates only as an Ethernet transponder. DP04QSDD-HE0 supports only trunk-mode ZR. Configuring trunk-mode OR on the DP04QSDD-HE0 pluggable raises the MEA alarm.

The following is a sample configuration of configuring a 4x100G OTN trunk on a Bright ZR+ pluggable.

```
RP/0/RP0/CPU0:ios#configure
Tue Apr 11 19:29:20.132 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0
RP/0/RP0/CPU0:ios(config-hwmod)#mxponder-slice 4
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-mode OR
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 400G
RP/0/RP0/CPU0:ios(config-hwmod-mxp)# client-port-rate 9 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)# client-port-rate 9 lane 2 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)# client-port-rate 9 lane 3 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)# client-port-rate 9 lane 4 client-type 100GE
```

The following is a sample configuration of configuring Ethernet trunk on a Bright ZR+ pluggable.

```
RP/0/RP0/CPU0:ios#configure
Tue Apr 11 19:29:20.132 UTC
```

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/0
RP/0/RP0/CPU0:ios(config-hwmod)#mxponder-slice 4
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-mode ZR
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 400G
```

The following is a sample configuration of setting 0dBm transmit power on a Bright ZR+ pluggable.

```
RP/0/RP0/CPU0:ios#configure
RP/0/RP0/CPU0:ios(config)#controller optics 0/0/0/2
RP/0/RP0/CPU0:ios(config-Optics)#transmit-power 0
Thu Mar 9 13:02:30.662 UTC
WARNING! Changing TX power can impact traffic
RP/0/RP0/CPU0:ios(config-Optics)#commit
Thu Mar 9 13:02:31.566 UTC
```

The following is a sample output of the **show controllers optics** command, with the transmit power set to 0 dBm.

```
RP/0/RP0/CPU0:ios#show controllers optics 0/0/0/8
Thu Apr 13 13:54:33.163 UTC
Controller State: Up
Transport Admin State: In Service
Laser State: On
LED State: Green
Optics Status
    Optics Type: QSFP-DD DWDM
    DWDM carrier Info: C BAND, MSA ITU Channel=49, Frequency=193.70THz,
    Wavelength=1547.715nm
    Alarm Status:
    -----
    Detected Alarms: None
    LOS/LOI/Fault Status:
    Alarm Statistics:
    -----
    HIGH-RX-PWR = 0           LOW-RX-PWR = 4
    HIGH-TX-PWR = 0           LOW-TX-PWR = 1
    HIGH-LBC = 0              HIGH-DGD = 0
    OOR-CD = 0                OSNR = 4
    WVL-OOL = 0               MEA = 0
    IMPROPER-REM = 0
    TX-POWER-PROV-MISMATCH = 0
    Laser Bias Current = 0.0 %
    Actual TX Power = 0.00 dBm
    RX Power = -10.50 dBm
    RX Signal Power = -10.35 dBm
    Frequency Offset = 199 MHz

    Performance Monitoring: Enable

    THRESHOLD VALUES
    -----
    Parameter      High Alarm   Low Alarm   High Warning  Low Warning
    -----
    Rx Power Threshold(dBm)  3.0        -24.5       0.0          0.0
    Tx Power Threshold(dBm)  0.0        -16.0       0.0          0.0
    LBC Threshold(mA)       N/A         N/A        0.00         0.00
    LBC High Threshold = 90 %
    Configured Tx Power = 0.00 dBm
    Configured CD High Threshold = 52000 ps/nm
    Configured CD lower Threshold = -52000 ps/nm
    Configured OSNR lower Threshold = 21.10 dB
    Configured DGD Higher Threshold = 67.00 ps
```

**Table 10: Operating Modes Supported for Bright ZR+ Pluggable Modules on QXP Card**

Operating mode	Modulation	FEC
4x100GE MXP	16-QAM	CFEC
4x100GE MXP	16-QAM	OFEC
2x100GE MXP	QPSK	OFEC
400GE TXP	16-QAM	CFEC
400GE TXP	16-QAM	OFEC

## ONS-QDD-OLS pluggable

**Table 11: Feature History**

Feature Name	Release Information	Description
Pluggable support	Cisco IOS XR Release 25.2.1	<p>The NCS1K4-QXP-K9 line card now supports the new ONS-QDD-OLS optical amplifier pluggable.</p> <p>It is supported independently on all 16 ports of the QXP card and offers various channel breakout options to combine or separate each channel from a coherent DWDM optical source using these breakout cables:</p> <ul style="list-style-type: none"> <li>• ONS-BRK-CS-8LC</li> <li>• ONS-BRK-CS-16LC</li> <li>• ONS-CAB-CS-LC-5</li> </ul> <p>This pluggable increases fiber bandwidth and lowers power dissipation.</p> <p>CLI:</p> <p>These keywords are added to the <b>hw-module location</b> command:</p> <ul style="list-style-type: none"> <li>• <b>ols-port &lt;port number&gt;</b></li> <li>• <b>mode edfa</b></li> </ul>

## ONS QDD optical line systems

The ONS-QDD-OLS is a pluggable optical amplifier that interconnects two routers or switches for transporting a limited number of coherent optical channels over a single span point-to-point link.

### ONS-QDD-OLS features and support

These are the key features of the ONS-QDD-OLS pluggable optical amplifier:

- OLS Optics is supported independently on all 16 ports of NCS1K4-QXP-K9 line card. The EDFA `ols-port` mode is supported on ports 0 through 15 of the ONS-QDD-OLS pluggable.
- New XR CLI commands are introduced for OLS configuration:
  - `OLS-PORT` is used to select a specific port, extending the `hwmode` configuration.
  - `OLS-MODE` is used under the `hw-module` configuration specifically for EDFA settings.
- When a port is configured as an `OLS-PORT`, the corresponding TXP/MXP slice becomes unavailable for provisioning.
  - COM is represented as `OTS R/S/I/P/0`.
  - LINE is represented as `OTS R/S/I/P/1`.
- On the OTS controller, only egress parameters configuration is supported; ingress parameters are not supported.

The OLS configurations also utilize these additional breakout cable- assembly and patch-cord to establish connections between the EDFA module and the QDD-ZR/ZRP optical channels:

- ONS-BRK-CS-8LC: A dual-fanout 1x8 cable-assembly with embedded passive splitter and coupler.
- ONS-BRK-CS-16LC: A dual-fanout 1x16 cable-assembly with embedded passive splitter and coupler.
- ONS-CAB-CS-LC-5: A 5-meter dual adapter patch-cord with CS-connectors on one end and LC-connectors on the other.

### Supported wavelength or frequency configuration

For each channel supported through ONS-BRK-CS-8LC or ONS-BRK-CS-16LC passive/mux cable, the wavelength or the frequency must be configured according to this table:


*Table 12: ONS-QDD-OLS operating signal wavelength range*

<b>Channel spacing</b>	<b>Total bandwidth</b>	<b>Wavelength</b>		<b>Frequency</b>	
		<b>Start</b>	<b>End</b>	<b>Start</b>	<b>End</b>
8 channels - 200 GHz spaced	19.2 nm 2.4 THz	1539.1 nm	1558.4 nm	192.375 THz	194.775 THz
16 channels - 100 GHz spaced					

### Functional description of QDD-OLS

The QDD OLS pluggable contains the COM side and the Line side as shown in this figure:

*Figure 1: Functional description of QDD OLS*

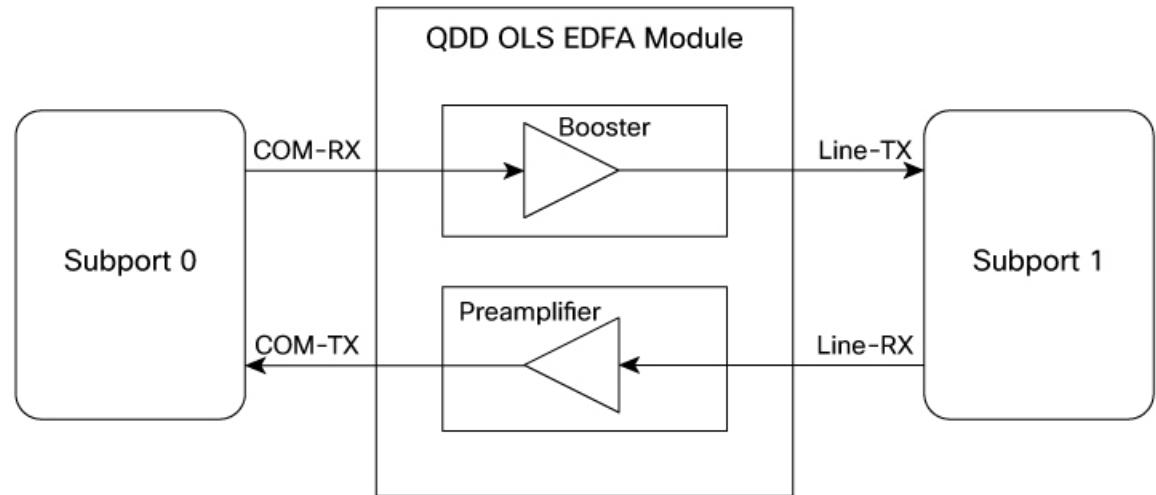

523257

Each physical port of the QDD OLS pluggable is represented as two ots controllers (subport 0 and subport 1). COM port is subport 0 and Line port is subport 1.

The Gain of the Booster is associated to subport 1 while the gain of the Preamplifier is associated to subport 0.

*Table 13: OTS and optical ports*

Controller	Optical ports
ots R/S/I/P/0	COM-RX (booster input)
	COM-TX (preamplifier output)
ots R/S/I/P/1	LINE-RX (preamplifier input)
	LINE-TX (booster output)

### Configure the ols-port in EDFA mode

Use this task to configure the ONS-QDD-OLS pluggable ols-port in EDFA mode.

This is a sample to configure the pluggable on slot 2 and port 14:

#### Procedure

- Step 1** Configure the **hw-module location** command for the specific ols-port.

**Example:**

## OTS parameters and operational data sample configurations

```
RP/0/RP0/CPU0:ios#conf
Fri Feb 28 22:36:59.927 IST
RP/0/RP0/CPU0:ios(config)#hw-module location 0/2/NXR0 ols-port 14
```

**Step 2** Configure the ols-port in the EDFA mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-ols)#mode edfa
```

**Step 3** Run the **commit** and **end** commands to commit the changes and exit the configuration mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-ols)#commit
Fri Feb 28 22:37:26.891 IST
RP/0/RP0/CPU0:ios(config-ols)#end
RP/0/RP0/CPU0:ios#
```

**Step 4** Verify the configuration using the **show hw-module location** *location* **ols-port** command in EDFA mode.

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/2/NXR0
ols-port 14
mode edfa
```

## OTS parameters and operational data sample configurations

This table lists configuration examples for ONS-QDD-OLS pluggable OTS parameters:

**Table 14: OTS parameters**

Parameters	Configuration example
Gain setting in COM port	<pre>RP/0/RP0/CPU0:ios#configur Fri Feb 28 23:06:25.489 IST RP/0/RP0/CPU0:ios(config)#controller ots 0/2/0/14/0 RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain 200 RP/0/RP0/CPU0:ios(config-Ots)#commit Fri Feb 28 23:06:48.834 IST RP/0/RP0/CPU0:ios(config-Ots)#end RP/0/RP0/CPU0:ios# RP/0/RP0/CPU0:ios#</pre>
Operational mode	<pre>RP/0/RP0/CPU0:ios#configur Mon Feb 3 19:20:02.757 UTC RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/1/0 RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-mode ? power-control Set amplifier to power control mode RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-mode power-control RP/0/RP0/CPU0:ios(config-Ots)#commit Mon Feb 3 19:20:13.832 UTC</pre>

Parameters	Configuration example
Gain setting in Line port	<pre>RP/0/RP0/CPU0:ios#configur Fri Feb 28 23:08:08.172 IST RP/0/RP0/CPU0:ios(config)# RP/0/RP0/CPU0:ios(config)#controller ots 0/2/0/14/1 RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-gain 210 RP/0/RP0/CPU0:ios(config-Ots)#commit Fri Feb 28 23:08:20.677 IST RP/0/RP0/CPU0:ios(config-Ots)#+</pre>
Power	<pre>RP/0/RP0/CPU0:ios#configur Mon Feb 3 19:22:36.395 UTC RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/1/0 RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-power 110 RP/0/RP0/CPU0:ios(config-Ots)#commit Mon Feb 3 19:22:45.173 UTC</pre>
Egress ampli OSRI mode	<pre>RP/0/RP0/CPU0:ios(config)#controller ots 0/2/0/14/0 RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-osri RP/0/RP0/CPU0:ios(config-Ots)#commit Fri Feb 28 23:13:07.065 IST RP/0/RP0/CPU0:ios(config-Ots)#+</pre>
Delete configuration for egress ampli OSRI mode	<pre>RP/0/RP0/CPU0:ios(config)#controller ots 0/2/0/14/0 RP/0/RP0/CPU0:ios(config-Ots)#no egress-ampli-osri RP/0/RP0/CPU0:ios(config-Ots)#commit Fri Feb 28 23:14:05.117 IST RP/0/RP0/CPU0:ios(config-Ots)#+</pre>
ALS on line	<pre>RP/0/RP0/CPU0:ios#configur Mon Feb 3 19:11:03.983 UTC RP/0/RP0/CPU0:ios(config)#controller ots 0/1/0/1/1 RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-safety-control-mode ?     auto      Select Safety Control Mode: Automatic     disabled  Disable Safety Control Mode RP/0/RP0/CPU0:ios(config-Ots)#egress-ampli-safety-control-mode disabled RP/0/RP0/CPU0:ios(config-Ots)#commit Mon Feb 3 19:11:30.980 UTC</pre>
TX low threshold	<pre>RP/0/RP0/CPU0:ios#configur Mon Feb 3 18:38:42.101 UTC RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/1/0 RP/0/RP0/CPU0:ios(config-Ots)#tx-low-threshold 160 RP/0/RP0/CPU0:ios(config-Ots)#commit Mon Feb 3 18:39:09.280 UTC</pre>

Parameters	Configuration example
RX low threshold	<pre>RP/0/RP0/CPU0:ios#configur Mon Feb  3 18:42:06.049 UTC RP/0/RP0/CPU0:ios(config)#controller ots 0/0/0/1/1 RP/0/RP0/CPU0:ios(config-Ots)#rx-low-threshold -40 RP/0/RP0/CPU0:ios(config-Ots)#commit Mon Feb  3 18:42:27.695 UTC</pre>

### Operational data on COM port, line port, and optics

This table lists configurations examples and unsupported parameters on the ONS-QDD-OLS pluggable:

*Table 15: Operational data for COM port, line port, and optics*

Operational data	Configuration example	Unsupported parameters
COM port (OTS 0)		<ul style="list-style-type: none"><li>• INGRESS Parameters(alarms statistics)</li><li>• HIGH-TX/RX-BR-POWER</li><li>• SPAN-TOO-SHORT- TX/RX</li><li>• Egress Ampli Force APR</li></ul>

## OTS parameters and operational data sample configurations

Operational data	Configuration example	Unsupported parameters
	<pre> RP/0/RP0/CPU0:ios#show controllers ots 0/2/0/14/0 Fri Feb 28 22:44:42.823 IST Controller State: Up Transport Admin State: In Service LED State: Green Last link flapped: 00:38:04     Alarm Status:     -----     Detected Alarms: None      Alarm Statistics:     -----     RX-LOS-P = 0      RX-LOC = 0     TX-POWER-FAIL-LOW = 0      INGRESS-AUTO-LASER-SHUT = 0      INGRESS-AUTO-POW-RED = 0      INGRESS-AMPLI-GAIN-LOW = 0      INGRESS-AMPLI-GAIN-HIGH = 0      EGRESS-AUTO-LASER-SHUT = 0      EGRESS-AUTO-POW-RED = 0     EGRESS-AMPLI-GAIN-LOW = 0      EGRESS-AMPLI-GAIN-HIGH = 0      HIGH-TX-BR-PWR = 0      HIGH-RX-BR-PWR = 0      SPAN-TOO-SHORT-TX = 0     SPAN-TOO-SHORT-RX = 0      INGRESS-AMPLI-LASER-OFF = 0      EGRESS-AMPLI-LASER-OFF = 0      Parameter Statistics:     -----     Total Rx Power = -9.18 dBm     Total Tx Power = 14.36 dBm </pre>	

Operational data	Configuration example	Unsupported parameters
	<pre> Egress Ampli Mode = Gain Egress Ampli Gain = 19.0 dB Egress Ampli OSRI = OFF Egress Ampli Force APR = OFF  Configured Parameters: ----- Egress Ampli Mode = Gain Egress Ampli Gain = 19.0 dB Egress Ampli Power = 8.0 dBm Egress Ampli OSRI = OFF Rx Low Threshold = -30.0 dBm Tx Low Threshold = -5.0 dBm  RP/0/RP0/CPU0:ios# RP/0/RP0/CPU0:ios# </pre>	

Operational data	Configuration example	Unsupported parameters
Line port (OTS 1)		<ul style="list-style-type: none"><li>• INGRESS Parameters(alarms statistics)</li><li>• HIGH-TX/RX-BR-POWER</li><li>• SPAN-TOO-SHORT- TX/RX</li><li>• Egress Ampli Force APR</li></ul>

Operational data	Configuration example	Unsupported parameters
	<pre> RP/0/RP0/CPU0:ios#sh controllers ots 0/2/0/14/1 Fri Feb 28 22:54:15.156 IST Controller State: Up Transport Admin State: In Service LED State: Green Last link flapped: 00:47:36 Alarm Status: ----- Detected Alarms: None  Alarm Statistics: ----- RX-LOS-P = 0  RX-LOC = 0 TX-POWER-FAIL-LOW = 0  INGRESS-AUTO-LASER-SHUT = 0  INGRESS-AUTO-POW-RED = 0  INGRESS-AMPLI-GAIN-LOW = 0  INGRESS-AMPLI-GAIN-HIGH = 0  EGRESS-AUTO-LASER-SHUT = 0  EGRESS-AUTO-POW-RED = 0 EGRESS-AMPLI-GAIN-LOW = 0  EGRESS-AMPLI-GAIN-HIGH = 0  HIGH-TX-BR-PWR = 0  HIGH-RX-BR-PWR = 0  SPAN-TOO-SHORT-TX = 0 SPAN-TOO-SHORT-RX = 0  INGRESS-AMPLI-LASER-OFF = 0  EGRESS-AMPLI-LASER-OFF = 0 Parameter Statistics: ----- Total Rx Power = -5.67 dBm Total Tx Power = 10.80 dBm Egress Ampli Mode = Gain </pre>	

Operational data	Configuration example	Unsupported parameters
	<pre> Egress Ampli Gain = 21.0 dB Egress Ampli Safety Control mode = disabled Egress Ampli OSRI = OFF Egress Ampli Force APR = OFF  Configured Parameters: ----- Egress Ampli Mode = Gain Egress Ampli Gain = 21.0 dB Egress Ampli Power = 8.0 dBm Egress Ampli Safety Control mode = auto Egress Ampli OSRI = OFF Rx Low Threshold = -30.0 dBm Tx Low Threshold = -5.0 dBm </pre>	

Operational data	Configuration example	Unsupported parameters
Optics	<pre> RP/0/RP0/CPU0:Node68#sh controllers ots Ots  Ots-Och RP/0/RP0/CPU0:Node68#sh controllers optics 0/3/0/2 Controller State: Administratively Down Transport Admin State: Out Of Service Laser State: Off LED State: Off Optics Status            Optics Type: QSFP-DD DUAL EDFA Transceiver Vendor Details            Form Factor : QSFP-DD Name : CISCO-ACCELINK Part Number : 10-100458-01 Rev Number : 27 Serial Number : ACW2739Z00M PID : ONS-QDD-OLS VID : V01 Firmware Version : Major.Minor.Build Active : 2.07. Inactive : 2.05. Date Code (yy/mm/dd) : 23/10/04 Fiber Connector Type: CS Otn Application Code: Not Set Sonet Application Code: Not Set Ethernet Compliance Code: Not set </pre>	—

# 2-QDD-C Line Card

**Table 16: Feature History**

Product Impact	Feature	Release Information	Description
Hardware Reliability	NCS1K4-2-QDD-C-K9 C-Band Line Card	Cisco IOS XR Release 25.2.1	<p>NCS 1014 now supports the NCS1K4-2-QDD-C-K9 C-Band line card. This card features eight client ports (QSFP28 and QSFP-DD) and two software-configurable DWDM dual sub-channel module trunk ports. Each trunk port supports line rates of 200, 300, and 400 Gbps with precise control over modulation format, baud rate, and forward error correction.</p> <p>Additionally, the line card supports both module and slice configurations, enhancing network flexibility and performance.</p>

The following section describes the supported configurations and procedures to configure the card modes on the 2-QDD-C line card.

## Limitations for 2-QDD-C

- Flex Ethernet is not supported.
- A single 400GE cannot be split and use as 4x 100GE due to hardware limitations.

## 2-QDD-C Card Modes

The 2-QDD-C line cards support module and slice configurations.

The line cards have two trunk ports (0 and 1) and 8 client ports (2 through 9) each. You can configure the line card in two modes:

- Muxponder—In this mode, both trunk ports are configured with the same trunk rate. The client-to-trunk mapping is in a sequence in vertical order.
- Muxponder slice—In this mode, each trunk port is configured independent of the other with different trunk rates. The client-to-trunk mapping is fixed in vertical order. For Trunk 0, the client ports are 2 through 5. For Trunk 1, the client ports are 6 through 9.

## Sub 50G Configuration

You can configure sub 50G muxponder mode in the following combination of trunk and client rates:

- 100GE Muxponder mode:
  - 1x100GE and 2x50G

- 3x100GE and 2x150G
- 5x100GE and 2x250G
- 7x100GE and 2x350G
- OTU4 Muxponder mode:
  - 1xOTU4 and 2x50G
  - 3xOTU4 and 2x150G
  - 5xOTU4 and 2x250G
  - 7xOTU4 and 2x350G

The following table displays the port configuration for the supported data rates.

Trunk Data Rate (per trunk)	Total Configured Data rate	Trunk Ports	Client Ports for Trunk 0 (100G)	Shared Client Port (50G per trunk)	Client Ports for Trunk 1 (100G)
50G	100G	0, 1	-	2	-
150G	300G	0, 1	2	3	4
250G	500G	0, 1	2, 3	4	5, 6
350G	700G	0, 1	2, 3, 4	5	6, 7, 8

From Release 7.5.2, 2-QDD-C cards support an alternate port configuration for Sub 50G (split client port mapping) that you configure using CLI. The following table displays the port configuration for the supported data rates.

Trunk Data Rate (per trunk)	Total Configured Data rate	Trunk Ports	Client Ports for Trunk 0 (100G)	Shared Client Port (50G per trunk)	Client Ports for Trunk 1 (100G)
50G	100G	0, 1	-	5	-
150G	300G	0, 1	2	5	6
250G	500G	0, 1	2, 3	5	6, 7
350G	700G	0, 1	2, 3, 4	5	6, 7, 8

For information on how to configure split client port mapping, see [Configure Split Client Port Mapping](#).

### Coupled Mode Restrictions

The following restrictions apply to the coupled mode configuration:

- Both trunk ports must be configured with the same bits-per-symbol or baud rate and must be sent over same fiber and direction.
- The chromatic dispersion must be configured to the same value for both trunk ports.

- When trunk internal loopback is configured, it must be done for both trunk ports. Configuring internal loopback on only one trunk results in traffic loss.
- Fault on a trunk port of a coupled pair may cause errors on all clients including those running only on the unaffected trunk port.

## Supported Data Rates for 2-QDD-C Card

The following table displays the client and trunk ports that are enabled for the muxponder configuration.

Trunk Data Rate	Card Support	Client Data Rate	Client Optics	Trunk Ports	Client Ports
200	2-QDD-C	100GE, OTU4	QSFP-28	0, 1	2, 3, 4, 5
300	2-QDD-C	100GE, OTU4	QSFP-28	0, 1	2, 3, 4, 5, 6, 7
400	2-QDD-C	100GE, OTU4	QSFP-28	0, 1	2, 3, 4, 5, 6, 7, 8, 9
200	2-QDD-C	400GE	QSFP-DD	0, 1	4
400	2-QDD-C	400GE	QSFP-DD	0, 1	4, 8

The following table displays the client and trunk ports that are enabled for the muxponder slice 0 configuration.

Trunk Data Rate	Card Support	Client Data Rate	Trunk Ports	Client Ports
200	2-QDD-C	100GE, OTU4	0	2, 3
300	2-QDD-C	100GE, OTU4	0	2, 3, 4
400	2-QDD-C	100GE, OTU4	0	2, 3, 4, 5
400	2-QDD-C	400GE	0	4

The following table displays the client and trunk ports that are enabled for the muxponder slice 1 configuration.

Trunk Data Rate	Card Support	Client Data Rate	Trunk Ports	Client Ports
200	2-QDD-C	100GE, OTU4	1	6, 7
300	2-QDD-C	100GE, OTU4	1	6, 7, 8
400	2-QDD-C	100GE, OTU4	1	6, 7, 8, 9
400	2-QDD-C	400GE	1	8

The following table displays the trunk parameter ranges for the 2-QDD-C card.

Trunk Payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
150G	27%	1.453125	4.335938	24.02079	71.67494
200G	27%	2	4.40625	31.51	69.43

Trunk Payload	FEC	Min BPS	Max BPS	Min GBd	Max GBd
250G	27%	2.414063	6	28.93129	71.9069
300G	27%	2.8984375	6	34.7175497	71.8681352
350G	27%	3.382813	6	40.5038	71.84047
400G	27%	3.8671875	6	46.2900663	71.8197392
150G	15%	1.320313	3.9375	24.02079	71.67494
200G	15%	1.7578125	5.25	24.02079115	71.74209625
250G	15%	2.195313	6	26.27274	71.80592
300G	15%	3.8203125	6	31.52728839	49.51525048
350G	15%	3.070313	6	36.78184	71.87901
400G	15%	3.8671875	6	42.03638452	71.9018782



**Note** The recommended value for 6 BPS for corresponding line rates are listed below:

Trunk Payload	FEC	BPS	GBd
300G	27%	6	34.7175
350G	27%	6	40.5038
400G	15%	6	42.0364

## Configuring the Card Mode for 2-QDD-C Card

You can configure the 2-QDD-C line card in the module (muxponder) or slice configuration (muxponder slice).

To configure the card in the muxponder mode, use the following commands:

- **configure**
- hw-module location *location* mxponder client-rate {100GE | OTU4 }**
- hw-module location *location* mxponder trunk-rate {100G | 150G | 200G | 250G | 300G | 350G | 400G }**
- commit**
- **configure**
- hw-module location *location* mxponder client-rate { 400GE}**
- hw-module location *location* mxponder trunk-rate { 200G | 400G }**

**commit**

To configure the card in the muxponder slice mode, use the following commands.

**configure**

```
hw-module location location mxponder-slice mxponder-slice-number client-rate { 100GE | 400GE}
```

```
hw-module location location mxponder-slice mxponder-slice-number trunk-rate { 100G | 200G | 300G | 400G}
```

**commit****Examples**

The following is a sample in which the card is configured in the muxponder mode with a 400G trunk rate.

```
RP/0/RP0/CPU0:ios#config
Tue Oct 15 01:24:56.355 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#commit
```

The following is a sample in which the card is configured in the muxponder slice 0 mode with a 400G trunk rate.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 0 client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 0 trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#commit
```

The following is a sample in which the card is configured in the muxponder slice 1 mode with a 400G trunk rate.

```
RP/0/RP0/CPU0:ios#config
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 1 client-rate 100GE
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 1 trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#commit
```

The following is a sample in which the card is configured in the muxponder mode with a 400GE trunk rate.

```
RP/0/RP0/CPU0:west#configure
Thu Oct 7 11:43:01.914 IST
RP/0/RP0/CPU0:west(config)#hw-module location 0/2 mxponder trunk-rate 4
400G 450G
RP/0/RP0/CPU0:west(config)#hw-module location 0/2 mxponder trunk-rate 400G
RP/0/RP0/CPU0:west(config)#hw-module location 0/2 mxponder client-rate 400GE
RP/0/RP0/CPU0:west(config)#commit
```

## Configuring Mixed Client Traffic Mode

You can configure the client traffic mode on each trunk in a line card independently. This provides flexibility for the same card to carry both OTN and Ethernet client traffic at the same time across 2 slices.

100G, 200G, and 300G trunk rates are supported on both the slices (slice 0 and slice 1) with different client modes (100GE/OTU4).

From R7.10.1, you can configure both Ethernet and OTU interfaces on different client ports on each trunk in the 2-QDD-C line card independently. This enhancement gives you flexibility on the same 2-QDD-C line card to carry both OTN and Ethernet client traffic at the same time in the same slice for each trunk rates.

An additional 400G trunk rate is supported on both the slices (slice 0 and slice 1) with different client modes (100GE/OTU4).

## Configuration

### Different-Slice Mixed Client Traffic Mode

To configure the card in mixed client traffic mode, use the following commands:

```
hw-module location R/S
mxponder-slice 0
  trunk-rate [100G|200G|300G|400G]
  client-rate [100GE|OTU4]
!
mxponder-slice 1
  trunk-rate [100G|200G|300G|400G]
  client-rate [OTU4|100GE]
!
!
```

The following is a sample in which the card is configured with mixed client rates in the muxponder slice 0 and 1 mode.

```
RP/0/RP0/CPU0:ios#configure
Mon Mar 23 06:10:22.227 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 0 client-rate OTU4 trunk-rate
400G
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 1 client-rate 100GE trunk-rate
400G
RP/0/RP0/CPU0:ios(config)#commit
```

The following configuration is a sample of the mixed client traffic mode in different slices.

### Example 1:

```
hw-module location 0/0
mxponder-slice 0
  trunk-rate 400G
  client-rate OTU4
!
mxponder-slice 1
  trunk-rate 400G
  client-rate 100GE
!
!
```

### Verifying Card Configuration

```
RP/0/RP0/CPU0:ios#show hw-module location 0/0 mxponder
Location:          0/0
Slice ID:          0
Client Bitrate:    OTU4
Trunk Bitrate:     400G
Status:            Provisioned
Client Port        Peer/Trunk Port      CoherentDSP0/0/0/0
                  Traffic Split Percentage
OTU40/0/0/2         ODU40/0/0/0/1      100
OTU40/0/0/3         ODU40/0/0/0/2      100
OTU40/0/0/4         ODU40/0/0/0/3      100
OTU40/0/0/5         ODU40/0/0/0/4      100

Location:          0/0
Slice ID:          1
```

## Configuring Mixed Client Traffic Mode

Client Bitrate:	100GE	
Trunk Bitrate:	400G	
Status:	Provisioned	
Client Port	Peer/Trunk Port	CoherentDSP0/0/0/1
	Traffic Split Percentage	
HundredGigECtrlr0/0/0/6	ODU40/0/0/1/1	100
HundredGigECtrlr0/0/0/7	ODU40/0/0/1/2	100
HundredGigECtrlr0/0/0/8	ODU40/0/0/1/3	100
HundredGigECtrlr0/0/0/9	ODU40/0/0/1/4	100

The following configuration is a sample in which both the slices use the same client mode.

### Example 2:

```
hw-module location 0/3
  mpxponder
    trunk-rate 350G
    client-rate 100GE
  !
!
```

### Verifying Card Configuration

```
RP/0/RP0/CPU0:ios#show hw-module location 0/3 mpxponder
Fri Nov 26 12:21:16.174 UTC

Location:          0/3
Client Bitrate:    100GE
Trunk Bitrate:     350G
Status:            Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port        Mapper/Trunk Port      CoherentDSP0/3/0/0
CoherentDSP0/3/0/1                          Traffic Split Percentage

HundredGigECtrlr0/3/0/2          ODU40/3/0/0/1           100
      0
HundredGigECtrlr0/3/0/3          ODU40/3/0/0/2           100
      0
HundredGigECtrlr0/3/0/4          ODU40/3/0/0/3           100
      0
HundredGigECtrlr0/3/0/5          ODU40/3/0/0/4           50
      50
HundredGigECtrlr0/3/0/6          ODU40/3/0/1/1           0
      100
HundredGigECtrlr0/3/0/7          ODU40/3/0/1/2           0
      100
HundredGigECtrlr0/3/0/8          ODU40/3/0/1/3           0
      100
```

### Same-Slice Mixed Client Traffic Mode

To configure the card in mixed client traffic mode in same slice, use the following commands:

```
hw-module location R/S
  mpxonder-slice 0
    trunk-rate [100G|200G|300G|400G]
    client-port-rate 2 client-type <100GE|OTU4>
  !
!
  mpxonder-slice 1
    trunk-rate [100G|200G|300G|400G]
    client-port-rate 2 client-type <100GE|OTU4>
  !
!
```

The following is a sample in which the card is configured with mixed client rates in the muxponder slice 0 mode.

```
RP/0/RP0/CPU0:ios#configure
Mon Mar 23 06:10:22.227 UTC
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 0 client-port-rate 2
client-type OTU4 trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1 mxponder-slice 0 client-port-rate 3
client-type 100GE trunk-rate 400G
RP/0/RP0/CPU0:ios(config)#commit
```

The following configuration is a sample of the mixed client port rate in same slice.

```
hw-module location 0/0
  mxponder-slice 0
    trunk-rate 200G
    client-port-rate 2 client-type 100G
    client-port-rate 3 client-type otu4
  !
  mxponder-slice 1
    trunk-rate 400G
    client-port-rate 4 client-type 100G
    client-port-rate 8 client-type otu4
  !
!
```

## 2.4T and 2.4TX Card Modes Overview

This section helps you familiarize with the different card modes available in the 2.4T and 2.4TX cards, their corresponding data rates, baud rate of each data rate, and the step-by-step procedure to configure line card in muxponder modes with the QDD-4x100GE and QDD-400GE pluggables.

### Available Card Modes

The 2.4T and 2.4TX line cards have two trunk ports (0 and 7) and six client ports (from 1 to 6) each. You can configure the line card in:

- Muxponder slice—You can configure each trunk port independent of the other with different trunk rates. The client-to-trunk mapping is fixed. For Trunk 0, the client ports are 1 to 3. For Trunk 7, the client ports are 4 to 6.
- Muxponder—You can configure both trunk ports with the same trunk rate. The client-to-trunk mapping is fixed.



**Note** The muxponder mode is supported on the 2.4TX card only.

## 2.4T and 2.4TX Card Trunk Pluggables and Datarates

### Coherent Interconnect Module 8

The 2.4T and 2.4TX cards support Coherent Interconnect Module 8 (CIM8) pluggables as trunk pluggables.

The Coherent Interconnect Module 8 (CIM8) is a pluggable, high-capacity multi-haul transceiver. The module can operate at line rates between 400G and 1200G in 100G increments. It utilizes a single optical carrier for both C-band and L-band operations.

### **CIM8-C-K9**

CIM8-C-K9 is the C-band Coherent Interconnect module 8.

The frequency range supported on a 50 GHz or 100 MHz flex grid is from 1912500 to 1961000. Any frequency outside this range will trigger a "Port Pluggable Module Mismatched With Pre-Provisioned PPM" alarm, causing the link to go down.

The default frequency is 193.10 THz.

### **CIM8-CE-K9**

CIM8-CE-K9 includes a pre-amplifier (EDFA).

The frequency range supported on a 50 GHz or 100 MHz flex grid is from 1912500 to 1961000. Any frequency outside this range will trigger a "Port Pluggable Module Mismatched With Pre-Provisioned PPM" alarm, causing the link to go down.

Due to the inclusion of the pre-amplifier, the optical performance is enhanced compared to the CIM8-C-K9, enabling longer reach.

### **CIM8-LE-K9**

This variant of the CIM8 supports the L-band spectrum and includes a pre-amplifier (EDFA).

The frequency range supported on a 100 MHz flex grid is from 1861500 to 1909250. Any frequency outside this range triggers a "Port Pluggable Module Mismatched With Pre-Provisioned PPM" alarm, causing the link to go down.

There is no default frequency for the CIM8-LE-K9. You must configure the frequency for the laser to be activated.

In R24.3.1 and later releases, if a C-band CIM8 is replaced with an LE CIM8 and the frequency is configured within the specified range, the traffic should resume seamlessly.

<b>PID</b>	<b>Frequency Range Supported</b>	<b>Default Frequency</b>
CIM8-C-K9	1912500 to 1961000	193.10 THz
CIM8-CE-K9	1912500 to 1961000	193.10 THz
CIM8-LE-K9	1861500 to 1909250	No default frequency


The following table shows the different pluggables and datarates that each pluggable supports.

<b>PID</b>	<b>Cards Supported</b>	<b>Supported Rates</b>
CIM8-C-K9	2.4T and 2.4TX cards	400G, 500G, 600G, 700G, 800G, 900G, 1000G, 1100G, 1200G
CIM8-CE-K9	2.4TX card	400G, 500G, 600G, 700G, 800G, 900G, 1000G, 1100G, 1200G
CIM8-LE-K9	2.4TX card	400G, 500G, 600G, 700G, 800G, 900G, 1000G


## Muxponder Slice Mode for 2.4T and 2.4TX Cards

The line card is divided into two slices, namely, Slice 0 and Slice 1. Each slice contains a trunk port and three client ports. In this mode, the trunk ports operate independently, carrying different data rates. The slices enable the card to function as two different modules. For example, if you set the trunk as 400 G for Slice 0 and 600 G for Slice 1, then Trunk 0 delivers 400 G and Trunk 7 delivers 600 G.

*Figure 2: 2.4T Line Card Slices and Ports*

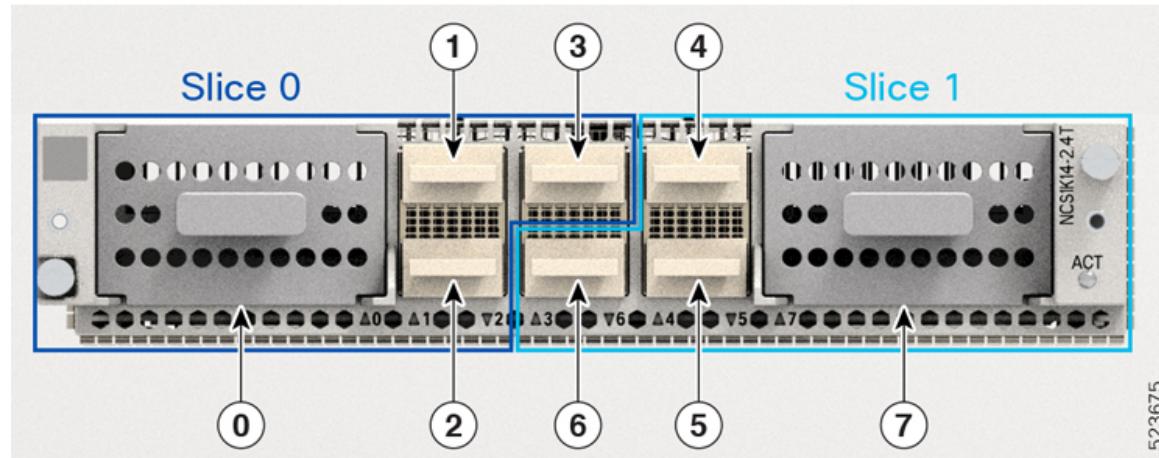

*Figure 3: 2.4TX Line Card Slices and Ports*

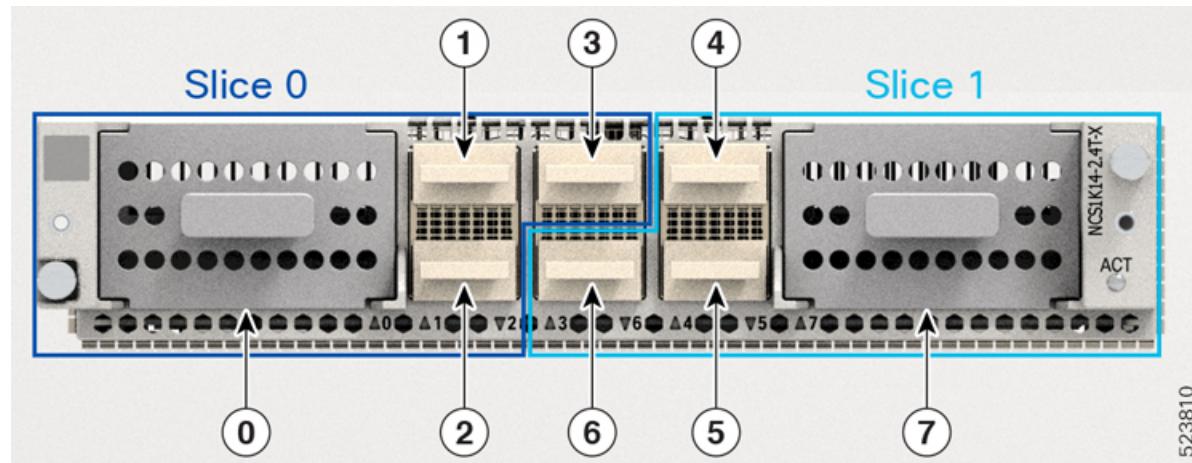

*Table 17: Client-to-Trunk Mapping in Slice 0 and Slice 1 Modes*

Slice 0		Slice 1	
Trunk Port	Client Ports	Trunk Port	Client Ports
0	1, 2, 3	7	4, 5, 6

### Data Rate Capabilities for 2.4T and 2.4TX Line Cards in Muxponder Slice Mode

The 2.4T and 2.4TX line cards support various trunk rates.

## Recommended Trunk Parameters in the 2.4T and 2.4TX Cards

The table shows the releases from which the 2.4T and 2.4TX cards started supporting each trunk rate.

**Table 18: Release-Wise Trunk Rates Supported by the 2.4T and 2.4TX Cards**

Trunk Rate (G)	2.4T	2.4TX
400	7.11.1	24.1.1
500	-	24.1.1
600	7.11.1	24.1.1
700	-	24.2.1
800	7.11.1	24.1.1
900	-	24.2.1
1000	7.11.1	24.1.1
1100	-	24.2.1
1200	-	24.1.1

## Recommended Trunk Parameters in the 2.4T and 2.4TX Cards

### Baud Rate Ranges for Each Trunk Rate in the 2.4T Card

The 2.4T card carries signals at different trunk rates, with each trunk rate operating within a baud rate range.

In the *Baud Rate Ranges for Each Trunk Rate in the 2.4T Card* table, you can find the recommended baud rate ranges to maintain the signal health for each trunk rate in the network.

**Table 19: Baud Rate Ranges for Each Trunk Rate in the 2.4T Card**

Data Rate per Trunk (G)	Minimum Baud Rate (GBd)	Maximum Baud Rate (GBd)
400	43.34518	130.4647
500	49.61196	147.7235
600	59.53435	148.0555
700	69.45674	147.8182
800	79.37913	148.0555
900	89.30152	147.8709
1000	99.22392	148.0555
1100	109.1463	148.2068
1200	119.0687	148.0555

### Baud Rate and Bit Rate Range for Each Trunk Rate in the 2.4TX Card

The 2.4TX card carries trunk signals at different data rates. Each trunk data rate operates in a default baud rate. However, you can customize the baud rate within the recommended baud rate range based on your deployment scenario. To customize baud rate, see.

In the *Baud Rate and Bit Rate Range for Each Trunk Rate in the 2.4TX Card* table, you can find the recommended baud rate ranges to maintain the signal health for each trunk rate in the network. The table also features the bit per second information for the respective baud rates.

**Table 20: Baud Rate and Bit Rate Range for Each Trunk Rate in the 2.4TX Card**

Trunk Data Rate per Trunk (G)	Minimum Baud Rate (GBd)	Maximum Baud Rate (GBd)	Default Baud Rate (GBd)	Minimum Bit per Second (bps)	Maximum Bit per Second (bps)
400	43.34518	130.4647	127.931418	2.1	4.1
500	49.61196	147.7235	137.8340588	2.5	5
600	59.53435	148.0555	137.738007	2.8	5.1
700	69.45674	147.8182	138.08166	3.2	5
800	79.37913	148.0555	137.978388	3.5	5.1
900	89.30152	147.8709	137.89817	3.8	5.2
1000	99.22392	148.0555	137.834059	4.3	5.3
1100	109.1463	148.2068	137.78165	4.7	5.3
1200	119.0687	148.0555	137.738007	5.3	5.7

## Customize Baud Rates

The muxponder mode enables the 2.4T and 2.4TX cards to carry signals in default baud rates when you set up the trunk rate. However, you can customize the baud rates for each trunk rate based on the bandwidth in the network.

Use this procedure to customize the baud rates within the recommended range as per your deployment scenario.

### Before you begin

- Install the following pluggable modules as required.
  - QDD-4x100G
  - QDD-400G
- Enter the Cisco IOS XR configuration mode.

## Procedure

---

- Step 1** Locate the Trunk Optics Controller for the 2.4T or 2.4TX card.

**Example:**

```
RP/0/RP0/CPU0:ios(config)#controller optics 0/0/0/7
```

- Step 2** Enter baud rate.

**Example:**

```
RP/0/RP0/CPU0:ios(config-Optics)#baud-rate 120.0000
```

- Step 3** Save the changes.

**Example:**

```
RP/0/RP0/CPU0:ios(config-Optics)#commit
```

---

## Client Pluggables for Configuring Muxponder Slice Modes

This section provides details about the client pluggable combinations that you need to set up the client rate for each trunk rate in slice 0 and slice 1.

### Pluggable Combinations in Muxponder Slice Modes

The client data rates and ports differ for each trunk rate in the muxponder slice 0 (Trunk 0) and muxponder slice 1 (Trunk 1) configurations. However, the type of client pluggable modules stays the same for both slice modes.

*Table 21: Trunk Rate and Client Pluggable Combinations for Slices 0 and Slice 1*

Trunk Rate (G) per Trunk	Card Support	Client Rate	Client Pluggable	Client Ports	
				Slice 0	Slice 1
400	2.4T, 2.4TX	400 GE	QDD-400G	1	4
		4x 100 GE	QDD-4x100G		
500	2.4TX	400 GE + 1x 100 GE	QDD-400G + QDD-4x100G	1, 2	4, 5
		5x 100 GE	2x QDD-4x100G		
600	2.4T, 2.4TX	400 GE + 2x 100 GE	QDD-400G + QDD-4x100G	1, 2	4, 5
		6x 100 GE	2x QDD-4x100G		

Trunk Rate (G) per Trunk	Card Support	Client Rate	Client Pluggable	Client Ports	
				Slice 0	Slice 1
700	2.4TX	400 GE + 3x 100 GE	QDD-400G + QDD-4x100G	1, 2	4, 5
		7x 100 GE	2x QDD-4x100G		
800	2.4T, 2.4TX	2x 400 GE	2x QDD-400G	1, 2	4, 5
		400 GE + 4x 100 GE	QDD-400G + QDD-4x100G		
		8x 100 GE	2x QDD-4x100G		
900	2.4TX	2x 400 GE + 1x 100 GE	QDD-400G + QDD-4x100G	1, 2, 3	4, 5, 6
		400 GE + 5x 100 GE	QDD-400G + QDD-4x100G		
		9x 100 GE	3x QDD-4x100G		
1000	2.4T, 2.4TX	2x 400GE + 2x 100 GE	2x QDD-400G + 2x QDD-4x100G	1, 2, 3	4, 5, 6
		10x 100 GE	3x QDD-4x100G		
1100	2.4TX	2x 400 GE + 3x 100 GE	2x QDD-400G + QDD-4x100G	1, 2, 3	4, 5, 6
		400 GE + 7x 100 GE	2x QDD-400G + QDD-4x100G		
		11x 100 GE	3x QDD-4x100G		
1200	2.4TX	3x 400 GE	3x QDD-400G	1, 2, 3	4, 5, 6
		2x 400 GE + 4x 100 GE	2x QDD-400G + QDD-4x100G		
		400 GE + 8x 100 GE	QDD-400G + 2x QDD-4x100G		
		12x 100 GE	3x QDD-4x100G		
		6x 2X100 GE	6x QDD-2X100-CWDM4-S 6x QDD-2X100-LR4-S	1, 2, 3, 4, 5, 6	—

<sup>1</sup> QDD-400G refers to QDD-400G-FR4-S, QDD-400G-LR4-S, QDD-400G-AOCxM, and QDD-400G-DR4-S pluggable modules.

## Set Up the Client and Trunk Rate in the Muxponder Slice Mode for 2.4T and 2.4TX Cards

<sup>2</sup> QDD-4x100G refers to QDD-4X100G-LR-S, QDD-4X100G-FR-S, and QDD-400G-DR4-S pluggable modules.

Make sure you use the appropriate values for client bitrate and trunk bitrate parameters when configuring the Muxponder slice mode using the **hw-module** command.

## Set Up the Client and Trunk Rate in the Muxponder Slice Mode for 2.4T and 2.4TX Cards

Use this procedure to set up the client and trunk rate in the muxponder slice mode for the 2.4T and 2.4TX cards.

This procedure considers that you are setting up the 600-G data rate in one of the trunk ports of the 2.4T or 2.4TX card. This scenario requires you to set the client rate for the client ports. Based on the client pluggable that you use, the client rate can change to 400-GE client, 100-GE client, or mixed client.

For more information on the the data rate on each client port, see [Client Pluggables for Configuring Muxponder Slice Modes, on page 48](#).

### Before you begin

- Install the following pluggables as required.
  - QDD-400G
  - QDD-4x100G

### Procedure

---

#### Step 1 Specify the card location.

**Example:**

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0
```

#### Step 2 Configure the 2.4T or 2.4TX line cards in the muxponder slice mode.

For Trunk 0 port, enter the **muxponder-slice 0** mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config)#mxponder-slice 0
```

For Trunk 1 port, enter the **mxponder-slice 1** mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config)#mxponder-slice 1
```

**Note**

You can configure both muxponder slice 0 and slice 1 modes when needed.

For more information on how to configure muxponder slice mode with QDD-4x100GE and QDD-4x100GE pluggables, see the **hw-module** command.

#### Step 3 Set up the trunk rate for the 2.4T or 2.4TX card.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 600G
```

**Step 4** Set up the client rate based on the pluggables that you use.

For the QDD-400G pluggable, run this command.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 client-type 400GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 2 client-type 400GE
```

For the QDD-4x100G pluggable, run this command.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 2 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 3 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 1 lane 4 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 2 lane 1 client-type 100GE
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-port-rate 2 lane 2 client-type 100GE
```

**Note**

Use the **lane** keyword to set up the 100-GE client rate in the client ports.

For the mixed client pluggable, use the combination of the QDD-400G and QDD-4x100G commands.

**Step 5** Save the configuration and exit the muxponder slice mode.**Example:****Command**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#exit
RP/0/RP0/CPU0:ios(config)#exit
```

**Step 6** Verify the 600-G data rate that you set up.

The following sample shows the 600-G data rate (**Trunk Bitrate: 600G**) set up in client ports 1 (**FourHundredGigEController0/1/0/1**) and 2 with breakout lanes 1 and 2 (**HundredGigEController0/1/0/2/1** and **HundredGigEController0/1/0/2/2**) using 400-GE and 100-GE client type pluggables (**Client Bitrate: MIXED**) in muxponder slice 0 (**Slice ID: 0**).

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 muxponder-slice 0
Thu Nov 16 15:41:25.720 UTC
Location:          0/1/NXR0
Slice ID:          0
Client Bitrate:    MIXED
Trunk Bitrate:     600G
Status:            Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port        Mapper/Trunk Port      CoherentDSP0/1/0/0
                  Traffic Split Percentage
FourHundredGigEController0/1/0/1   ODU-FLEX0/1/0/0/1           100
HundredGigEController0/1/0/2/1     ODU-FLEX0/1/0/0/2/1           100
HundredGigEController0/1/0/2/2     ODU-FLEX0/1/0/0/2/2           100
```

The following sample shows the 600-G data rate (**Trunk Bitrate: 600G**) set up in client ports 0 with breakout lanes 1 to 4 (**HundredGigEController0/1/0/1/1** to **HundredGigEController0/1/0/1/4**) and 1 (**HundredGigEController0/1/0/2/1**) using 100-GE client type pluggable (**Client Bitrate: 100GE**) in muxponder slice 0 (**Slice ID: 0**).

**Set Up 2x100G Clients in 1200G Trunk rate in the Muxponder Slice Mode for 2.4TX Cards****Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/1/NXR0 muxponder-slice 0
Thu Nov 16 16:06:57.575 UTC
Location:          0/1/NXR0
Slice ID:          0
Client Bitrate:    100GE
Trunk Bitrate:     600G
Status:             Provisioned
LLDP Drop Enabled: FALSE
ARP Snoop Enabled: FALSE
Client Port          Mapper/Trunk Port      CoherentDSP0/1/0/0
                     Traffic Split Percentage
HundredGigEctr1r0/1/0/1/1   ODU-FLEX0/1/0/0/1/1   100
HundredGigEctr1r0/1/0/1/2   ODU-FLEX0/1/0/0/1/2   100
HundredGigEctr1r0/1/0/1/3   ODU-FLEX0/1/0/0/1/3   100
HundredGigEctr1r0/1/0/1/4   ODU-FLEX0/1/0/0/1/4   100
HundredGigEctr1r0/1/0/2/1   ODU-FLEX0/1/0/0/2/1   100
HundredGigEctr1r0/1/0/2/2   ODU-FLEX0/1/0/0/2/2   100
```

---

**Set Up 2x100G Clients in 1200G Trunk rate in the Muxponder Slice Mode for 2.4TX Cards**

Use this procedure to set up 2x100G client pluggables in 1200G trunk rate in the muxponder slice mode for the 2.4TX card.

For more information on the the data rate on each client port, see [Client Pluggables for Configuring Muxponder Slice Modes, on page 48](#).

**Before you begin**

- Install either of the following pluggables in all 6 client ports.
  - QDD-2X100-CWDM4-S
  - QDD-2X100-LR4-S

**Procedure****Step 1** Specify the card location.**Example:**

```
RP/0/RP0/CPU0:ios(config)#hw-module location 0/1/NXR0
```

**Step 2** Configure the 2.4TX line cards in the muxponder slice mode.

For 6x2x100pluggables in 1200G trunk mode all client ports are in slice 0. Enter the `muxponder-slice 0` mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config)#muxponder-slice 0
```

**Step 3** Set up the trunk rate for the 2.4T or 2.4TX card.**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#trunk-rate 1200G
```

**Step 4** Set up the client rate.

For the 2X100G pluggables, run this command.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#client-rate 100GE
```

**Step 5** Save the configuration and exit the muxponder slice mode.

**Example:**

**Command**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp)#exit
RP/0/RP0/CPU0:ios(config)#exit
```

**Step 6** Verify the 1200-G data rate that you set up.

The following sample shows the 1200-G data rate (**Trunk Bitrate: 1200G**) set up in all 12 client ports.

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/2/NXR0 muxponder-slice 0
Thu Nov 16 15:41:25.720 UTC
Location:          0/2/NXR0
Slice ID:          0
Client Bit100GE
Trunk Bitrate:    1200G
Status:            Provisioned
rate:      LLDP Drop Enabled:    FALSE
ARP Snoop Enabled: FALSE
Client Port           Mapper/Trunk Port           CoherentDSP0/2/0/0
                      Traffic Split Percentage
HundredGigEController0/2/0/1/1   ODU-FLEX0/2/0/0/1   100
HundredGigEController0/2/0/1/5   ODU-FLEX0/2/0/0/2   100
HundredGigEController0/2/0/2/1   ODU-FLEX0/2/0/0/3   100
HundredGigEController0/2/0/2/5   ODU-FLEX0/2/0/0/4   100
HundredGigEController0/2/0/3/1   ODU-FLEX0/2/0/0/5   100
HundredGigEController0/2/0/3/5   ODU-FLEX0/2/0/0/6   100
HundredGigEController0/2/0/4/1   ODU-FLEX0/2/0/0/7   100
HundredGigEController0/2/0/4/5   ODU-FLEX0/2/0/0/8   100
HundredGigEController0/2/0/5/1   ODU-FLEX0/2/0/0/9   100
HundredGigEController0/2/0/5/5   ODU-FLEX0/2/0/0/10  100
HundredGigEController0/2/0/6/1   ODU-FLEX0/2/0/0/9   100
HundredGigEController0/2/0/6/5   ODU-FLEX0/2/0/0/10  100
```

## Muxponder Mode for 2.4TX Card

The muxponder mode enables the 2.4TX card to split wavelengths in specific client ports between the two trunk ports. In the slice mode, the client ports that support wavelength splitting act the same as other client ports. However, in the muxponder mode, the 2.4TX card activates the split client ports. The shared client ports are client port 2 for 600G and client port 3 for 1000G.

## Recommended Connections for Point-to-Point Topology in Muxponder Mode

### How Muxponder Mode Splits 400GE and 4x100GE Client Traffic

This use case explains the wavelength splitting for 600G trunk rate.

For 600G trunk rate, you must configure client port 1, 2, and 4 as 400GE or 4x100GE. Trunk 0 receives 400GE from port 1. Trunk 7 receives 400GE from port 4. As per split client configuration, port 2 gives 200GE to Trunk 0 and another 200GE to Trunk 7. In this way, both trunk ports deliver 600G trunk rate each.

## Recommended Connections for Point-to-Point Topology in Muxponder Mode

- Connect the port 0 and port 7 in the near end node to their respective port 0 and port 7 in the far end node.
- Make sure the optic fibers connected to trunk ports 0 and 7 are the same length. The difference must be less than 500 m; otherwise, you'll lose traffic on the split port.

## Data Rate Capabilities for the 2.4TX Card

*Table 22: Feature History*

Feature Name	Release Information	Description
Additional Muxponder Mode Trunk Rates for the NCS1K14-2.4T-X-K9 Line Card	Cisco IOS XR Release 24.3.1	The NCS1K14-2.4T-X-K9 line card now supports additional trunk rates of 500G and 900G in muxponder mode, enhancing flexibility and optimizing pluggable count alongside the existing 600G and 1000G rates.

The 2.4TX card supports different trunk rates.

*Table 23: Release-Wise Trunk Rates Supported by the 2.4TX Cards*

Trunk Rate (G)	Release Introduced
500	24.3.1
600	24.1.1
900G	24.3.1
1000G	24.1.1



**Note** For 600G and 1000G trunk rates, in R24.1.1, the shared client port supports only 400GE client and from R24.3.1, the shared client port supports both 400GE and 4x100GE clients.

## Client Pluggables for Configuring 2.4TX Muxponder Mode

*Table 24: Feature History*

Feature Name	Release Information	Description
100GE Channel Support for the 600G and 1000G Trunk Rate in NCS1K14-2.4T-X-K9 Muxponder Mode	Cisco IOS XR Release 24.3.1	The NCS1K14-2.4T-X-K9 line card now allows 100G breakout client support for 600G and 1000G trunk rate in muxponder mode. It features 4x100GE breakout channels in shared client ports, enabling easy integration with existing 100G networks using QDD-4X100G-LR-S, QDD-4X100G-FR-S, and QDD-400G-DR4-S pluggable modules. These channels offer high density and bandwidth efficiency without extra costs.

This section provides details about the client pluggable combinations that you need to set up the client rate for each trunk rate.

### Client Pluggable Combinations in Muxponder Mode

The 2.4TX muxponder mode supports various trunk rate per trunk with different client pluggable combinations.



**Note** From R24.3.1, the 2.4TX card supports 100GE client traffic in the shared client port for both 600G and 1000G trunk rates.

The client channel rate in the table refers to both the total client rate and the client rate per channel in the client ports. For example, **2x 400GE + 2x 100GE** indicates that the client traffic consists of two channels at 400GE each and two channels at 100GE each.

*Table 25: 2.4TX Muxponder Mode Port Configurations*

Trunk Rate (G) per Trunk	Total Configured Trunk Rate (G)	Client Channel Rate	Client Pluggable	Shared Client Port	Client Ports
500	1000	2x 400GE + 2x 100GE	2x QDD-400G + 1x QDD-4x100G	2	1, 4
		1x 400GE + 6x 100GE	1x QDD-400G + 2x QDD-4x100G		
		10x 100GE	3x QDD-4x100G		

Trunk Rate (G) per Trunk	Total Configured Trunk Rate (G)	Client Channel Rate	Client Pluggable	Shared Port	Client	Client Ports
600	1200	3x 400GE	3x QDD-400G	2	1, 4	
		2x 400GE + 4x 100GE	2x QDD-400G + 1x QDD-4x100G			
		1x 400GE + 8x 100GE	1x QDD-400G + 2x QDD-4x100G			
900	1800	4x 400GE + 2x 100GE	4x QDD-400G + 1x QDD-4x100G	3	1, 2, 4, 5	
		3x 400GE + 6x 100GE	3x QDD-400G + 2x QDD-4x100G			
		2x 400GE + 10x 100GE	2x QDD-400G + 3x QDD-4x100G			
		1x 400GE + 14x 100GE	1x QDD-400G + 4x QDD-4x100G			
		18x 100GE	5x QDD-4x100G			
1000	2000	5x 400GE	5x QDD-400G	3	1, 2, 4, 5	
		4x 400GE + 4x 100GE	4x QDD-400G + 1x QDD-4x100G			
		3x 400GE + 8x 100GE	3x QDD-400G + 2x QDD-4x100G			
		2x 400GE + 12x 100GE	2x QDD-400G + 3x QDD-4x100G			
		1x 400GE + 16x 100GE	1x QDD-400G + 4x QDD-4x100G			

#### Understanding Client Rates per Client Port for Each Trunk Rate

The table shows the sample client rate per client port for each trunk rate. This simplified matrix helps you understand the traffic flow in each client port. It also indicates the number of channels that each client port

uses to deliver the client traffic. The type of pluggable module inserted in the shared client port determines the traffic rate through breakout and non-breakout channels.

You can customize the configuration by mixing and matching the client pluggable modules according to your requirements.

**Table 26: Client Rate Traffic per Trunk Rate and Client Pluggable Combinations**

<b>Trunk Rate (G) per Trunk</b>	<b>Client Pluggable</b>	<b>Client Rate (GE) per Trunk 0 Client Ports</b>		<b>Client Rate (GE) per Shared Client Ports</b>		<b>Client Rate (GE) per Trunk 1 client ports</b>		
		<b>1</b>	<b>2</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>
500	2x QDD-400G + 1x QDD-4x100G	400	-	2x 100	-	400	-	-
	1x QDD-400G + 2x QDD-4x100G	400	-	2x 100 <sup>3</sup>	-	4x 100	-	-
	1x QDD-4x100G	4x 100	-	2x 100 <sup>3</sup>	-	4x 100	-	-
600	3x QDD-400G	400	-	400	-	400	-	-
	2x QDD-400G + 1x QDD-4x100G	400	-	4x 100 <sup>3</sup>	-	400	-	-
	1x QDD-400G + 2x QDD-4x100G	400	-	4x 100 <sup>3</sup>	-	4x 100	-	-
900	4x QDD-400G + 1x QDD-4x100G	400	400	-	2x 100 <sup>3</sup>	400	400	-
	3x QDD-400G + 2x QDD-4x100G	400	400	-	2x 100 <sup>3</sup>	400	4x 100	-
	2x QDD-400G + 3x QDD-4x100G	400	400	-	2x 100 <sup>3</sup>	4x 100	4x 100	-
	1x QDD-400G + 4x QDD-4x100G	400	4x 100	-	2x 100 <sup>3</sup>	4x 100	4x 100	-
	5x QDD-4x100G	4x 100	4x 100	-	2x 100 <sup>3</sup>	4x 100	4x 100	-

## Set Up the Client and Trunk Rate in the Muxponder Mode for the 2.4TX Card

Trunk Rate (G) per Trunk	Client Pluggable	Client Rate (GE) per Trunk 0 Client Ports		Client Rate (GE) per Shared Client Ports		Client Rate (GE) per Trunk 1 client ports		
		1	2	2	3	4	5	6
1000	5x QDD-400G	400	400	-	400	400	400	-
	4x QDD-400G + 1x QDD-4x100G	400	400	-	4x 100	400	400	-
	3x QDD-400G + 2x QDD-4x100G	400	400	-	4x 100	400	4x 100	-
	2x QDD-400G + 3x QDD-4x100G	400	400	-	4x 100	4x 100	4x 100	-
	1x QDD-400G + 4x QDD-4x100G	400	4x 100	-	4x 100	4x 100	4x 100	-

<sup>3</sup> In this shared port, the pluggable capacity is 400GE or 4x 100GE, but, for this trunk rate, the 2.4TX card consumes only 2x 100GE client data.

## Set Up the Client and Trunk Rate in the Muxponder Mode for the 2.4TX Card

Use this procedure to configure a trunk rate in muxponder mode for the 2.4TX card.



**Note** This procedure considers that you're setting up the 600G trunk rate in the muxponder mode for the 2.4TX card. The commands and output shown are for 600G trunk rate. The commands and output change for other trunk rates.

This procedure uses a mix of client pluggable modules. For this procedure, the card has:

- QDD-4x100G pluggable in shared client port 2, and
- QDD-400G pluggable in client ports 1 and 4



**Note** For the 600G trunk rate, the split port supports both 400GE and 4x100GE. For more information on required pluggable modules for other trunk rates, see [Client Pluggables for Configuring 2.4TX Muxponder Mode, on page 55](#).

### Before you begin

- Install the pluggables as required.
  - QDD-400G
  - QDD-4x100G

## Procedure

---

**Step 1** Specify the card location.

**Example:**

```
RP/0/RP0/CPU0:ios(config) #hw-module location 0/1/NXR0
```

**Step 2** Enter the muxponder card mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod) #mxponder
```

**Step 3** Set up the trunk rate.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #trunk-rate 600G
```

**Step 4** Set up the client rate for the QDD-400G and QDD-4x100G pluggable modules.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #client-port-rate 1 client-type 400GE
// QDD-400G pluggable in client port 1
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #client-port-rate 2 lane 1 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #client-port-rate 2 lane 2 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #client-port-rate 2 lane 3 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #client-port-rate 2 lane 4 client-type 100GE
// Enter lane for the QDD-4x100G pluggable in client port 2
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #client-port-rate 4 client-type 400GE
```

**Note**

Use the **lane** keyword to set up the 100GE client rate in the client ports.

**Step 5** Save the configuration and exit the muxponder mode.

**Example:**

```
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #commit
RP/0/RP0/CPU0:ios(config-hwmod-mxp) #exit
// Exits muxponder mode
RP/0/RP0/CPU0:ios(config) #exit
// Exits configuration mode
```

**Step 6** Verify the 600G mixed client rate configured for the 2.4TX muxponder mode.

The sample shows the 600G data rate (**Trunk Bitrate: 600G**) set up in client ports 1 and 4 (**FourHundredGigECtrlr0/2/0/1** and **FourHundredGigECtrlr0/2/0/4**) and split client port 2 with breakout lanes 1 to 4 (**HundredGigECtrlr0/2/0/2/1** to **HundredGigECtrlr0/2/0/2/4**).

**Example:**

```
RP/0/RP0/CPU0:ios#show hw-module location 0/2/NXR0 mxponder
Location:          0/2/NXR0
Client Bitrate:    MIXED
Trunk Bitrate:     600G
Status:            Provisioned
```

## Set Up the Client and Trunk Rate in the Muxponder Mode for the 2.4TX Card

LLDP Drop Enabled:	FALSE		
ARP Snoop Enabled:	FALSE		
Client Port	Mapper/Trunk Port	CoherentDSP0/2/0/0	CoherentDSP0/2/0/7
Traffic Split Percentage			
FourHundredGigECtrlr0/2/0/1 0	ODU-FLEX0/2/0/0/1	100	
HundredGigECtrlr0/2/0/2/1 0	ODU-FLEX0/2/0/0/2/1	100	
HundredGigECtrlr0/2/0/2/2 0	ODU-FLEX0/2/0/0/2/2	100	
HundredGigECtrlr0/2/0/2/1 100	ODU-FLEX0/2/0/7/2/3	0	
HundredGigECtrlr0/2/0/2/2 100	ODU-FLEX0/2/0/7/2/4	0	
FourHundredGigECtrlr0/2/0/4 100	ODU-FLEX0/2/0/7/4	0	