



Implementing IPv6 VPN Provider Edge Transport over MPLS

This module describes how to implement IPv6 VPN Provider Edge Transport over MPLS on Cisco ASR 9000 Series Aggregation Services Routers.

IPv6 VPN Provider Edge (6PE/VPE) uses the existing MPLS IPv4 core infrastructure for IPv6 transport. 6PE/VPE enables IPv6 sites to communicate with each other over an MPLS IPv4 core network using MPLS label switched paths (LSPs).

This feature relies heavily on multiprotocol Border Gateway Protocol (BGP) extensions in the IPv4 network configuration on the provider edge (PE) router to exchange IPv6 reachability information (in addition to an MPLS label) for each IPv6 address prefix. Edge routers are configured as dual-stack, running both IPv4 and IPv6, and use the IPv4 mapped IPv6 address for IPv6 prefix reachability exchange.

For detailed information about the commands used to configure L2TP functionality, see the *Cisco ASR 9000 Aggregation Services Router Routing Command Reference*.

Feature History for Implementing 6PE on Cisco ASR 9000 Series Routers

Release	Modification
Release 3.9.1	This feature was introduced.
Release 4.0.0	Support was added for the 6PE and 6VPE features for IPv6 L3VPN on A9K-SIP-700. Support was added for the BGP per VRF/CE label allocation for 6PE feature.

Contents

- [Prerequisites for Implementing 6PE/VPE, page VPC-82](#)
- [Information About 6PE/VPE, page VPC-82](#)
- [How to Implement 6PE/VPE, page VPC-84](#)
- [Configuration Examples for 6PE, page VPC-94](#)
- [Additional References, page VPC-95](#)

Prerequisites for Implementing 6PE/VPE

These prerequisites are required to implement 6PE:

- You must be in a user group associated with a task group that includes the proper task IDs. The command reference guides include the task IDs required for each command.
If you suspect user group assignment is preventing you from using a command, contact your AAA administrator for assistance.
- Familiarity with MPLS and BGP4 configuration and troubleshooting.

Information About 6PE/VPE

To configure the 6PE feature, you should understand the concepts that are described in these sections:

- [Overview of 6PE/VPE, page VPC-82](#)
- [Benefits of 6PE/VPE, page VPC-83](#)
- [Deploying IPv6 over MPLS Backbones, page VPC-83](#)
- [IPv6 on the Provider Edge and Customer Edge Routers, page VPC-83](#)
- [IPv6 Provider Edge Multipath, page VPC-84](#)

Overview of 6PE/VPE

Multiple techniques are available to integrate IPv6 services over service provider core backbones:

- Dedicated IPv6 network running over various data link layers
- Dual-stack IPv4-IPv6 backbone
- Existing MPLS backbone leverage

These solutions are deployed on service providers' backbones when the amount of IPv6 traffic and the revenue generated are in line with the necessary investments and the agreed-upon risks. Conditions are favorable for the introduction of native IPv6 services, from the edge, in a scalable way, without any IPv6 addressing restrictions and without putting a well-controlled IPv4 backbone in jeopardy. Backbone stability is essential for service providers that have recently stabilized their IPv4 infrastructure.

Service providers running an MPLS/IPv4 infrastructure follow similar trends because several integration scenarios that offer IPv6 services on an MPLS network are possible. Cisco Systems has specially developed Cisco 6PE or IPv6 Provider Edge Router over MPLS, to meet all those requirements.

Inter-AS support for 6PE requires support of Border Gateway Protocol (BGP) to enable address families and to allocate and distribute PE and ASBR labels.

Benefits of 6PE/VPE

Service providers who currently deploy MPLS experience these benefits of Cisco 6PE:

- Minimal operational cost and risk—No impact on existing IPv4 and MPLS services.
- Only provider edge routers upgrade—A 6PE/VPE router can be an existing PE router or a new one dedicated to IPv6 traffic.
- No impact on IPv6 customer edge routers—The ISP can connect to any customer CE running Static, IGP or EGP.
- Production services ready—An ISP can delegate IPv6 prefixes.
- IPv6 introduction into an existing MPLS service—6PE/VPE routers can be added at any time.

Deploying IPv6 over MPLS Backbones

Backbones enabled by 6PE (IPv6 over MPLS) allow IPv6 domains to communicate with each other over an MPLS IPv4 core network. This implementation requires no backbone infrastructure upgrades and no reconfiguration of core routers because forwarding is based on labels instead of the IP header itself. This provides a very cost-effective strategy for IPv6 deployment.

Additionally, the inherent virtual private network (VPN) and traffic engineering (TE) services available within an MPLS environment allow IPv6 networks to be combined into VPNs or extranets over an infrastructure that supports IPv4 VPNs and MPLS-TE.

IPv6 on the Provider Edge and Customer Edge Routers

Service Provider Edge Routers


6PE is particularly applicable to service providers who currently run an MPLS network. One of its advantages is that there is no need to upgrade the hardware, software, or configuration of the core network, and it eliminates the impact on the operations and the revenues generated by existing IPv4 traffic. MPLS is used by many service providers to deliver services to customers. MPLS as a multiservice infrastructure technology is able to provide layer 3 VPN, QoS, traffic engineering, fast re-routing and integration of ATM and IP switching.

Customer Edge Routers

Using tunnels on the CE routers is the simplest way to deploy IPv6 over MPLS networks. It has no impact on the operation or infrastructure of MPLS, and requires no changes to the P routers in the core or to the PE routers. However, tunnel meshing is required as the number of CEs to connect increases, and it becomes difficult to delegate a global IPv6 prefix for an ISP.

[Figure 7](#) illustrates the network architecture using tunnels on the CE routers.

Figure 7 IPv6 Using Tunnels on the CE Routers

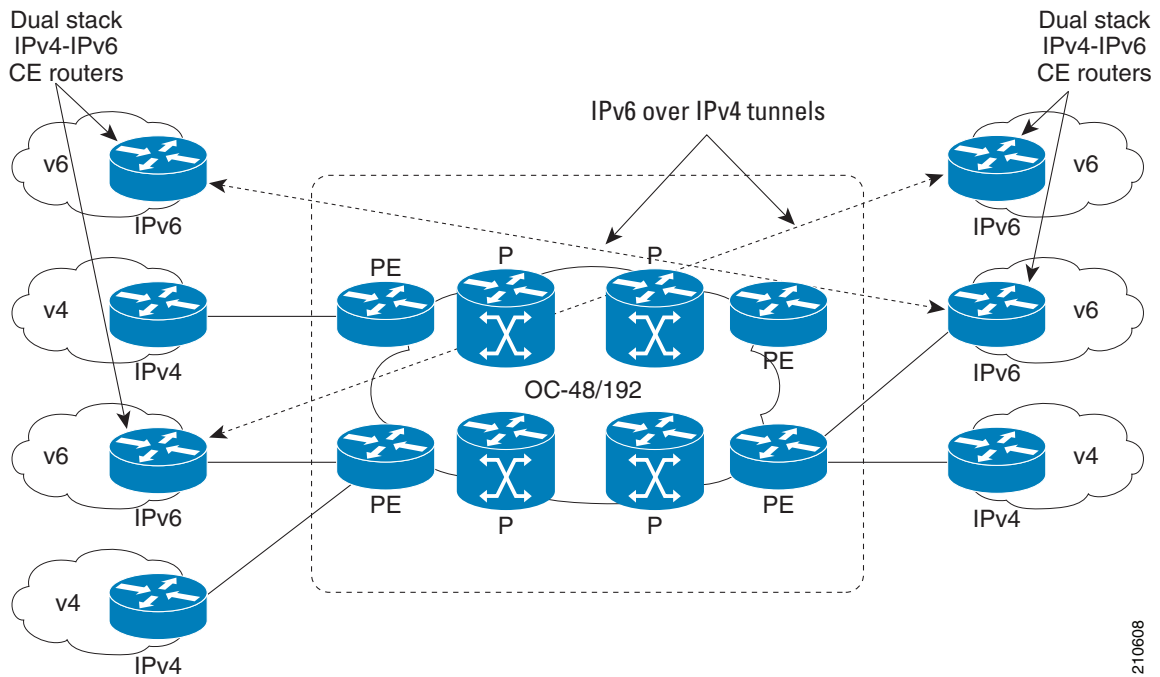

IPv6 Provider Edge Multipath

Internal and external BGP multipath for IPv6 allows the IPv6 router to balance load between several paths (for example, the same neighboring autonomous system (AS) or sub-AS, or the same metrics) to reach its destination. The 6PE multipath feature uses multiprotocol internal BGP (MP-IBGP) to distribute IPv6 routes over the MPLS IPv4 core network and to attach an MPLS label to each route.

When MP-IBGP multipath is enabled on the 6PE router, all labeled paths are installed in the forwarding table with available MPLS information (label stack). This functionality enables 6PE to perform load balancing.

How to Implement 6PE/VPE

This section includes these implementation procedures:

- [Configuring 6PE/VPE, page VPC-84](#)
- [Configuring PE to PE Core, page VPC-86](#)
- [Configuring PE to CE Core, page VPC-90](#)

Configuring 6PE/VPE

This task describes how to configure 6PE/VPE on PE routers to transport the IPv6 prefixes across the IPv4 cloud.

Ensure that you configure 6PE/VPE on PE routers participating in both the IPv4 cloud and IPv6 clouds.

**Note**

For 6PE, you can use all routing protocols supported on Cisco IOS XR software such as BGP, OSPF, IS-IS, EIGRP, RIP, and Static to learn routes from both clouds. However, for 6VPE, you can use only the BGP, EIGRP and Static routing protocols to learn routes.

SUMMARY STEPS

1. **configure**
2. **router bgp** *as-number*
3. **neighbor** *ip-address*
4. **address-family ipv6** **labeled-unicast**
5. **exit**
6. **exit**
7. **address-family ipv6** **unicast**
8. **allocate-label** [**all** | **route-policy** *policy_name*]
9. **end**
or
commit

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	router bgp <i>as-number</i> Example: RP/0/RSP0/CPU0:router(config)# router bgp 1	Enters the number that identifies the autonomous system (AS) in which the router resides. Range for 2-byte numbers is 1 to 65535. Range for 4-byte numbers is 1.0 to 65535.65535.
Step 3	neighbor <i>ip-address</i> Example: RP/0/RSP0/CPU0:router(config-bgp)# neighbor 1.1.1.1	Enters neighbor configuration mode for configuring Border Gateway Protocol (BGP) routing sessions.
Step 4	address-family ipv6 labeled-unicast Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# address-family ipv6 labeled-unicast	Specifies IPv6 labeled-unicast address prefixes. Note This option is also available in IPv6 neighbor configuration mode and VRF neighbor configuration mode.

	Command or Action	Purpose
Step 5	exit Example: RP/0/RSP0/CPU0:router(config-bgp-nbr-af)# exit	Exits BGP address-family submode.
Step 6	exit Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# exit	Exits BGP neighbor submode.
Step 7	address-family ipv6 unicast Example: RP/0/RSP0/CPU0:router(config-bgp)# address-family ipv6 unicast	Specifies IPv6 unicast address prefixes.
Step 8	allocate-label [all route-policy policy_name] Example: RP/0/RSP0/CPU0:router(config-bgp-af)# allocate-label all	Allocates MPLS labels for specified IPv4 unicast routes. Note The route-policy keyword provides finer control to filter out certain routes from being advertised to the neighbor.
Step 9	end OR commit Example: RP/0/RSP0/CPU0:router(config-bgp-af)# end OR RP/0/RSP0/CPU0:router(config-bgp-af)# commit	Saves configuration changes. <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> <ul style="list-style-type: none"> Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Configuring PE to PE Core

This task describes how to configure a Provider Edge (PE) to PE Core.

For information on configuring VPN Routing and Forwarding (VRF), refer to the *Implementing BGP on Cisco ASR 9000 Series Router* module of the *Cisco ASR 9000 Series Aggregation Services Router Routing Configuration Guide*.

SUMMARY STEPS

1. **configure**
2. **router bgp**
3. **address-family vpnv6 unicast**
4. **bgp dampening** [*half-life* [*reuse suppress max-suppress-time*] | **route-policy** *route-policy-name*]
5. **bgp client-to-client reflection** { **cluster-id** | **disable** }
6. **neighbor** *ip-address*
7. **remote-as** *as-number*
8. **description** *text*
9. **password** { **clear** | **encrypted** } *password*
10. **shutdown**
11. **timers** *keepalive hold-time*
12. **update-source type** *interface-id*
13. **address-family vpnv6 unicast**
14. **route-policy** *route-policy-name* { **in** | **out** }
15. **exit**
16. **vrf** *vrf-name*
17. **rd** { *as-number : nn* | *ip-address : nn* | **auto** }
18. **end**
or
commit

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	router bgp <i>as-number</i> Example: RP/0/RSP0/CPU0:router(config)# router bgp 10	Specifies the BGP AS number and enters the BGP configuration mode, allowing you to configure the BGP routing process.
Step 3	address-family vpnv6 unicast Example: RP/0/RSP0/CPU0:router(config-bgp)# address-family vpnv6 unicast	Specifies the vpnv6 address family and enters address family configuration submode.

	Command or Action	Purpose
Step 4	<p>bgp dampening [<i>half-life</i> [<i>reuse suppress max-suppress-time</i>] route-policy <i>route-policy-name</i>]</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-af)# bgp dampening 30 1500 10000 120</p>	Configures BGP dampening for the specified address family.
Step 5	<p>bgp client-to-client reflection {<i>cluster-id</i> disable }</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-af)# bgp client-to-client reflection disable</p>	Configures client to client route reflection.
Step 6	<p>exit</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-af)# exit</p>	Exits the address family configuration submode.
Step 7	<p>neighbor <i>ip-address</i></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp)# neighbor 10.1.1.1</p>	Places the router in neighbor configuration mode for BGP routing and configures the neighbor IP address as a BGP peer.
Step 8	<p>remote-as <i>as-number</i></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# remote-as 100</p>	Creates a neighbor and assigns a remote autonomous system number to it.
Step 9	<p>description <i>text</i></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# description neighbor 172.16.1.1</p>	Provides a description of the neighbor. The description is used to save comments and does not affect software function.
Step 10	<p>password { clear encrypted } <i>password</i></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# password encrypted 123abc</p>	Enables Message Digest 5 (MD5) authentication on the TCP connection between the two BGP neighbors.
Step 11	<p>shutdown</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# router bgp 1</p>	Terminates any active sessions for the specified neighbor and removes all associated routing information.
Step 12	<p>timers <i>keepalive hold-time</i></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# timers 12000 200</p>	Set the timers for the BGP neighbor.

	Command or Action	Purpose
Step 13	<p>update-source type interface-id</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# update-source gigabitEthernet 0/1/5/0</p>	Allows iBGP sessions to use the primary IP address from a specific interface as the local address when forming an iBGP session with a neighbor.
Step 14	<p>address-family vpnv6 unicast</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr)# address-family vpnv6 unicast</p>	Enters VPN neighbor address family configuration mode.
Step 15	<p>route-policy route-policy-name { in out }</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr-af)# route-policy pe-pe-vpn-in in</p>	Specifies a routing policy for an inbound route. The policy can be used to filter routes or modify route attributes.
Step 16	<p>route-policy route-policy-name { in out }</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr-af)# route-policy pe-pe-vpn-out out</p>	Specifies a routing policy for an outbound route. The policy can be used to filter routes or modify route attributes.
Step 17	<p>exit</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-nbr-af)# exit</p>	Exits address family configuration and neighbor submode.
Step 18	<p>vrf vrf-name</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp)# vrf vrf-pe</p>	Configures a VRF instance.

	Command or Action	Purpose
Step 19	<pre>rd { as-number : nn ip-address : nn auto }</pre> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf)# rd 345:567</p>	<p>Configures the route distinguisher.</p> <p>Use the auto keyword if you want the router to automatically assign a unique RD to the VRF.</p>
Step 20	<pre>end</pre> <p>or</p> <pre>commit</pre> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf)# end or RP/0/RSP0/CPU0:router(config-bgp-vrf)# commit</p>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> <ul style="list-style-type: none"> Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Configuring PE to CE Core

This task describes how to configure a PE to Customer Edge (CE) core.

SUMMARY STEPS

1. **configure**
2. **router bgp**
3. **vrf vrf-name**
4. **bgp router-id ip-address**
5. **label-allocation-mode { per-ce | per-vrf }**
6. **address-family ipv6 unicast**
7. **redistribute { connected | static | eigrp }**
8. **neighbor ip-address**
9. **remote-as as-number**
10. **ebgp-multihop { maximum hops | mpls }**
11. **address-family ipv6 unicast**
12. **site-of-origin [as-number : nn | ip-address : nn]**

13. **as-override**
14. **allowas-in** [*as-occurrence-number*]
15. **end**
or
commit

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure Example: RP/0/RSP0/CPU0:router# configure	Enters global configuration mode.
Step 2	router bgp <i>as-number</i> Example: RP/0/RSP0/CPU0:router(config)# router bgp 10	Specifies the BGP AS number and enters the BGP configuration mode, allowing you to configure the BGP routing process.
Step 3	vrf <i>vrf-name</i> Example: RP/0/RSP0/CPU0:router(config-bgp)# vrf vrf-pe	Configures a VRF instance.
Step 4	bgp router-id <i>ip-address</i> Example: RP/0/RSP0/CPU0:router(config-bgp-vrf)#bgp router-id 172.16.9.9	Configures a fixed router ID for a BGP-speaking router.
Step 5	label-allocation-mode { per-ce per-vrf } Example: RP/0/RSP0/CPU0:router(config-bgp-vrf)# label-allocation-mode per-ce	<p>Configures the per-CE label allocation mode to avoid an extra lookup on the PE router and conserve label space (per-prefix is the default label allocation mode). In this mode, the PE router allocates one label for every immediate next-hop (in most cases, this would be a CE router). This label is directly mapped to the next hop, so there is no VRF route lookup performed during data forwarding. However, the number of labels allocated would be one for each CE rather than one for each VRF. Because BGP knows all the next hops, it assigns a label for each next hop (not for each PE-CE interface). When the outgoing interface is a multiaccess interface and the media access control (MAC) address of the neighbor is not known, Address Resolution Protocol (ARP) is triggered during packet forwarding.</p> <p>The per-vrf keyword configures the same label to be used for all the routes advertised from a unique VRF.</p>

	Command or Action	Purpose
Step 6	<p>address-family ipv6 unicast</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf)# address-family ipv6 unicast</p>	<p>Specifies an IPv6 address family unicast and enters address family configuration submode.</p> <p>To see a list of all the possible keywords and arguments for this command, use the CLI help (?).</p>
Step 7	<p>redistribute {connected static eigrp }</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-af)#</p>	<p>Causes routes from the specified instance to be redistributed into BGP.</p>
Step 8	<p>neighbor ip-address</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf)# neighbor 10.0.0.0</p>	<p>Configures a CE neighbor. The ip-address argument must be a private address.</p>
Step 9	<p>remote-as as-number</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr)# remote-as 2</p>	<p>Configures the remote AS for the CE neighbor.</p>
Step 10	<p>ebgp-multihop { maximum hops mpls }</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr)# ebgp-multihop 55</p>	<p>Configures the CE neighbor to accept and attempt BGP connections to external peers residing on networks that are not directly connected.</p>
Step 11	<p>address-family ipv6 unicast</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr)# address-family ipv6 unicast</p>	<p>Specifies an IPv6 address family unicast and enters address family configuration submode.</p> <p>To see a list of all the possible keywords and arguments for this command, use the CLI help (?).</p>
Step 12	<p>site-of-origin [as-number:nn ip-address:nn]</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr-af)# site-of-origin 234:111</p>	<p>Configures the site-of-origin (SoO) extended community. Routes that are learned from this CE neighbor are tagged with the SoO extended community before being advertised to the rest of the PEs. SoO is frequently used to detect loops when as-override is configured on the PE router. If the prefix is looped back to the same site, the PE detects this and does not send the update to the CE.</p>
Step 13	<p>as-override</p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr-af)# as-override</p>	<p>Configures AS override on the PE router. This causes the PE router to replace the CE's ASN with its own (PE) ASN.</p> <p>Note This loss of information could lead to routing loops; to avoid loops caused by as-override, use it in conjunction with site-of-origin.</p>

Command or Action	Purpose
<p>Step 14 <code>allowas-in [as-occurrence-number]</code></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr-af)# allowas-in 5</p>	<p>Allows an AS path with the PE autonomous system number (ASN) a specified number of times.</p> <p>Hub and spoke VPN networks need the looping back of routing information to the HUB PE through the HUB CE. When this happens, due to the presence of the PE ASN, the looped-back information is dropped by the HUB PE. To avoid this, use the <code>allowas-in</code> command to allow prefixes even if they have the PEs ASN up to the specified number of times.</p>
<p>Step 15 <code>end</code> OR <code>commit</code></p> <p>Example: RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr-af)# end OR RP/0/RSP0/CPU0:router(config-bgp-vrf-nbr-af)# commit</p>	<p>Saves configuration changes.</p> <ul style="list-style-type: none"> When you issue the end command, the system prompts you to commit changes: <pre>Uncommitted changes found, commit them before exiting(yes/no/cancel)? [cancel]:</pre> <ul style="list-style-type: none"> Entering yes saves configuration changes to the running configuration file, exits the configuration session, and returns the router to EXEC mode. Entering no exits the configuration session and returns the router to EXEC mode without committing the configuration changes. Entering cancel leaves the router in the current configuration session without exiting or committing the configuration changes. Use the commit command to save the configuration changes to the running configuration file and remain within the configuration session.

Configuration Examples for 6PE

This section includes these configuration example:

- [Configuring 6PE on a PE Router: Example, page VPC-94](#)
- [Configuring 6VPE on a PE Router: Example, page VPC-94](#)

Configuring 6PE on a PE Router: Example

This sample configuration shows the configuration of 6PE on a PE router:

```
interface GigabitEthernet0/3/0/0
  ipv6 address 2001::1/64
  !
router isis ipv6-cloud
  net 49.0000.0000.0001.00
  address-family ipv6 unicast
    single-topology
  interface GigabitEthernet0/3/0/0
    address-family ipv6 unicast
  !
  !
router bgp 55400
  bgp router-id 54.6.1.1
  address-family ipv4 unicast
  !
  address-family ipv6 unicast
    network 55:5::/64
    redistribute connected
    redistribute isis ipv6-cloud
    allocate-label all

  !
neighbor 34.4.3.3
  remote-as 55400
  address-family ipv4 unicast
  !
  address-family ipv6 labeled-unicast
```

Configuring 6VPE on a PE Router: Example

This sample configuration shows the configuration of 6VPE on a PE router:

```
vrf vpn1
  address-family ipv6 unicast
    import route-target
      200:2
  !
  export route-target
    200:2

interface Loopback0
  ipv4 address 10.0.0.1 255.255.255.255

interface GigabitEthernet0/0/0/1
  vrf vpn1
  ipv6 address 2001:c003:a::2/64
```

```

router bgp 1
  bgp router-id 10.0.0.1
  bgp redistribute-internal
  bgp graceful-restart
  address-family ipv4 unicast
  !

address-family vpnv6 unicast
  !
  neighbor 10.0.0.2                >>>> Remote peer loopback address.
    remote-as 1
    update-source Loopback0
  address-family ipv4 unicast
  !
  address-family vpnv6 unicast
    route-policy pass-all in
    route-policy pass-all out
  !

vrf vpn1
  rd 100:2
  bgp router-id 140.140.140.140
  address-family ipv6 unicast
  redistribute connected
  !

neighbor 2001:c003:a::1
  remote-as 6502
  address-family ipv6 unicast
  route-policy pass-all in
  route-policy pass-all out
  !

```

Additional References

For additional information related to this feature, refer to these references:

Related Document

Related Topic	Document Title
Getting started material	<i>Cisco ASR 9000 Series Aggregation Services Router Getting Started Guide</i>

Standards

Standards ¹	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

1. Not all supported standards are listed.

MIBs

MIBs	MIBs Link
—	To locate and download MIBs using Cisco IOS XR software, use the Cisco MIB Locator found at this URL and choose a platform under the Cisco Access Products menu: http://cisco.com/public/sw-center/netmgmt/cmtk/mibs.shtml

RFCs

RFCs	Title
—	—

Technical Assistance

Description	Link
The Cisco Technical Support website contains thousands of pages of searchable technical content, including links to products, technologies, solutions, technical tips, and tools. Registered Cisco.com users can log in from this page to access even more content.	http://www.cisco.com/techsupport