



MPLS Multilink PPP Support

The MPLS Multilink PPP Support feature ensures that MPLS Layer 3 Virtual Private Networks (VPNs) with quality of service (QoS) can be enabled for bundled links. This feature supports Multiprotocol Label Switching (MPLS) over Multilink PPP (MLP) links in the edge (provider edge [PE]-to-customer edge [CE]) or in the MPLS core (PE-to-PE and PE-to-provider [P] device).

Service providers that use relatively low-speed links can use MLP to spread traffic across them in their MPLS networks. Link fragmentation and interleaving (LFI) should be deployed in the CE-to-PE link for efficiency, where traffic uses a lower link bandwidth (less than 768 kbps). The MPLS Multilink PPP Support feature can reduce the number of Interior Gateway Protocol (IGP) adjacencies and facilitate load sharing of traffic.

- [Prerequisites for MPLS Multilink PPP Support, on page 1](#)
- [Restrictions for MPLS Multilink PPP Support, on page 1](#)
- [Information About MPLS Multilink PPP Support, on page 2](#)
- [How to Configure MPLS Multilink PPP Support, on page 6](#)
- [Configuration Examples for MPLS Multilink PPP Support, on page 17](#)

Prerequisites for MPLS Multilink PPP Support

- Multiprotocol Label Switching (MPLS) must be enabled on provider edge (PE) and provider (P) devices

Restrictions for MPLS Multilink PPP Support

- Only 168 multilink bundles can be created per the OC-3 interface module on the router.
- The maximum number of members per multilink bundle is 16.

For information on how to configure, Protocol-Field-Compression (PFC) and Address-and-Control-Field-Compression (AFC), see the *Configuring PPP and Multilink PPP* chapter in this book.

Information About MPLS Multilink PPP Support

MPLS Layer 3 Virtual Private Network Features Supported for Multilink PPP

The table below lists Multiprotocol Label Switching (MPLS) Layer 3 Virtual Private Network (VPN) features supported for Multilink PPP (MLP) and indicates if the feature is supported on customer edge-to-provider edge (CE-to-PE) links, PE-to-provider (P) links, and Carrier Supporting Carrier (CSC) CE-to-PE links.

Table 1: MPLS Layer 3 VPN Features Supported for MLP

MPLS L3 VPN Feature	CE-to-PE Links	PE-to-P Links	CSC CE-to-PE Links
Static routes	Supported	Not supported	Not supported
External Border Gateway Protocol (eBGP)	Supported	Not applicable to this configuration	Supported
Intermediate System-to-Intermediate System (IS-IS)	Not supported	Supported	Not supported
Open Shortest Path First (OSPF)	Supported	Supported	Not supported
Enhanced Interior Gateway Routing Protocol (EIGRP)	Supported	Supported	Not supported
Interprovider interautonomous (Inter-AS) VPNs (with Label Distribution Protocol [LDP])	Not applicable to this configuration	Supported (MLP between Autonomous System Boundary Routers [ASBRs])	Not applicable to this configuration
Inter-AS VPNs with IPv4 Label Distribution	Not applicable to this configuration	Supported (MLP between ASBRs)	Not applicable to this configuration
CSC VPNs (with LDP)	Not supported	Not applicable to this configuration	Supported
CSC VPNs with IPv4 label distribution	Supported	Not applicable to this configuration	Supported
External and internal BGP (eIBGP) Multipath	Not supported	Not supported	Not applicable to this configuration
Internal BGP (iBGP) Multipath	Not applicable to this configuration	Not supported	Not applicable to this configuration
eBGP Multipath	Not supported	Not supported	Not supported

MPLS Quality of Service Features Supported for Multilink PPP

The table below lists the Multiprotocol Label Switching (MPLS) quality of service (QoS) features supported for Multilink PPP (MLP) and indicates if the feature is supported on customer edge-to-provider edge (CE-to-PE) links, PE-to-provider (P) links, and Carrier Supporting Carrier (CSC) CE-to-PE links.

Table 2: MPLS QoS Features Supported for MLP


MPLS QoS Feature	CE-to-PE Links	PE-to-P Links	CSC CE-to-PE Links
Default copy of IP Precedence to EXP bits and the reverse	Supported	Not supported	Not supported
Set MPLS EXP bits using the modular QoS Command-Line Interface (MQC)	Supported	Supported	Supported
Matching on MPLS EXP using MQC	Supported	Supported	Supported
Low Latency Queueing (LLQ)/Class-Based Weighted Fair Queueing (CBWFQ) support	Supported	Supported	Supported
Weighted Random Early Detection (WRED) based on EXP bits using MQC	Supported	Supported	Supported
Policer with EXP bit-marking using MQC-3 action	Supported	Supported	Supported
Support for EXP bits in MPLS accounting	Supported	Supported	Supported

MPLS Multilink PPP Support and PE-to-CE Links

The figure below shows a typical Multiprotocol Label Switching (MPLS) network in which the provider edge (PE) device is responsible for label imposition (at ingress) and disposition (at egress) of the MPLS traffic.

In this topology, Multilink PPP (MLP) is deployed on the PE-to-customer edge (CE) links. The Virtual Private Network (VPN) routing and forwarding instance (VRF) interface is in a multilink bundle. There is no MPLS interaction with MLP; all packets coming into the MLP bundle are IP packets.

Figure 1: MLP and Traditional PE-to-CE Links

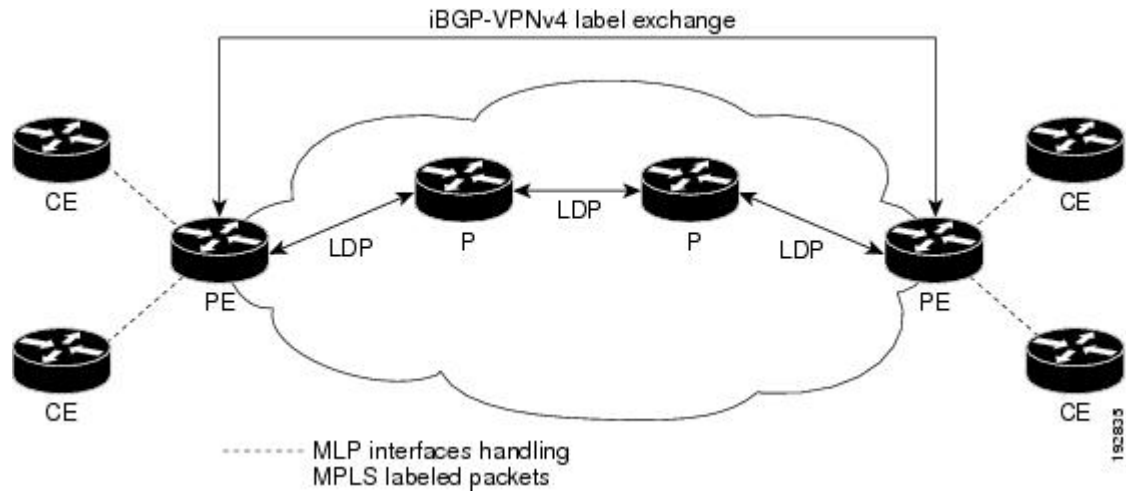


The PE-to-CE routing protocols that are supported for the MPLS Multilink PPP Support feature are external Border Gateway Protocol (eBGP), Open Shortest Path First (OSPF), and Enhanced Interior Gateway Routing Protocol (EIGRP). Static routes are also supported between the CE and PE devices.

Quality of service (QoS) features that are supported for the MPLS Multilink PPP Support feature on CE-to-PE links are link fragmentation and interleaving (LFI), compressed Real-Time Transport Protocol (cRTP), policing, marking, and classification.

MPLS Multilink PPP Support and Core Links

The figure below shows a sample topology in which Multiprotocol Label Switching (MPLS) is deployed over Multilink PPP (MLP) on provider edge-to-provider (PE-to-P) and P-to-P links. Enabling MPLS on MLP for PE-to-P links is similar to enabling MPLS on MLP for P-to-P links.

Figure 2: MLP on PE-to-P and P-to-P Links

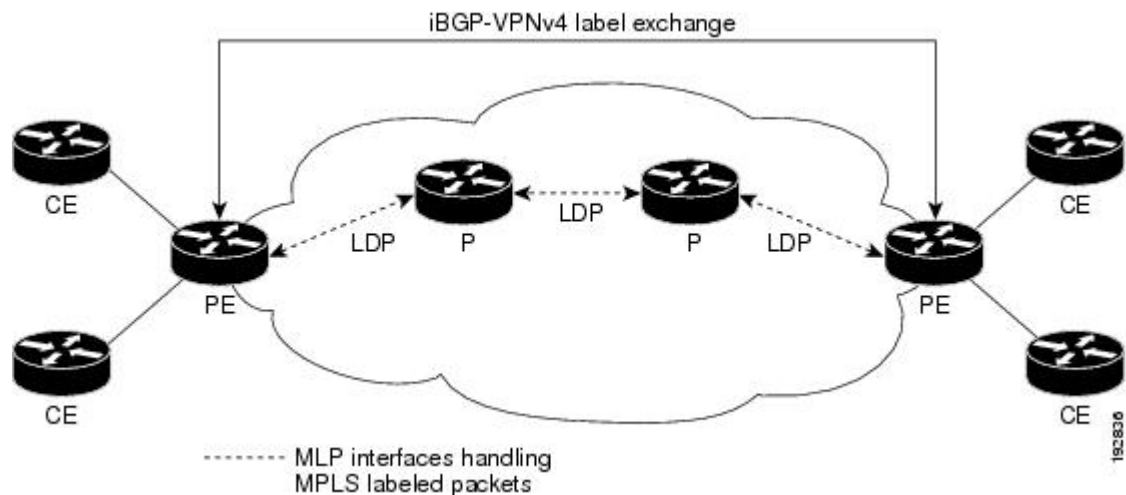


You employ MLP in the PE-to-P or P-to-P links primarily so that you can reduce the number of Interior Gateway Protocol (IGP) adjacencies and facilitate the load sharing of traffic.

In addition to requiring MLP on the PE-to-P links, the MPLS Multilink PPP Support feature requires the configuration of an IGP routing protocol and the Label Distribution Protocol (LDP).

MPLS Multilink PPP Support in a CSC Network


The figure below shows a typical Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) Carrier Supporting Carrier (CSC) network where Multilink PPP (MLP) is configured on the CSC customer edge (CE)-to-provider edge (PE) links.

Figure 3: MLP on CSC CE-to-PE Links with MPLS VPN Carrier Supporting Carrier

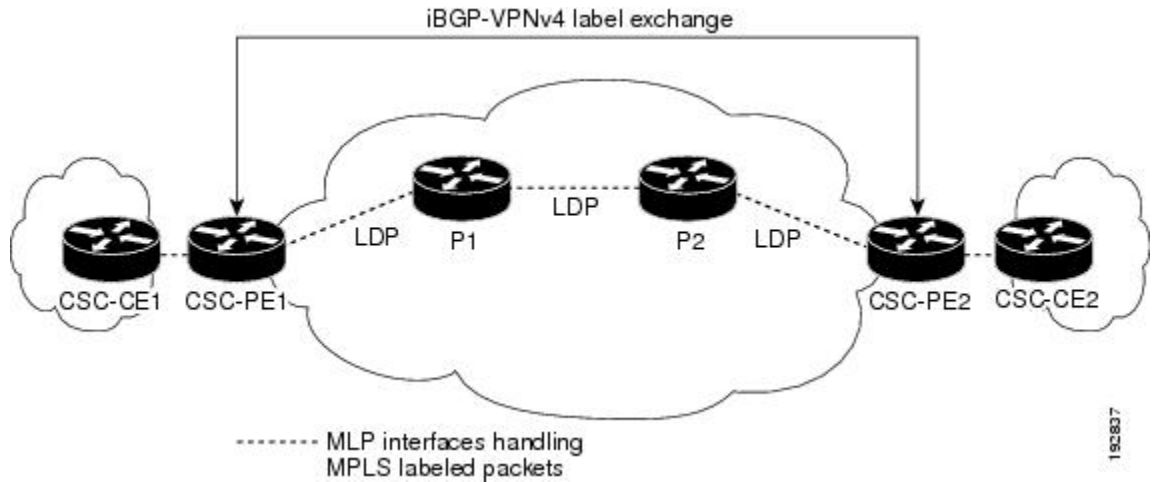

The MPLS Multilink PPP Support feature supports MLP between CSC-CE and CSC-PE links with the Label Distribution Protocol (LDP) or with external Border Gateway Protocol (eBGP) IPv4 label distribution. This feature also supports link fragmentation and interleaving (LFI) for an MPLS VPN CSC configuration. The figure below shows all MLP links that this feature supports for CSC configurations.


Figure 4: MLP Supported Links with MPLS VPN Carrier Supporting Carrier

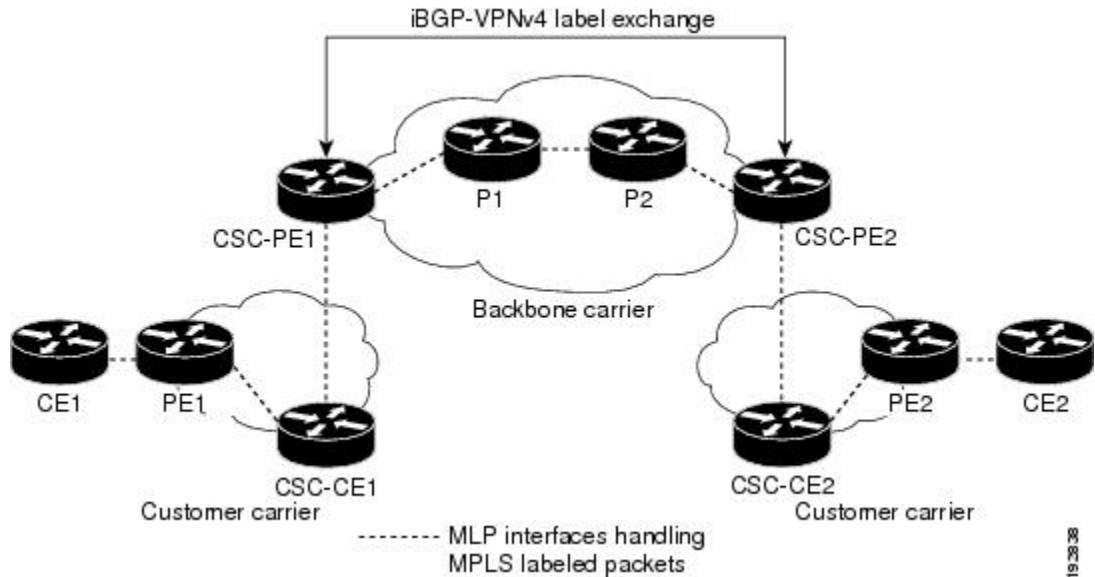

MPLS Multilink PPP Support in an Interautonomous System

The figure below shows a typical Multiprotocol Label Switching (MPLS) Virtual Private Network (VPN) interautonomous system (Inter-AS) network where Multilink PPP (MLP) is configured on the provider edge-to-customer edge (PE-to-CE) links.

Figure 5: MLP on ASBR-to-PE Links in an MPLS VPN Inter-AS Network

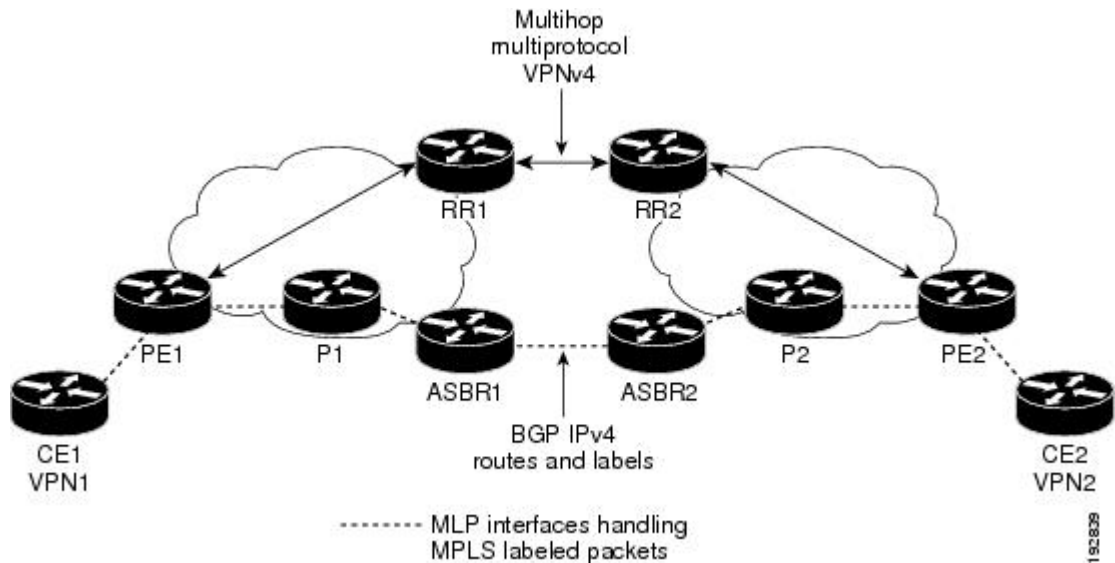

The MPLS Multilink PPP Support feature supports MLP between Autonomous System Boundary Router (ASBR) links for Inter-AS VPNs with Label Distribution Protocol (LDP) and with external Border Gateway Protocol (eBGP) IPv4 label distribution.

How to Configure MPLS Multilink PPP Support

The tasks in this section can be performed on customer edge-to-provider edge (CE-to-PE) links, PE-to-provider (P) links, P-to-P links, and Carrier Supporting Carrier (CSC) CE-to-PE links.

Enabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

Perform the following task to enable Cisco Express Forwarding or distributed Cisco Express Forwarding.

Before you begin

Multilink PPP (MLP) requires the configuration of Cisco Express Forwarding. Distributed MLP (dMLP) requires the configuration of distributed Cisco Express Forwarding.

Cisco Express Forwarding is enabled by default on most Cisco platforms running Cisco software. To find out if Cisco Express Forwarding is enabled on your platform, enter the **show ip cef** command. If Cisco Express Forwarding is enabled, you receive output that looks like this:

```
Device# show ip cef
Prefix          Next Hop          Interface
```

```

10.2.61.8/24          192.168.100.1      FastEthernet1/0/0
                    192.168.101.1      FastEthernet6/1

```

If Cisco Express Forwarding is not enabled on your platform, the output for the **show ip cef** command looks like this:

```

Device# show ip cef
%CEF not running

```

Distributed Cisco Express Forwarding is enabled by default on devices such as the Catalyst 6500 series switch, the Cisco 7500 series router, and the Cisco 12000 series Internet router.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. Enter one of the following commands:
 - **ip cef**
 - **ip cef distributed**
4. **exit**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	Enter one of the following commands: <ul style="list-style-type: none"> • ip cef • ip cef distributed Example: Device(config)# ip cef Example: Device(config)# ip cef distributed	Enables Cisco Express Forwarding switching. or Enables distributed Cisco Express Forwarding switching.
Step 4	exit Example: Device(config)# exit	Returns to privileged EXEC mode.

Creating a Multilink Bundle

Perform this task to create a multilink bundle for the MPLS Multilink PPP Support feature. This multilink bundle can reduce the number of Interior Gateway Protocol (IGP) adjacencies and facilitate load sharing of traffic.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface multilink** *group-number*
4. **ip address** *address mask* [**secondary**]
5. **encapsulation** *encapsulation-type*
6. **ppp multilink**
7. **mpls ip**
8. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	interface multilink <i>group-number</i> Example: Device(config)# interface multilink 1	Creates a multilink bundle and enters multilink interface configuration mode. <ul style="list-style-type: none"> • The <i>group-number</i> argument is the number of the multilink bundle (a nonzero number).
Step 4	ip address <i>address mask</i> [secondary] Example: Device(config-if)# ip address 10.0.0.0 255.255.0.0	Sets a primary or secondary IP address for an interface. <ul style="list-style-type: none"> • The <i>address</i> argument is the IP address. • The <i>mask</i> argument is the mask for the associated IP subnet. • The secondary keyword specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address. This command is used to assign an IP address to the multilink interface.

	Command or Action	Purpose
Step 5	encapsulation <i>encapsulation-type</i> Example: Device(config-if)# encapsulation ppp	Sets the encapsulation method as PPP to be used by the interface. <ul style="list-style-type: none"> The <i>encapsulation-type</i> argument specifies the encapsulation type.
Step 6	ppp multilink Example: Device(config-if)# ppp multilink	Enables MLP on an interface.
Step 7	mpls ip Example: Device(config-if)# mpls ip	Enables label switching on the interface.
Step 8	end Example: Device(config-if)# end	Returns to privileged EXEC mode.

Assigning an Interface to a Multilink Bundle

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **controller** {t1 | e1} *slot/port*
4. **channel-group** *channel-number* **timeslots**
5. **exit**
6. **interface serial** *slot/subslot / port : channel-group*
7. **ip route-cache** [cef | **distributed**]
8. **no ip address**
9. **keepalive** [*period* [*retries*]]
10. **encapsulation** *encapsulation-type*
11. **ppp multilink group** *group-number*
12. **ppp multilink**
13. **ppp authentication chap**
14. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example:	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.

	Command or Action	Purpose
	Device> enable	
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	controller {t1 e1} slot/port Example: Device# controller t1 0/0/1	Configures a T1 or E1 controller and enters controller configuration mode. <ul style="list-style-type: none"> • The t1 keyword indicates a T1 line card. • The e1 keyword indicates an E1 line card. • The <i>slot/port</i> arguments are the backplane slot number and port number on the interface. Refer to your hardware installation manual for the specific slot numbers and port numbers.
Step 4	channel-group channel-number timeslots Example: Device(config-controller)# channel-group 1 timeslots 1	Defines the time slots that belong to each T1 or E1 circuit. <ul style="list-style-type: none"> • The <i>channel-number</i> argument is the channel-group number. When a T1 data line is configured, channel-group numbers can be values from 0 to 23. When an E1 data line is configured, channel-group numbers can be values from 0 to 30. • The timeslots range keyword and argument specifies one or more time slots or ranges of time slots belonging to the channel group. The first time slot is numbered 1. For a T1 controller, the time slot range is from 1 to 24. For an E1 controller, the time slot range is from 1 to 31. You can specify a time slot range (for example, 1-29), individual time slots separated by commas (for example 1, 3, 5), or a combination of the two (for example 1-14, 15, 17-31).
Step 5	exit Example: Device(config-controller)# exit	Returns to global configuration mode.
Step 6	interface serial slot/subslot / port : channel-group Example: Device(config)# interface serial 0/0/1:1	Configures a serial interface for a Cisco 7500 series router with channelized T1 or E1 and enters interface configuration mode. <ul style="list-style-type: none"> • The <i>slot</i> argument indicates the slot number. Refer to the appropriate hardware manual for slot and port information.

	Command or Action	Purpose
		<ul style="list-style-type: none"> The <i>/port</i> argument indicates the port number. Refer to the appropriate hardware manual for slot and port information. The <i>:channel-group</i> argument indicates the channel group number. Cisco 7500 series routers specify the channel group number in the range of 0 to 4 defined with the channel-group controller configuration command.
Step 7	ip route-cache [cef distributed] Example: <pre>Device(config-if)# ip route-cache cef</pre>	Controls the use of switching methods for forwarding IP packets. <ul style="list-style-type: none"> The cef keyword enables Cisco Express Forwarding operation on an interface after Cisco Express Forwarding operation was disabled. The distributed keyword enables distributed switching on the interface.
Step 8	no ip address Example: <pre>Device(config-if)# no ip address</pre>	Removes any specified IP address.
Step 9	keepalive [period [retries]] Example: <pre>Device(config-if)# keepalive</pre>	Enables keepalive packets and specifies the number of times that the Cisco software tries to send keepalive packets without a response before bringing down the interface or before bringing the tunnel protocol down for a specific interface. <ul style="list-style-type: none"> The <i>period</i> argument is an integer value, in seconds, greater than 0. The default is 10. The <i>retries</i> argument specifies the number of times that the device continues to send keepalive packets without a response before bringing the interface down. Enter an integer value greater than 1 and less than 255. If you do not enter a value, the value that was previously set is used; if no value was specified previously, the default of 5 is used. <p>If you are using this command with a tunnel interface, the command specifies the number of times that the device continues to send keepalive packets without a response before bringing the tunnel interface protocol down.</p>
Step 10	encapsulation encapsulation-type Example: <pre>Device(config-if)# encapsulation ppp</pre>	Sets the encapsulation method used by the interface. <ul style="list-style-type: none"> The <i>encapsulation-type</i> argument specifies the encapsulation type. The example specifies PPP encapsulation.

	Command or Action	Purpose
Step 11	ppp multilink group <i>group-number</i> Example: Device(config-if)# ppp multilink group 1	Restricts a physical link to join only one designated multilink group interface. <ul style="list-style-type: none"> The <i>group-number</i> argument is the number of the multilink bundle (a nonzero number).
Step 12	ppp multilink Example: Device(config-if)# ppp multilink	Enables MLP on the interface.
Step 13	ppp authentication chap Example: Device(config-if)# ppp authentication chap	(Optional) Enables Challenge Handshake Authentication Protocol (CHAP) authentication on the serial interface.
Step 14	end Example: Device(config-if)# end	Returns to privileged EXEC mode.

Disabling PPP Multilink Fragmentation

Perform this task to disable PPP multilink fragmentation. PPP multilink fragmentation is enabled by default.

Enabling fragmentation reduces the delay latency among bundle links, but adds some load to the CPU. Disabling fragmentation might produce better throughput.

If your data traffic is consistently of a similar size, we recommend disabling fragmentation. In this case, the benefits of fragmentation can be outweighed by the added load on the CPU.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface** *type number*
4. **ppp multilink fragmentation disable**
5. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.

	Command or Action	Purpose
Step 2	configure terminal Example: <pre>Device# configure terminal</pre>	Enters global configuration mode.
Step 3	interface <i>type number</i> Example: <pre>Device(config)# interface serial 1/0/0</pre>	Configures an interface type and enters interface configuration mode. <ul style="list-style-type: none"> • The <i>type</i> argument indicates the type of interface to be configured. • The <i>number</i> argument specifies the port, connector, or interface card number. The numbers are assigned at the factory at the time of installation or when the interface is added to a system, and they can be displayed with the show interfaces command.
Step 4	ppp multilink fragmentation disable Example: <pre>Device(config-if)# ppp multilink fragmentation disable</pre>	Disables packet fragmentation.
Step 5	end Example: <pre>Device(config-if)# end</pre>	Returns to privileged EXEC mode.

Verifying the Multilink PPP Configuration

SUMMARY STEPS

1. **enable**
2. **show ip interface brief**
3. **show ppp multilink**
4. **show ppp multilink interface *interface-bundle***
5. **show interface *type number***
6. **show mpls forwarding-table**
7. **exit**

DETAILED STEPS

-
- Step 1** **enable**
- Enables privileged EXEC mode. Enter your password if prompted.
- Example:**

```
Device> enable
Device#
```

Step 2 show ip interface brief

Verifies logical and physical Multilink PPP (MLP) interfaces.

Example:

```
Device# show ip interface brief
```

Localrface	IP-Address	OK?	Method	Status	Prot
GigabitEthernet1/0/0	10.3.62.106	YES	NVRAM	up	up
GigabitEthernet0/0/1	unassigned	YES	NVRAM	administratively down	down
GigabitEthernet0/0/0	unassigned	YES	NVRAM	administratively down	down
GigabitEthernet0/0/1	unassigned	YES	NVRAM	administratively down	down
GigabitEthernet0/0/2	unassigned	YES	NVRAM	administratively down	down
GigabitEthernet0/1/0	unassigned	YES	NVRAM	administratively down	down
GigabitEthernet0/1/1	unassigned	YES	NVRAM	administratively down	down
GigabitEthernet0/1/2	unassigned	YES	NVRAM	administratively down	down
Serial0/1/0:1	unassigned	YES	NVRAM	administratively down	down
Serial0/1/0:2	unassigned	YES	NVRAM	administratively down	down
Serial0/1/1:1	unassigned	YES	NVRAM	up	up
Serial0/1/1:2	unassigned	YES	NVRAM	up	down
Serial0/1/3:1	unassigned	YES	NVRAM	up	up
Serial0/1/3:2	unassigned	YES	NVRAM	up	up
Multilink6	10.30.0.2	YES	NVRAM	up	up
Multilink8	unassigned	YES	NVRAM	administratively down	down
Multilink10	10.34.0.2	YES	NVRAM	up	up
Loopback0	10.0.0.1	YES	NVRAM	up	up

Step 3 show ppp multilink

Verifies that you have created a multilink bundle.

Example:

```
Device# show ppp multilink
```

```
Multilink1, bundle name is group 1
Bundle is Distributed
0 lost fragments, 0 reordered, 0 unassigned, sequence 0x0/0x0 rcvd/sent
0 discarded, 0 lost received, 1/255 load
Member links: 4 active, 0 inactive (max no set, min not set)
Serial0/0/0/:1
Serial0/0/0/:2
Serial0/0/0/:3
Serial0/0/0/:4
```

Step 4 show ppp multilink interface interface-bundle

Displays information about a specific MLP interface.

Example:

```
Device# show ppp multilink interface multilink6
```

```
Multilink6, bundle name is router
Bundle up for 00:42:46, 1/255 load
Receive buffer limit 24384 bytes, frag timeout 1524 ms
Bundle is Distributed
0/0 fragments/bytes in reassembly list
```

```

1 lost fragments, 48 reordered
0/0 discarded fragments/bytes, 0 lost received
0x4D7 received sequence, 0x0 sent sequence
Member links: 2 active, 0 inactive (max not set, min not set)
Se0/1/3:1, since 00:42:46, 240 weight, 232 frag size
Se0/1/3:2, since 00:42:46, 240 weight, 232 frag size

```

Step 5 **show interface type number**

Displays information about serial interfaces in your configuration.

Example:

```

Device# show interface serial 0/1/3:1

Serial0/1/3:1 is up, line protocol is up
Hardware is Multichannel T1
MTU 1500 bytes, BW 64 Kbit, DLY 20000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
Encapsulation PPP, LCP Open, multilink Open, crc 16, Data non-inverted
Last input 00:00:01, output 00:00:01, output hang never
Last clearing of "show interface" counters 00:47:13
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
  722 packets input, 54323 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  697 packets output, 51888 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  0 output buffer failures, 0 output buffers swapped out
  1 carrier transitions no alarm present
Timeslot(s) Used:1, subrate: 64Kb/s, transmit delay is 0 flags
Transmit queue length 25

Device# show interface serial 0/1/3:2

Serial0/1/3:2 is up, line protocol is up
Hardware is Multichannel T1
MTU 1500 bytes, BW 64 Kbit, DLY 20000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
Encapsulation PPP, LCP Open, multilink Open, crc 16, Data non-inverted
Last input 00:00:03, output 00:00:03, output hang never
Last clearing of "show interface" counters 00:47:16
Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
  725 packets input, 54618 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  693 packets output, 53180 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  0 output buffer failures, 0 output buffers swapped out
  1 carrier transitions no alarm present
Timeslot(s) Used:2, subrate: 64Kb/s, transmit delay is 0 flags
Transmit queue length 26

```

You can also use the **show interface** command to display information about the multilink interface:

Example:

```

Device# show interface multilink6

Multilink6 is up, line protocol is up
  Hardware is multilink group interface
  Internet address is 10.30.0.2/8
  MTU 1500 bytes, BW 128 Kbit, DLY 100000 usec,
    reliability 255/255, txload 1/255, rxload 1/255
  Encapsulation PPP, LCP Open, multilink Open
  Open: CDPCP, IPCP, TAGCP, loopback not set
  DTR is pulsed for 2 seconds on reset
  Last input 00:00:00, output never, output hang never
  Last clearing of "show interface" counters 00:48:43
  Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0
  Queueing strategy: fifo
  Output queue: 0/40 (size/max)
  30 second input rate 0 bits/sec, 0 packets/sec
  30 second output rate 0 bits/sec, 0 packets/sec
  1340 packets input, 102245 bytes, 0 no buffer
  Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
  0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
  1283 packets output, 101350 bytes, 0 underruns
  0 output errors, 0 collisions, 1 interface resets
  0 output buffer failures, 0 output buffers swapped out
  0 carrier transitions

```

Step 6 show mpls forwarding-table

Displays contents of the Multiprotocol Label Switching (MPLS) Label Forwarding Information Base (LFIB). Look for information on multilink interfaces associated with a point2point next hop.

Example:

```

Device# show mpls forwarding-table

Local  Outgoing  Prefix          Bytes tag  Outgoing  Next Hop
tag    tag or VC  or Tunnel Id    switched   interface
16     Untagged  10.30.0.1/32    0          Mu6       point2point
17     Pop tag    10.0.0.3/32     0          Mu6       point2point
18     Untagged  10.0.0.9/32[V]  0          Mu10      point2point
19     Untagged  10.0.0.11/32[V] 6890       Mu10      point2point
20     Untagged  10.32.0.0/8[V]  530       Mu10      point2point
21     Aggregate 10.34.0.0/8[V]  0          Mu10      point2point
22     Untagged  10.34.0.1/32[V] 0          Mu10      point2point

```

Use the **show ip bgp vpnv4** command to display VPN address information from the Border Gateway Protocol (BGP) table.

Example:

```

Device# show ip bgp vpnv4 all summary

BGP router identifier 10.0.0.1, local AS number 100
BGP table version is 21, main routing table version 21
10 network entries using 1210 bytes of memory
10 path entries using 640 bytes of memory
2 BGP path attribute entries using 120 bytes of memory
1 BGP extended community entries using 24 bytes of memory
0 BGP route-map cache entries using 0 bytes of memory
0 BGP filter-list cache entries using 0 bytes of memory
BGP using 1994 total bytes of memory
BGP activity 10/0 prefixes, 10/0 paths, scan interval 5 secs
10.0.0.3  4 100 MsgRc52 MsgSe52 TblV21 0 0 00:46:35 State/P5xRcd

```


Step 7 **exit**

Returns to user EXEC mode.

Example:

```
Device# exit
Device>
```

Configuration Examples for MPLS Multilink PPP Support

Sample MPLS Multilink PPP Support Configurations

The following examples show sample configurations on a Carrier Supporting Carrier (CSC) network. The configuration of MLP on an interface is the same for provider edge-to-customer edge (PE-to-CE) links, PE-to-provider (P) links, and P-to-P links.

Example: Configuring Multilink PPP on an MPLS CSC PE Device

The following example shows how to configure for Multiprotocol Label Switching (MPLS) Carrier Supporting Carrier (CSC) provider edge (PE) device.

```
!
mpls label protocol ldp
ip cef
ip vrf vpn2
  rd 200:1
  route-target export 200:1
  route-target import 200:1
!

controller T1 0/0/1
framing esf
clock source internal
linecode b8zs
channel-group 1 timeslots 1-24
!
interface Serial0/0:1
no ip address
encapsulation ppp

ppp multilink
ppp multilink group 1

interface Multilink1
ip vrf forwarding vpn2
ip address 10.35.0.2 255.0.0.0
no peer neighbor-route
load-interval 30
ppp multilink
ppp multilink interleave
ppp multilink group 1
mpls ip
mpls label protocol ldp
```

```

!
!
router ospf 200
 log-adjacency-changes
 auto-cost reference-bandwidth 1000
 redistribute connected subnets
 passive-interface Multilink1
 network 10.0.0.7 0.0.0.0 area 200
 network 10.31.0.0 0.255.255.255 area 200
!
!
router bgp 200
 no bgp default ipv4-unicast
 bgp log-neighbor-changes
 neighbor 10.0.0.11 remote-as 200
 neighbor 10.0.0.11 update-source Loopback0
!
 address-family vpnv4
  neighbor 10.0.0.11 activate
  neighbor 10.0.0.11 send-community extended
 bgp scan-time import 5
 exit-address-family
!
 address-family ipv4 vrf vpn2
  redistribute connected
  neighbor 10.35.0.1 remote-as 300
  neighbor 10.35.0.1 activate
  neighbor 10.35.0.1 as-override
  neighbor 10.35.0.1 advertisement-interval 5
 no auto-summary
 no synchronization
 exit-address-family

```

Example: Enabling Cisco Express Forwarding or Distributed Cisco Express Forwarding

The following example shows how to enable Cisco Express Forwarding for Multilink PPP (MLP) configurations:

```

enable
configure terminal
ip cef

```

The following example shows how to enable distributed Cisco Express Forwarding for distributed MLP (dMLP) configurations:

```

enable
configure terminal
ip cef distribute

```

Example: Creating a Multilink Bundle

The following example shows how to create a multilink bundle for the MPLS Multilink PPP Support feature:

```

Device(config)# interface multilink 1
Device(config-if)# ip address 10.0.0.0 10.255.255.255
Device(config-if)# encapsulation ppp

```

```
Device(config-if)# ppp chap hostname group 1
Device(config-if)# ppp multilink
Device(config-if)# ppp multilink group 1
Device(config-if)# mpls ip
Device(config-if)# mpls label protocol ldp
```

Example: Assigning an Interface to a Multilink Bundle

The following example shows how to create four multilink interfaces with Cisco Express Forwarding switching and Multilink PPP (MLP) enabled. Each of the newly created interfaces is added to a multilink bundle.

```
interface multilink1
 ip address 10.0.0.0 10.255.255.255
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1
 mpls ip
 mpls label protocol ldp

interface serial 0/0/0/:1
 no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1

no ip address
 encapsulation ppp
 ip route-cache cef
 no keepalive
 ppp chap hostname group 1
 ppp multilink
 ppp multilink group 1
```

