

## **Overview**

- Features, on page 1
- Package Contents, on page 4
- Serial Number Locations, on page 5
- Front Panel, on page 6
- Front Panel LEDs , on page 9
- Rear Panel, on page 12
- Rear Panel LEDs, on page 16
- Power Supply, on page 17
- Hardware Specifications, on page 18
- Product ID (PID) Numbers, on page 19
- Power Cord Specifications, on page 19

#### **Features**

The Cisco Secure Web Appliance includes the S196, S396, S696, and S696F. It helps organizations secure and control web traffic.

The Secure Web Appliance S196, S396, S696, and S696F support Cisco AsyncOS version 15.2 and later.

The following figures show the Cisco Secure Web Appliance series.

Figure 1: Cisco Secure Web Appliance S196 and S396



Figure 2: Cisco Secure Web Appliance S696 and S696F



The following table lists the features of the Secure Web Appliance S196, S396, S696, and S696F.

Table 1: Secure Web Appliance S196, S396, S696, and S696F Features

Feature	S196	S396	S696	S696F			
Form factor	1 RU		2 RU				
Rack mount	Standard 19-inch (48.3 cm) 4-post EIA rack						
Airflow	Front to rear						
	Cold aisle to hot aisle						
Pullout asset card	Displays the serial number						


Feature	S196	S396	S696	S696F				
Grounding holes	Two threaded hole	s for dual-hole grou	nding lug					
	Use is optional; the supported AC power supplies have internal grounding, so no additional chassis grounding is required.							
Locking faceplate	Optional							
Unit identification button	On front panel							
Power button	On front panel							
Memory	16-GB RAM	64-GB RAM	128-GB RAM					
RDIMMs Internal component only; not field-replaceable	One 16-GB SRx4 3200-MHz DIMM (8 Gb)	3200-MHz DIMM   3200-MHz DIMM   (8 Gb)						
Management ports	One (M1)							
	M2 is not supporte	d.						
Proxy ports	Two (P1 and P2)							
Traffic ports	Two (T1 and T2)							
Remote power cycling (RPC)	Accessed through	the 1-Gb dedicated	port					
USB ports	Two USB 3.0 Type	e A						
	Note Not supported. Do not connect any external devices to the chassis.							
SFP+ ports	No			Six fiber optic				
Supported SFP+ Note	_			SFP-10G-SR (10 Gb)				
Copper SFPs are not supported.				Note SFP-10G-SR has been qualified by Cisco. Use only Cisco-qualified SFPs. We recommend you use SFP-10G-SR in the secure web appliance interface and the corresponding switch interface.				
Serial console port	One 1-Gb RJ45 serial port running RS-232 (RS-232D TIA-561)							

Feature	S196	S396	S696	S696F			
AC power supply	Two						
Note Do not mix power supply type or wattage between models.	'   Hot awannahla and radundant as   +						
Fans	Six fans for front-to-rear cooling Internal component only; not field-replaceable. If one fan fails, you must send your chassis for return material authorization (RMA).						
Storage	Two 1.2-TB SAS HDDs RAID 1, hot-swappable	Four 1.2-TB SAS HDDs RAID 10, hot-swappable	Ten 1.2-TB SAS F				

# **Package Contents**

The following figure shows the package contents for the Secure Web Appliance S196, S396, S696, and S696F. Note that the contents are subject to change and your exact contents might contain additional or fewer items.

Figure 3: Secure Web Appliance Package Contents

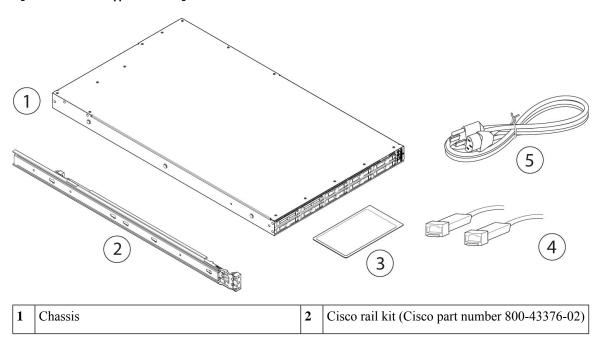

3 Cisco Secure Web Appliance S196, S396, S696, S696F

This document contains URLs that point to the hardware installation guide, regulatory compliance and safety information guide, the getting started guide, and a QR code that points to the secure web appliance Documentation Portal.

Two 10-Gb SFP+ fiber optic transceivers with cables


#### Note

Supported on the S696F. You cannot mix SFP transceiver types in the same chassis. 1-Gb SFPs are not supported on the S696F.

#### **Serial Number Locations**

The Serial Number (SN) and the Media Access Control (MAC) address for the Secure Web Appliance S196, S396, S696, and S696F are printed on the top of the pullout asset card located on the front panel as shown in the following figure of the Secure Web Appliance S196. The PID (Product ID) and VID (Version ID) are printed on the back of the pullout asset card.

Figure 4: Serial Number on Pullout Asset Card

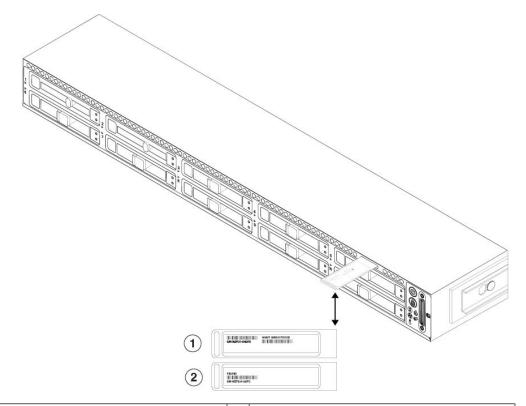

1 Front of the pullout asset tag with the SN and MAC address

Bottom of the pullout asset tag with the PID and VID numbers


The serial number is also on the label on the cover of the chassis as shown in the following figure.



Caution

The cover latch on the top of the chassis cover is not supported. There are no internal field-replaceable parts in the Secure Web Appliance S196, S396, S696, and S696F.

Figure 5: Serial Number Location on Cover

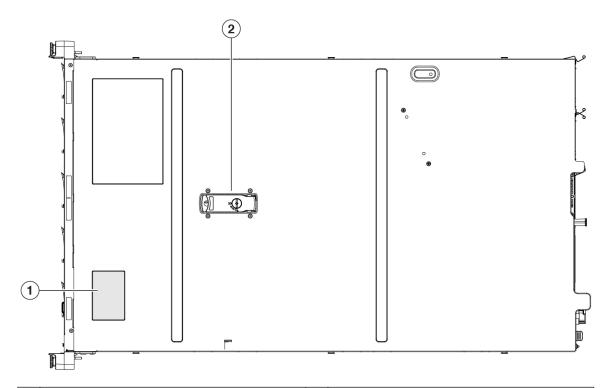

1 Chassis compliance labels with the SN, MAC address, etc. and a QR code that points to the Documentation Portal

#### Note

Scan the QR code to go to the Documentation Portal, which has links to the product page, hardware installation guide, the regulatory and compliance guide, and the getting started guide.


Cover latch

Not supported

#### **Front Panel**


The following figure shows the front panel features and disk-drive configuration for the Secure Web Appliance S196. See Front Panel LEDs, on page 9 for a description of the LEDs.

Figure 6: Secure Web Appliance S196 Front Panel

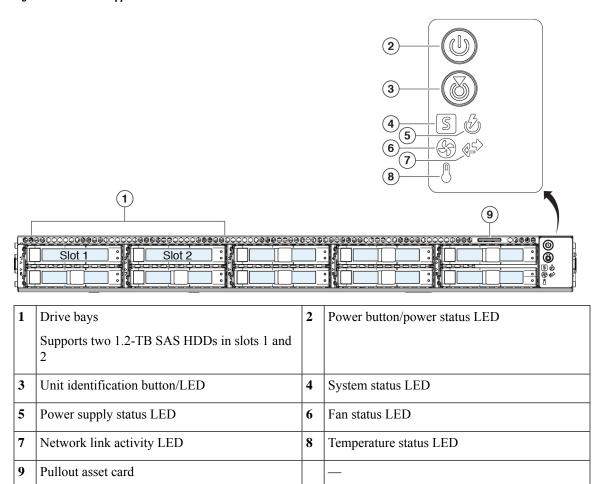

The following figure shows the front panel features and disk-drive configuration for the Secure Web Appliance S396. See Front Panel LEDs, on page 9 for a description of the LEDs.

Figure 7: Secure Web Appliance S396 Front Panel

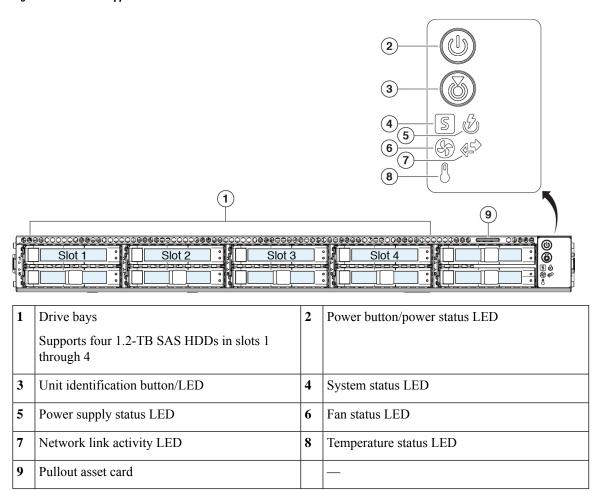

The following figure shows the front panel features and disk-drive configuration for the Secure Web Appliance S695 and S695F. See Front Panel LEDs, on page 9 for a description of the LEDs.


**(2**) (3) 4 5 6 (1) Drive bays Power button/power status LED Supports ten 1.2-TB SAS HDDs in slots 1 through 10 3 Unit identification button/LED 4 System status LED 5 Fan status LED 6 Temperature status LED 7 8 Power supply status LED Network link activity LED Pullout asset card

Figure 8: Secure Web Appliance S696 and S696F Front Panel

### **Front Panel LEDs**

The following figure shows the front panel LEDs for the Secure Web Appliance S196, S396, S696, and S696F, and describes their states.

Figure 9: Front Panel LEDs

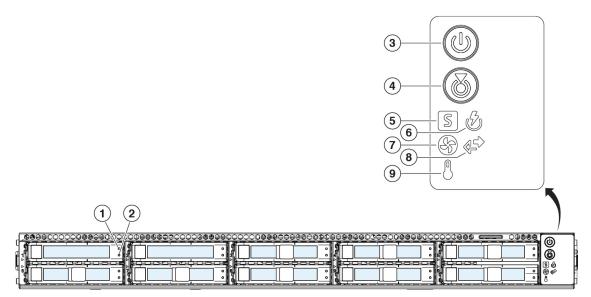

- 1 Drive fault LED:
  - Off—The drive is operating properly.
  - Amber—Drive fault detected.
  - Amber, flashing—The drive is rebuilding.
  - Amber, flashing with 1-second interval—Drive locate function activated in the software.
- 2 Drive activity LED:
  - Off—There is no drive in the drive tray (no access, no fault).
  - Green—The drive is ready.
  - Green, flashing—The drive is reading or writing data.


- 3 Power LED:
  - Off—There is no AC power to the chassis.
  - Amber—The chassis is in standby mode.
  - Green—The chassis is in main power mode. Power is supplied to all components.
- Unit identification LED:
  - Off—The unit identification function is not in use.
  - Blue, flashing—The unit identification function is activated.

5	System status LED:	6	Power supply status LED:
	<ul> <li>Green—The chassis is running in normal operating condition.</li> </ul>		Green—All power supplies are operating normally.
	<ul> <li>Green, flashing—The chassis is performing system initialization and memory check.</li> </ul>		Amber—One or more power supplies are in a degraded operational state.
	<ul> <li>Amber—The chassis is in a degraded operational state (minor fault).</li> </ul>		Amber, flashing—One or more power supplies are in a critical fault state.
	• Power supply redundancy is lost.		
	• CPUs are mismatched.		
	• At least one CPU is faulty.		
	• At least one DIMM is faulty.		
	<ul> <li>At least one drive in a RAID configuration failed.</li> </ul>		
	• Amber, 2 flashes—There is a major fault with the system board.		
	• Amber, 3 flashes—There is a major fault with the DIMMs.		
	• Amber, 4 flashes—There is a major fault with the CPUs.		
7	Fan status LED:	8	Network link activity LED:
	Green—All fans are operating properly.		Off—The Ethernet port link is idle.
	<ul> <li>Amber, flashing—One or more fans breached the nonrecoverable threshold.</li> </ul>		Green—One or more Ethernet ports are link-active, but there is no activity.
			Green, flashing—One or more Ethernet ports are link-active with activity.
9	Temperature status LED:		_
	<ul> <li>Green—The chassis is operating at normal temperature.</li> </ul>		
	• Amber—One or more temperature sensors breached the critical threshold.		
	• Amber, flashing—One or more temperature sensors breached the nonrecoverable threshold.		

### **Rear Panel**

The following figure shows the rear panel of the Secure Web Appliance S196 and S396. See Rear Panel LEDs, on page 16 for a description of the LEDs.

Figure 10: Secure Web Appliance S196 and S396 Rear Panel

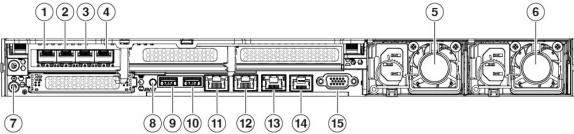


	8 9 10 11 12 13	14	(15)
1	Proxy port 1 (P1)	2	Proxy port 2 (P2)
	Connects to the network for both incoming and outgoing traffic.		When P1 and P2 are both enabled, you must connect P1 to the internal network and P2 to the internet.
			Note You can connect P1 and P2 to an L4 switch, WCCP router, or network switch.
3	Traffic monitor port 1 (T1)	4	Traffic monitor port 2 (T2)
	Use for Duplex Ethernet tap; one cable for all incoming and outgoing traffic.		Use for Simplex Ethernet tap; one cable connected to T1 for all packets going to the internet. and one cable connected to T2 for all packets coming from the internet.
5	1050-W AC power supply (PSU 2)	6	1050-W AC power supply (PSU 1)
7	Threaded holes for dual-hole grounding lug Use is optional. The supported AC power supplies have internal grounding, so no additional chassis grounding is required.	8	Unit identification button
9	USB 3.0 Type A (USB 2)  Note  Not supported. Do not connect any external devices to the chassis.	10	USB 3.0 Type A (USB 1)  Note  Not supported. Do not connect any external devices to the chassis.
11	Management interface (M1) Restricted to management use only	12	Management interface (M2)  Not in use

13	RPC port (RPC)	14	Serial console port (Console)
	Used for remote power cycling		RJ-45 connector that directly connects a management computer to the appliance.
15	VGA video port (DB-15 connector)		_
	Not supported		

The following figure shows the rear panel of the Secure Web Appliance S696. See Rear Panel LEDs, on page 16 for a description of the LEDs.

Figure 11: Secure Web Appliance S696 Rear Panel

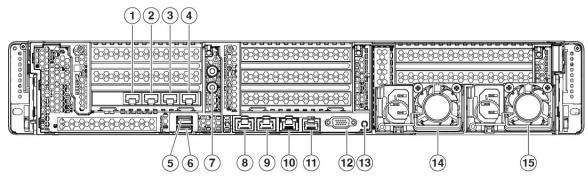


1	Proxy port 1 (P1)	2	Proxy port 2 (P2)
	Connects to the network for both incoming and outgoing traffic.		When P1 and P2 are both enabled, you must connect P1 to the internal network and P2 to the internet.
			Note You can connect P1 and P2 to an L4 switch, WCCP router, or network switch.
3	Traffic monitor port 1 (T1)	4	Traffic monitor port 2 (T2)
	Use for Duplex Ethernet tap; one cable for all incoming and outgoing traffic.		Use for Simplex Ethernet tap; one cable connected to T1 for all packets going to the internet. and one cable connected to T2 for all packets coming from the internet.
5	USB 3.0 Type A (USB 1)	6	USB 3.0 Type A (USB 2)
	Note Not supported. Do not connect any external devices to the chassis.		Note Not supported. Do not connect any external devices to the chassis.
7	Threaded holes for dual-hole grounding lug	8	Management interface 1 (MGMT 1)
	Use is optional. The supported AC power supplies have internal grounding, so no additional chassis grounding is required.		Restricted to management use only

9	Management interface 2 (MGMT 2)	10	RPC port (RPC)
	Not supported		Used for remote power cycling
11	Serial console port	12	VGA video port (DB-15 connector)
	RJ-45 connector that directly connects a management computer to the appliance.		Not supported
13	Unit identification button	14	1050-W AC power supply (PSU 1)
15	1050-W AC power supply (PSU 2)		_

The following figure shows the rear panel of the Secure Web Appliance S696F. See Rear Panel LEDs, on page 16 for a description of the LEDs.

Figure 12: Secure Web Appliance S696F Rear Panel

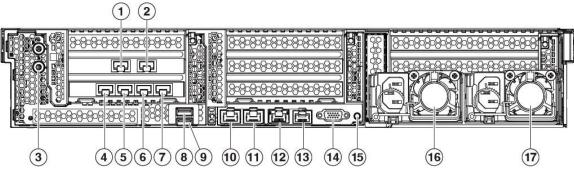


	3 436789 10 11 12	(13	) (14) (15) (16) (17)
1	Management interface 1 (MGMT 1)	2	Management interface 2 (MGMT 2)
	Restricted to management use only		Not in use
	Note The SFP-10G-SR (10 Gb) is the only SFP+ transceiver qualified by Cisco. Use only Cisco-qualified SFPs.  Note Copper SFPs are not supported.		Caution  Do not install any SFPs into this interface.
3	Threaded holes for dual-hole grounding lug Use is optional; the supported AC power supplies have internal grounding, so no additional chassis grounding is required.	4	Proxy port 1 (P1)  Connects to the network for both incoming and outgoing traffic.  The SFP-10G-SR (10 Gb) is the only SFP+ transceiver qualified by Cisco. Use only Cisco-qualified SFPs.  Note  Copper SFPs are not supported.

5	Proxy port 2 (P2)	6	Traffic monitor port 1 (T1)
	When P1 and P2 are both enabled, you must connect P1 to the internal network and P2 to the internet.		Use for Duplex Ethernet tap; one cable for all incoming and outgoing traffic.
	Note You can connect P1 and P2 to an L4 switch, WCCP router, or network switch.  10-Gigabit Ethernet SFP+ support		Note The SFP-10G-SR (10 Gb) is the only SFP+transceiver qualified by Cisco. Use only Cisco-qualified SFPs.
	The SFP-10G-SR (10 Gb) is the only SFP+ transceiver qualified by Cisco. Use only Cisco-qualified SFPs.		Note Copper SFPs are not supported.
	Note Copper SFPs are not supported.		
7	Traffic monitor port 2 (T2)	8	USB 3.0 Type A (USB 1)
	Use for Simplex Ethernet tap; one cable connected to T1 for all packets going to the internet. and one cable connected to T2 for all packets coming from the internet.		Note Not supported. Do not connect any external devices to the chassis.
	10-Gigabit Ethernet SFP+ support		
	Note The SFP-10G-SR (10 Gb) is the only SFP+ transceiver qualified by Cisco. Use only Cisco-qualified SFPs.		
	Note Copper SFPs are not supported.		
9	USB 3.0 Type A (USB 2)	10	Data interface (DATA 1)
	Note Not supported. Do not connect any external devices to the chassis.		Not supported
11	Data interface (DATA 2)	12	RPC port (RPC)
	Not supported		Used for remote power cycling
13	Serial console port (Console)	14	VGA video port (DB-15 connector)
	RJ-45 connector that directly connects a management computer to the appliance.		Not supported
15	Unit identification button	16	1050-W AC power supply (PSU 1)
17	1050-W AC power supply (PSU 2)		_

#### **Rear Panel LEDs**

The following figure shows the rear panel LEDs of the Secure Web Appliance S196 and describes their states. The Secure Web Appliance S396 is the same except it has two power supplies. The Secure Web Appliance S696 and S696F have the same LEDs except that these models have more data interfaces; the speed and status LED descriptions are the same.

Figure 13: Rear Panel LEDs

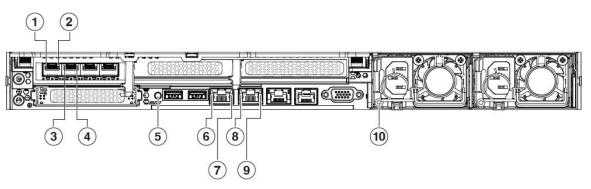

1	Data interface link speed:  • Off—Link speed is 100 Mbps.	2	Data interface link status:  • Off—No link is present.
	Amber—Link speed is 1 Gbps.		• Green—Link is active.
	Green—Link speed is 10 Gbps.		<ul> <li>Green, flashing—Traffic is present on the active link.</li> </ul>
3	Data interface link speed:  • Off—Link speed is 100 Mbps.	4	Data interface link status:  • Off—No link is present.
	<ul><li> Amber—Link speed is 1 Gbps.</li><li> Green—Link speed is 10 Gbps.</li></ul>		<ul> <li>Green—Link is active.</li> <li>Green, flashing—Traffic is present on the active link.</li> </ul>
5	<ul> <li>Rear unit identification:</li> <li>Off—The unit identification function is not in use.</li> <li>Blue, flashing—The unit identification function is activated.</li> </ul>	6	Management interface link speed:  Off—Link speed is 100 Mbps.  Amber—Link speed is 1 Gbps.  Green—Link speed is 10 Gbps.
7	Management interface link status:  • Off—No link is present.  • Green—Link is active.  • Green, flashing—Traffic is present on the active link.	4	Management interface link speed:  Off—Link speed is 100 Mbps.  Amber—Link speed is 1 Gbps.  Green—Link speed is 10 Gbps.

5	Management interface link status:	6	Power supply:
	<ul> <li>Off—No link is present.</li> <li>Green—Link is active.</li> <li>Green, flashing—Traffic is present on the active link.</li> </ul>		<ul> <li>Off—No AC input (12-V main power off; 12-V standby power off)</li> <li>Green, flashing—12-V main power off; 12-V standby power on.</li> <li>Green—12-V main power on; 12-V standby power on.</li> </ul>
			<ul> <li>Amber, flashing—Warning threshold detected but 12-V main power on.</li> <li>Amber—Critical error detected; 12-V main power off ( for example, overcurrent, overvoltage, or overtemperature failure).</li> </ul>

# **Power Supply**

The power supply is hot-swappable. The Secure Web Appliance ships with two power supplies thus providing redundancy.



Note

Make sure that one power supply is always active.

The following table lists the specifications for the 1050-W AC power supply (Cisco part number 341-0638-03).

#### **Table 2: 1050-W Power Supply Specifications**

Description	Specification
AC input voltage range	Nominal range: 100 to 120 V AC, 200 to 240 V AC
	Range: 90–132 V AC, 180–264 V AC
AC input frequency	Nominal range: 50–60 Hz
	Range: 47–63 Hz
Maximum AC input current	12.5 A peak at 100 V AC
	6.0 A peak at 208 V AC
Maximum input volt amperes	1250 VA at 100 V AC
Maximum output power for each power supply	1050 W
Maximum inrush current	15 A (subcycle duration)
Maximum hold-up time	12 ms at 1050 W
Power supply output voltage	12 V DC

Description	Specification
Power supply standby voltage	12 V DC
Efficiency rating	Climate Savers Platinum Efficiency (80 Plus Platinum certified)
Form factor	RSP2
Input connector	IEC320 C14

# **Hardware Specifications**

The following table lists the hardware specifications for the Secure Web Appliance S196, S396, S696, and S696F.

Table 3: S196, S396, S696, and S696F Hardware Specifications

Specification	S196	S396	S696	S696F		
Weight	31 lb (14.06 kg)	33.5 lb (15.19 kg)	30.8 lb (13.97 kg)	52.2 lb (23.68 kg)		
Dimensions (H x W x D)	1.7 x 16.89 x 29.8 in 75.6 cm)	ches (4.32 x 43.0 x	3.4 x 16.9 x 29.5 inc 74.93 cm)	ches (8.64 x 42.92 x		
Temperature	Operating: 41 to 95°	F (5 to 35°C)	•			
	Derate the maximum sea level.	temperature by 1°C	for every 1000 ft (305	5 m) of altitude above		
	Nonoperating: –40 to	o 149°F (–40 to 65°C	)			
	When stored or trans	ported				
Relative humidity	Operating: 10 to 90%	6 noncondensing				
	Nonoperating: 5 to 93% noncondensing					
Altitude Operating: 0 to 10,000 ft						
	Nonoperating: 0 to 4	0,000 ft				
	When stored or trans	ported				
Sound power level	5.5 Bels (measure A	-weighted per ISO77	79 LWAd)			
	Operation at 73°F (23°C)					
Sound pressure level 40 dBa (measure A-weighted per ISO7779 LpAM)						
Operation at 73°F (23°C)						

### **Product ID (PID) Numbers**

The following table lists the PIDs associated with Secure Web Appliance S196, S396, S696, and S696F. The spare components are ones that you can order and replace yourself. If any internal components fail, you must get an RMA for the entire chassis including the SFPs and SFP cables. Remove the drives and power supplies before you send the chassis for RMA. See the Cisco Returns Portal for more information.

Table 4: \$196, \$396, \$696, and \$696F PIDs

PID	Description
WSA-S196-K9	Cisco Secure Web Appliance S196 chassis 1 RU
WSA-S396-K9	Cisco Secure Web Appliance S396 chassis 1 RU
WSA-S696-K9	Cisco Secure Web Appliance S696 chassis 2 RU
WSA-S696F-K9	Cisco Secure Web Appliance S696F chassis 2 RU
UCS-HD12TB10K12N	S196, S396, S696, S696F HDD
UCS-HD12TB10K12N=	S196, S396, S696, S696F HDD (spare)
UCSC-PSU1-1050W	S196, S396, S696, S696F AC power supply
UCSC-PSU1-1050W=	S196, S396, S696, S696F AC power supply (spare)
UCSC-RAIL-M6	S195, S395, S695, S695F rail kit
UCSC-RAIL-M6=	S196, S396, S696, S696F rail kit (spare)
UCSC-BZL-C220M6	S196 and S396 1 RU locking faceplate
UCSC-BZL-C220M6=	S196 and S396 1 RU locking faceplate (spare)
UCSC-BZL-C240M6	S696 and S696F 2 RU locking faceplate
UCSC-BZL-C240M6=	S696 and S696F 2 RU locking faceplate (spare)
SFP-10G-SR	C696F 10-Gb SFP
SFP-10G-SR=	C696F 10-Gb SFP (spare)

## **Power Cord Specifications**


Each power supply has a separate power cord. Standard power cords or jumper power cords are available for connection to the Secure Web Appliance. The jumper power cords for use in racks are available as an optional alternative to the standard power cords.

If you do not order the optional power cord with the system, you are responsible for selecting the appropriate power cord for the product. Using a incompatible power cord with this product may result in electrical safety

hazard. Orders delivered to Argentina, Brazil, and Japan must have the appropriate power cord ordered with the system.


The following power cords and jumper cords are supported.

Figure 14: Argentina (CAB-250V-10A-AR)

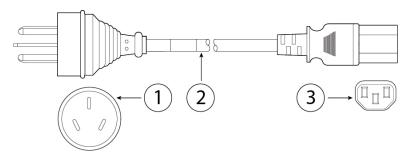


1	Plug: IRAM 2073	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320/C13		_

Figure 15: Australia (CAB-9K10A-AU)

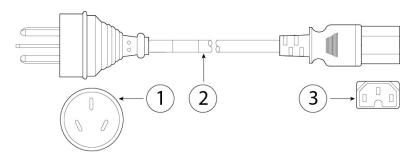


1	Plug: A.S. 3112-2000	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320/C15		_

Figure 16: Brazil (PWR-250V-10A-BZ)

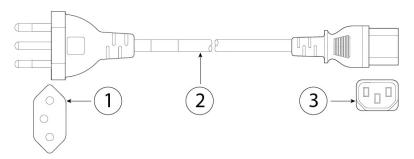


1	Plug: NBR 14136	2	Cord set rating: 10 A, 250 V	
3	Connector: IEC 60320/C13		_	

Figure 17: Cabinet Jumper (CAB-C13-C14-2M)

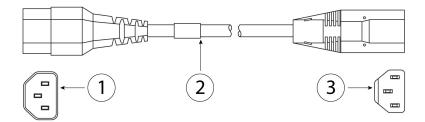


1	Plug: SS10A	2	Cord set rating: 10A, 250V
3	Connector: HS10S, C-13 to C-14		_

Figure 18: Cabinet Jumper (CAB-C13-C14-AC)

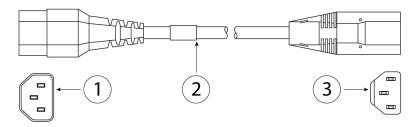


1	Plug: SS10A	2	Cord set rating: 10 A, 250 V
3	Connector: HS10S, C-13 to C-14 (recessed receptacle)		

Figure 19: Cabinet Jumper (CAB-C13-CBN)

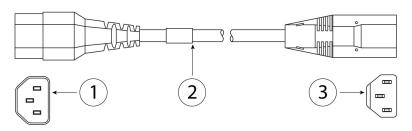


1	Plug: SS10A	2	Cord set rating: 10 A, 250 V
3	Connector: HS10S, C-13 to C-14		_

#### Figure 20: China (CAB-250V-10A-CH)

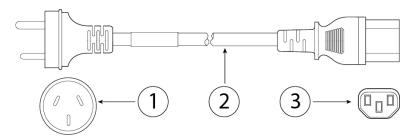


1	Plug: GB2099.1/2008	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320/C13		_

Figure 21: Europe (CAB-9K10A-EU)

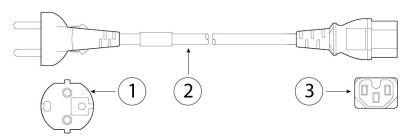


1	Plug: CEE 7/7 (M2511)	2	Cord set rating: 10 A/16 A, 250 V
3	Connector: IEC 60320/C15 (VSCC 15)		_

Figure 22: India (CAB-250V-10A-ID)

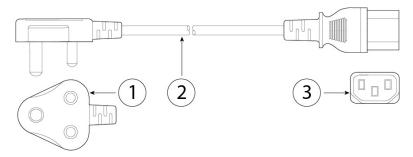


1	Plug: IS 6538-1971	2	Cord set rating: 16 A, 250 V
3	Connector: IEC 60320-C13		_

Figure 23: Israel (CAB-250V-10A-IS)

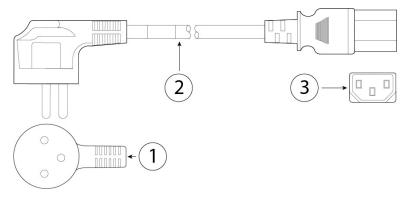


1	Plug: SI-32	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320-C13		_

Figure 24: Italy (CAB-9K10A-IT)

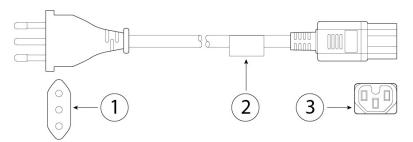


1	Plug: CEI 23-16/VII (I/3G)	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320/C15		_
	(EN 60320/C15M)		

Figure 25: Japan (CAB-JPN-3PIN)

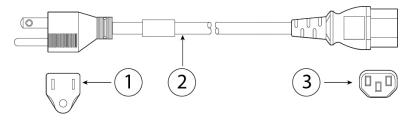


1	Plug: JIS 8303	2	Cord set rating: 12 A, 125 V
3	Connector: IEC 60320/C13		_

Figure 26: Japan (CAB-C13-C14-2M-JP)

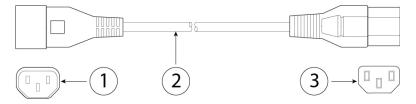


1	Plug: EN 60320-2-2/E	2	Cord set rating: 10 A, 250 V
3	Connector: EN 60320/C13 to C14		

Figure 27: Korea (CAB-9K10S-KOR)

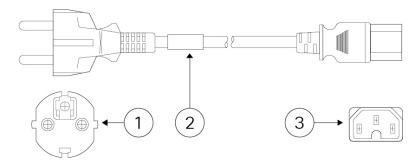


]	1	Plug: EL211 (KSC 8305)	2	Cord set rating: 10 A, 250 V	
3	3	Connector: IEC 60320/C15		_	

Figure 28: North America (CAB-9K12A-NA)

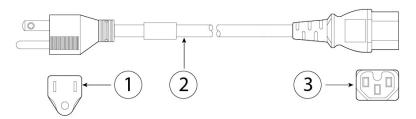


1	Plug: NEMA5-15P	2	Cord set rating: 13 A, 125 V
3	Connector: IEC 60320/C15		_

Figure 29: North America (CAB-N5K6A-NA)

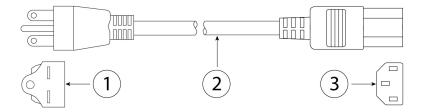


1	Plug: NEMA6-15P	2	Cord set rating: 10 A, 125 V
3	Connector: IEC 60320/C13		_

Figure 30: North America (CAB-AC-L620-C13)

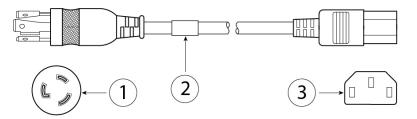


1	Plug: NEMA L6-20 (molded twist lock)	2	Cord set rating: 13 A, 250 V
3	Connector: IEC 60320/C13		_

Figure 31: Switzerland (CAB-9K10A-SW)

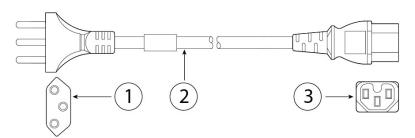


1	Plug: SEV 1011 (MP232-R)	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320/C15		_

Figure 32: Taiwan (CAB-ACTW)

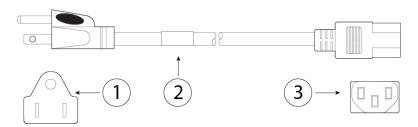

1	Plug: EL 302 (CNS10917)	2	Cord set rating: 10 A, 125 V
3	Connector: IEC 60320/C13		_

Figure 33: United Kingdom (CAB-9K10A-UK)

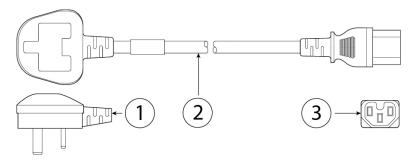

1	Plug: BS1363A/SS145	2	Cord set rating: 10 A, 250 V
3	Connector: IEC 60320/C15		_