



## Overview

---

This chapter provides an overview of the Cisco Nexus 7000 Series switch and includes the following sections:

- [Cisco Nexus 7000 Series, on page 1](#)
- [Preparing the Site, on page 23](#)
- [Safety Guidelines, on page 23](#)
- [Installation and Connection Guidelines, on page 23](#)
- [Managing the System Hardware, on page 24](#)
- [Replacing Components, on page 24](#)


## Cisco Nexus 7000 Series

The Cisco Nexus 7000 Series switches are multiprotocol-capable, high-density, and high-performance switches that incorporate Ethernet/IP, virtualization, Layer 4 to Layer 7 services, and low-latency interconnect (LLI) technologies. The Cisco Nexus 7000 Series models are described in the following topics:

### Cisco Nexus 7004 Switch

The Cisco Nexus 7004 chassis has four slots that allow for one or two supervisor modules and up to two I/O modules. Additionally, the chassis holds a fan tray, up to four power supplies, and cable management frames. Optionally, you can include a door and air filter. [Figure 1: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7004 Chassis, on page 2](#) identifies these features as seen from the front of the chassis.

Figure 1: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7004 Chassis

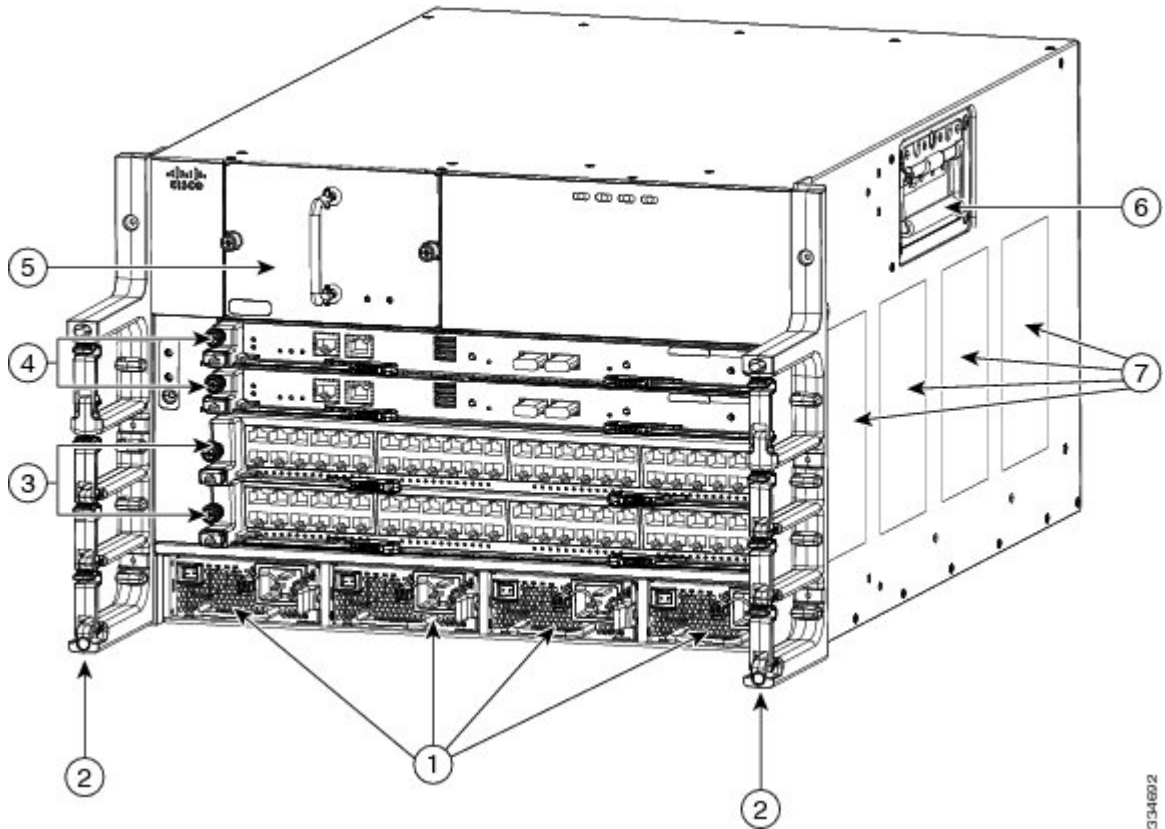

1	Air intake areas for up to four AC or DC power supplies (N7K-AC-3KW/N7K-DC-3KW/N7K-HV-3.5KW) or blank filler plates in place of missing power supplies to maintain the designed airflow.	5	Fan tray
2	Cable management side frames	6	Handles used for moving the chassis (reduce the chassis weight to less than 120 lbs (54.4 kg) in order to use these handles to lift the chassis)
3	I/O or NAM modules (1 to 2 modules in slots 3 to 4).	7	Air intake areas for supervisor and I/O modules
4	Supervisor modules (1 or 2 modules in slots 1 and 2). These modules are of only one of the following types (if installing two supervisor modules, both modules must be the same type with the same amount of memory): <ul style="list-style-type: none"> <li>• Supervisor 2 (N7K-SUP2)</li> <li>• Supervisor 2 Enhanced (N7K-SUP2E)</li> </ul>		



**Note** Figure 1: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7004 Chassis, on page 2 shows the Cisco Nexus 7004 chassis as it appears when it is fully configured before including cables for management and network connections. The systems that are not fully configured with the maximum number of supervisor modules, I/O modules, or power supply units have blank panels installed in place of the missing components to maintain the designed airflow for system cooling.

The I/O module slots hold one or two of the following types of modules:

- F2 Series I/O modules
  - 48-port 1-/10-Gigabit SFP+ with XL option and FEX support (N7K-F248XP-25 and N7K-F248XP-25E<sup>1</sup>)
  - 48-port 1-/10-GBASE-T with XL option (N7K-F248XT-25E)
- F3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP/SFP+ (N7K-F348XP-25)
  - 12-port 40-Gigabit Ethernet QSFP+ (N7K-F312FQ-25)
  - 6-port 100-Gigabit Ethernet CPAK (N7K-F306CK-25)
- M1 Series I/O modules
  - 48-port 10/100/1000 with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet with XL option (N7K-M108X2-12L)
- M2 Series I/O modules
  - 24-port 10-Gigabit Ethernet with XL option and FEX support (N7K-M224XP-23L)
  - 6-port 40-Gigabit Ethernet with XL option (N7K-M206XP-23L)
  - 2-port 100-Gigabit Ethernet with XL option (N7K-M202XP-23L)
- M3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP+ (N7K-M348XP-25L)
  - 24-port 40-Gigabit Ethernet QSFP+ (N7K-M324FQ-25L)
- Network Analysis modules (N7K-SM-NAM-K9)



**Note** Starting with Cisco NX-OS Release 8.0(1), the following I/O modules are not supported:

- 48-port 1-/10-Gigabit SFP+ (N7K-F248XP-25)
- 48-port 10/100/1000 with XL option (N7K-M148GT-11L)
- 48-port 1-Gigabit Ethernet with XL option (N7K-M148GS-11L)
- 32-port 10-Gigabit Ethernet with XL option and FEX support (N7K-M132XP-12L)
- 8-port 10-Gigabit Ethernet with XL option (N7K-M108X2-12L)

<sup>1</sup> The Cisco Nexus F2-Series 48-port 1/10-Gigabit SFP+ module supports all of the standard features of F2 modules and it functions like an F2-series module with Layer 2 and Layer 3 enabled. These modules also support IPv6 DSCP-to-Queue mapping.

You must install the Cisco Nexus 7004 chassis in a two- or four-post 19-inch EIA rack that meets the following specifications:

- Mounting rails that conform to the English universal hole spacing as specified in ANSI/EIA-310-D-1992.
- The minimum vertical rack space is 12.25 inches (31.1 cm) or 7 rack units (RU) for a single chassis installation.

Install the Cisco Nexus 7004 chassis at the lowest possible RU on the rack for stability. If there are other devices in the rack, install the heavier chassis below the lighter chassis.



---

**Danger** Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048


---

## Cisco Nexus 7009 Switch

The Cisco Nexus 7009 chassis has 9 slots that allow for one or two supervisor modules and up to seven I/O modules. Additionally, the chassis also holds up to five fabric modules, one fan tray, up to two power supplies, and cable management frames. The chassis also has a front-mount bracket (an alternative center-mount bracket can be ordered) and four positioning handles (two on each side) that you use to position the chassis after you place it on a mechanical lift or bottom-support brackets. Optionally, you can include a door and air intake frame.


[Figure 2: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7009 Chassis, on page 5](#) identifies the standard features on the front and sides of the Cisco Nexus 7009 chassis, and [Figure 3: Standard Hardware Features on the Rear of a Cisco Nexus 7009 Chassis, on page 6](#) identifies the standard features on the rear of the chassis.

Figure 2: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7009 Chassis

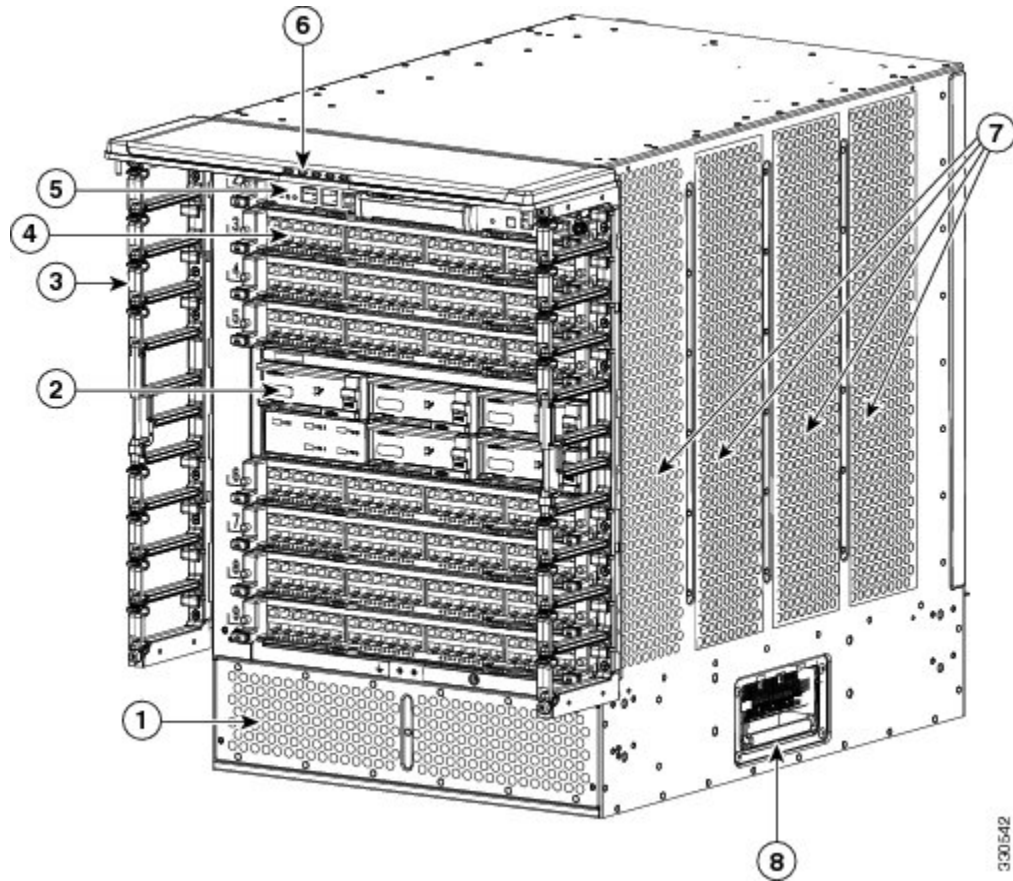

1	Air intake area for power supply units	5	Supervisor modules (1 or 2 modules in slots 1 and 2). These modules are of only one of the following types (if installing two supervisor modules, both modules must be the same type with the same amount of memory): <ul style="list-style-type: none"> <li>• Supervisor 1 (N7K-SUP1)</li> <li>• Supervisor 2 (N7K-SUP2)</li> <li>• Supervisor 2 Enhanced (N7K-SUP2E)</li> </ul>
2	Fabric modules (up to 5) (N7K-C7009-FAB-2)	6	Cable management top hood with LEDs
3	Cable management side frame	7	Air intake areas for supervisor, I/O, and fabric modules
4	I/O or NAM modules (1 to 7 modules in slots 3 to 9).	8	Handles used for adjusting placement of chassis on mechanical lift

Figure 3: Standard Hardware Features on the Rear of a Cisco Nexus 7009 Chassis

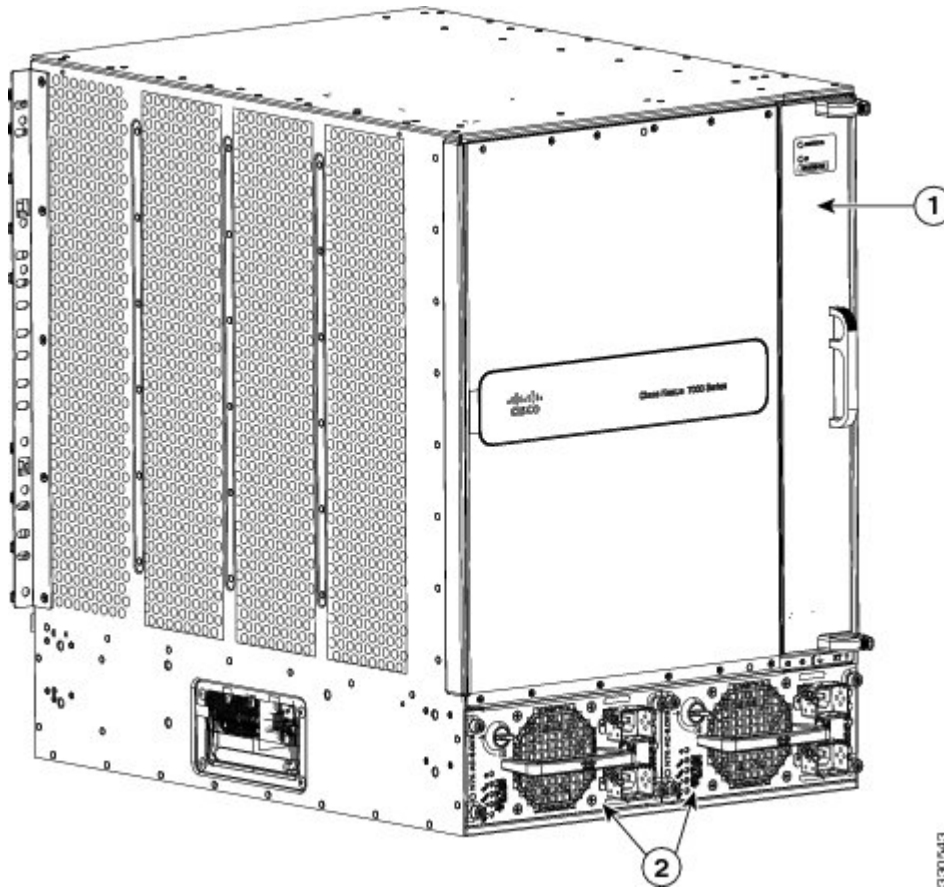

1	Fan tray (1)	2 Power supplies (1 or 2)—these modules are a combination of the following: <ul style="list-style-type: none"> <li>• 6 kW AC power supply (N7K-AC-6.0KW)</li> <li>• 7.5 kW AC power supply (N7K-AC-7.5KW-INT [international plugs])(N7K-AC-7.5KW-US [US plugs])</li> <li>• 6 kW DC power supply (N7K-DC-6.0KW)</li> <li>• Blank filler plate (installed in place of a missing power supply to maintain the designed airflow)</li> </ul>
---	--------------	---



**Note** Figure 2: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7009 Chassis, on page 5 and Figure 3: Standard Hardware Features on the Rear of a Cisco Nexus 7009 Chassis, on page 6 show the Cisco Nexus 7009 chassis as it appears when it is fully configured before including cables for management and network connections. The systems that are not fully configured with the maximum number of supervisor modules, I/O modules, fabric modules, or power supplies have blank panels installed in place of the missing components to maintain the designed airflow for system cooling.

The I/O module slots hold one or two of the following types of modules:

- F1 Series I/O modules
  - 32-port 1- and 10-Gigabit Ethernet I/O modules (N7K-F132XP-15)
  - 48-port 1-/10-GBASE-T with XL option (N7K-F248XT-25E)
- F2 Series I/O modules
  - 48-port 1-/10-Gigabit SFP+ with XL option and FEX support (N7K-F248XP-25 and N7K-F248XP-25E<sup>2</sup>)
- F3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP/SFP+ (N7K-F348XP-25)
  - 12-port 40-Gigabit Ethernet QSFP+ (N7K-F312FQ-25)
  - 6-port 100-Gigabit Ethernet CPAK (N7K-F306CK-25)
- M1 Series I/O modules
  - 48-port 10/100/1000 I/O modules (N7K-M148GT-11)
  - 48-port 10/100/1000 I/O modules with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet I/O modules (N7K-M148GS-11)
  - 48-port 1-Gigabit Ethernet I/O modules with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet I/O modules with FEX support (N7K-M132XP-12)
  - 32-port 10-Gigabit Ethernet I/O modules with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet I/O modules with XL option (N7K-M108X2-12L)
- M2 Series I/O modules
  - 24-port 10-Gigabit Ethernet I/O modules with XL option and FEX support (N7K-M224XP-23L)
  - 6-port 40-Gigabit Ethernet I/O modules with XL option (N7K-M206XP-23L)
  - 2-port 100-Gigabit Ethernet I/O modules with XL option (N7K-M202XP-23L)
- M3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP+ (N7K-M348XP-25L)
  - 24-port 40-Gigabit Ethernet QSFP+ (N7K-M324FQ-25L)
- Network Analysis Modules (NAMs) (N7K-SM-NAM-K9)




---

**Note** M3-Series I/O modules are not compatible with Sup-1 and Fab-1 modules. M3-Series I/O modules cannot be combined with M1-, F1- or F2-Series I/O modules in the same Cisco Nexus 7009 switch.

---




---

**Note** Starting with Cisco NX-OS Release 7.3(0)D1(1), the following I/O modules are not supported:

---

- 32-port 1- and 10-Gigabit Ethernet I/O modules (N7K-F132XP-15)
- 48-port 10/100/1000 I/O modules (N7K-M148GT-11)

<sup>2</sup> The Cisco Nexus F2-Series 48-port 1/10-Gigabit SFP+ module supports all of the standard features of F2 modules and it functions like an F2-series module with Layer 2 and Layer 3 enabled. These modules also support IPv6 DSCP-to-Queue mapping.

- 32-port 10-Gigabit Ethernet I/O modules with FEX support (N7K-M132XP-12)
- 48-port 1-Gigabit Ethernet I/O modules (N7K-M148GS-11)
- Starting with Cisco NX-OS Release 8.0(1), the following I/O modules are not supported:
  - 48-port 1-/10-Gigabit SFP+ (N7K-F248XP-25)
  - 48-port 10/100/1000 with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet with XL option (N7K-M108X2-12L)

You must install the Cisco Nexus 7009 chassis in a two- or four-post 19-inch EIA rack that meets the following specifications:

- Mounting rails that conform to the English universal hole spacing as specified in ANSI/EIA-310-D-1992.
- The minimum vertical rack space is 24.5 inches (62.2 cm) or 14 rack units (RU) for a single chassis installation (15 RU if you use the bottom support rails, which are required for center-mount installations and optional for front-mount installations).

Install the Cisco Nexus 7009 chassis at the lowest possible RU on the rack for stability. If there are other devices in the rack, install the heaviest chassis below the lighter chassis.



---

**Danger**

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048

---


## Cisco Nexus 7010 System

The Cisco Nexus 7010 chassis has 10 slots that allow for two supervisor modules and up to eight I/O modules. Additionally, the chassis holds up to five fabric modules, two system fan trays, two fabric fan trays, up to three power supplies, and cable management frames. The chassis also has mounting brackets and four positioning handles (two on each side) that you use to install the chassis after you position it on a rack. Optionally, you can include an air filter and mid-frame doors.

[Figure 4: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7010 Chassis, on page 9](#) identifies the standard features on the front and sides of the Cisco Nexus 7010 chassis, [Figure 5: Optional Hardware Features on the Front Side of the Cisco Nexus 7010 Chassis, on page 10](#) identifies the optional features on the front side of the chassis, and [Cisco Nexus 7010 System](#) identifies the standard features on the rear of the chassis.




Figure 4: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7010 Chassis

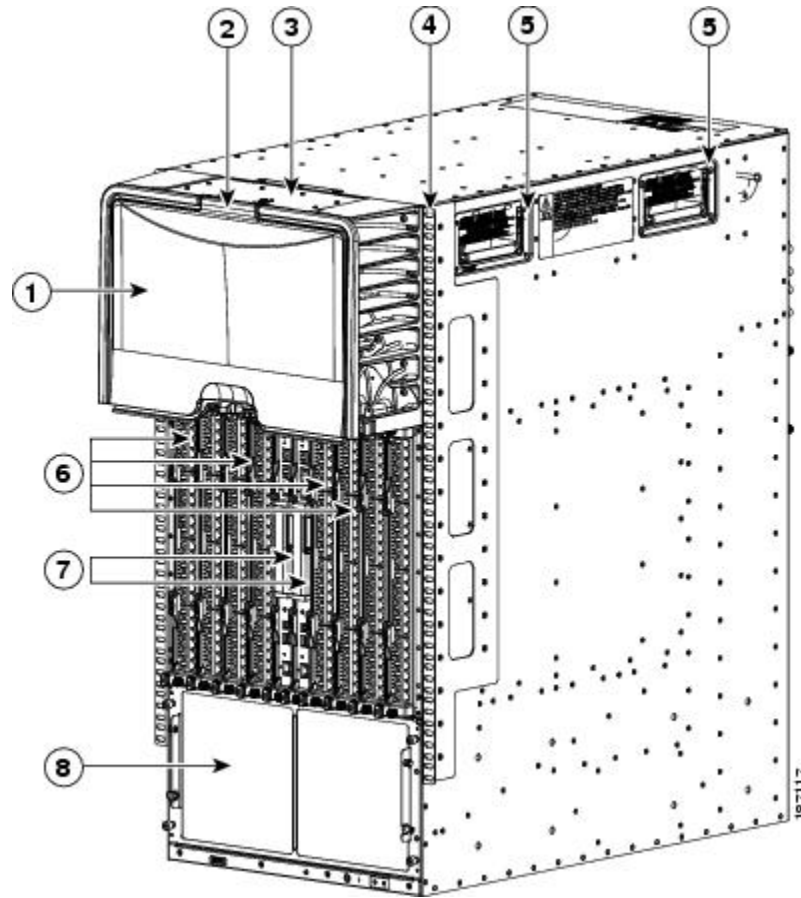


1	Door for the cable management area	5	Handles used to reposition the chassis (do not lift the chassis with these handles—use a mechanical lift)
2	System status LEDs	6	I/O or NAM modules (1 to 8 modules in slots 1 to 4 and 7 to 10).
3	Cable management area (upper routing portion can be removed if necessary)	7	Supervisor modules (1 or 2 modules in slots 5 and 6). These modules are of only one of the following types (if installing two supervisor modules, both modules must be the same type with the same amount of memory): <ul style="list-style-type: none"> <li>• Supervisor 1 (N7K-SUP1)</li> <li>• Supervisor 2 (N7K-SUP2)</li> <li>• Supervisor 2 Enhanced (N7K-SUP2E)</li> </ul>
4	Rack-mount bracket (2) (one on each side)	8	Air intake (shown without the optional air filter)

Figure 5: Optional Hardware Features on the Front Side of the Cisco Nexus 7010 Chassis

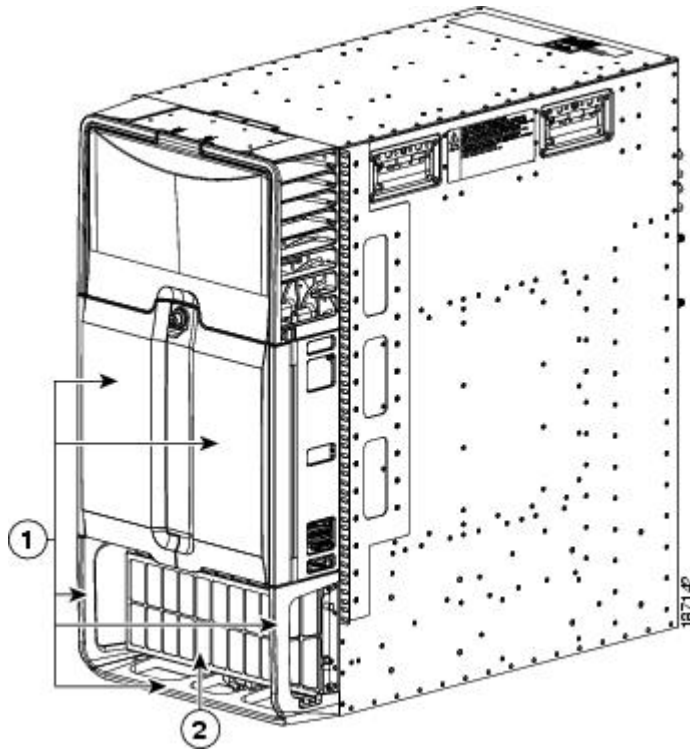

1	Mid-frame door assembly	2	Air filter
---	-------------------------	---	------------

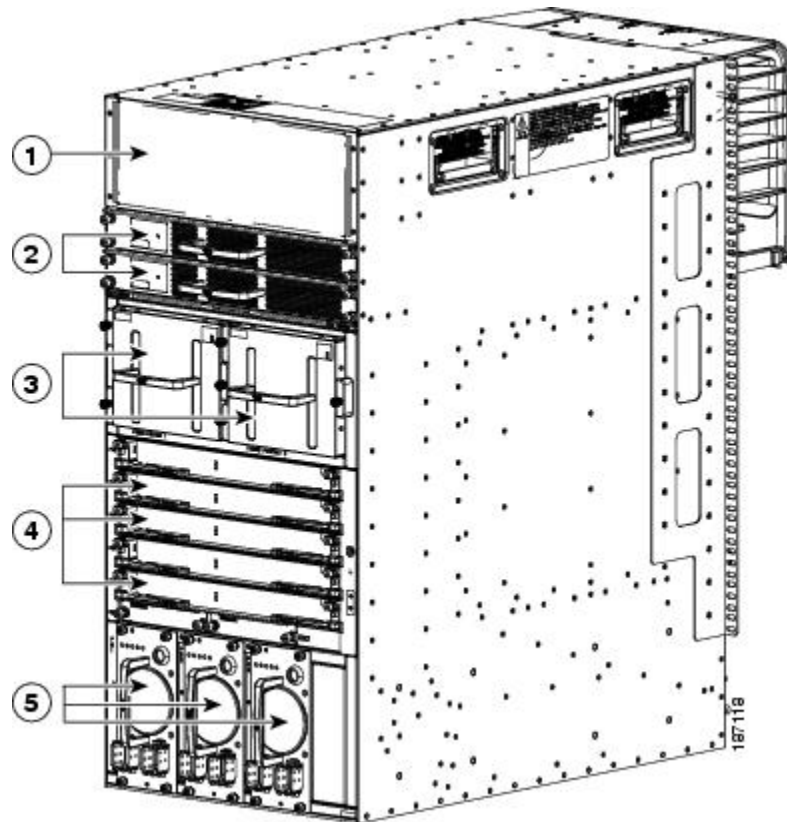

1	Fan exhaust for the supervisor and I/O modules	4	Fabric modules (up to 5) [N7K-C7010-FAB-1 or N7K-C7010-FAB-2])
2	System fan trays (2) (N7K-C7010-FAN-S) and exhaust for the supervisor and I/O modules	5	Power supply units (up to 3) and exhaust for the power supply units—these modules are a combination of the following: <ul style="list-style-type: none"> <li>• 6 kW AC power supply (N7K-AC-6.0KW)</li> <li>• 7.5 kW AC power supply (N7K-AC-7.5KW-INT [international plugs] and N7K-AC-7.5KW-US [US plugs])</li> <li>• 6 kW DC power supply (N7K-DC-6.0KW)</li> <li>• Blank filler plate (replaces a missing power supply to maintain the designed airflow)</li> </ul>
3	Fabric fan trays (2) (N7K-C7010-FAN-F) and exhaust for the fabric modules		



**Note** [Figure 4: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7010 Chassis, on page 9](#) and [Figure 1-6](#) show the Cisco Nexus 7000 Series chassis as it appears when it is fully configured before including cables for connections to the Internet and the console. The systems that are not fully configured with the maximum number of supervisor modules, I/O modules, fabric modules, or power supplies have blank filler panels installed in place of the missing components to maintain the designed airflow for system cooling.

The I/O module slots hold one or two of the following types of modules:

- F1 Series I/O modules
  - 32-port 1- and 10-Gigabit Ethernet I/O modules (N7K-F132XP-15)
  - 48-port 1-/10-GBASE-T with XL option (N7K-F248XT-25E)
- F2 Series I/O modules
  - 48-port 1-/10-Gigabit SFP+ with XL option and FEX support (N7K-F248XP-25 and N7K-F248XP-25E<sup>3</sup>)
- F3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP/SFP+ (N7K-F348XP-25)
  - 12-port 40-Gigabit Ethernet QSFP+ (N7K-F312FQ-25)
  - 6-port 100-Gigabit Ethernet CPAK (N7K-F306CK-25)
- M1 Series I/O modules
  - 48-port 10/100/1000 I/O modules (N7K-M148GT-11)
  - 48-port 10/100/1000 I/O modules with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet I/O modules (N7K-M148GS-11)
  - 48-port 1-Gigabit Ethernet I/O modules with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet I/O modules with FEX support (N7K-M132XP-12)
  - 32-port 10-Gigabit Ethernet I/O modules with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet I/O modules with XL option (N7K-M108X2-12L)
- M2 Series I/O modules
  - 24-port 10-Gigabit Ethernet I/O modules with XL option and FEX support (N7K-M224XP-23L)
  - 6-port 40-Gigabit Ethernet I/O modules with XL option (N7K-M206XP-23L)
  - 2-port 100-Gigabit Ethernet I/O modules with XL option (N7K-M202XP-23L)
- M3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP+ (N7K-M348XP-25L)
  - 24-port 40-Gigabit Ethernet QSFP+ (N7K-M324FQ-25L)
- Network Analysis Modules (NAMs) (N7K-SM-NAM-K9)




---

**Note** M3-Series I/O modules are not compatible with Sup-1 and Fab-1 modules. M3-Series I/O modules cannot be combined with M1-, F1- or F2-Series I/O modules in the same Cisco Nexus 7010 switch.

---




---

**Note** Starting with Cisco NX-OS Release 7.3(0)D1(1), the following I/O modules are not supported:

---

- 32-port 1- and 10-Gigabit Ethernet I/O modules (N7K-F132XP-15)
- 48-port 10/100/1000 I/O modules (N7K-M148GT-11)

---

<sup>3</sup> The Cisco Nexus F2-Series 48-port 1/10-Gigabit SFP+ module supports all of the standard features of F2 modules and it functions like an F2-series module with Layer 2 and Layer 3 enabled. These modules also support IPv6 DSCP-to-Queue mapping.

- 32-port 10-Gigabit Ethernet I/O modules with FEX support (N7K-M132XP-12)
- 48-port 1-Gigabit Ethernet I/O modules (N7K-M148GS-11)
- Starting with Cisco NX-OS Release 8.0(1), the following I/O modules are not supported:
  - 48-port 1-/10-Gigabit SFP+ (N7K-F248XP-25)
  - 48-port 10/100/1000 with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet with XL option (N7K-M108X2-12L)

You must install the Cisco Nexus 7010 system chassis in a four-post 19-inch EIA rack that meets the following specifications:

- Mounting rails that conform to the English universal hole spacing as specified in ANSI/EIA-310-D-1992.
- The minimum vertical rack space is 36.75 inches (93.3 cm) or 21 rack units (RU) for a single chassis installation and 73.5 inches (186.6 cm) or 42 rack units for a dual-chassis installation. We recommend that you use a 45 RU rack for a dual-chassis installation.

If you install one chassis, install it at the lowest possible RU on the rack for stability, as shown in [Figure 6: One Cisco Nexus 7010 Chassis Installed in a Four-Post Rack, on page 14](#). If you install two chassis in the same rack, install the bottom chassis first and then install the other chassis on top as shown in [Figure 7: Two Cisco Nexus 7010 Chassis Installed in a Four-Post Rack, on page 15](#).




---

**Danger** Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048

---


*Figure 6: One Cisco Nexus 7010 Chassis Installed in a Four-Post Rack*

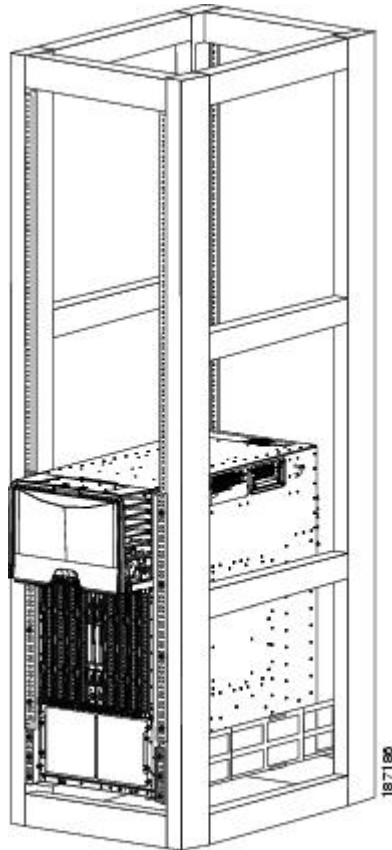

Install the first chassis at the bottom of the rack for maximum stability.

**Figure 7: Two Cisco Nexus 7010 Chassis Installed in a Four-Post Rack**

Install a second chassis immediately above the first installed chassis.

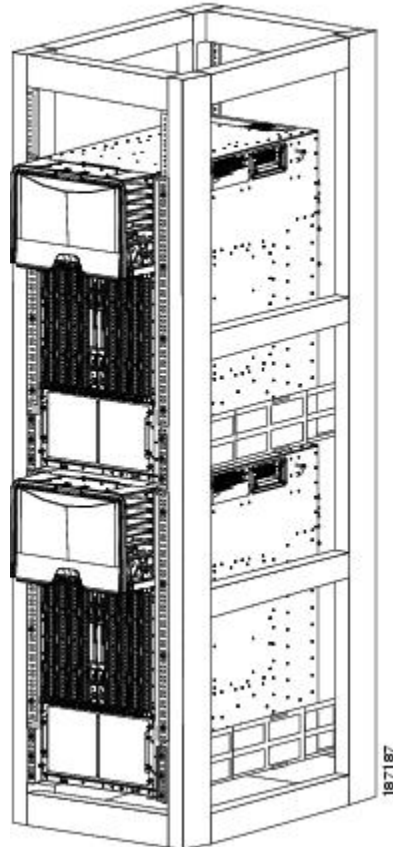


## Cisco Nexus 7018 System

The Cisco Nexus 7018 chassis has 18 slots that allow for two supervisor modules and up to 16 I/O modules. The chassis also holds up to five fabric modules, two fan trays, up to four power supplies, and a cable management system. The chassis also has a mounting bracket and four positioning handles (two on each side) that you use to install the chassis after you position it on a rack. Optionally, you can include a front door to protect the I/O cable connections.

[Figure 8: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7018 Chassis, on page 16](#) identifies the standard features on the front and sides of the Cisco Nexus 7018 chassis, [Figure 9: Cable Management System for the Cisco Nexus 7018 Chassis, on page 17](#) identifies the components of the cable management system, [Figure 10: Optional Front Door for the Cisco Nexus 7018 Chassis, on page 18](#) identifies the optional feature on the front side of the chassis, and [Figure 1-12](#) identifies the standard features on the rear of the chassis.

Figure 8: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7018 Chassis

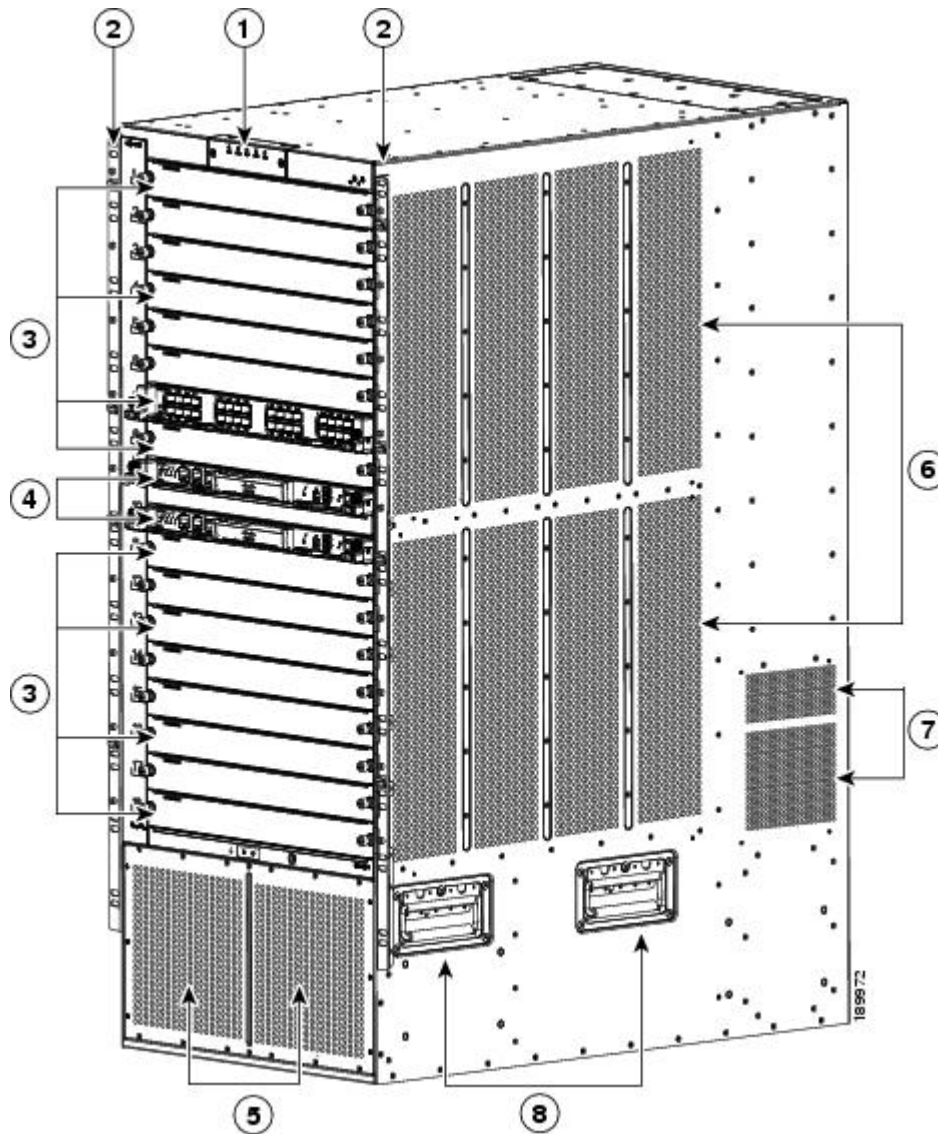


1	System status LEDs	5	Air intake for power supply units
2	Rack-mount brackets (2)	6	Air intake for the supervisor modules and I/O modules
3	I/O or NAM modules (1 to 16 in slots 1 to 8 and slots 11 to 18).	7	Air intake for fabric modules




4	<p>Supervisor modules (1 or 2 modules in slots 9 and 10). These modules are of only one of the following types (if installing two supervisor modules, both modules must be the same type with the same amount of memory):</p> <ul style="list-style-type: none"> <li>• Supervisor 1 (N7K-SUP1)</li> <li>• Supervisor 2 (N7K-SUP2)</li> <li>• Supervisor 2 Enhanced (N7K-SUP2E)</li> </ul>	8	<p>Handles used to reposition the chassis (do not lift the chassis with these handles—use a mechanical lift)</p>
---	---	---	--

Figure 9: Cable Management System for the Cisco Nexus 7018 Chassis

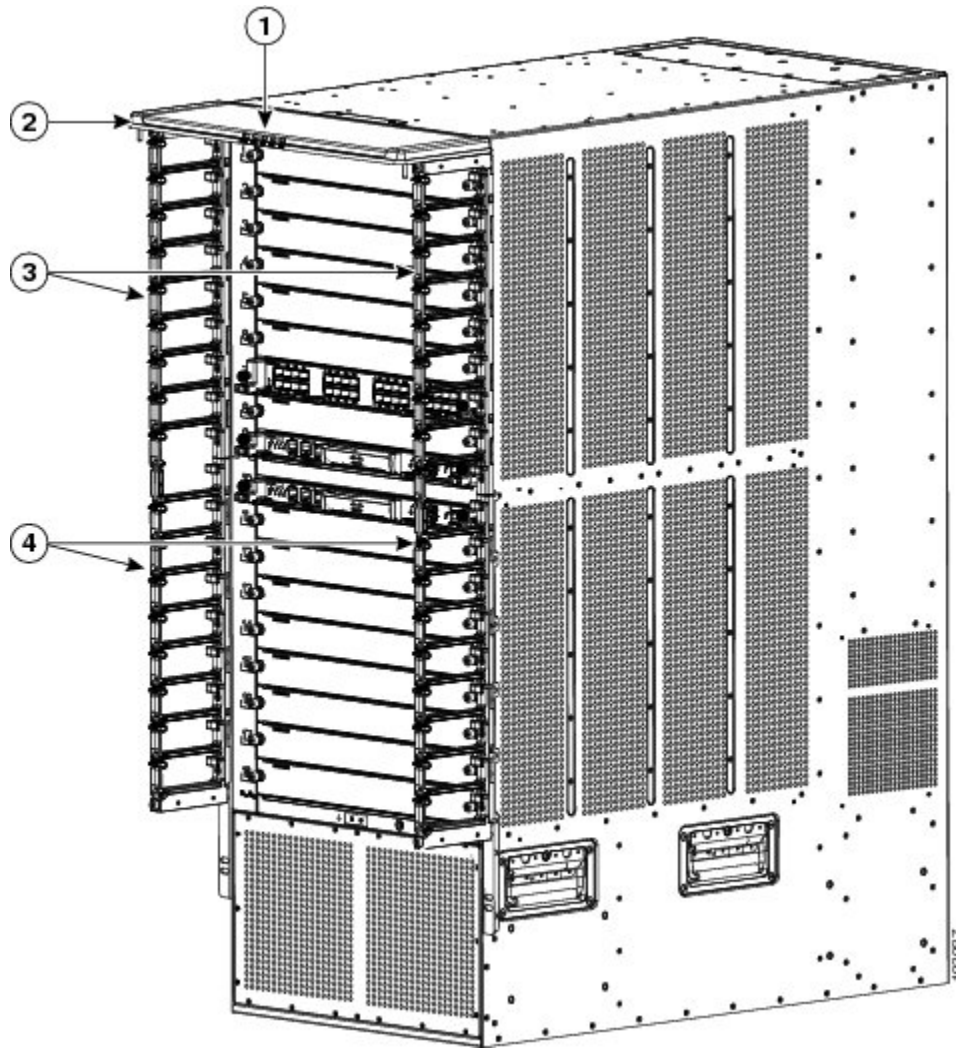


1	<p>System status LEDs (these LEDs show the system status displayed by the chassis LEDs)</p>	3	<p>Upper cable management assemblies</p>
2	<p>Top hood</p>	4	<p>Lower cable management assemblies</p>

Figure 10: Optional Front Door for the Cisco Nexus 7018 Chassis

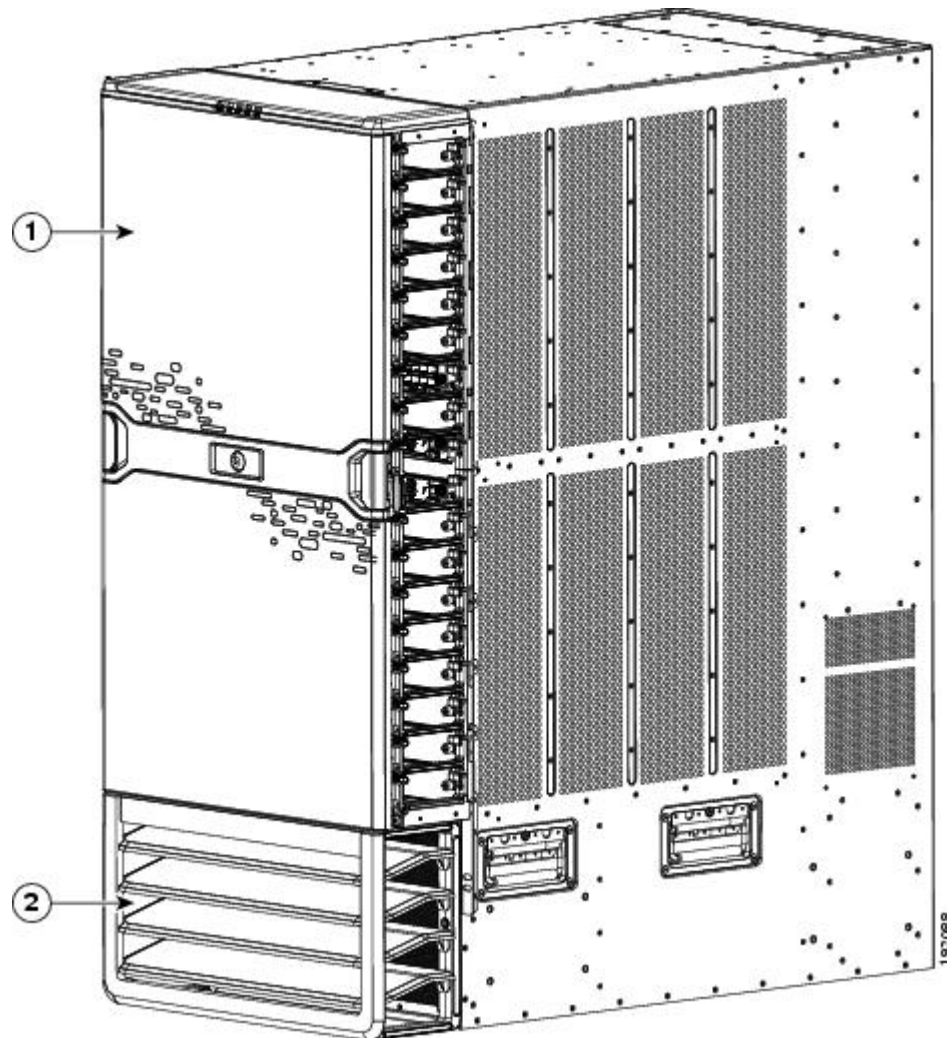

1	Front doors	2	Air intake frame for power supply units
---	-------------	---	---

Figure 11: Standard Hardware Features on the Back of the Cisco Nexus 7018 Chassis

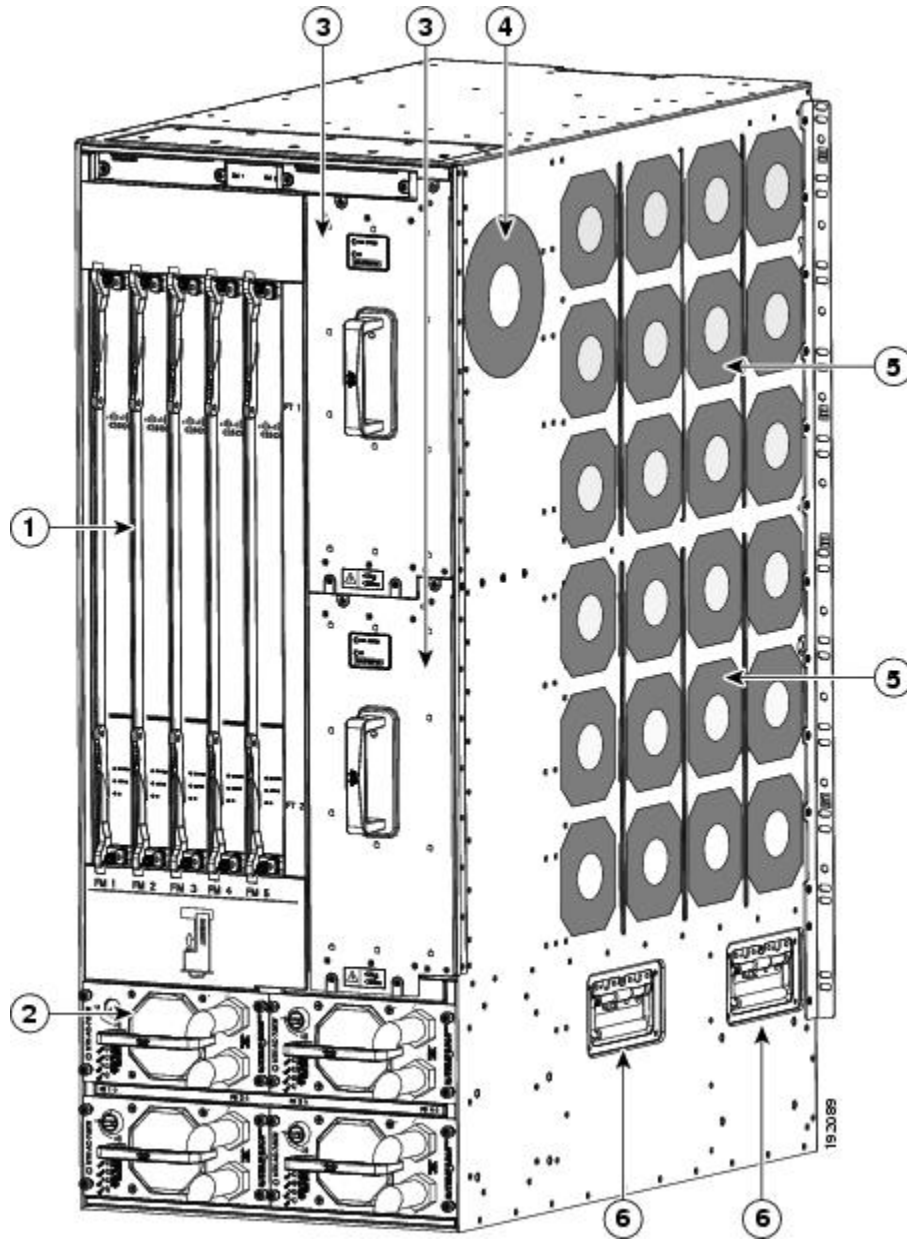

<p>1 Fabric modules (up to 5) (N7K-C7018-FAB-1 or N7K-C7018-FAB-2)</p>	<p>4 Fan exhaust for fabric modules</p>
--	---

2	Power supply units (up to 4)—these modules are a combination of the following: <ul style="list-style-type: none"> <li>• 6 kW AC power supply (N7K-AC-6.0KW)</li> <li>• 7.5 kW AC power supply (N7K-AC-7.5KW-INT [international plugs])(N7K-AC-7.5KW-US [US plugs])</li> <li>• 6 kW DC power supply (N7K-DC-6.0KW)</li> <li>• Blank filler plate (replaces missing power supplies to maintain the designed airflow)</li> </ul>	5	Fan exhaust for supervisor and I/O modules
3	Fan trays for cooling the supervisor, I/O, and fabric modules	6	Handles used to reposition the chassis (do not lift the chassis with these handles—use a mechanical lift)



**Note** [Figure 8: Standard Hardware Features on the Front and Sides of the Cisco Nexus 7018 Chassis, on page 16](#) and [Figure 1-12](#) show the Cisco Nexus 7018 chassis as it appears when it is fully configured before including cables for connections to the Internet and the console. The systems that are not fully configured with the maximum number of supervisor modules, I/O modules, fabric modules, or power supplies have blank panels installed in place of the missing components to maintain the designed airflow for system cooling.

The I/O module slots hold one or two of the following types of modules:

- F1 Series I/O modules
  - 32-port 1- and 10-Gigabit Ethernet I/O modules (N7K-F132XP-15)
  - 48-port 1-/10-GBASE-T with XL option (N7K-F248XT-25E)
- F2 Series I/O modules
  - 48-port 1-/10-Gigabit SFP+ with XL option and FEX support (N7K-F248XP-25 and N7K-F248XP-25E<sup>4</sup>)
- F3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP/SFP+ (N7K-F348XP-25)
  - 12-port 40-Gigabit Ethernet QSFP+ (N7K-F312FQ-25)
  - 6-port 100-Gigabit Ethernet CPAK (N7K-F306CK-25)
- M1 Series I/O modules
  - 48-port 10/100/1000 I/O modules (N7K-M148GT-11)
  - 48-port 10/100/1000 I/O modules with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet I/O modules (N7K-M148GS-11)
  - 48-port 1-Gigabit Ethernet I/O modules with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet I/O modules with FEX support (N7K-M132XP-12)
  - 32-port 10-Gigabit Ethernet I/O modules with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet I/O modules with XL option (N7K-M108X2-12L)

<sup>4</sup> The Cisco Nexus F2-Series 48-port 1/10-Gigabit SFP+ module supports all of the standard features of F2 modules and it functions like an F2-series module with Layer 2 and Layer 3 enabled. These modules also support IPv6 DSCP-to-Queue mapping.

- M2 Series I/O modules
  - 24-port 10-Gigabit Ethernet I/O modules with XL option and FEX support (N7K-M224XP-23L)
  - 6-port 40-Gigabit Ethernet I/O modules with XL option (N7K-M206XP-23L)
  - 2-port 100-Gigabit Ethernet I/O modules with XL option (N7K-M202XP-23L)
- M3 Series I/O modules
  - 48-port 1-/10-Gigabit Ethernet SFP+ (N7K-M348XP-25L)
  - 24-port 40-Gigabit Ethernet QSFP+ (N7K-M324FQ-25L)
- Network Analysis Modules (NAMs) (N7K-SM-NAM-K9)




---

**Note** M3-Series I/O modules are not compatible with Sup-1 and Fab-1 modules. M3-Series I/O modules cannot be combined with M1-, F1- or F2-Series I/O modules in the same Cisco Nexus 7018 switch.

---




---

**Note** Starting with Cisco NX-OS Release 7.3(0)D1(1), the following I/O modules are not supported:

---

- 32-port 1- and 10-Gigabit Ethernet I/O modules (N7K-F132XP-15)
- 48-port 10/100/1000 I/O modules (N7K-M148GT-11)
- 32-port 10-Gigabit Ethernet I/O modules with FEX support (N7K-M132XP-12)
- 48-port 1-Gigabit Ethernet I/O modules (N7K-M148GS-11)
- Starting with Cisco NX-OS Release 8.0(1), the following I/O modules are not supported:
  - 48-port 1-/10-Gigabit SFP+ (N7K-F248XP-25)
  - 48-port 10/100/1000 with XL option (N7K-M148GT-11L)
  - 48-port 1-Gigabit Ethernet with XL option (N7K-M148GS-11L)
  - 32-port 10-Gigabit Ethernet with XL option and FEX support (N7K-M132XP-12L)
  - 8-port 10-Gigabit Ethernet with XL option (N7K-M108X2-12L)

You can insert a maximum of ten 24-port 40-Gigabit Ethernet QSFP+ (N7K-M324FQ-25L) I/O modules in the Cisco Nexus 7018 switch. This I/O module uses 96 VQI per slot. The maximum VQI of a Cisco Nexus 7018 switch is 1024 and a total of eleven 24-port 40-Gigabit Ethernet QSFP+ I/O modules will require 1056 VQI. In such a scenario, the eleventh I/O module will attempt to come online 3 times and then will get powered down. During a reload of a switch with eleven 24-port 40-Gigabit Ethernet QSFP+ I/O modules, the I/O module that comes up last will be powered down.

You must install the Cisco Nexus 7018 chassis in a four-post 19-inch EIA rack that meets the following specifications:


- Mounting rails that conform to the English universal hole spacing as specified in ANSI/EIA-310-D-1992.
- The minimum vertical rack space is 43.75 inches (111.1 cm) or 25 rack units (RU) for a single chassis installation and 87.5 inches (222.2 cm).

Install the Cisco Nexus 7018 chassis at the lowest possible RU on the rack for stability, as shown in [Figure 12: Cisco Nexus 7018 Chassis Installed in a Four-Post Rack](#), on page 22. If there is another device in the rack, install the heaviest one at the bottom.



**Danger** Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over. Statement 1048

*Figure 12: Cisco Nexus 7018 Chassis Installed in a Four-Post Rack*

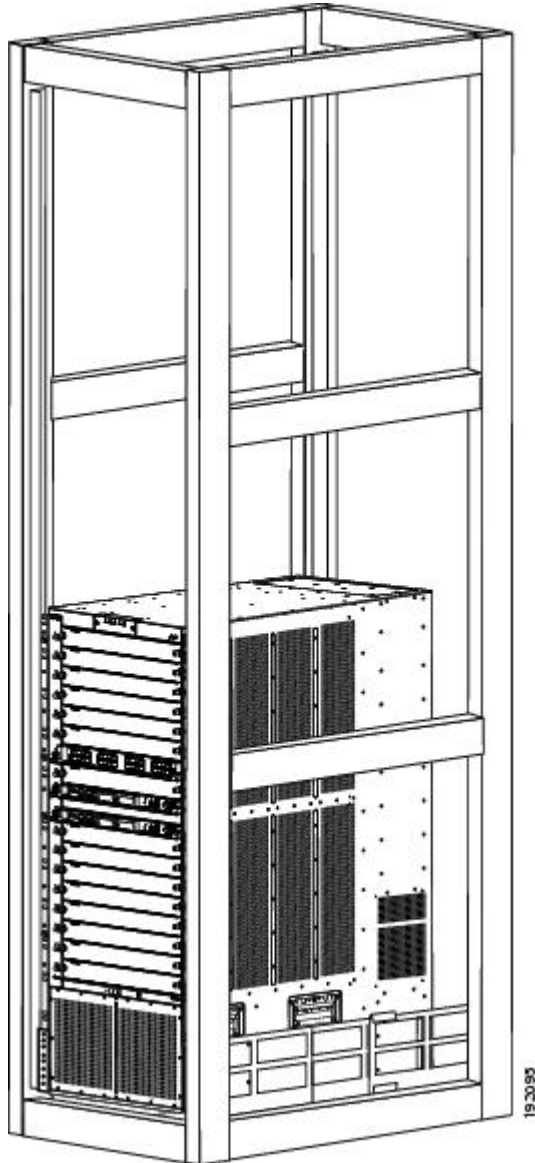

## Preparing the Site



---

**Danger** Installation of the equipment must comply with local and national electrical codes. Statement 1074

---

Before you can install a Cisco Nexus 7000 Series system, you must prepare the site for the installation. You must make sure that the altitude, temperature, humidity, air quality, airflow, electromagnetic and radio frequency interference, floor structure, power, and earth grounding of the installation site all meet the requirements of the Cisco Nexus 7000 Series system that you are installing. In addition, you must set up a rack or cabinet that can hold the number of chassis that you are installing. To see the general requirements for this system, see [Appendix A, “Technical Specifications.”](#) To see detailed information about preparing the data center for the installation, see the Cisco Nexus 7000 Series Site Preparation Guide.

## Safety Guidelines



---

**Danger** Only trained and qualified personnel should be allowed to install, replace, or service this equipment. Statement 1030

---

The prerequisites listed for any procedure are required conditions that you must verify before you start that procedure. If the prerequisites have not been met, you must satisfy those requirements before carrying out the procedure.

Safety warnings appear in this publication wherever procedures present conditions that could endanger you or others installing this system. Adhering to these warnings and following their recommended actions are required actions for these procedures. For regulatory compliance and safety information on these warnings, see the *Cisco Nexus 7000 Series Regulatory Compliance and Safety Information* document.

## Installation and Connection Guidelines

After you fully prepare the site as specified in the Cisco Nexus 7000 Series Site Preparation Guide, install a two-post 19-inch EIA rack for Cisco Nexus 7004 and 7009 chassis or a four-post 19-inch EIA rack for all chassis. To install the system, you must make sure that you have the proper mounting brackets (front-mount or center-mount brackets) installed on the chassis, move the chassis to the rack, elevate it to the lowest possible RU for that chassis, and fasten the chassis to the rack. With the chassis fastened to the rack, you can ground the chassis, install its cable management frames, install the optional door and optional air filter, and connect the switch to the console and network. For detailed instructions on installing a Cisco Nexus 7000 Series switch, see the following chapters:

For detailed instructions on connecting the switch to the console and network, see [Chapter 7, “Connecting the Cisco Nexus 7000 Series Switch to the Network”](#).



---

**Caution** Do not use the handles on the side of the chassis to lift the Cisco Nexus 7009, 7010, or 7018 chassis or a fully loaded Cisco Nexus 7004 chassis (you can use these handles to lift a Cisco Nexus 7004 chassis if you remove the power supplies so that the chassis weighs less than 120 pounds [52 kg]). For the Cisco Nexus 7009, 7010, and 7018, use these handles only for adjusting the position of the chassis while the chassis rests on a platform or bottom-support rails.

---

If you are replacing Fabric 1 modules with Fabric 2 modules (Cisco Nexus 7010 and 7018 models only), you must replace all of the Fabric 1 modules with Fabric 2 modules or the Fabric 2 modules will perform like Fabric 1 modules. If you power up a switch with both Fabric 1 and Fabric 2 modules installed, only the Fabric 2 modules will power up.



---

**Note** The Cisco NX-OS software may require 8 GB of memory, depending on the software version you use and the software features that you enable. If your switch has Supervisor 1 modules with only 4 GB of memory, then you might need to upgrade the modules to 8 GB of memory by using the 8 GB supervisor upgrade kit (N7K-SUP1-8GBUPG=). This upgrade is not needed for switches that have at least 8 GB of memory (which includes Supervisor 1 modules with 8 GB and all Supervisor 2 and Supervisor 2E modules). To verify the amount of memory installed in the supervisor modules or to upgrade the memory, see the [“Upgrading Memory for Supervisor 1 Modules”](#) section on page 10-31 .

---

## Managing the System Hardware

After the Cisco Nexus 7000 Series system is installed and operating, you can use the Cisco NX-OS operating system to manage the system hardware. These management functions include displaying system and module information, setting the power supply modes, and managing module functions. For more information about these functions, see [Chapter 8, “Managing the Switch Hardware.”](#)

## Replacing Components

While the Cisco Nexus 7000 Series system is operational, you can replace any one of the following components if they are redundant:

- Power supply
- Supervisor module
- Fabric module (Cisco Nexus 7009, 7010, and 7018 models only)
- I/O modules
- Fan trays

For detailed information on replacing these components, see [Chapter 10, “Installing or Replacing Components.”](#)