



Configuring the SAN Extension Tuner

The SAN Extension Tuner (SET) feature is unique to the Cisco MDS 9000 Family of switches. This feature helps you optimize FCIP performance by generating either direct access (magnetic disk) or sequential access (magnetic tape) SCSI I/O commands and directing such traffic to a specific virtual target. You can specify the size of the test I/O transfers and how many concurrent or serial I/Os to generate while testing. The SET reports the resulting I/Os per second (IOPS) and I/O latency, which helps you determine the number of concurrent I/Os needed to maximize FCIP throughput.

This chapter includes the following topics:

- [Information About the SAN Extension Tuner, page 3-1](#)
- [Licensing Requirements for SAN Extension Tuner, page 3-4](#)
- [Default Settings, page 3-4](#)
- [Configuring the SAN Extension Tuner, page 3-5](#)
- [Verifying SAN Extension Tuner Configuration, page 3-12](#)
- [Additional References, page 3-13](#)

Information About the SAN Extension Tuner

The SAN extension tuner (SET) feature is unique to the Cisco MDS 9000 Family of switches. This feature helps you optimize FCIP performance by generating either direct access (magnetic disk) or sequential access (magnetic tape) SCSI I/O commands and directing such traffic to a specific virtual target. Applications such as remote copy and data backup use FCIP over an IP network to connect across geographically distributed SANs. SET is implemented in IPS ports. When enabled, this feature can be used to generate SCSI I/O commands (read and write) to the virtual target based on your configured options.



Note

SAN Extension Tuner is not supported on the Cisco Fabric Switch for HP c-Class BladeSystem, the Cisco Fabric Switch for IBM BladeCenter, and 16-Port Storage Services Node (SSN-16).



Note

As of Cisco MDS SAN-OS Release 3.3(1a), SAN Extension Tuner is supported on the Multiservice Module (MSM) and the Multiservice Modular Switch.

Text Part Number:


Send documentation comments to dcnm-san-docfeedback@cisco.com

Applications such as remote copy and data backup use FCIP over an IP network to connect across geographically distributed SANs. To achieve maximum throughput performance across the fabric, you can tune the following configuration parameters:

- The TCP parameters for the FCIP profile.
- The number of concurrent SCSI I/Os generated by the application.
- The transfer size used by the application over an FCIP link.

SET is implemented in IPS ports. When enabled, this feature can be used to generate SCSI I/O commands (read and write) to the virtual target based on your configured options (see Figure 3-1).

Figure 3-1 *SCSI Command Generation to the Virtual Target*

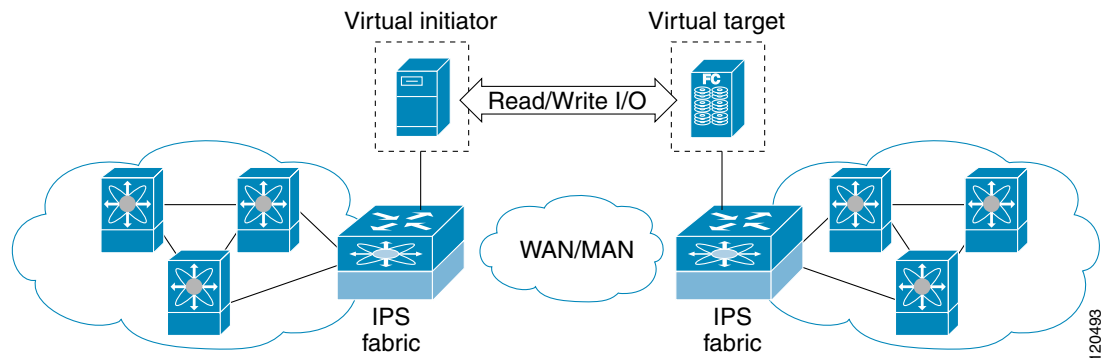

The SET feature assists with tuning by generating varying SCSI traffic workloads. It also measures throughput and response time per I/O over an FCIP link.

Before tuning the SAN fabric, be aware of the following guidelines:

- Following these implementation details:
 - The tuned configuration is not persistent.
 - The virtual N ports created do not register FC4 features supported with the name server. This is to avoid the hosts in the SAN from discovering these N ports as regular initiators or targets.
 - Login requests from other initiators in the SAN are rejected.
 - The virtual N ports do not implement the entire SCSI suite; it only implements the SCSI read and write commands.
 - Tuner initiators can only communicate with tuner targets.
- Verify that the Gigabit Ethernet interface is up at the physical layer (GBIC and Cable connected—an IP address is not required).
- Enable iSCSI on the switch (no other iSCSI configuration is required).
- **Enable the interface (no other iSCSI interface configuration is required)**
See “Creating iSCSI Interfaces” section on page 4-36 for more information.
- Create an iSCSI interface on the Gigabit Ethernet interface and enable the interface (no other iSCSI interface configuration is required)
see “Creating iSCSI Interfaces” section on page 4-36 for more information.
- Configure the virtual N ports in a separate VSAN or zone as required by your network.

Send documentation comments to dcnm-san-docfeedback@cisco.com

- Be aware that a separate VSAN with only virtual N ports is not required, but is recommended as some legacy HBAs may fail if logins to targets are rejected.
- Do not use same Gigabit Ethernet interface to configure virtual N ports and FCIP links—use different Gigabit Ethernet interfaces. While this is not a requirement, it is recommended as the traffic generated by the virtual N ports may interfere with the performance of the FCIP link.

This section includes the following topics:

- [SAN Extension Tuner Setup, page 3-3](#)
- [Data Pattern, page 3-4](#)

SAN Extension Tuner Setup

Figure 3-2 provides a sample physical setup in which the virtual N ports are created on ports that are not a part of the FCIP link for which the throughput and latency is measured.

Figure 3-2 N Port Tuning Configuration Physical Example


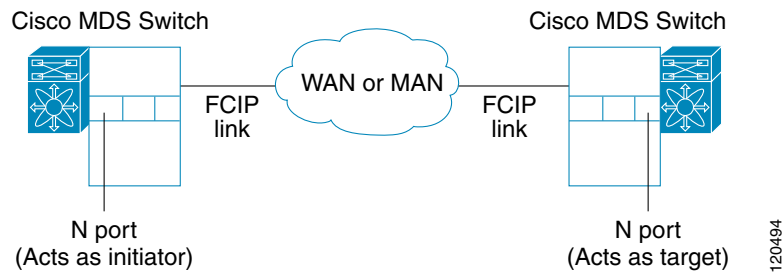


Figure 3-3 provides a sample logical setup in which the virtual N ports are created on ports that are not a part of the FCIP link for which the throughput and latency is measured.

Figure 3-3 Logical Example of N Port Tuning for a FCIP Link

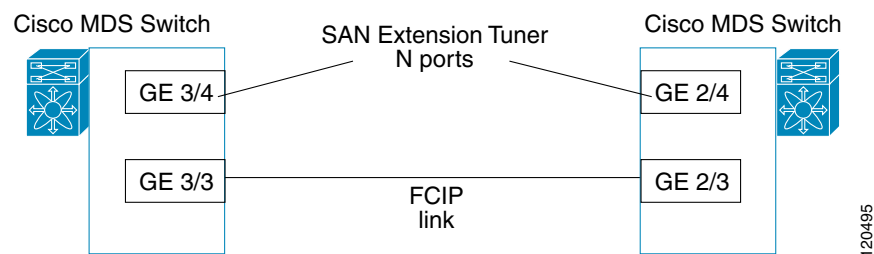

[Send documentation comments to dcnm-san-docfeedback@cisco.com](mailto:dcnm-san-docfeedback@cisco.com)

Data Pattern

By default, an all-zero pattern is used as the pattern for data generated by the virtual N ports. You can optionally specify a file as the data pattern to be generated by selecting a data pattern file from one of three locations: the bootflash: directory, the volatile: directory, or the slot0: directory. This option is especially useful when testing compression over FCIP links. You can also use Canterbury corpus or artificial corpus files for benchmarking purposes.

Licensing Requirements for SAN Extension Tuner

To use the SET, you need to obtain the SAN_EXTN_OVER_IP license (see the *Cisco Family NX-OS Licensing Guide*).

The following table shows the licensing requirements for this feature:

License	License Description
SAN extension over IP package for IPS-8 modules <ul style="list-style-type: none"> (SAN_EXTN_OVER_IP) SAN extension over IP package for IPS-4 modules <ul style="list-style-type: none"> (SAN_EXTN_OVER_IP_IPS4) 	It comprises the SAN extension tuner features.
SAN extension over IP package for MPS-14/2 modules <ul style="list-style-type: none"> (SAN_EXTN_OVER_IP_IPS2) 	This feature applies to the MPS-14/2 module and the fixed Cisco MDS 9216i Switch IP ports.
SAN extension over IP package for one MPS-18/4, one MPS-18/4 FIPS, or one SSN-16 engine in the Cisco MDS 9500 Series <ul style="list-style-type: none"> (SAN_EXTN_OVER_IP_18_4) (SAN_EXTN_OVER_IP_SSN16) 	This feature applies to the MPS-18/4, MPS-18/4 FIPS, or SSN-16 modules.

Default Settings

Table 3-1 lists the default settings for tuning parameters.

Table 3-1 Default Tuning Parameters

Parameters	Default
Tuning	Disabled
Transfer ready size	Same as the transfer size in the SCSI write command
Outstanding I/Os	1
Number of transactions	1
Data generation format	All-zero format

Send documentation comments to dcnm-san-docfeedback@cisco.com

Configuring the SAN Extension Tuner

This section includes the following topics:

- [Tuning the FCIP Link, page 3-5](#)
- [Using the SAN Extension Tuner Wizard, page 3-5](#)
- [Enabling the Tuner, page 3-7](#)
- [Configuring nWWN, page 3-7](#)
- [Configuring the Virtual N Port, page 3-7](#)
- [Assigning the SCSI Read/Write, page 3-8](#)
- [Assigning SCSI Tape Read/Write, page 3-10](#)
- [Configuring a Data Pattern, page 3-11](#)

Tuning the FCIP Link

Detailed Steps

To tune the required FCIP link, follow these steps:

-
- | | |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Step 1 | Configure the nWWN for the virtual N ports on the switch. |
| Step 2 | Enable iSCSI on the interfaces on which you want to create the N ports. |
| Step 3 | Configure the virtual N ports on either side of the FCIP link. |
| Step 4 | Ensure that the virtual N ports are not visible to real initiators in the SAN. You can use zoning (see the <i>Fabric Configuration Guide, Cisco DCNM for SAN Cisco MDS 9000 Family NX-OS Fabric Configuration Guide</i>) to segregate the real initiators. Ensure that the zoning configuration is set up to allow the virtual N-ports to communicate with each other. |
| Step 5 | Start the SCSI read and write I/Os. |
| Step 6 | Add more N ports (as required) to other Gigabit Ethernet ports in the switch to obtain maximum throughput. One scenario that may require additional N ports is if you use FCIP PortChannels. |
-

Using the SAN Extension Tuner Wizard

You can use the SAN Extension Tuner wizard to perform the these tasks:

- [Configuring nWWN ports](#)
- [Enabling iSCSI](#)
- [Configuring Virtual N ports](#)
- [Assigning SCSI read and write CLI commands](#)
- [Assigning SCSI tape read and write CLI commands](#)
- [Configuring a data pattern for SCSI commands](#)

Send documentation comments to dcnm-san-docfeedback@cisco.com

Detailed Steps

To tune the required FCIP link using the SAN Extension Tuner Wizard in Cisco DCNM-SAN, follow these steps:

Step 1 Right-click a valid FCIP link in the Fabric pane, and then select **SAN Extension Tuner** from the drop-down list. You can also highlight the link and choose **Tools > IP SAN > SAN Extension Tuner**. You see the Select Ethernet Port Pair dialog box.

Step 2 Select the Ethernet port pairs that correspond to the FCIP link you want to tune and click **Next**.



Note The Ethernet ports you select should be listed as down.

You see the Specify Parameters dialog box.

Step 3 Create and activate a new zone to ensure that the virtual N ports are not visible to real initiators in the SAN by clicking **Yes** to the zone creation dialog box.

Step 4 Close the **Edit Local Full Zone Database** window.

Step 5 (Optional) Change the default settings for the transfer data size and the number of concurrent SCSI read and write commands as follows:

- a. Set **Transfer Size** to the number of bytes that you expect your applications to use over the FCIP link.
- b. Set **Read I/O** to the number of concurrent SCSI read commands you expect your applications to generate over the FCIP link.
- c. Set **Write I/O** to the number of concurrent outstanding SCSI write commands you expect your applications to generate over the FCIP link.



Note There is only one outstanding I/O at a time to the virtual N port that emulates the tape behavior.

- d. Check the **Use Pattern File** check box and select a file that you want to use to set the data pattern that is generated by the SAN extension tuner. See the “Data Pattern” section on page 3-4.

Step 6 Click **Next**.

You see the Results dialog box.

Step 7 Click **Start** to start the tuner. The tuner sends a continuous stream of traffic until you click **Stop**.

Step 8 Click **Show** to see the latest tuning statistics. You can select this while the tuner is running or after you stop it.

Step 9 Click **Stop** to stop the SAN extension tuner.

[Send documentation comments to dcnm-san-docfeedback@cisco.com](mailto:dcnm-san-docfeedback@cisco.com)

Enabling the Tuner

The tuning feature is disabled by default in all switches in the Cisco 9000 Family. When you enable this feature, tuning is globally enabled for the entire switch.

Detailed Steps

To enable the tuning feature, follow these steps:

	Command	Purpose
Step 1	switch# config t	Enters configuration mode.
Step 2	switch(config)# feature san-ext-tuner	Enables tuning.
	switch(config)# no feature san-ext-tuner	Removes the currently applied tuning configuration and disables tuning (default).

Configuring nWWN

Detailed Steps

To configure the nWWNs for the tuner in this switch, follow these steps:

	Command	Purpose
Step 1	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.
Step 2	switch(san-ext)# nWWN 10:00:00:00:00:00:00:00	Configures the nWWN for the SAN extension tuner.

Configuring the Virtual N Port

Detailed Steps

To configure the virtual N port for tuning, follow these steps:

	Command	Purpose
Step 1	switch# config t switch(config)#	Enters configuration mode.
Step 2	switch(config)# feature iscsi switch(config)# iscsi enable module 1	Enables iSCSI globally and then on module 1.
Step 3	switch(config)# interface iscsi 3/4 switch(config-if)#	Creates an iSCSI interface and enters interface configuration submode.
Step 4	switch(config-if)# no shutdown	Enables the iSCSI interface.
Step 5	switch(config-if)# end switch#	Returns to EXEC mode.
Step 6	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.

Send documentation comments to dcnm-san-docfeedback@cisco.com

	Command	Purpose
Step 7	<code>switch(san-ext)# nwwn 10:00:00:00:00:00:00:00</code>	Configures the nWWN for the SAN extension tuner.
Step 8	<code>switch(san-ext)# nport pwwn 12:00:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4</code> <code>switch(san-ext-nport)#</code>	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
	<code>switch(san-ext)# no nport pwwn 22:34:56:78:90:12:34:56 vsan 200 interface gigabitethernet 3/4</code>	Removes a virtual N port on the specified Gigabit Ethernet port and VSAN.

Assigning the SCSI Read/Write

You can assign SCSI read and write commands on a one-time basis or on a continuous basis.

Detailed Steps

To assign SCSI read or write commands on a one-time basis, follow these steps:

	Command	Purpose
Step 1	<code>switch# san-ext-tuner</code> <code>switch(san-ext)#</code>	Enters the SET configuration submode.
Step 2	<code>switch(san-ext)# nwwn 10:00:00:00:00:00:00:00</code>	Configures the nWWN for the SAN extension tuner.
Step 3	<code>switch(san-ext)# nport pwwn 12:00:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4</code> <code>switch(san-ext-nport)#</code>	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
Step 4	<code>switch(san-ext-nport)# read command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 outstanding-ios 2 num-transactions 5000000</code>	Specifies a transfer size of 512,000 bytes with two outstanding I/Os in the read command. The total number of I/Os is 5,000,000 bytes.
Step 5	<code>switch(san-ext-nport)# write command-id 101 target 22:22:22:22:22:22:22:22 transfer-size 512000 outstanding-ios 2 num-transactions 5000000</code>	Specifies a transfer size of 512,000 bytes with two outstanding I/Os in the write command received by the target. The total number of I/Os is 5,000,000 bytes.
Step 6	<code>switch(san-ext-nport)# stop command-id 100</code>	Stops the command with the specified ID.
	<code>switch(san-ext-nport)# stop all</code>	Stops all outstanding commands.
Step 7	<code>switch(san-ext-nport)# clear counters</code>	Clears the counters associated with this N port.
Step 8	<code>switch(san-ext-nport)# end</code> <code>switch#</code>	Exits the SAN extension tuner submode.

Send documentation comments to dcnm-san-docfeedback@cisco.com

To generate SCSI read or write commands continuously, follow these steps:

	Command	Purpose
Step 1	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.
Step 2	switch(san-ext)# nWWN 10:00:00:00:00:00:00:00	Configures the nWWN for the SAN extension tuner.
Step 3	switch(san-ext)# nport pWWN 12:00:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4 switch(san-ext-nport)#	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
Step 4	switch(san-ext-nport)# read command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 outstanding-ios 2 continuous	Configures SCSI commands to be read continuously. Tip Use the stop command-id command to stop the outstanding configuration.
Step 5	switch(san-ext-nport)# write command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 outstanding-ios 2 continuous	Configures SCSI commands to be written continuously.
Step 6	switch(san-ext-nport)# stop command-id 100 switch(san-ext-nport)# stop command-id all	Stops the command with the specified ID. Stops all outstanding commands.
Step 7	switch(san-ext-nport)# clear counters	Clears the counters associated with this N port.
Step 8	switch(san-ext-nport)# end switch#	Exits the SAN extension tuner submode.

To specify a transfer ready size for a SCSI write command, follow these steps:

	Command	Purpose
Step 1	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.
Step 2	switch(san-ext)# nWWN 10:00:00:00:00:00:00:00	Configures the nWWN for the SAN extension tuner.
Step 3	switch(san-ext)# nport pWWN 12:00:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4 switch(san-ext-nport)#	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
Step 4	switch(san-ext-nport)# write command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 outstanding-ios 2 num-transactions 5000000	Specifies a transfer size of 512,000 bytes with two outstanding I/Os in the write command received by the target. The total number of I/Os is 5,000,000 bytes.
Step 5	switch(san-ext-nport)# transfer-ready-size 512000 switch(san-ext-nport)# no transfer-ready-size 512000	Specifies the maximum transfer ready size of 512,000 bytes as a target for SCSI write commands. For a SCSI write command with a larger size, the target performs multiple transfers based on the specified transfer size. Removes the specified transfer ready size configuration for SCSI write commands.

Send documentation comments to dcnm-san-docfeedback@cisco.com

	Command	Purpose
Step 6	switch(san-ext-nport)# stop command-id 100	Stops the command with the specified ID.
Step 7	switch(san-ext-nport)# end switch#	Exits the SAN extension tuner submode.

Assigning SCSI Tape Read/Write

You can assign SCSI tape read and write commands on a one-time basis or on a continuous basis.



Note

There is only one outstanding I/O at a time to the virtual N-port that emulates the tape behavior.

Detailed Steps

To assign SCSI tape read and or write commands on a one-time basis, follow these steps:

	Command	Purpose
Step 1	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.
Step 2	switch(san-ext)# nWWN 10:00:00:00:00:00:00:00	Configures the nWWN for the SAN extension tuner.
Step 3	switch(san-ext)# nport pWWN 12:00:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4 switch(san-ext-nport)#	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
Step 4	switch(san-ext-nport)# tape-read command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 num-transactions 5000000 filemark-frequency 32	Specifies a transfer size of 512,000 bytes with space over the filemark every 32 SCSI read commands. The total number of I/Os is 5,000,000 bytes.
Step 5	switch(san-ext-nport)# tape-write command-id 101 target 22:22:22:22:22:22:22:22 transfer-size 512000 num-transactions 5000000 filemark-frequency 32	Specifies a transfer size of 512,000 bytes with filemarks written every 32 SCSI write commands. The total number of I/Os is 5,000,000 bytes.
Step 6	switch(san-ext-nport)# stop command-id 100	Stops the command with the specified ID.
	switch(san-ext-nport)# stop all	Stops all outstanding commands.
Step 7	switch(san-ext-nport)# clear counters	Clears the counters associated with this N port.
Step 8	switch(san-ext-nport)# end switch#	Exits the SAN extension tuner submode.

To generate SCSI tape read or write commands continuously, follow these steps:

	Command	Purpose
Step 1	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.
Step 2	switch(san-ext)# nWWN 10:00:00:00:00:00:00:00	Configures the nWWN for the SAN extension tuner.

Send documentation comments to dcnm-san-docfeedback@cisco.com

	Command	Purpose
Step 3	switch(san-ext)# nport pWWN 12:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4 switch(san-ext-nport)#	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
Step 4	switch(san-ext-nport)# tape-read command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 continuous filemark-frequency 32	Configures SCSI tape read commands to be issued continuously. Tip Use the stop command-id command to stop the outstanding configuration.
Step 5	switch(san-ext-nport)# tape-write command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 continuous filemark-frequency 32	Configures SCSI tape write commands to be issued continuously.
Step 6	switch(san-ext-nport)# stop command-id 100 switch(san-ext-nport)# stop command-id all	Stops the command with the specified ID. Stops all outstanding commands.
Step 7	switch(san-ext-nport)# clear counters	Clears the counters associated with this N port.
Step 8	switch(san-ext-nport)# end switch#	Exits the SAN extension tuner submode.

Configuring a Data Pattern

Detailed Steps

To optionally configure a data pattern for SCSI commands, follow these steps:

	Command	Purpose
Step 1	switch# san-ext-tuner switch(san-ext)#	Enters the SET configuration submode.
Step 2	switch(san-ext)# nport pWWN 12:00:00:00:00:00:56 vsan 200 interface gigabitethernet 3/4 switch(san-ext-nport)#	Creates a virtual N port on the specified Gigabit Ethernet port and VSAN. This N port can act as an initiator or a target.
Step 3	switch(san-ext-nport)# data-pattern-file bootflash://DataPatternFile	Specifies the data pattern sent by the virtual N port when it is a target for read commands and an initiator for write commands.. Tip This command should be configured on the target to change the data returned by read commands and on the initiator for write commands. This command is useful to define data sets which contain certain bit patterns or have certain compression ratios. The default data set of all zeros is very homogenous and very compressible.
	switch(san-ext-nport)# no data-pattern-file	Removes the specified data pattern configuration for SCSI read and write commands. The default is to send an all zero data pattern.

Send documentation comments to dcnm-san-docfeedback@cisco.com

	Command	Purpose
Step 4	switch(san-ext-nport)# write command-id 100 target 22:22:22:22:22:22:22:22 transfer-size 512000 outstanding-ios 2 num-transactions 5000000	Specifies a transfer size of 512,000 bytes with two outstanding I/Os. The total number of I/Os is 5,000,000 bytes.
Step 5	switch(san-ext-nport)# stop command-id 100	Stops the command with the specified ID.
Step 6	switch(san-ext-nport)# clear counters	Clears the counters associated with this N port.
Step 7	switch(san-ext-nport)# end switch#	Exits the SAN extension tuner submode.

Verifying SAN Extension Tuner Configuration

To display SAN extension tuner configuration information, perform one of the following tasks:

Command	Purpose
<code>show flogi database</code>	Displays entries in the FLOGI database.
<code>show fcns database vsan 200</code>	Displays the name server database and statistical information for a specified VSAN
<code>show san-ext-tuner interface gigabitethernet 3/4 nport pwwn 12:00:00:00:00:00:56 vsan 200 counters</code>	Displays the actual IOPs, Throughput and Response time counters.
<code>show san-ext-tuner interface gigabitethernet 3/1</code>	Displays all N ports configured on the specified gigabit ethernet interface.
<code>show san-ext-tuner interface gigabitethernet 3/1 nport pwwn 10:0:0:0:0:0:1 vsan 91</code>	Displays the transfer ready size configured for a specified N port.
<code>show san-ext-tuner nports</code>	Displays all virtual N ports configured in this switch.

Verifying the SAN Extension Tuner Configuration

The `show` commands display the current SAN extension tuner settings for the Cisco MDS switch (see Examples to).

Example 3-1 Displays Entries in the FLOGI Database

```
switch# show flogi database
-----
INTERFACE   VSAN   FCID           PORT NAME                               NODE NAME
-----
iscsi3/4    200    0x050000       12:00:00:00:00:00:00:56                 10:00:00:00:00:00:00:00
```

Example 3-2 Displays Details for a VSAN Entry in the FCNS Database

```
switch# show fcns database vsan 200
VSAN 200
-----
FCID        TYPE   PWWN (VENDOR)          FC4-TYPE:FEATURE
-----
0x020000    N      22:22:22:22:22:22:22   scsi-fcp
```

Send documentation comments to dcnm-san-docfeedback@cisco.com

```
0x050000      N      12:00:00:00:00:00:00:56      scsi-fcp
```

Example 3-3 Displays the actual IOPs, Throughput and Response time counters.

```
switch# sh san-ext-tuner interface gigabitethernet 1/2 nport pwwn 01:02:00:05:30:3f:57:40
vsan 100 counters
Statistics for nport
Node name 00:00:00:05:30:3f:57:40 Port name 01:02:00:05:30:3f:57:40
      I/Os per sec      : 26
      Reads             : 15%
      Writes            : 84%
Egress throughput      : 175.38 MBs/sec (Max - 179.35 MBs/sec)
Ingress throughput     : 33.04 MBs/sec (Max - 35.28 MBs/sec)
Average response time  : Read - 4123047 us, Write - 754670 us
Minimum response time  : Read - 978209 us, Write - 108535 us
Maximum response time  : Read - 4391352 us, Write - 3609334 us
Errors                 : 0
switch#
```

Example 3-4 Displays N Ports Configured on a Specified Gigabit Ethernet Interface

```
switch# show san-ext-tuner interface gigabitethernet 3/1
-----
Interface          NODE NAME          PORT NAME          VSAN
-----
GigabitEthernet3/1 10:00:00:00:00:00:00:00 10:00:00:00:00:00:00:01 91
```

Example 3-5 Displays the Transfer Ready Size Configured for a Specified N Port

```
switch# show san-ext-tuner interface gigabitethernet 3/1 nport pwwn 10:0:0:0:0:0:0:1 vsan
91
Node name          : 10:00:00:00:00:00:00:00
Port name          : 10:00:00:00:00:00:00:01
Transfer ready size : all
```

Example 3-6 Displays All Virtual N Ports Configured in This Switch

```
switch# show san-ext-tuner nports
-----
Interface          NODE NAME          PORT NAME          VSAN
-----
GigabitEthernet3/1 10:00:00:00:00:00:00:00 10:00:00:00:00:00:00:01 91
```

Additional References

For additional information related to implementing FCIPs, see the following section:

- [Related Document, page 3-14](#)
- [Standards, page 3-14](#)
- [RFCs, page 3-14](#)

Send documentation comments to dcnm-san-docfeedback@cisco.com

- [MIBs, page 3-14](#)

Related Document

Related Topic	Document Title
Cisco MDS 9000 Family Command Reference	<i>Cisco MDS 9000 Family Command Reference, Release 5.0(1a)</i>

Standards

Standard	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	–

RFCs

RFC	Title
No new or modified RFCs are supported by this feature, and support for existing RFCs has not been modified.	–

MIBs

MIBs	MIBs Link
No new or modified MIBs are supported by this feature, and support for existing MIBs has not been modified.	To locate and download MIBs, go to the following URL: http://www.cisco.com/dc-os/mibs