



Cisco Nexus 3400-S Series NX-OS Software Upgrade and Downgrade Guide, Release 9.2(2)

First Published: 2019-09-27

Last Modified: 2019-11-14

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2019 Cisco Systems, Inc. All rights reserved.



CONTENTS

PREFACE

Preface v

Audience v

Document Conventions v

Related Documentation for Cisco Nexus 9000 Series Switches vi

Documentation Feedback vi

Communications, services, and additional information vi

Cisco Bug Search Tool vii

Documentation feedback vii

CHAPTER 1

New and Changed Information 1

New and Changed Information 1

CHAPTER 2

Upgrading and Downgrading the Cisco Nexus 3400-S Series NX-OS Software 3

About the Software Image 3

Prerequisites for Upgrading the Cisco NX-OS Software 4

Cisco NX-OS Software Upgrade Guidelines and Limitations 4

NX-OS Upgrade History 5

CHAPTER 3

Optionality in Cisco NX-OS Software 7

Optionality in Cisco NX-OS Software 7

Using Modular Packages 9

Booting the NX-OS Image in Base or Full Mode 10

Information About RPMs 10

Format of the RPM 10

Optional RPMs and Their Associated Features 11

Guidelines for NX-OS Feature RPM Installation 12

Using Install CLIs for Feature RPM Operation	13
Using Install CLIs for Digital Signature Support	15
Querying All Installed RPMs	15
Installing the RPMs Using One Step Procedure	17
Installing the RPMs Using Two Steps Procedure	18
Upgrading the RPMs Using One Step	19
Downgrading the RPMs	20
Removing the RPMs	21
Information About YUM Commands	21
Performing Package Operations Using the YUM Commands	21
Finding the Base Version RPM of the Image	22
Checking the List of the Installed RPMs	22
Getting Details of the Installed RPMs	23
Installing the RPMs	23
Upgrading the RPMs	25
Downgrading the RPMs	28
Deleting the RPMs	29
Support for YUM Groups	30
Finding Repositories	37
Finding the Installed YUM Version	38
Mapping the NX-OS CLI to the YUM Commands	38
Configuring an FTP server and Setting up a Local FTP YUM Repository	39
Creating an FTP Server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine	40
Creating a Local FTP YUM Repository	41
Configuring a Switch to Reach an FTP Server	42
Creating User Roles for Install Operation	43



Preface

This preface includes the following sections:

- [Audience, on page v](#)
- [Document Conventions, on page v](#)
- [Related Documentation for Cisco Nexus 9000 Series Switches, on page vi](#)
- [Documentation Feedback, on page vi](#)
- [Communications, services, and additional information, on page vi](#)

Audience

This publication is for network administrators who install, configure, and maintain Cisco Nexus switches.

Document Conventions

Command descriptions use the following conventions:

Convention	Description
bold	Bold text indicates the commands and keywords that you enter literally as shown.
<i>Italic</i>	Italic text indicates arguments for which you supply the values.
[x]	Square brackets enclose an optional element (keyword or argument).
[x y]	Square brackets enclosing keywords or arguments that are separated by a vertical bar indicate an optional choice.
{x y}	Braces enclosing keywords or arguments that are separated by a vertical bar indicate a required choice.
[x {y z}]	Nested set of square brackets or braces indicate optional or required choices within optional or required elements. Braces and a vertical bar within square brackets indicate a required choice within an optional element.

Convention	Description
<code>variable</code>	Indicates a variable for which you supply values, in context where italics cannot be used.
<code>string</code>	A nonquoted set of characters. Do not use quotation marks around the string or the string includes the quotation marks.

Examples use the following conventions:

Convention	Description
<code>screen font</code>	Terminal sessions and information the switch displays are in screen font.
<code>boldface screen font</code>	Information that you must enter is in boldface screen font.
<i><code>italic screen font</code></i>	Arguments for which you supply values are in italic screen font.
<code><></code>	Nonprinting characters, such as passwords, are in angle brackets.
<code>[]</code>	Default responses to system prompts are in square brackets.
<code>!, #</code>	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.

Related Documentation for Cisco Nexus 9000 Series Switches

The entire Cisco Nexus 9000 Series switch documentation set is available at the following URL:

https://www.cisco.com/en/US/products/ps13386/tsd_products_support_series_home.html

Documentation Feedback

To provide technical feedback on this document, or to report an error or omission, please send your comments to nexus9k-docfeedback@cisco.com. We appreciate your feedback.

Communications, services, and additional information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions, and services, visit [Cisco DevNet](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).
- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a gateway to the Cisco bug-tracking system, which maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. The BST provides you with detailed defect information about your products and software.

Documentation feedback

To provide feedback about Cisco technical documentation, use the feedback form available in the right pane of every online document.



CHAPTER 1

New and Changed Information

This chapter provides release-specific information for each new and changed feature in the *Cisco Nexus 3400-S Series NX-OS Software Upgrade and Downgrade Guide, Release 9.2(2)*.

- [New and Changed Information, on page 1](#)

New and Changed Information

Table 1: New and Changed Features for Cisco NX-OS Release 9.2(2)

Feature	Description	Changed in Release	Where Documented
New guide	First publication of Cisco Nexus 3400-S Software Upgrade and Downgrade Guide for release 9.2(2).	9.2(2v)	



CHAPTER 2

Upgrading and Downgrading the Cisco Nexus 3400-S Series NX-OS Software

This chapter describes how to upgrade or downgrade the Cisco NX-OS software. It contains the following sections:

- [About the Software Image, on page 3](#)
- [Prerequisites for Upgrading the Cisco NX-OS Software, on page 4](#)
- [Cisco NX-OS Software Upgrade Guidelines and Limitations, on page 4](#)
- [NX-OS Upgrade History, on page 5](#)

About the Software Image

Each device is shipped with the Cisco NX-OS software preinstalled. The Cisco NX-OS software consists of one NX-OS software image. The image filename begins with "nxos" (for example, nxos.9.2.2.bin). Only this image is required to load the Cisco NX-OS operating system.



Note Another type of binary file is the software maintenance upgrade (SMU) package file. SMUs contain fixes for specific defects. They are created to respond to immediate issues and do not include new features. SMU package files are available for download from Cisco.com and generally include the ID number of the resolved defect in the filename (for example, n3400-dk9.2.2.CSCab00001.gbin). For more information on SMUs, see the "Performing Software Maintenance Upgrades" chapter in the *Cisco Nexus 3400-S NX-OS System Management Configuration Guide*.



Note Cisco also provides electronic programmable logic device (EPLD) image upgrades to enhance hardware functionality or to resolve known hardware issues. The EPLD image upgrades are independent from the Cisco NX-OS software upgrades. For more information on EPLD images and the upgrade process, see the [Cisco Nexus 3400-S Platform FPGA/EPLD Upgrade Release Notes](#).

Prerequisites for Upgrading the Cisco NX-OS Software

Upgrading the Cisco NX-OS software has the following prerequisites:

- Ensure that everyone who has access to the device or the network is not configuring the device or the network during this time. You cannot configure a device during an upgrade. Use the **show configuration session summary** command to verify that you have no active configuration sessions.
- Save, commit, or discard any active configuration sessions before upgrading or downgrading the Cisco NX-OS software image on your device. On a device with dual supervisors, the active supervisor module cannot switch over to the standby supervisor module during the Cisco NX-OS software upgrade if you have an active configuration session.
- Ensure that the device has a route to the remote server. The device and the remote server must be in the same subnetwork if you do not have a router to route traffic between subnets. To verify connectivity to the remote server, use the **ping** command.

```
switch# ping 172.18.217.1 vrf management
PING 172.18.217.1 (172.18.217.1): 56 data bytes
64 bytes from 172.18.217.1: icmp_seq=0 ttl=239 time=106.647 ms
64 bytes from 172.18.217.1: icmp_seq=1 ttl=239 time=76.807 ms
64 bytes from 172.18.217.1: icmp_seq=2 ttl=239 time=76.593 ms
64 bytes from 172.18.217.1: icmp_seq=3 ttl=239 time=81.679 ms
64 bytes from 172.18.217.1: icmp_seq=4 ttl=239 time=76.5 ms

--- 172.18.217.1 ping statistics ---
5 packets transmitted, 5 packets received, 0.00% packet loss
round-trip min/avg/max = 76.5/83.645/106.647 ms
```

Cisco NX-OS Software Upgrade Guidelines and Limitations



Note The [Cisco Nexus 3400-S NX-OS Release Notes](#) contain specific upgrade guidelines for each release. See the Release Notes for the target upgrade release before starting the upgrade.

Before attempting to upgrade to any software image, note these guidelines and limitations:

- Schedule the upgrade when your network is stable and steady.
- Avoid any power interruption, which could corrupt the software image, during the installation procedure.
- On devices with dual supervisor modules, both supervisor modules must have connections on the console ports to maintain connectivity when switchovers occur during a software upgrade. See the [Hardware Installation Guide](#) for your specific chassis.
- Perform the installation on the active supervisor module, not the standby supervisor module.
- The **install all nxos** command is the recommended method for software upgrades because it performs configuration compatibility checks and BIOS upgrades automatically. In contrast, changing the boot variables and reloading the device bypasses these checks and the BIOS upgrade and therefore is not recommended.

- For secure POAP, ensure that DHCP snooping is enabled and set firewall rules to block unintended or malicious DHCP servers. For more information on POAP, see the "Using PowerOn Auto Provisioning" chapter in the *Cisco Nexus 3400-S NX-OS Fundamentals Configuration Guide*.
- By default, the software upgrade process is disruptive.

The following describe the supported upgrade paths for the current release of the Cisco NX-OS software on the Cisco Nexus 3400-S platform switch:



Note The only supported upgrade method for any of the above paths is the disruptive upgrade performed by the **install all nxos** command.

NX-OS Upgrade History

During the life of a Cisco Nexus 3400-S switch, many upgrade procedures can be performed. Upgrades can occur for maintenance purposes or to update the operating system to obtain new features. Over time, switches may be updated on numerous occasions. Viewing the types of upgrades and when they occurred can help in troubleshooting issues or simply understanding the history of the switch.

Beginning with Cisco NX-OS Release 9.3(5), Cisco Nexus 3400-S switches log all upgrade activity performed over time providing a comprehensive history of these events. The stored upgrade history types are:

- Cisco NX-OS System Upgrades
- Electronic Programmable Logic Device (EPLD) Upgrades
- Software Maintenance Upgrade (SMU) Installations

View the Cisco NX-OS upgrade history by entering the **show upgrade history** command. The output displays any upgrade activity that previously occurred on the switch and defines the start and end times for each event. The following is an example output of the **show upgrade history** command:

```
switch# show upgrade history
TYPE                VERSION  DATE                STATUS
NXOS EPLD           n3400-   26 Apr 2020 11:37:16 EPLD Upgrade completed
                    epld.9.3.4.img
NXOS EPLD           n3400-   26 Apr 2020 11:32:41 EPLD Upgrade started
                    epld.9.3.4.img
NXOS system image   9.3(5)   24 Mar 2020 20:09:10 Installation End
NXOS system image   9.3(5)   24 Mar 2020 20:05:29 Installation started
NXOS SMU            9.3(5)   03 Mar 2020 23:34:15 Patch activation ended for
                    nxos.libnbproxyccli_patch-n3400_
                    ALL-1.0.0-9.3.5.lib32_n3400.rpm
NXOS SMU            9.3(5)   03 Mar 2020 23:34:03 Patch activation started for
                    nxos.libnbproxyccli_patch-n3400_
                    ALL-1.0.0-9.3.5.lib32_n3400.rpm
```




CHAPTER 3

Optionality in Cisco NX-OS Software

This chapter describes optionality in Cisco NX-OS software.

- [Optionality in Cisco NX-OS Software, on page 7](#)
- [Using Modular Packages, on page 9](#)
- [Booting the NX-OS Image in Base or Full Mode, on page 10](#)
- [Information About RPMs, on page 10](#)
- [Information About YUM Commands, on page 21](#)
- [Configuring an FTP server and Setting up a Local FTP YUM Repository, on page 39](#)
- [Creating User Roles for Install Operation, on page 43](#)

Optionality in Cisco NX-OS Software

Beginning with Cisco NXOS Release 9.2(1), Cisco NX-OS software image supports modular package management. Cisco NX-OS software now provides flexibility to add, remove, and upgrade the features selectively without changing the base NX-OS software.


The advantages for using modular Cisco NX-OS software are:

- Lean NX-OS software
- Asynchronous delivery of the features and the fixes: Quick fixes are provided that are independent of the releases, including new features.
- Reduced footprint of binaries and libraries at run time

Cisco NX-OS software is provisioned to boot the NX-OS software in two modes as described in the following illustration:

- Base NX-OS mode
- Full NX-OS mode

Figure 1: Optionality in Cisco NX-OS Software

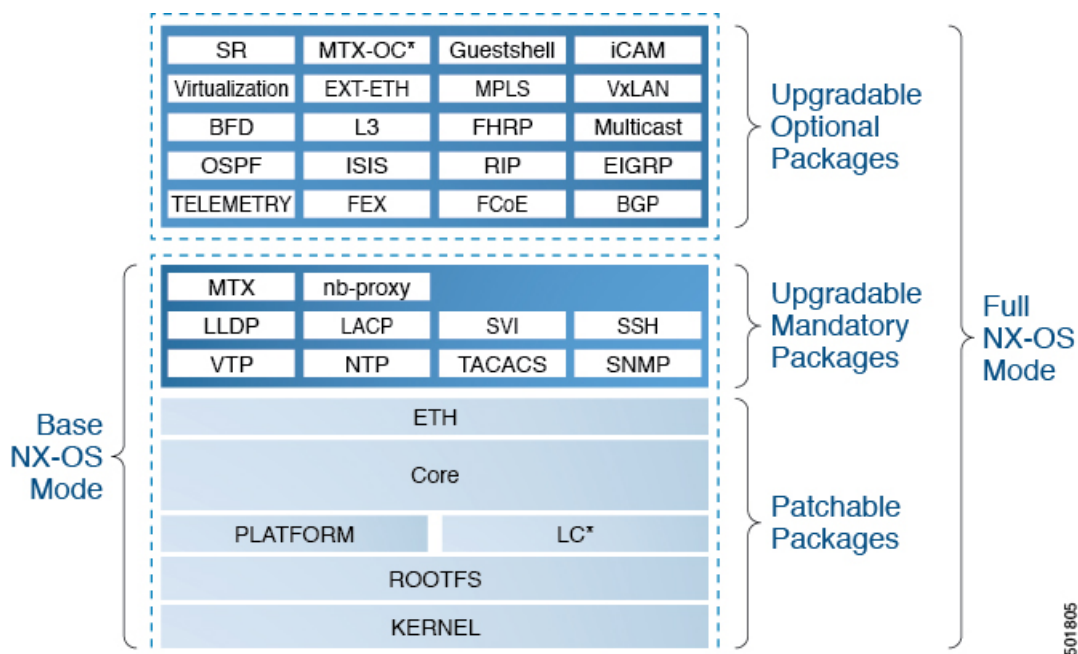

Note The following optional packages are not supported in the Cisco NX-OS Release 9.2(2v):

- SR
 - ICAM
 - Virtualization
 - MPLS
 - VxLAN
 - Multicast
 - FEX
 - FCoE
-
- Base NX-OS mode contains:
 - Upgradable mandatory packages
 - Patchable packages
 - Full NX-OS mode contains:
 - Upgradable optional packages
 - Upgradable mandatory packages
 - Patchable packages



Note The default mode is full NX-OS mode.

In base NX-OS mode, basic Layer 2 and Layer 3 features are available. All dynamic routing features (for example, BGP, OSPF, EIGRP, RIP, and ISIS) and other optional feature RPMs are not available by default. You have to install the optional feature RPMs on top of the base image.

In full NX-OS mode, all feature RPMs are installed during boot time when Ethernet plugin is activated by the plugin manager. There is no change in the user behavior as compared to the previous releases.

Using Modular Packages

The Cisco NX-OS software image is traditionally constructed with the packaging that forms a Cisco Linux distribution. It makes upgrading certain packages difficult as each package is big in size.

This section describes a new package management for the Cisco NX-OS software image. Beginning with Cisco NX-OS Release 9.2(1), some NXOS features are considered as optional, for example, BGP and OSPF.

Each modular package has the following important characteristics:

- Upgrade functionality: The modular packages can be independently upgraded. The modular packages should be used from the same release as performing upgrades on these packages across multiple releases is not supported.
- Optionality: The modular packages are optional, for example, these packages can be removed or uninstalled at run time. The removal of the modular packages does not affect bringing-up the system and it does not affect any other functionality of the switches.



Note All APIs exported by the modular package should be used only after the installation of the feature.

RPM and YUM

RPM (RedHat Package Manager) is the package management system used for packaging in the Linux Standard Base (LSB). The RPM command options are grouped into three subgroups for:

- Querying and verifying packages
- Installing, upgrading, and removing packages
- Performing miscellaneous functions

Note that **rpm** is the command name for the main command used with RPM, while **.rpm** is the extension used for the RPM files.

YUM (Yellowdog Updater, Modified) is an open source command-line tool for RPM based Linux systems. It allows users and system administrators to easily install, update, remove, or search software packages on the systems. YUM adds the automatic updates and the package management, including dependency management, to the RPM systems. In addition to understanding the installed packages on a system, YUM works with the repositories that are collections of the packages and they are typically accessible over a network connection.

Booting the NX-OS Image in Base or Full Mode

You can now boot the NX-OS image in base or full mode. The full boot mode installs the complete NX-OS software which is similar to the software of the previous releases. This is the default boot mode. The base boot mode has no optional RPMs installed.

To use the command line option, see the following steps:

- Use the **install reset nxos base** option to install the NX-OS image in the base boot mode using the VSH prompt. After reload, the switch is in the base mode with no optional packages installed.
- Use the **install reset nxos full** option to install the NX-OS image in the full boot mode using the VSH prompt. After reload, the switch is in the full mode with the optional packages automatically installed.

For more information, see Using Install CLIs for Feature RPM Operation section.

Information About RPMs

RPMs can be upgraded or downgraded to a new software version using NXOS install commands or by using YUM commands. An upgradable RPM can be optional or mandatory.

See the following sections for more information about optional and mandatory RPMs.

Format of the RPM

The general format of a RPM is <name>-<version>-<release>.<arch>.rpm. The same format is followed for NXOS feature RPMs.

- Name: package name, for example, BFD
- Version in <x.y.x.b> format: <major.minor.patch.build_number>, for example, 2.0.1.0
- Release: The branch from which the RPM is created, for example, 9.2.2
- Arch: The architecture type of the RPM, for example, lib32_n3400-s

See the following table for more information on the naming convention, for example, bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm:

Table 2: RPM Naming Convention

RPM Naming Convention Example: bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm	Description
bfd	Indicates the name of the component.
2	Indicates that the RPM is not backward compatible. Configuration loss takes place during an upgrade.

RPM Naming Convention Example: bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm	Description
0	Indicates the incremental API changes/CLI changes/Schema changes with backward compatibility. It is applicable to the new features on top of the existing capabilities. No configuration is lost during an upgrade.
0	Indicates a bug fix without any functionality change. No configuration is lost during an upgrade.
0	This number tracks how many times the component has changed during the development cycle of a release. This value will be 0 for all the release images.
9.2.2	Indicates the release number or the distribution version for the RPM. It aligns to the NVR format. Since the feature RPM is only applicable to a NXOS release, this field has NXOS release version number present.
lib32_n3400-s	Indicates the architecture type of the RPM.

Optional RPMs and Their Associated Features

The optional RPMs are the RPMs that can be installed to enable the features without affecting the native NXOS behavior or they can be removed using the **install deactivate** command from the switch.

Optional RPMs, for example, EIGRP are not a part of the base software. They can be added, upgraded, and removed as required using either **yum** or **install** CLI commands from the switch.

See the following list of the optional RPMs and their associated features:

Table 3: List of Optional RPMs and Their Associated Features

Package Name	Associated Features
BGP	feature bgp
BFD	feature bfd
Container-tracker	feature container-tracker
EIGRP	feature eigrp
Ext-Eth	<ul style="list-style-type: none"> • feature sla_sender • feature sla_responder • feature sla twamp-server • feature sflow

Package Name	Associated Features
FHRP	<ul style="list-style-type: none"> • feature hsrp • feature vrrpv3
ISIS	feature isis
OSPF	<ul style="list-style-type: none"> • feature ospf • feature ospfv3
RIP	feature rip
TELEMETRY	feature telemetry

Guidelines for NX-OS Feature RPM Installation

See the following NX-OS system RPM repositories that are present in the Cisco NX-OS Series switches for the RPM management.



Note Avoid manually copying the RPMs to system repositories. Instead use the install or YUM commands.

Table 4: RPM Repositories That Are Present in the Switches

Repository Name	Repository Path	Description
groups-repo	/rpms	Part of the bundled NX-OS image. It is used to keep all the RPMs that are bundled as part of the NX-OS image. All RPMs based in this repository are known as base RPMs.

Repository Name	Repository Path	Description
localdb	/bootflash/.rpmstore/patching/localrepo	<p>Used for RPM persistency. When a user adds a NX-OS feature RPM as part of install add command, the RPM is copied to this location and it is persisted during the reloads. User has the responsibility to clean the repository.</p> <p>To add a RPM to this repository, use install add command.</p> <p>To remove a RPM from this repository, use install remove command.</p> <p>YUM commands can be used to populate the repository too.</p> <p>The maximum space for the repository is 200Mb along with the patching repository for Cisco Nexus 9000 Series switches except Cisco Nexus 3000 Series switches. For Cisco Nexus 3000 Series switches, the maximum space for the repository is 20 Mb only.</p>
patching	/bootflash/.rpmstore/patching/patchrepo	Used for RPM persistency. When a user adds a NX-OS patch RPM to the switch, the patch RPM is copied to this repository.
thirdparty	/bootflash/.rpmstore/thirdparty	Used for RPM persistency when a user adds a third party RPM.

The **groups-repo** and **localdb** repositories hold the NX-OS feature RPMs that should be installed during the system boot or during activation. YUM commands or **install** command can be used for the installation or the removal of these RPMs.

The following rules are applied to the feature RPM installation procedure during boot or install time:

- Only RPMs with the same NX-OS release number should be selected for the installation.
- Base RPMs cannot be added to the **localdb** repository.

Using Install CLIs for Feature RPM Operation

See the following reference table for using install CLIs for the feature RPM operations:

Table 5: Reference for Install CLIs for the Feature RPM Operations

CLI	Description
install reset	<p>This operation removes all the patches, persisted configurations, upgraded packages, third party installed packages, unsaved configurations, and reloads the switch's previous mode (Full/Base) with the default packages.</p> <p>The install reset command also performs write erase operation. The following message is displayed at the prompt:</p> <pre>switch(config)# install reset</pre> <hr/> <p>WARNING!!This operation will remove all patches, upgraded packages, persisted etc configs, third party packages installed, startup configuration(write erase) and reload the switch with default packages.</p> <hr/> <p>Do you want to proceed with reset operation? (y/n)? [n]</p>
install reset nxos base	This operation installs NXOS in base mode by removing all patches, upgraded packages, persisted etc configurations, third party packages installed, startup configuration (write erase), and reloads the switch with the default packages.
install reset nxos full	This operation installs NXOS with full mode by removing all patches, upgraded packages, persisted etc configs, third party packages installed, startup configuration (write erase), and reloads the switch with the default packages (with mandatory and optional RPMs).
install add <>	Adds an RPM file to respective repository and updates the repository (patch/feature/third-party).
install activate <rpm name>	Installs an RPM that is present in the repository.
install commit <rpm name>	Used for the patch RPMs. Makes the patch persist during reload.
install deactivate <rpm name>	Un-installs an RPM.
install remove <rpm name>	Removes an RPM file from the repository and updates the repository.
sh install active	Displays the list of the installed RPMs in the system apart from base rootfs RPMs. (features/patch/third-party).

CLI	Description
sh install inactive	Displays the list of the RPMs that are present in the repository but they are not installed.
sh install packages	Lists all the RPMs that are installed including rootfs RPMs.

Using Install CLIs for Digital Signature Support

Use the following CLI commands to install CLIs for digital signature support:

SUMMARY STEPS

1. switch#**install add bootflash:<keyfile> gpg-key**
2. switch#**install verify package <package-name>**
3. OR switch#**install verify bootflash:<RPM file>**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	switch# install add bootflash:<keyfile> gpg-key Example: <pre>install add bootflash:RPM-GPG-KEY-puppetlabs gpg-key [#####] 100% Install operation 304 completed successfully at Thu Jun 19 16:40:28 2018</pre>	Cisco release RPMs are signed with Cisco GPG (GNU Privacy Guard) key. The public GPG key is present at /etc/pki/rpm-gpg/arm-Nexus9k-rel.gpg . To add other public keys from different sources, use the steps in this section.
Step 2	switch# install verify package <package-name>	Verifies the package.
Step 3	OR switch# install verify bootflash:<RPM file> Example: <pre>switch# install verify bootflash:bgp-2.0.0.0-9.2.2.lib32_n3400.rpm RSA signed switch#</pre>	Use step 2 or 3 to verify whether the RPM file is a signed or non-signed file.

Querying All Installed RPMs

Complete the following step to query all the installed RPMs:

SUMMARY STEPS

1. show install packages

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	show install packages Example: <pre>switch# show install packages</pre> <p>Boot Image: NXOS Image: bootflash:/nxos.9.2.2.bin</p> <p>-----</p> <pre>Installed Packages attr.x86_64 2.4.47-r0.0 installed Unsigned aufs-util.x86_64 3.14+git0+b59a2167a1-r0.0 installed Unsigned base-files.n3400-s 3.0.14-r89.0 installed Unsigned base-passwd.lib32_x86 3.5.29-r0.1.0 installed Unsigned bash.lib32_x86 4.3.30-r0.0 installed Unsigned bfd.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed bgp.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed binutils.x86_64 2.25.1-r0.0 installed Unsigned bridge-utils.x86_64 1.5-r0.0 installed Unsigned busybox.x86_64 1.23.2-r0.0 installed Unsigned busybox-udhcp.x86_64 1.23.2-r0.0 installed Unsigned bzip2.x86_64 1.0.6-r5.0 installed Unsigned ca-certificates.all 20150426-r0.0 installed Unsigned cgroup-lite.x86_64 1.1-r0.0 installed Unsigned chkconfig.x86_64 1.3.58-r7.0 installed Unsigned container-tracker.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed containerd-docker.x86_64 0.2.3+gitaa8187dbd3b7ad67d8e5e3a15115d3eef43a7ed1-r0.0 installed Unsigned core.lib32_n3400-s 2.0.0.0-9.2.2 installed Signed coreutils.lib32_x86 8.24-r0.0 installed Unsigned cpio.x86_64 2.12-r0.0 installed Unsigned cracklib.lib32_x86 2.9.5-r0.0 installed Unsigned cracklib.x86_64 2.9.5-r0.0 installed Unsigned createrepo.x86_64 0.4.11-r9.0 installed Unsigned cronie.x86_64 1.5.0-r0.0 installed Unsigned curl.lib32_x86 7.60.0-r0.0 installed Unsigned db.x86_64 6.0.30-r0.0 installed Unsigned dbus-1.lib32_x86 1.8.20-r0.0 installed Unsigned dhcp-client.x86_64 4.3.2-r0.0 installed Unsigned dhcp-server.x86_64 4.3.2-r0.0 installed Unsigned switch#</pre>	Queries all the installed RPMs.

Installing the RPMs Using One Step Procedure

The CLIs for both install and upgrade RPMs are the same. See the following step to install the RPMs using one step procedure:

Procedure

	Command or Action	Purpose
Step 1	install add <rpm> activate Example: <pre>switch# install add bootflash:chef.rpm activate Adding the patch (/chef.rpm) [#####] 100% Install operation 868 completed successfully at Tue May 8 11:20:10 2018 Activating the patch (/chef.rpm) [#####] 100% Install operation 869 completed successfully at Tue May 8 11:20:20 2018</pre>	Installs and activates the RPM.

Example

```
switch# show install active
Boot Image:
    NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
bgp-2.0.1.0-9.2.2.lib32_n3400-s
chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.el5.x86_64

Active Base Packages:
  lacp-2.0.0.0-9.2.2.lib32_n3400-s
  lldp-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
  ntp-2.0.0.0-9.2.2.lib32_n3400-s
  nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
  snmp-2.0.0.0-9.2.2.lib32_n3400-s
  svi-2.0.0.0-9.2.2.lib32_n3400-s
  tacacs-2.0.0.0-9.2.2.lib32_n3400-s
  vtp-2.0.0.0-9.2.2.lib32_n3400-s
switch(config)#
```

Installing the RPMs Using Two Steps Procedure

The CLIs for both install and upgrade RPMs are the same. See the following steps to install the RPMs using two steps procedure:

SUMMARY STEPS

1. **install add** *<rpm>*
2. **install activate** *<rpm>*

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	install add <i><rpm></i> Example: <pre>switch# install add bootflash:bgp-2.0.1.0-9.2.2.lib32_n3400.rpm [#####] 100% Install operation 892 completed successfully at Thu Jun 7 13:56:38 2018 switch(config)# sh install inactive grep bgp bgp-2.0.1.0-9.2.2.lib32_n3400-s</pre>	Installs the RPM.
Step 2	install activate <i><rpm></i> Example:	Activates the RPM.

Example

```
switch#install activate bgp

[#####] 100%
Install operation 891 completed successfully at Thu Jun  7 13:53:07 2018

switch# show install active | grep bgp
bgp-2.0.0.0-9.2.2.lib32_n3400

switch# sh install inactive | grep bgp

switch#
```

Upgrading the RPMs Using One Step

The CLIs for both install and upgrade RPMs are the same. See the following steps to upgrade the RPMs:

Procedure

	Command or Action	Purpose
Step 1	install add <rpm>activate upgrade Example: <pre>switch(config)# install add bootflash:bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm activate upgrade</pre> <p>Adding the patch (/bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 870 completed successfully at Tue May 8 11:22:30 2018</p> <p>Activating the patch (/bgp-2.0.2.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 871 completed successfully at Tue May 8 11:22:40 2018</p>	Installs the RPM.

Example

```
switch(config)# show install active
```

Boot Image:

NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:

```
bgp-2.0.2.0-9.2.2.lib32_n3400-s
chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.el5.x86_64
```

Active Base Packages:

```
lACP-2.0.0.0-9.2.2.lib32_n3400-s
lldp-2.0.0.0-9.2.2.lib32_n3400-s
mtx-device-2.0.0.0-9.2.2.lib32_n3400-s
mtx-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-infra-2.0.0.0-9.2.2.lib32_n3400-s
mtx-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
mtx-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
ntp-2.0.0.0-9.2.2.lib32_n3400-s
nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
snmp-2.0.0.0-9.2.2.lib32_n3400-s
svi-2.0.0.0-9.2.2.lib32_n3400-s
tacacs-2.0.0.0-9.2.2.lib32_n3400-s
vtp-2.0.0.0-9.2.2.lib32_n3400-s
```

Downgrading the RPMs

The downgrade procedure needs a special CLI attribute. See the following step to downgrade the RPMs using the one step procedure:

Procedure

	Command or Action	Purpose
Step 1	install add <rpm>activate downgrade Example: <pre>switch(config)# install add bootflash:bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm activate downgrade</pre> <p>Adding the patch (/bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 872 completed successfully at Tue May 8 11:24:43 2018</p> <p>Activating the patch (/bgp-2.0.1.0-9.2.2.lib32_n3400-s.rpm) [#####] 100% Install operation 873 completed successfully at Tue May 8 11:24:52 2018</p>	Downgrades the RPM.

Example

```
switch(config)# show install active
Boot Image:
  NXOS Image: bootflash:/nxos.9.2.2.bin

Active Packages:
  bgp-2.0.1.0-9.2.2.lib32_n3400-s
  chef-12.0.0alpha.2+20150319234423.git.1608.b6eb10f-1.el5.x86_64

Active Base Packages:
  lACP-2.0.0.0-9.2.2.lib32_n3400-s
  lldp-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-device-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-infra-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s
  mtX-telemetry-2.0.0.0-9.2.2.lib32_n3400-s
  ntp-2.0.0.0-9.2.2.lib32_n3400-s
  nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s
  snmp-2.0.0.0-9.2.2.lib32_n3400-s
  svi-2.0.0.0-9.2.2.lib32_n3400-s
  tacacs-2.0.0.0-9.2.2.lib32_n3400-s
  vtp-2.0.0.0-9.2.2.lib32_n3400-s
switch(config)#
```

Removing the RPMs

See the following steps to remove the RPMs:

SUMMARY STEPS

1. **install remove** *<rpm>*

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	install remove <i><rpm></i> Example: <pre>switch(config)# show install inactive grep bgp bgp-2.0.0.0-9.2.2.lib32_n93400 switch(config)# install remove bgp Proceed with removing bgp? (y/n)? [n] y [#####] 100% Install operation 890 Removal of base rpm package is not permitted at Thu Jun 7 13:52:15 2018</pre>	Removes the RPM from the repository.

Information About YUM Commands

See the following sections for more information about YUM commands.



Note YUM commands do not support ctrl+c. Install commands do support ctrl+c. If YUM commands are aborted using ctrl+c, manual cleanup must be performed using "/isan/bin/patching_utils.py --unlock".

Performing Package Operations Using the YUM Commands

See the following sections for performing package operations using the YUM commands:



Note YUM commands are accessed only from the BASH shell on the box and they are not allowed from the NXOS VSH terminal.



Note Make sure that as a sudo user, you have access to the super user privileges.

Finding the Base Version RPM of the Image

Use the **ls /rpms** command to find the base version RPM of the image. The base RPM version is the pre-installed RPM that is archived in the system image.

#ls /rpms

```
bfd-2.0.0.0-9.2.2.lib32_n3400-s.rpm          lACP-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      nxos-ssh-2.0.0.0-9.2.2.lib32_n3400-s.rpm
bgp-2.0.0.0-9.2.2.lib32_n3400-s.rpm          lldp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      ospf-2.0.0.0-9.2.2.lib32_n3400-s.rpm
container-tracker-2.0.0.0-9.2.2.lib32_n3400-s.rpm  mtX-device-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      repodata
eigrp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtX-grpc-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm      rip-2.0.0.0-9.2.2.lib32_n3400-s.rpm
ext-eth-2.0.0.0-9.2.2.lib32_n3400-s.rpm          mtX-infra-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      snmp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
fhrp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtX-netconf-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm  svi-2.0.0.0-9.2.2.lib32_n3400-s.rpm
guestshell-2.0.0.0-9.2.2.lib32_n3400-s.rpm
mtX-restconf-agent-2.0.0.0-9.2.2.lib32_n3400-s.rpm  tacacs-2.0.0.0-9.2.2.lib32_n3400-s.rpm
ins_tor_sdk_t2-1.0.0.0-9.2.0.77.lib32_n3400-s.rpm
mtX-telemetry-2.0.0.0-9.2.2.lib32_n3400-s.rpm      telemetry-2.3.4.0-9.2.2.lib32_n3400-s.rpm
ins_tor_sdk_t3-1.0.0.0-9.2.0.77.lib32_n3400-s.rpm  nbproxy-2.0.0.0-9.2.2.lib32_n3400-s.rpm
      vtp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
isis-2.0.0.0-9.2.2.lib32_n3400-s.rpm          ntp-2.0.0.0-9.2.2.lib32_n3400-s.rpm
```

Checking the List of the Installed RPMs

Use the **yum list installed** command to query the feature and third party RPMs and grep a specific RPM. See the following example for feature RPMs:

bash-4.2# yum list installed | grep lib32_n3400-s

```
bfd.lib32_n3400-s          2.0.0.0-9.2.2      @groups-repo
core.lib32_n3400-s        2.0.0.0-9.2.2      installed
eth.lib32_n3400-s         2.0.0.0-9.2.2      installed
guestshell.lib32_n3400-s  2.0.0.0-9.2.2      @groups-repo
lACP.lib32_n3400-s        2.0.0.0-9.2.2      installed
linecard2.lib32_n3400-s   2.0.0.0-9.2.2      installed
lldp.lib32_n3400-s        2.0.0.0-9.2.2      installed
mtX-device.lib32_n3400-s  2.0.0.0-9.2.2      installed
mtX-grpc-agent.lib32_n3400-s  2.0.0.0-9.2.2      installed
mtX-infra.lib32_n3400-s   2.0.0.0-9.2.2      installed
mtX-netconf-agent.lib32_n3400-s  2.0.0.0-9.2.2      installed
mtX-restconf-agent.lib32_n3400-s  2.0.0.0-9.2.2      installed
mtX-telemetry.lib32_n3400-s  2.0.0.0-9.2.2      installed
nbproxy.lib32_n3400-s     2.0.0.0-9.2.2      installed
ntp.lib32_n3400-s         2.0.0.0-9.2.2      installed
nxos-ssh.lib32_n3400-s    2.0.0.0-9.2.2      installed
ospf.lib32_n3400-s        2.0.0.0-9.2.2      @groups-repo
platform.lib32_n3400-s    2.0.0.0-9.2.2      installed
snmp.lib32_n3400-s        2.0.0.0-9.2.2      installed
svi.lib32_n3400-s         2.0.0.0-9.2.2      installed
tacacs.lib32_n3400-s     2.0.0.0-9.2.2      installed
```

```

tor.lib32_n3400-s                2.0.0.0-9.2.0.77      installed
virtualization.lib32_n3400-s    2.0.1.0-9.2.2        @localdb
vtp.lib32_n3400-s              2.0.0.0-9.2.2        installed
...

```

Getting Details of the Installed RPMs

The **yum info <rpmname>** command lists out the detailed info of the installed RPM.

yum info bfd

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

```

```

localdb                | 1.1 kB    00:00 ...
patching               | 951 B     00:00 ...
thirdparty             | 951 B     00:00 ...

```

```

Installed Packages
Name      : bfd
Arch      : lib32_n3400-s
Version   : 2.0.0.0
Release   : 9.2.2
Size      : 6.4 M
Repo      : installed
From repo : groups-repo
Summary   : Cisco NXOS BFD
URL       : http://cisco.com/
License   : Proprietary
Description : Provides BFD support

```

Installing the RPMs

Installing the RPMs downloads the RPMs and copies the respective program to the switches. See the following example for installing the RPMs from a remote server (that is reachable in the network):

```

bash-4.3# yum install
http://10.0.0.2/modularity/rpms/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm

```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

```

```

localdb                | 1.1 kB    00:00 ...
localdb/primary        | 951 B     00:00 ...
localdb                | 886 B     00:00 ...
                        1/1
patching               | 951 B     00:00 ...
thirdparty

```

```

| 951 B      00:00 ...
Setting up Install Process
bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
| 1.6 MB      00:00
Examining /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm:
bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /var/tmp/yum-root-RaANgb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm to be installed
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be installed
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Repository	Arch	Version Size
Installing:			
bfd		lib32_n3400	2.0.1.0-9.2.2
		/bfd-2.0.1.0-9.2.2.lib32_n3400	6.4 M
Transaction Summary			

Install 1 Package

```

Total size: 6.4 M
Installed size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Installing : bfd-2.0.1.0-9.2.2.lib32_n3400
                                                    1/1

starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete

```

```

Installed:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

```

Complete!

See the following example for installing the RPMs from local bootflash:

```
sudo yum install /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

```

```

| 1.1 kB      00:00 ...
localdb

| 951 B      00:00 ...
patching

| 951 B      00:00 ...
thirdparty

```



```

| 951 B      00:00 ...
Setting up Install Process
Examining /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm: bfd-2.0.1.0-9.2.2.lib32_n3400
Marking /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution

```

Dependencies Resolved

Package Version	Arch Size	Repository
Updating: bfd 2.0.1.0-9.2.2	lib32_n3400 6.4 M	/bfd-2.0.1.0-9.2.2.lib32_n3400

Transaction Summary

Upgrade 1 Package

```

Total size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Updating   : bfd-2.0.1.0-9.2.2.lib32_n3400

                                1/2
starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
  Cleanup    : bfd-2.0.0.0-9.2.2.lib32_n3400

                                2/2

```

```

Updated:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

```

Complete!

See the following example for installing the RPM if it is available in a repository:

```
yum install eigrp
```

Upgrading the RPMs

See the following example for upgrading the RPMs from a remote server (that is reachable in the network):

```
bash-4.3# yum upgrade
http://10.0.0.2/modularity/rpms/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```

                                | 1.1 kB    00:00 ...
localdb
                                |  951 B    00:00 ...
patching
                                |  951 B    00:00 ...
thirdparty
                                |  951 B    00:00 ...
```

```
Setting up Upgrade Process
```

```
bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
| 1.6 MB    00:00
```

```
Examining /var/tmp/yum-root-RaAngb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm:
```

```
bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
Marking /var/tmp/yum-root-RaAngb/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
Resolving Dependencies
```

```
--> Running transaction check
```

```
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
```

```
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
```

```
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package	Repository	Arch	Version	Size
Updating:				
bfd		lib32_n3400	2.0.1.0-9.2.2	
	/bfd-2.0.1.0-9.2.2.lib32_n3400			6.4 M
Transaction Summary				

```
Upgrade      1 Package
```

```
Total size: 6.4 M
```

```
Is this ok [y/N]: y
```

```
Downloading Packages:
```

```
Running Transaction Check
```

```
Running Transaction Test
```

```
Transaction Test Succeeded
```

```
Running Transaction
```

```
** Found 1 pre-existing rpmdb problem(s), 'yum check' output follows:
```

```
busybox-1.23.2-r0.0.x86_64 has missing requires of busybox-syslog
```

```
Updating      : bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
1/2
```

```
starting pre-install package version mgmt for bfd
```

```
pre-install for bfd complete
```

```
starting post-install package version mgmt for bfd
```

```
post-install for bfd complete
```

```
Cleanup      : bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
2/2
```

```
Updated:
```

```
bfd.lib32_n3400 0:2.0.1.0-9.2.2
```

Complete!

See the following example for upgrading the RPMs from local bootflash:

```
sudo yum upgrade /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm
```

```
Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo
```

```
localdb          | 1.1 kB      00:00 ...
```

```
patching         | 951 B       00:00 ...
```

```
thirdparty       | 951 B       00:00 ...
```

```
Setting up Upgrade Process
```

```
Examining /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm: bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
Marking /bootflash/bfd-2.0.1.0-9.2.2.lib32_n3400.rpm as an update to
```

```
bfd-2.0.0.0-9.2.2.lib32_n3400
```

```
Resolving Dependencies
```

```
--> Running transaction check
```

```
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be updated
```

```
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be an update
```

```
--> Finished Dependency Resolution
```

```
Dependencies Resolved
```

Package Version	Arch	Repository
	Size	
Updating:		
bfd	lib32_n3400	
2.0.1.0-9.2.2	6.4 M	/bfd-2.0.1.0-9.2.2.lib32_n3400

```
Transaction Summary
```

```
Upgrade      1 Package
```

```
Total size: 6.4 M
```

```
Is this ok [y/N]: y
```

```
Downloading Packages:
```

```
Running Transaction Check
```

```
Running Transaction Test
```

```
Transaction Test Succeeded
```

```
Running Transaction
```

```
Updating      : bfd-2.0.1.0-9.2.2.lib32_n3400
```

```
1/2
```

```
starting pre-install package version mgmt for bfd
```

```
pre-install for bfd complete
```

```
starting post-install package version mgmt for bfd
```

```
post-install for bfd complete
```

```
Cleanup      : bfd-2.0.0.0-9.2.2.lib32_n3400
```

2/2

Updated:
bfd.lib32_n3400 0:2.0.1.0-9.2.2

Complete!

See the following example for upgrading the RPMs if it is available in any repository:

yum upgrade eigrp

Downgrading the RPMs

See the following example for downgrading the RPMs from a remote server (that is reachable in the network):

sudo yum downgrade bfd-2.0.0.0-9.2.2.lib32_n3400

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching, protect-packages
Setting up Downgrade Process
groups-repo

```
localdb          | 1.1 kB      00:00 ...
localdb/primary  | 951 B       00:00 ...
localdb          | 1.3 kB      00:00 ...
patching
thirdparty       | 951 B       00:00 ...
```

2/2

Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400 0:2.0.0.0-9.2.2 will be a downgrade
---> Package bfd.lib32_n3400 0:2.0.1.0-9.2.2 will be erased
--> Finished Dependency Resolution

Dependencies Resolved

Package	Version	Size	Arch	Repository
Downgrading:				
bfd	2.0.0.0-9.2.2	1.6 M	lib32_n3400	groups-repo

```

Transaction Summary
-----
Downgrade      1 Package

Total download size: 1.6 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Installing : bfd-2.0.0.0-9.2.2.lib32_n3400

                  1/2
starting pre-install package version mgmt for bfd
pre-install for bfd complete
starting post-install package version mgmt for bfd
post-install for bfd complete
  Cleanup      : bfd-2.0.1.0-9.2.2.lib32_n3400

                  2/2

Removed:
  bfd.lib32_n3400 0:2.0.1.0-9.2.2

Installed:
  bfd.lib32_n3400 0:2.0.0.0-9.2.2

Complete!

```

See the following example for downgrading the RPMs from local bootflash:

```
yum downgrade /bootflash/eigrp-2.0.0-9.2.2.lib32_n3400.rpm
```

See the following example for downgrading the RPMs if it is available in any repository:

```
yum downgrade eigrp
```

Deleting the RPMs

Deleting the RPMs de-installs the RPMs and removes any configuration CLI of the feature. Use the **yum erase <rpm>** command to delete the RPMs.

```

bash-4.2# sudo yum erase bfd

Loaded plugins: downloadonly, importpubkey, localrpmdB, patchaction, patching,
protect-packages
Setting up Remove Process
Resolving Dependencies
--> Running transaction check
---> Package bfd.lib32_n3400-S 0:2.0.1.0-9.2.2 will be erased
--> Finished Dependency Resolution

Dependencies Resolved

```

```

Package Arch Repository Version Size
-----
Removing:
bfd lib32_n3400-s 2.0.1.0-9.2.2
@bfd-2.0.1.0-9.2.2.lib32_n3400-s 6.4 M
Transaction Summary
-----
Remove 1 Package

Installed size: 6.4 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
Erasing : bfd-2.0.1.0-9.2.2.lib32_n3400-s

1/1
starting pre-remove package version mgmt for bfd
pre-remove for bfd complete

Removed:
bfd.lib32_n3400-s 0:2.0.1.0-9.2.2

Complete!

```

Support for YUM Groups

The support for YUM groups is part of the package management. It simplifies the management of the packages for the administrators and it provides greater flexibility.

The administrators can group a list of packages (RPMs) into a logical group and they can perform various operations. YUM supports the following group commands:

- grouplist
- groupinfo
- groupinstall
- groupremove
- groupupdate

YUM groups can be broadly classified as L2, L3, routing, and management.

Using the grouplist Command

In Linux, number of packages are bundled to particular group. Instead of installing individual packages with yum, you can install particular group that will install all the related packages that belongs to the group. For example to list all the available groups, use the **yum grouplist** command:

```
bash-4.2# sudo yum grouplist
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb          | 1.1 kB      00:00 ...
patching         | 951 B       00:00 ...
thirdparty       | 951 B       00:00 ...
groups-repo/group | 951 B       00:00 ...

Installed Groups:
  L2
  L3
  management
Available Groups:
  routing
Done

bash-4.3$

```

Using the groupmembers Command

Use **yum groupinfo** command to display the description and the contents of a package group. The command lists out the feature members of the group.

```
bash-4.2# sudo yum groupinfo l2
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

localdb          | 1.1 kB      00:00 ...
patching         | 951 B       00:00 ...
thirdparty       | 951 B       00:00 ...

Group: L2
Mandatory Packages:
  lacp
  lldp
  svi
  vtp

```

Using the groupinstall Command

This command is for both install & upgrade of the members RPM. If the member is not installed, it will install the highest version available. If the member is already installed and higher RPM is available, it will upgrade that member.

```
bash-4.2# sudo yum groupinstall routing

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb          | 1.1 kB      00:00 ...
patching         | 951 B       00:00 ...
thirdparty       | 951 B       00:00 ...
                 | 951 B       00:00 ...

Setting up Group Process
Package ospf-2.0.0.0-9.2.2.lib32_n3400-s already installed and latest version
Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be installed
--> Finished Dependency Resolution

Dependencies Resolved
```

Package	Arch	Repository	Version Size
Installing:			
bgp	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 2.4 M
eigrp	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 428 k
isis	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 1.2 M
rip	lib32_n3400-s	groups-repo	2.0.0.0-9.2.2 214 k
Transaction Summary			
Install	4 Packages		
Total download size: 4.2 M			
Installed size: 19 M			
Is this ok [y/N]: y			
Downloading Packages:			
Total			
132 MB/s 4.2 MB 00:00			
Running Transaction Check			
Running Transaction Test			


```

Transaction Test Succeeded
Running Transaction
  Installing : rip-2.0.0.0-9.2.2.lib32_n3400-s

                                1/4
starting pre-install package version mgmt for rip
pre-install for rip complete
starting post-install package version mgmt for rip
post-install for rip complete
  Installing : isis-2.0.0.0-9.2.2.lib32_n3400-s

                                2/4
starting pre-install package version mgmt for isis
pre-install for isis complete
starting post-install package version mgmt for isis
post-install for isis complete
  Installing : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

                                3/4
starting pre-install package version mgmt for eigrp
pre-install for eigrp complete
starting post-install package version mgmt for eigrp
post-install for eigrp complete
  Installing : bgp-2.0.0.0-9.2.2.lib32_n3400-s

                                4/4
starting pre-install package version mgmt for bgp
pre-install for bgp complete
starting post-install package version mgmt for bgp
post-install for bgp complete

Installed:
  bgp.lib32_n3400-s 0:2.0.0.0-9.2.2          eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2
               isis.lib32_n3400-s 0:2.0.0.0-9.2.2          rip.lib32_n3400-s
0:2.0.0.0-9.2.2

Complete!

```

Using the groupupdate Command

Use the **yum groupupdate** command to update any existing installed group packages.

```
bash-4.3# yum groupupdate routing
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

```

```

localdb                | 1.1 kB    00:00 ...
localdb/primary        | 951 B     00:00 ...
localdb                | 1.9 kB    00:00 ...

                                6/6
patching

```

```

| 951 B      00:00 ...
thirdparty

| 951 B      00:00 ...
Setting up Group Process
Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package bgp.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package eigrp.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package isis.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package ospf.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package ospf.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be updated
---> Package rip.lib32_n3400-s 0:2.0.1.0-9.2.2 will be an update
--> Finished Dependency Resolution

```

Dependencies Resolved

Package	Arch	Repository	Size	Version
Updating:				
bgp	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		2.4 M
eigrp	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		428 k
isis	lib32_n3400-s			
2.0.1.0-9.2.2		local		1.2 M
ospf	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		2.8 M
rip	lib32_n3400-s			
2.0.1.0-9.2.2		localdb		214 k
Transaction Summary				

Upgrade 5 Packages

Total download size: 7.0 M

Is this ok [y/N]: y

Downloading Packages:

Total

269 MB/s | 7.0 MB 00:00

Running Transaction Check

Running Transaction Test

Transaction Test Succeeded

Running Transaction

Updating : eigrp-2.0.1.0-9.2.2.lib32_n3400-s

1/10

starting pre-install package version mgmt for eigrp

pre-install for eigrp complete

starting post-install package version mgmt for eigrp

post-install for eigrp complete

Updating : ospf-2.0.1.0-9.2.2.lib32_n3400-s

2/10

starting pre-install package version mgmt for ospf

pre-install for ospf complete

```

starting post-install package version mgmt for ospf
post-install for ospf complete
  Updating   : rip-2.0.1.0-9.2.2.lib32_n3400-s

                                3/10
starting pre-install package version mgmt for rip
pre-install for rip complete
starting post-install package version mgmt for rip
post-install for rip complete
  Updating   : isis-2.0.1.0-9.2.2.lib32_n3400-s

                                4/10
starting pre-install package version mgmt for isis
pre-install for isis complete
starting post-install package version mgmt for isis
post-install for isis complete
  Updating   : bgp-2.0.1.0-9.2.2.lib32_n3400-s

                                5/10
starting pre-install package version mgmt for bgp
pre-install for bgp complete
starting post-install package version mgmt for bgp
post-install for bgp complete
  Cleanup    : bgp-2.0.0.0-9.2.2.lib32_n3400-s

                                6/10
Cleanup     : isis-2.0.0.0-9.2.2.lib32_n3400-s

                                7/10
Cleanup     : rip-2.0.0.0-9.2.2.lib32_n3400-s

                                8/10
Cleanup     : ospf-2.0.0.0-9.2.2.lib32_n3400-s

                                9/10
Cleanup     : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

                               10/10

Updated:
  bgp.lib32_n3400-s 0:2.0.1.0-9.2.2      eigrp.lib32_n3400-s 0:2.0.1.0-9.2.2
  isis.lib32_n3400-s 0:2.0.1.0-9.2.2    ospf.lib32_n3400-s 0:2.0.1.0-9.2.2
  rip.lib32_n3400-s 0:2.0.1.0-9.2.2

Complete!

```

Using the grouperase Command

Use the **yum grouperase** command to delete the groups or all the RPM members of the group.

```
bash-4.3$ sudo yum grouperase routing
```

```

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
Setting up Group Process
groups-repo

                                | 1.1 kB      00:00 ...
localdb

                                | 951 B       00:00 ...
patching

```

```

thirdparty          | 951 B      00:00 ...
Resolving Dependencies
--> Running transaction check
---> Package bgp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package isis.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package ospf.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
---> Package rip.lib32_n3400-s 0:2.0.0.0-9.2.2 will be erased
--> Finished Dependency Resolution

Dependencies Resolved

```

Package	Arch	Repository	Size	Version
Removing:				
bgp	lib32_n3400-s	@groups-repo	11 M	2.0.0.0-9.2.2
eigrp	lib32_n3400-s	@groups-repo	2.0 M	2.0.0.0-9.2.2
isis	lib32_n3400-s	@groups-repo	5.7 M	2.0.0.0-9.2.2
ospf	lib32_n3400-s	@groups-repo	15 M	2.0.0.0-9.2.2
rip	lib32_n3400-s	@groups-repo	1.0 M	2.0.0.0-9.2.2

Transaction Summary

```

Remove          5 Packages

Installed size: 34 M
Is this ok [y/N]: y
Downloading Packages:
Running Transaction Check
Running Transaction Test
Transaction Test Succeeded
Running Transaction
  Erasing      : isis-2.0.0.0-9.2.2.lib32_n3400-s

                                1/5
starting pre-remove package version mgmt for isis
pre-remove for isis complete
  Erasing      : ospf-2.0.0.0-9.2.2.lib32_n3400-s

                                2/5
starting post-remove package version mgmt for isis
post-remove for isis complete
starting pre-remove package version mgmt for ospf
pre-remove for ospf complete
  Erasing      : eigrp-2.0.0.0-9.2.2.lib32_n3400-s

                                3/5
starting post-remove package version mgmt for ospf
post-remove for ospf complete
starting pre-remove package version mgmt for eigrp
pre-remove for eigrp complete
  Erasing      : rip-2.0.0.0-9.2.2.lib32_n3400-s

```

```

                                4/5
starting post-remove package version mgmt for eigrp
post-remove for eigrp complete
starting pre-remove package version mgmt for rip
pre-remove for rip complete
Erasing      : bgp-2.0.0.0-9.2.2.lib32_n3400-s

                                5/5
starting post-remove package version mgmt for rip
post-remove for rip complete
starting pre-remove package version mgmt for bgp
pre-remove for bgp complete

Removed:
  bgp.lib32_n3400-s 0:2.0.0.0-9.2.2      eigrp.lib32_n3400-s 0:2.0.0.0-9.2.2
  isis.lib32_n3400-s 0:2.0.0.0-9.2.2    ospf.lib32_n3400-s 0:2.0.0.0-9.2.2
  rip.lib32_n3400-s 0:2.0.0.0-9.2.2

Complete!

```

Finding Repositories

This command lists the repositories that the switch has along with the number of RPMs it has to those repositories.

```

bash-4.3# yum repolist all

Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching,
protect-packages
groups-repo

localdb          | 1.1 kB      00:00 ...
patching         | 951 B       00:00 ...
thirdparty       | 951 B       00:00 ...
repo id          | 951 B       00:00 ...
repo name
repo id          status
groups-repo      Groups-RPM Database
                  enabled: 37
localdb          Local RPM Database
                  enabled: 6
patching         Patch-RPM Database
                  enabled: 0
thirdparty       Thirdparty RPM Database
                  enabled: 0
open-nxos        open-nxos
                  disabled
repolist: 43

```

Finding the Installed YUM Version

See the following example for listing the installed YUM version:

```
yum --version
```

```
3.4.3
  Installed: rpm-5.4.14-r0.0.x86_64 at 2018-06-02 13:04
    Built   : Wind River <info@windriver.com> at 2018-04-27 08:36
    Committed: Wind River <info@windriver.com> at 2018-04-27

  Installed: yum-3.4.3-r9.0.x86_64 at 2018-06-02 13:05
    Built   : Wind River <info@windriver.com> at 2018-04-27 08:36
    Committed: Wind River <info@windriver.com> at 2018-04-27
```

Mapping the NX-OS CLI to the YUM Commands

See the following table for mapping the NX-OS CLI to the YUM commands:

Table 6: Patching Command Reference


NX-OS CLI Commands	YUM Commands
show install inactive	yum list --patch-only available
show install active	yum list --patch-only installed
show install committed	yum list --patch-only committed
show install packages	yum list --patch-only
show install pkg-info	yum info --patch-only
show install log	yum history --show-patch-log where log_cmd: <ul style="list-style-type: none"> • opid= - Log that is specific to an operation ID. • last - Shows the latest operation log. • reverse – Shows the log in reverse order. • detail – Show detailed log. • from= - Shows logging from a specific operation ID.
clear install log	yum history --clear-patch-log= where clear_log_cmd: <ul style="list-style-type: none"> • all - Clears the complete log. • - Clears the logs above this operation ID.
install add	yum install --add bootflash:/

NX-OS CLI Commands	YUM Commands
install remove	yum install --remove
install remove inactive	yum install --remove all
install activate	yum install --no-persist --nocommit Note By default, all packages are activated and committed.
install deactivate	yum erase --nocommit Note By default, all packages are de-activated and committed.
install commit	yum install --commit
Install commit	yum install --commit all

Configuring an FTP server and Setting up a Local FTP YUM Repository

For setting up a local FTP YUM repository, you have to first create an FTP server, create a local FTP YUM repository, and configure the Cisco NX-OS switch to reach the FTP server as outlined in the following illustration.

Figure 2: Configuring an FTP server and Setting up a Local FTP YUM Repository

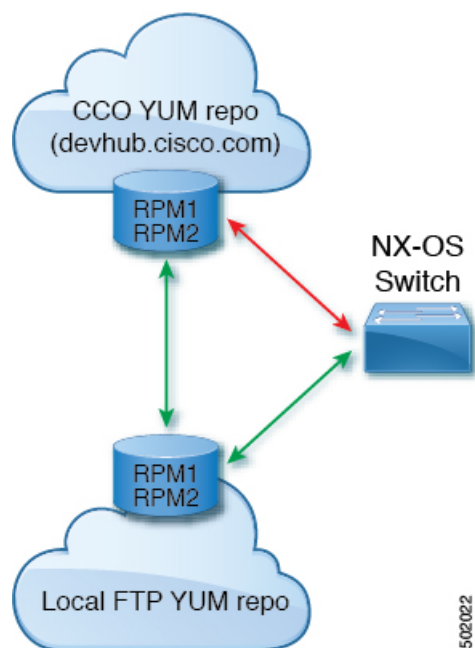

502022



Note Visit <https://devhub.cisco.com/artifactory/open-nxos/9.2.1/> for Cisco **open-nxos** repository.

Creating an FTP Server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine

Complete the following steps to create an FTP server on Red Hat Enterprise Linux 7 (RHEL7) Virtual Machine (VM):

SUMMARY STEPS

1. `yum install vsftpd`
2. `systemctl start vsftpd`
3. `systemctl status vsftpd`
4. `firewall-cmd --zone=public --permanent --add-port=21/tcp`
5. `firewall-cmd --zone=public --permanent --add-service=ftp`
6. `firewall-cmd --reload`
7. `wget ftp:// <ip of FTP server> /test.txt`

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	<code>yum install vsftpd</code>	Installs vsftpd, an FTP server.
Step 2	<code>systemctl start vsftpd</code>	Starts the FTP Server.
Step 3	<code>systemctl status vsftpd</code>	Checks the status of the FTP Server.
Step 4	<code>firewall-cmd --zone=public --permanent --add-port=21/tcp</code>	Allows access to the FTP services from the external systems and opens port 21.
Step 5	<code>firewall-cmd --zone=public --permanent --add-service=ftp</code>	Adds the FTP service.
Step 6	<code>firewall-cmd --reload</code>	Reloads the server.
Step 7	<code>wget ftp:// <ip of FTP server> /test.txt</code>	<p>Hosts a file in the FTP server (for example, test.txt) and attempts Wget of that file.</p> <p>Note Note that /var/ftp/ is the default home directory of the FTP server.</p>

Creating a Local FTP YUM Repository

Complete the following steps to synchronize the external repository RPMs to the FTP server and create a local FTP YUM repository:

SUMMARY STEPS

1. **cat /etc/yum.repos.d/local.repo**
2. **bash-4.3#yum repolist**
3. **nohup reposync -r <repo-name mentioned in the local.repo> -p <directory path to sync>&**
4. **tail -f nouhup.out**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	cat /etc/yum.repos.d/local.repo Example: <pre>bash-4.3#cat /etc/yum.repos.d/local.repo [localrepo] name=localrepo baseurl= https://devhub.cisco.com/artifactory/open-nxos/7.0-3-I2-1/x86_64/ enabled=1 gpgcheck=0 ssilverify=0</pre>	Creates a repository file under /etc/yum.repos.d/ , for example, creates local.repo repository and adds the base URL.
Step 2	bash-4.3#yum repolist Example: <pre>bash-4.3# yum repolist Loaded plugins: fastestmirror, langpacks Loading mirror speeds from cached hostfile * base: mirror.dhakacom.com * extras: mirror.dhakacom.com * updates: mirror.dhakacom.com repo id repo name status base/7/x86_64 CentOS-7 - Base 9,911 extras/7/x86_64 CentOS-7 - Extras 313 localrepo localrepo 687 updates/7/x86_64 CentOS-7 - Updates 711 repolist: 11,622</pre>	Checks the reachability of the repository.
Step 3	nohup reposync -r <repo-name mentioned in the local.repo> -p <directory path to sync>& Example: <pre>nohup reposync -r localrepo -p /var/ftp/ &</pre> <p>This command creates a directory with the name local.repo inside /var/ftp/ and downloads all the packages from devhub.cisco.com to the directory.</p>	Synchronizes all the packages from the external repository to the FTP server home directory.

	Command or Action	Purpose
Step 4	tail -f nouhup.out	Checks the status of the synchronization.

Configuring a Switch to Reach an FTP Server

Complete the following steps to configure a switch to reach an FTP server:

SUMMARY STEPS

1. **run bash sudo su**
2. **ip netns exec management ping <ip_address>**
3. **cat /etc/yum/repos.d/ftp.repo**
4. **ip netns exec management bash**
5. **yum repolist**
6. **yum list available**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	run bash sudo su	Logs in as a sudo user.
Step 2	ip netns exec management ping <ip_address>	Checks the reachability of the FTP server address from the switch using the ping command.
Step 3	cat /etc/yum/repos.d/ftp.repo Example: <pre>bash-4.3# cat /etc/yum/repos.d/ftp.repo [ftp] name=ftp baseurl=ftp://10.232.44.34/localrepo/ enabled=1 gpgcheck=0 ssllverify=0</pre>	Creates a repository file on the switch with the FTP server address as the URL.
Step 4	ip netns exec management bash	Uses the Bash shell prompt.
Step 5	yum repolist Example: <pre>bash-4.3# yum repolist Loaded plugins: downloadonly, importpubkey, localrpmDB, patchaction, patching, : protect-packages groups-repo 1.1 kB 00:00 ... localdb 951 B 00:00 ... patching 951 B 00:00 ... thirdparty 951 B 00:00 ... thirdparty/primary 758 B 00:00 ... thirdparty 1/1</pre>	Checks the reachability of newly created repository.

	Command or Action	Purpose
	<pre>repo id repo name status groups-repo Groups-RPM Database 37 localdb Local RPM Database 0 patching Patch-RPM Database 0 thirdparty Thirdparty RPM Database 1 ftp ftp 686 repolist: 724</pre>	
Step 6	yum list available	Lists the available packages in the new repository.

Creating User Roles for Install Operation

The **install** command is only available to the users of admin role. The **install** command can be available to a user by RBAC. See RBAC configuration guidelines for the same.

