



# CHAPTER 1

## Configuring Domain Parameters

---

The Fibre Channel domain (fcdomain) feature performs principal switch selection, domain ID distribution, FC ID allocation, and fabric reconfiguration functions as described in the FC-SW-2 standards. The domains are configured on a per-VSAN basis. If you do not configure a domain ID, the local switch uses a random ID.



### Caution

---

Changes to fcdomain parameters should not be performed on a daily basis. These changes should be made by an administrator or individual who is completely familiar with switch operations.

---



### Tip

---

When you change the configuration, be sure to save the running configuration. The next time you reboot the switch, the saved configuration is used. If you do not save the configuration, the previously saved startup configuration is used.

---

This chapter includes the following sections:

- [Information About Fibre Channel Domains, page 1-1](#)
- [Domain IDs, page 1-6](#)
- [FC IDs, page 1-13](#)
- [Verifying fcdomain Information, page 1-18](#)
- [Default Settings, page 1-19](#)

## Information About Fibre Channel Domains


This section describes each fcdomain phase:

- Principal switch selection—This phase guarantees the selection of a unique principal switch across the fabric.
- Domain ID distribution—This phase guarantees each switch in the fabric obtains a unique domain ID.
- FC ID allocation—This phase guarantees a unique FC ID assignment to each device attached to the corresponding switch in the fabric.
- Fabric reconfiguration—This phase guarantees a resynchronization of all switches in the fabric to ensure they simultaneously restart a new principal switch selection phase.

See [Figure 1-1](#) for an example fcdomain configuration.

**[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)**

**Figure 1-1 Sample fcdomain Configuration**

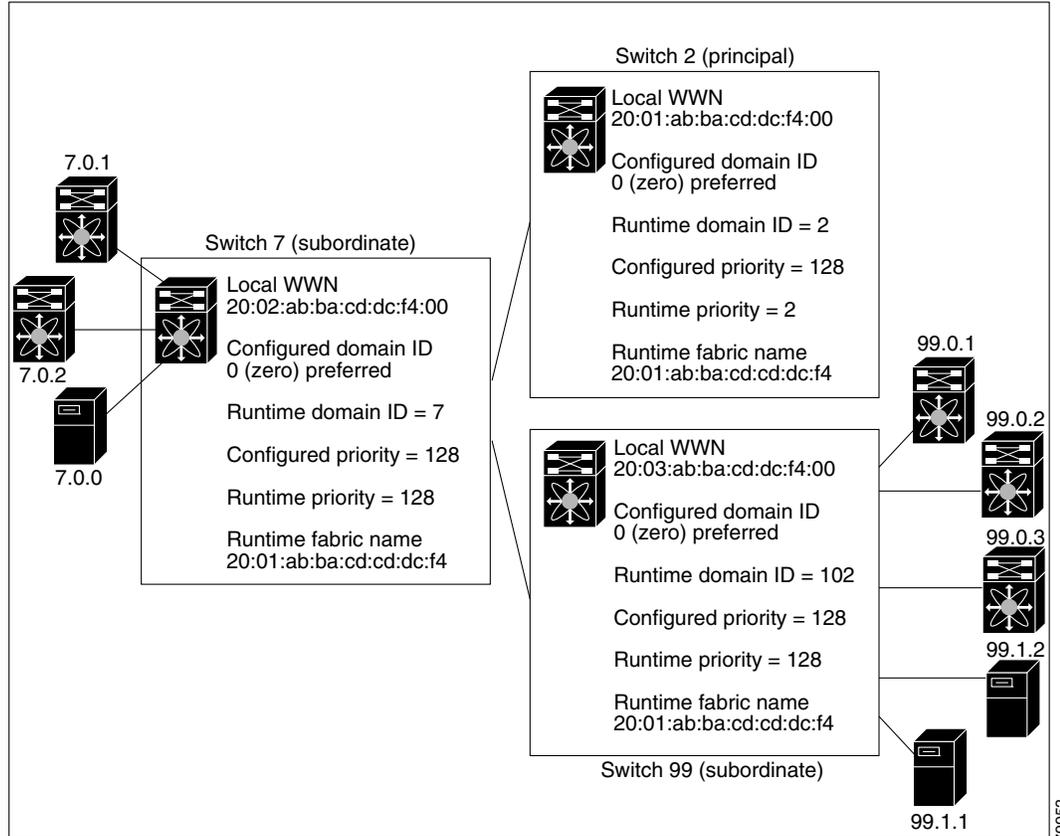

**Note**

Domain IDs and VSAN values used in all procedures are only provided as examples. Be sure to use IDs and values that apply to your configuration.

This section describes the fcdomain feature and includes the following topics:

- [About Domain Restart, page 1-3](#)
- [Restarting a Domain, page 1-3](#)
- [About Domain Manager Fast Restart, page 1-3](#)
- [Enabling Domain Manager Fast Restart, page 1-4](#)
- [About Switch Priority, page 1-4](#)
- [Configuring Switch Priority, page 1-4](#)
- [About fcdomain Initiation, page 1-5](#)
- [Disabling or Reenabling fcdomains, page 1-5](#)
- [Configuring Fabric Names, page 1-5](#)
- [About Incoming RCFs, page 1-5](#)
- [Rejecting Incoming RCFs, page 1-6](#)
- [About Autoreconfiguring Merged Fabrics, page 1-6](#)

## Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

- [Enabling Autoreconfiguration, page 1-6](#)

## About Domain Restart

Fibre Channel domains can be started disruptively or nondisruptively. If you perform a disruptive restart, reconfigure fabric (RCF) frames are sent to other switches in the fabric and data traffic is disrupted on all the switches in the VSAN (including remotely segmented ISLs). If you perform a nondisruptive restart, build fabric (BF) frames are sent to other switches in the fabric and data traffic is disrupted only on the switch.

If you are attempting to resolve a domain ID conflict, you must manually assign domain IDs. A disruptive restart is required to apply most configuration changes, including manually assigned domain IDs. Nondisruptive domain restarts are acceptable only when changing a preferred domain ID into a static one (and the actual domain ID remains the same).



### Note

A static domain is specifically configured by the user and may be different from the runtime domain. If the domain IDs are different, the runtime domain ID changes to take on the static domain ID after the next restart, either disruptive or nondisruptive.



### Tip

If a VSAN is in interop mode, you cannot disruptively restart the fcdomain for that VSAN.

You can apply most of the configurations to their corresponding runtime values. Each of the following sections provide further details on how the fcdomain parameters are applied to the runtime values.

The **fcdomain restart** command applies your changes to the runtime settings. Use the **disruptive** option to apply most of the configurations to their corresponding runtime values, including preferred domain IDs (see the [“About Domain IDs” section on page 1-7](#)).

## Restarting a Domain

To restart the fabric disruptively or nondisruptively, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain restart vsan vsan-id</b>	Forces the VSAN to reconfigure without traffic disruption.
	switch(config)# <b>fcdomain restart disruptive vsan vsan-id</b>	Forces the VSAN to reconfigure with data traffic disruption.

## About Domain Manager Fast Restart

When a principal link fails, the domain manager must select a new principal link. By default, the domain manager starts a build fabric (BF) phase, followed by a principal switch selection phase. Both of these phases involve all the switches in the VSAN, and together take at least 15 seconds to complete. To reduce the time required for the domain manager to select a new principal link, you can enable the domain manager fast restart feature.

## Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

When fast restart is enabled and a backup link is available, the domain manager needs only a few milliseconds to select a new principal link to replace the one that failed. Also, the reconfiguration required to select the new principal link only affects the two switches that are directly attached to the failed link, not the entire VSAN. When a backup link is not available, the domain manager reverts to the default behavior and starts a BF phase, followed by a principal switch selection phase. The fast restart feature can be used in any interoperability mode.

## Enabling Domain Manager Fast Restart

To enable the domain manager fast restart feature, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain optimize fast-restart vsan vsan-id</b>	Enables domain manager fast restart in the specified VSAN.
	switch(config)# <b>fcdomain optimize fast-restart vsan vsan-id - vsan-id</b>	Enables domain manager fast restart in the specified range of VSANs.
	switch(config)# <b>no fcdomain optimize fast-restart vsan vsan-id</b>	Disables (default) domain manager fast restart in the specified VSAN.

## About Switch Priority

By default, the configured priority is 128. The valid range to set the priority is between 1 and 254. Priority 1 has the highest priority. Value 255 is accepted from other switches, but cannot be locally configured.

Any new switch cannot become the principal switch when it joins a stable fabric. During the principal switch selection phase, the switch with the highest priority becomes the principal switch. If two switches have the same configured priority, the switch with the lower world-wide name (WWN) becomes the principal switch.

The priority configuration is applied to runtime when the fcdomain is restarted (see the [“About Domain Restart” section on page 1-3](#)). This configuration is applicable to both disruptive and nondisruptive restarts.

## Configuring Switch Priority

To configure the priority for the principal switch, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain priority number VSAN vsan-id</b>	Configures the specified priority for the local switch in the specified VSAN.
	switch(config)# <b>no fcdomain priority number VSAN vsan-id</b>	Reverts the priority to the factory default (128) in the specified VSAN.

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## About fcdomain Initiation

By default, the fcdomain feature is enabled on each switch. If you disable the fcdomain feature in a switch, that switch can no longer participate with other switches in the fabric. The fcdomain configuration is applied to runtime through a disruptive restart.

## Disabling or Reenabling fcdomains

To disable or reenables fcdomains in a single VSAN or a range of VSANs, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>no fcdomain vsan</b> <i>vsan-id - vsan-id</i>	Disables the fcdomain configuration in the specified VSAN range.
	switch(config)# <b>fcdomain vsan</b> <i>vsan-id</i>	Enables the fcdomain configuration in the specified VSAN.

## Configuring Fabric Names

To set the fabric name value for a disabled fcdomain, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain fabric-name</b> <b>20:1:ac:16:5e:0:21:01 vsan</b> <i>vsan-id</i>	Assigns the configured fabric name value in the specified VSAN.
	switch(config)# <b>no fcdomain fabric-name</b> <b>20:1:ac:16:5e:0:21:01 vsan</b> <i>vsan-id</i>	Changes the fabric name value to the factory default (20:01:00:05:30:00:28:df) in VSAN 3010.

## About Incoming RCFs

You can configure the **rcf-reject** option on a per-interface, per-VSAN basis. By default, the **rcf-reject** option is disabled (that is, RCF request frames are not automatically rejected).

The **rcf-reject** option takes effect immediately.

No fcdomain restart is required.



### Note

You do not need to configure the RFC reject option on virtual Fibre Channel interfaces, because these interfaces operate only in F port mode.

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## Rejecting Incoming RCFs

To reject incoming RCF request frames, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>interface fc slot/port</b> switch(config-if)#	Configures the specified interface.
Step 3	switch(config-if)# <b>fcdomain rcf-reject vsan</b> <i>vsan-id</i>	Enables the RCF filter on the specified interface in the specified VSAN.
	switch(config-if)# <b>no fcdomain rcf-reject vsan</b> <i>vsan-id</i>	Disables (default) the RCF filter on the specified interface in the specified VSAN.

## About Autoreconfiguring Merged Fabrics

By default, the autoreconfigure option is disabled. When you join two switches belonging to two different stable fabrics that have overlapping domains, the following situations can occur:

- If the autoreconfigure option is enabled on both switches, a disruptive reconfiguration phase is started.
- If the autoreconfigure option is disabled on either or both switches, the links between the two switches become isolated.

The autoreconfigure option takes immediate effect at runtime. You do not need to restart the fcdomain. If a domain is currently isolated due to domain overlap, and you later enable the autoreconfigure option on both switches, the fabric continues to be isolated. If you enabled the autoreconfigure option on both switches before connecting the fabric, a disruptive reconfiguration (RCF) will occur. A disruptive reconfiguration may affect data traffic. You can nondisruptively reconfigure the fcdomain by changing the configured domains on the overlapping links and eliminating the domain overlap.

## Enabling Autoreconfiguration

To enable automatic reconfiguration in a specific VSAN (or range of VSANs), perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain auto-reconfigure vsan</b> <i>vsan-id</i>	Enables the automatic reconfiguration option in the specified VSAN.
	switch(config)# <b>no fcdomain auto-reconfigure vsan</b> <i>vsan-id</i>	Disables the automatic reconfiguration option and reverts it to the factory default in the specified VSAN.

## Domain IDs

Domain IDs uniquely identify a switch in a VSAN. A switch may have different domain IDs in different VSANs. The domain ID is part of the overall FC ID.

## ***Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***

This section describes how to configure domain IDs and includes the following topics:

- [About Domain IDs, page 1-7](#)
- [Specifying Static or Preferred Domain IDs, page 1-9](#)
- [About Allowed Domain ID Lists, page 1-9](#)
- [Configuring Allowed Domain ID Lists, page 1-10](#)
- [About CFS Distribution of Allowed Domain ID Lists, page 1-10](#)
- [Enabling Distribution, page 1-10](#)
- [Locking the Fabric, page 1-11](#)
- [Committing Changes, page 1-11](#)
- [Discarding Changes, page 1-11](#)
- [Clearing a Fabric Lock, page 1-12](#)
- [Displaying CFS Distribution Status, page 1-12](#)
- [Displaying Pending Changes, page 1-12](#)
- [Displaying Session Status, page 1-13](#)
- [About Contiguous Domain ID Assignments, page 1-13](#)
- [Enabling Contiguous Domain ID Assignments, page 1-13](#)

## **About Domain IDs**

The configured domain ID can be preferred or static. By default, the configured domain ID is 0 (zero) and the configured type is preferred.

**Note**

---

The 0 (zero) value can be configured only if you use the preferred option.

---


If you do not configure a domain ID, the local switch sends a random ID in its request. We recommend that you use static domain IDs.

When a subordinate switch requests a domain, the following process takes place (see [Figure 1-2](#)):

1. The local switch sends a configured domain ID request to the principal switch.
2. The principal switch assigns the requested domain ID if available. Otherwise, it assigns another available domain ID.

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

Figure 1-2 Configuration Process Using the Preferred Option

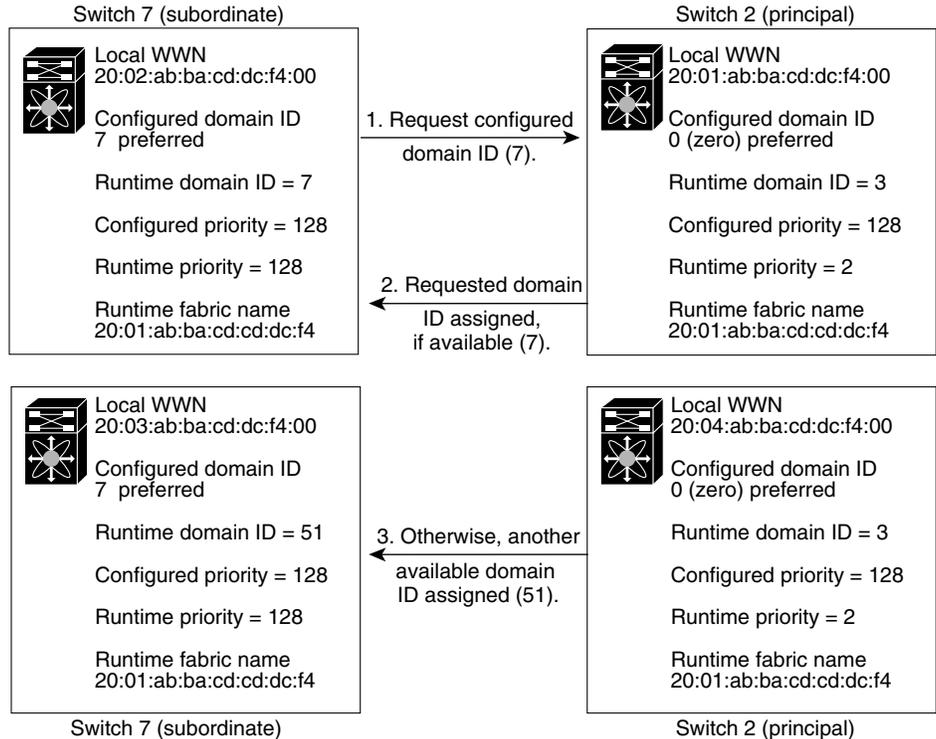

The operation of a subordinate switch changes based on three factors:

- The allowed domain ID lists.
- The configured domain ID.
- The domain ID that the principal switch has assigned to the requesting switch.

In specific situations, the changes are as follows:

- When the received domain ID is not within the allowed list, the requested domain ID becomes the runtime domain ID and all interfaces on that VSAN are isolated.
- When the assigned and requested domain IDs are the same, the preferred and static options are not relevant, and the assigned domain ID becomes the runtime domain ID.
- When the assigned and requested domain IDs are different, the following cases apply:
  - If the configured type is static, the assigned domain ID is discarded, all local interfaces are isolated, and the local switch assigns itself the configured domain ID, which becomes the runtime domain ID.
  - If the configured type is preferred, the local switch accepts the domain ID assigned by the principal switch and the assigned domain ID becomes the runtime domain ID.

If you change the configured domain ID, the change is only accepted if the new domain ID is included in all the allowed domain ID lists currently configured in the VSAN. Alternatively, you can also configure zero-preferred domain ID.



**Caution**

You must enter the **fcdomain restart** command if you want to apply the configured domain changes to the runtime domain.

**[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)**

**Note**

If you have configured an allow domain ID list, the domain IDs that you add must be in that range for the VSAN. See the [“About Allowed Domain ID Lists”](#) section on page 1-9.

## Specifying Static or Preferred Domain IDs

When you assign a static domain ID type, you are requesting a particular domain ID. If the switch does not obtain the requested address, it will isolate itself from the fabric. When you specify a preferred domain ID, you are also requesting a particular domain ID; however, if the requested domain ID is unavailable, then the switch will accept another domain ID.

While the static option can be applied at runtime after a disruptive or nondisruptive restart, the preferred option is applied at runtime only after a disruptive restart (see the [“About Domain Restart”](#) section on page 1-3).

**Note**

Within a VSAN all switches should have the same domain ID type (either static or preferred). If a configuration is mixed (some switches with static domain types and others with preferred), you may experience link isolation.

To specify a static or preferred domain ID, perform this task:

	<b>Command</b>	<b>Purpose</b>
<b>Step 1</b>	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
<b>Step 2</b>	switch(config)# <b>fcdomain domain domain-id</b> <b>preferred vsan vsan-id</b>	Configures the switch in the specified VSAN to request a preferred domain ID 3 and accepts any value assigned by the principal switch. The domain is range is 1 to 239.
	switch(config)# <b>no fcdomain domain domain-id</b> <b>preferred vsan vsan-id</b>	Resets the configured domain ID to 0 (default) in the specified VSAN. The configured domain ID becomes 0 preferred.
<b>Step 3</b>	switch(config)# <b>fcdomain domain domain-id</b> <b>static vsan vsan-id</b>	Configures the switch in the specified VSAN to accept only a specific value and moves the local interfaces in the specified VSAN to an isolated state if the requested domain ID is not granted.
	switch(config)# <b>no fcdomain domain domain-id</b> <b>static vsan vsan-id</b>	Resets the configured domain ID to factory defaults in the specified VSAN. The configured domain ID becomes 0 preferred.

## About Allowed Domain ID Lists

By default, the valid range for an assigned domain ID list is from 1 to 239. You can specify a list of ranges to be in the allowed domain ID list and separate each range with a comma. The principal switch assigns domain IDs that are available in the locally configured allowed domain list.

Use allowed domain ID lists to design your VSANs with nonoverlapping domain IDs. This helps you in the future if you need to implement IVR without the NAT feature.

**[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)**



**Tip**

If you configure an allowed list on one switch in the fabric, we recommend that you configure the same list in all other switches in the fabric to ensure consistency or use CFS to distribute the configuration.

An allowed domain ID list must satisfy the following conditions:

- If this switch is a principal switch, all the currently assigned domain IDs must be in the allowed list.
- If this switch is a subordinate switch, the local runtime domain ID must be in the allowed list.
- The locally configured domain ID of the switch must be in the allowed list.
- The intersection of the assigned domain IDs with other already configured domain ID lists must not be empty.

## Configuring Allowed Domain ID Lists

To configure the allowed domain ID list, perform this task:

	Command	Purpose
<b>Step 1</b>	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
<b>Step 2</b>	switch(config)# <b>fcdomain allowed</b> <i>domain-id range</i> <b>vsan</b> <i>vsan-id</i>	Configures the list to allow switches with the domain ID range in the specified VSAN.
	switch(config)# <b>no fcdomain allowed</b> <i>domain-id range</i> <b>vsan</b> <i>vsan-id</i>	Reverts to the factory default of allowing domain IDs from 1 through 239 in the specified VSAN.

## About CFS Distribution of Allowed Domain ID Lists

You can enable the distribution of the allowed domain ID list configuration information to all Cisco SAN switches in the fabric using the Cisco Fabric Services (CFS) infrastructure. This feature allows you to synchronize the configuration across the fabric from the console of a single switch. Because the same configuration is distributed to the entire VSAN, you can avoid possible misconfiguration and the possibility that two switches in the same VSAN have configured incompatible allowed domains.

Use CFS to distribute the allowed domain ID list to ensure consistency in the allowed domain ID lists on all switches in the VSAN.



**Note**

We recommend configuring the allowed domain ID list and committing it on the principal switch.

For more information about CFS, see [Chapter 1, “Using Cisco Fabric Services.”](#)

## Enabling Distribution

CFS distribution of allowed domain ID lists is disabled by default. You must enable distribution on all switches to which you want to distribute the allowed domain ID lists.

## Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

To enable (or disable) allowed domain ID list configuration distribution, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain distribute</b>	Enables domain configuration distribution.
	switch(config)# <b>no fcdomain distribute</b>	Disables (default) domain configuration distribution.

## Locking the Fabric

The first action that modifies the existing configuration creates the pending configuration and locks the feature in the fabric. After you lock the fabric, the following conditions apply:

- No other user can make any configuration changes to this feature.
- A pending configuration is created by copying the active configuration. Subsequent modifications are made to the pending configuration and remain there until you commit the changes to the active configuration (and other switches in the fabric) or discard them.

## Committing Changes

To apply the pending domain configuration changes to other SAN switches in the VSAN, you must commit the changes. The pending configuration changes are distributed and, on a successful commit, the configuration changes are applied to the active configuration in the SAN switches throughout the VSAN and the fabric lock is released.

To commit pending domain configuration changes and release the lock, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain commit vsan</b> <i>vsan-id</i>	Commits the pending domain configuration changes.

## Discarding Changes

At any time, you can discard the pending changes to the domain configuration and release the fabric lock. If you discard (abort) the pending changes, the configuration remains unaffected and the lock is released.

To discard pending domain configuration changes and release the lock, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain abort vsan</b> <i>vsan-id</i>	Discards the pending domain configuration changes.

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## Clearing a Fabric Lock

If you have performed a domain configuration task and have not released the lock by either committing or discarding the changes, an administrator can release the lock from any switch in the fabric. If the administrator performs this task, your pending changes are discarded and the fabric lock is released.



**Tip**

The pending changes are only available in the volatile directory and are discarded if the switch is restarted.

To release a fabric lock, enter the **clear fcdomain session vsan** command in EXEC mode using a login ID that has administrative privileges.

```
switch# clear fcdomain session vsan 10
```

## Displaying CFS Distribution Status

You can display the status of CFS distribution for allowed domain ID lists using the **show fcdomain status** command.

```
switch# show fcdomain status
CFS distribution is enabled
```

## Displaying Pending Changes

You can display the pending configuration changes using the **show fcdomain pending** command.

```
switch# show fcdomain pending vsan 10

Pending Configured Allowed Domains
-----

VSAN 10
Assigned or unallowed domain IDs: 1-9,24,100,231-239.
[User] configured allowed domain IDs: 10-230.
```

You can display the differences between the pending configuration and the current configuration using the **show fcdomain pending-diff** command.

```
switch# show fcdomain pending-diff vsan 10

Current Configured Allowed Domains
-----

VSAN 10
Assigned or unallowed domain IDs: 24,100.
[User] configured allowed domain IDs: 1-239.

Pending Configured Allowed Domains
-----

VSAN 10
Assigned or unallowed domain IDs: 1-9,24,100,231-239.
[User] configured allowed domain IDs: 10-230.
```

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## Displaying Session Status

You can display the status of the distribution session using the **show fcdomain session-status vsan** command.

```
switch# show fcdomain session-status vsan 1
Last Action: Distribution Enable
Result: Success
```

## About Contiguous Domain ID Assignments

By default, the contiguous domain assignment is disabled. When a subordinate switch requests the principal switch for two or more domains and the domains are not contiguous, the following situations can occur:

- If the contiguous domain assignment is enabled in the principal switch, the principal switch locates contiguous domains and assigns them to the subordinate switches. If contiguous domains are not available, the switch software rejects this request.
- If the contiguous domain assignment is disabled in the principal switch, the principal switch assigns the available domains to the subordinate switch.

## Enabling Contiguous Domain ID Assignments

To enable contiguous domains in a specific VSAN (or a range of VSANs), perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain contiguous-allocation vsan vsan-id - vsan-id</b>	Enables the contiguous allocation option in the specified VSAN range.  <b>Note</b> The <b>contiguous-allocation</b> option takes immediate effect at runtime. You do not need to restart the fcdomain.
	switch(config)# <b>no fcdomain contiguous-allocation vsan vsan-id</b>	Disables the contiguous allocation option and reverts it to the factory default in the specified VSAN.

## FC IDs

When an N port logs into a Cisco Nexus 5000 Series switch, it is assigned an FC ID. By default, the persistent FC ID feature is enabled. If this feature is disabled, the following situations can occur:

- An N port logs into a Cisco Nexus 5000 Series switch. The WWN of the requesting N port and the assigned FC ID are retained and stored in a volatile cache. The contents of this volatile cache are not saved across reboots.
- The switch is designed to preserve the binding FC ID to the WWN on a best-effort basis. For example, if one N port disconnects from the switch and its FC ID is requested by another device, this request is granted and the WWN with the initial FC ID association is released.

## Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

- The volatile cache stores up to 4000 entries of WWN to FC ID binding. If this cache is full, a new (more recent) entry overwrites the oldest entry in the cache. In this case, the corresponding WWN to FC ID association for the oldest entry is lost.
- N ports receive the same FC IDs if disconnected and reconnected to any port within the same switch (as long as it belongs to the same VSAN).

This section describes configuring FC IDs and includes the following topics:

- [About Persistent FC IDs, page 1-14](#)
- [Enabling the Persistent FC ID Feature, page 1-14](#)
- [Persistent FC ID Configuration Guidelines, page 1-15](#)
- [Configuring Persistent FC IDs, page 1-15](#)
- [About Unique Area FC IDs for HBAs, page 1-16](#)
- [Configuring Unique Area FC IDs for an HBA, page 1-16](#)
- [About Persistent FC ID Selective Purging, page 1-17](#)
- [Purging Persistent FC IDs, page 1-18](#)

## About Persistent FC IDs

When persistent FC IDs are enabled, the following occurs:

- The current FC IDs in use in the fcdomain are saved across reboots.
- The fcdomain automatically populates the database with dynamic entries that the switch has learned about after a device (host or disk) is plugged into a port interface.



### Note

If you connect to the switch from an AIX or HP-UX host, be sure to enable the persistent FC ID feature in the VSAN that connects these hosts.



### Note

When persistent FC IDs are enabled, FC IDs cannot be changed after a reboot. FC IDs are enabled by default, but can be disabled for each VSAN.

A persistent FC ID assigned to an F port can be moved across interfaces and can continue to maintain the same persistent FC ID.

## Enabling the Persistent FC ID Feature

To enable the persistent FC ID feature, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b>	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain fcid persistent vsan vsan-id</b> FCID(s) persistent feature is enabled.	Activates (default) persistency of FC IDs in the specified VSAN.
	switch(config)# <b>no fcdomain fcid persistent vsan vsan-id</b>	Disables the FC ID persistency feature in the specified VSAN.

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## Persistent FC ID Configuration Guidelines

When the persistent FC ID feature is enabled, you can enter the persistent FC ID submode and add static or dynamic entries in the FC ID database. By default, all added entries are static. Persistent FC IDs are configured on a per-VSAN basis.

When manually configuring a persistent FC ID, follow these requirements:

- Ensure that the persistent FC ID feature is enabled in the required VSAN.
- Ensure that the required VSAN is an active VSAN. Persistent FC IDs can only be configured on active VSANs.
- Verify that the domain part of the FC ID is the same as the runtime domain ID in the required VSAN. If the software detects a domain mismatch, the command is rejected.
- Verify that the port field of the FC ID is 0 (zero) when configuring an area.

## Configuring Persistent FC IDs

To configure persistent FC IDs, perform this task:

	Command	Purpose
Step 1	switch# <b>configuration terminal</b> switch(config)#	Enters configuration mode.
Step 2	switch(config)# <b>fcdomain fcid database</b> switch(config-fcid-db)#	Enters FC ID database configuration submode.
Step 3	switch(config-fcid-db)# <b>vsan vsan-id wwn</b> <b>33:e8:00:05:30:00:16:df fcid fcid</b>	Configures a device WWN (33:e8:00:05:30:00:16:df) with the FC ID 0x070128 in the specified VSAN.  <b>Note</b> To avoid assigning a duplicate FC ID, use the <b>show fcdomain address-allocation vsan</b> command to display the FC IDs in use.
	switch(config-fcid-db)# <b>vsan vsan-id wwn</b> <b>11:22:11:22:33:44:33:44 fcid fcid dynamic</b>	Configures a device WWN (11:22:11:22:33:44:33:44) with the FC ID 0x070123 in the specified VSAN in dynamic mode.
	switch(config-fcid-db)# <b>vsan vsan-id wwn</b> <b>11:22:11:22:33:44:33:44 fcid fcid area</b>	Configures a device WWN (11:22:11:22:33:44:33:44) with the FC IDs 0x070100 through 0x0701FF in the specified VSAN.  <b>Note</b> To secure the entire area for this fcdomain, assign 00 as the last two characters of the FC ID.

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## About Unique Area FC IDs for HBAs



### Note

Only read this section if the Host Bus Adapter (HBA) port and the storage port are connected to the same switch.

Some HBA ports require a different area ID than for the storage ports when they are both connected to the same switch. For example, if the storage port FC ID is 0x6f7704, the area for this port is 77. In this case, the HBA port's area can be anything other than 77. The HBA port's FC ID must be manually configured to be different from the storage port's FC ID.

Cisco Nexus 5000 Series switches facilitate this requirement with the FC ID persistence feature. You can use this feature to preassign an FC ID with a different area to either the storage port or the HBA port.

## Configuring Unique Area FC IDs for an HBA

The following task uses an example configuration with a switch domain of 111(6f hex). The server connects to the switch over FCoE. The HBA port connects to interface vfc20/1 and the storage port connects to interface fc2/3 on the same switch.

To configure a different area ID for the HBA port, perform this task:

- Step 1** Obtain the port WWN (Port Name field) ID of the HBA using the **show flogi database** command.

```
switch# show flogi database
```

INTERFACE	VSAN	FCID	PORT NAME	NODE NAME
vfc10/1	3	0x6f7703	50:05:08:b2:00:71:c8:c2	50:05:08:b2:00:71:c8:c0
fc2/3	3	0x6f7704	50:06:0e:80:03:29:61:0f	50:06:0e:80:03:29:61:0f



**Note** Both FC IDs in this setup have the same area 77 assignment.

- Step 2** Shut down the HBA interface in the Cisco Nexus 5000 Series switch.

```
switch# configuration terminal
switch(config)# interface vfc20/1
switch(config-if)# shutdown
switch(config-if)# end
switch#
```

- Step 3** Verify that the FC ID feature is enabled using the **show fcdomain vsan** command.

```
switch# show fcdomain vsan 1
...
Local switch configuration information:
    State: Enabled
    FCID persistence: Disabled
```

If this feature is disabled, continue with this procedure to enable the persistent FC ID.

If this feature is already enabled, skip to [Step 5](#).

- Step 4** Enable the persistent FC ID feature in the Cisco Nexus 5000 Series switch.

```
switch# configuration terminal
switch(config)# fcdomain fcid persistent vsan 1
```

## Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

```
switch(config)# end
switch#
```

**Step 5** Assign a new FC ID with a different area allocation. In this example, we replace 77 with ee.

```
switch# configuration terminal
switch(config)# fcdomain fcid database
switch(config-fcid-db)# vsan 3 wwn 50:05:08:b2:00:71:c8:c2 fcid 0x6fee00 area
```

**Step 6** Enable the HBA interface in the Cisco Nexus 5000 Series switch.

```
switch# configuration terminal
switch(config)# interface vfc20/1
switch(config-if)# no shutdown
switch(config-if)# end
switch#
```

**Step 7** Verify the pWWN ID of the HBA by using the **show flogi database** command.

```
switch# show flogi database
```

```
-----
INTERFACE    VSAN    FCID      PORT NAME                               NODE NAME
-----
vfc20/1      3       0x6fee00  50:05:08:b2:00:71:c8:c2                50:05:08:b2:00:71:c8:c0
fc2/3        3       0x6f7704  50:06:0e:80:03:29:61:0f                50:06:0e:80:03:29:61:0f
```



**Note** Both FC IDs now have different area assignments.

## About Persistent FC ID Selective Purging

Persistent FC IDs can be purged selectively. Static entries and FC IDs currently in use cannot be deleted. [Table 1-1](#) identifies the FC ID entries that are deleted or retained when persistent FC IDs are purged.

**Table 1-1** Purged FC IDs

Persistent FC ID state	Persistent Usage State	Action
Static	In use	Not deleted
Static	Not in use	Not deleted
Dynamic	In use	Not deleted
Dynamic	Not in use	Deleted

[Send feedback to nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

## Purging Persistent FC IDs

To purge persistent FC IDs, perform this task:

	Command	Purpose
Step 1	switch# <b>purge fcdomain fcid vsan vsan-id</b>	Purges all dynamic and unused FC IDs in the specified VSAN.
	switch# <b>purge fcdomain fcid vsan vsan-id - vsan-id</b>	Purges dynamic and unused FC IDs in the specified VSAN range.

## Verifying fcdomain Information



### Note

If the fcdomain feature is disabled, the runtime fabric name in the display is the same as the configured fabric name.

This example shows how to display information about fcdomain configurations:

```
switch# show fcdomain vsan 2
```

Use the **show fcdomain domain-list** command to display the list of domain IDs of all switches belonging to a specified VSAN. This list provides the WWN of the switches owning each domain ID. The next example uses the following values:

- A switch with WWN of 20:01:00:05:30:00:47:df is the principal switch and has domain 200.
- A switch with WWN of 20:01:00:0d:ec:08:60:c1 is the local switch (the one where you typed the CLI command to show the domain-list) and has domain 99.
- The IVR manager obtained virtual domain 97 using 20:01:00:05:30:00:47:df as the WWN for a virtual switch.

```
switch# show fcdomain domain-list vsan 76
```

```
Number of domains: 3
Domain ID          WWN
-----
0xc8(200)         20:01:00:05:30:00:47:df [Principal]
0x63(99)          20:01:00:0d:ec:08:60:c1 [Local]
0x61(97)          50:00:53:0f:ff:f0:10:06 [Virtual (IVR)]
```

Use the **show fcdomain allowed vsan** command to display the list of allowed domain IDs configured on this switch..

```
switch# show fcdomain allowed vsan 1
Assigned or unallowed domain IDs: 1-96,100,111-239.
[Interoperability Mode 1] allowed domain IDs: 97-127.
[User] configured allowed domain IDs: 50-110.
```



### Tip

Ensure that the requested domain ID passes the switch software checks, if **interop 1** mode is required in this switch.

The following example shows how to display all existing, persistent FC IDs for a specified VSAN. You can also specify the **unused** option to view only persistent FC IDs that are still not in use.

## Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)

```
switch# show fcdomain fcid persistent vsan 1000
```

The following example shows how to display frame and other fcdomain statistics for a specified VSAN or SAN port channel:

```
switch# show fcdomain statistics vsan 1
VSAN Statistics
  Number of Principal Switch Selections: 5
  Number of times Local Switch was Principal: 0
  Number of 'Build Fabric's: 3
  Number of 'Fabric Reconfigurations': 0
```

The following example shows how to display FC ID allocation statistics including a list of assigned and free FC IDs:

```
switch# show fcdomain address-allocation vsan 1
```

The following example shows how to display the valid address allocation cache. The cache is used by the principal switch to reassign the FC IDs for a device (disk or host) that exited and reentered the fabric. In the cache content, VSAN refers to the VSAN that contains the device, WWN refers to the device that owned the FC IDs, and mask refers to a single or entire area of FC IDs.

```
switch# show fcdomain address-allocation cache
```

## Default Settings

Table 1-2 lists the default settings for all fcdomain parameters.

**Table 1-2**      *Default fcdomain Parameters*

Parameters	Default
fcdomain feature	Enabled
Configured domain ID	0 (zero)
Configured domain	Preferred
<b>auto-reconfigure</b> option	Disabled
<b>contiguous-allocation</b> option	Disabled
Priority	128
Allowed list	1 to 239
Fabric name	20:01:00:05:30:00:28:df
<b>rcf-reject</b>	Disabled
Persistent FC ID	Enabled
Allowed domain ID list configuration distribution	Disabled

***Send feedback to [nx5000-docfeedback@cisco.com](mailto:nx5000-docfeedback@cisco.com)***