



Managing Bare Metal Agent

This chapter contains the following sections:

- [Default Root and Shelladmin Passwords, on page 1](#)
- [Changing the Default Bare Metal Agent Account, on page 1](#)
- [Starting and Stopping Bare Metal Agent Services, on page 2](#)
- [Checking the Status of a Bare Metal Agent, on page 2](#)
- [Viewing the DHCP Configuration for a Bare Metal Agent Account, on page 2](#)
- [Using External DHCP Server and Bare Metal Agent, on page 3](#)
- [Viewing the DHCP Logs for a Bare Metal Agent Account, on page 7](#)
- [Viewing the Logs for a Bare Metal Agent Account, on page 8](#)
- [Viewing Operating System Images, on page 8](#)
- [Viewing PXE Service Requests, on page 8](#)
- [Viewing the Network Interface Details for a Bare Metal Agent Account, on page 9](#)
- [Shelladmin Script for Bare Metal Agent, on page 9](#)
- [Setting Up UEFI as Network Boot Manager, on page 10](#)

Default Root and Shelladmin Passwords

During installation, Bare Metal Agent uses default passwords for the following accounts:

- Root user for the CentOS operating system of the Bare Metal Agent VM. The default password is pxeboot.
- Shelladmin user for the Bare Metal Agent Shell menu. The default password is changeme.

You are not prompted to enter these passwords during installation. However, the first time you log in to Bare Metal Agent after installation is completed, you are prompted to reset the default root and Shelladmin passwords.

The new root and Shelladmin password must meet the password requirements. It cannot be a dictionary word or be all lowercase.

Changing the Default Bare Metal Agent Account

The first Bare Metal Agent account that you create is designated as the default account. This account is used by default in legacy workflows. To use a different account in the legacy workflows, you must designate that Bare Metal Agent account as the default.

-
- Step 1** Choose **Administration > Physical Accounts**.
- Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
- Step 3** Click the row for the Bare Metal Agent account that you want designate as the default.
- Step 4** Click **Set Default BMA**.
-

Starting and Stopping Bare Metal Agent Services

- Step 1** Choose **Administration > Physical Accounts**.
- Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
- Step 3** Click the row for the Bare Metal Agent account whose services you want to start or stop.
- Step 4** Click one of the following:
- **Start Services**
 - **Stop Services**
- Step 5** Click **Service Status** and check the status displayed in the **Enabled Services** column to ensure that services have started or stopped as desired.
- If services do not start, check the status displayed in the **Enabled Services** column. If this status indicates that services are not enabled, verify the configuration of your DHCP server and try again.
-

Checking the Status of a Bare Metal Agent

- Step 1** Choose **Administration > Physical Accounts**.
- Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
- Step 3** Click the row for the Bare Metal Agent account whose status you want to check.
- Step 4** To see if services for the Bare Metal Agent account are Active or Inactive, check the **Status** column.
- Step 5** To check the status of the services, click **Service Status**.
- Step 6** To view the SSH-based test connection status, check the **Reachable** column.
-

Viewing the DHCP Configuration for a Bare Metal Agent Account

- Step 1** Choose **Administration > Physical Accounts**.
- Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.

Step 3 Click the row for the Bare Metal Agent account for which you want to view the DHCP configuration.


Step 4 Click **View DHCP Configuration**.

You might need to click the Down arrow at the end of the button bar to access the **View DHCP Configuration** option.


The **View DHCP Server Configuration** window displays the contents of the DHCP server configuration file for the account.

Using External DHCP Server and Bare Metal Agent

The following figure shows the sample topology for OS deployment over PXE from Cisco UCS Director using an external DHCP server, Bare Metal Agent, and bare metal servers in different subnets.

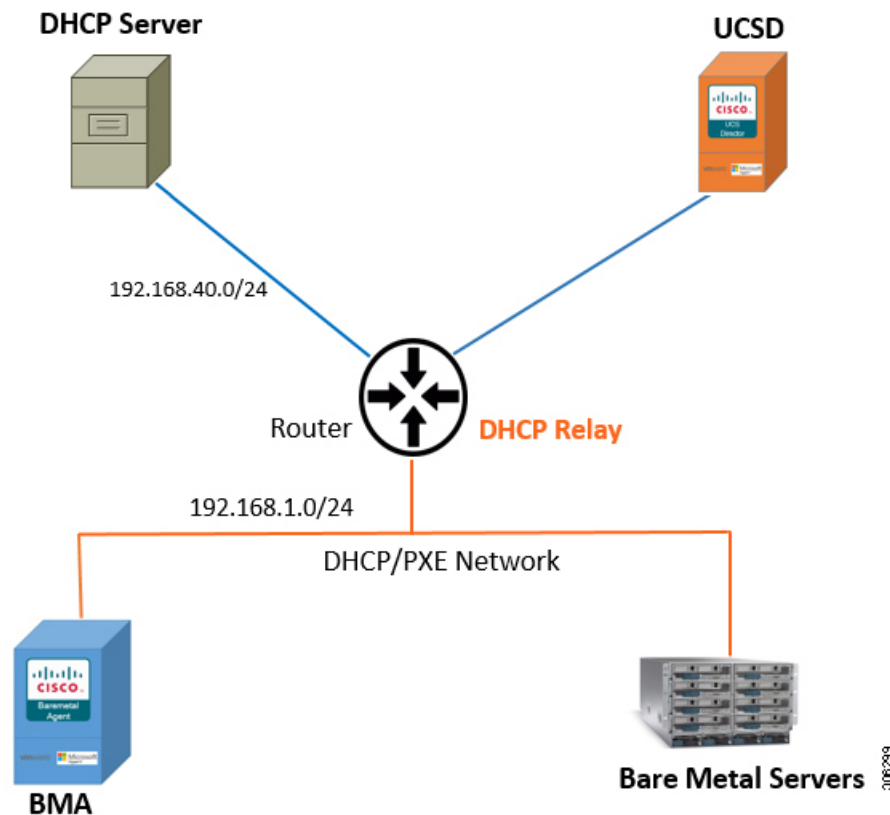

The following figure shows the sample topology for OS deployment over PXE from Cisco UCS Director using an external DHCP server, Bare Metal Agent, and bare metal servers in the same subnet.

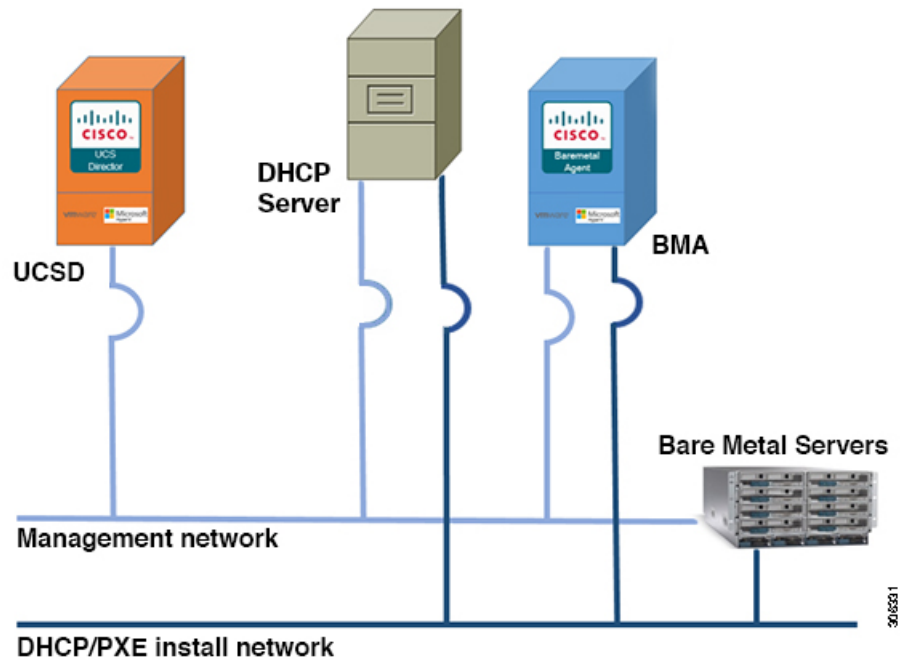

Configuring the DHCP Server on Linux OS

- Step 1** Disable the DHCP services on the BMA. Perform the following:
- Log on to the Bare Metal Agent VM using SSH client as 'shelladmin' user. See, [Shelladmin Script for Bare Metal Agent, on page 9](#).
 - Choose the **Disable DHCP Service** option to stop the DHCP service.
- Note** In future, if you want to use the DHCP service on the same BMA, you can choose the **Enable DHCP Service** option to start the DHCP service.
- Step 2** Perform the following in the router:
- Enable routing between the BMA or the Bare Metal server subnet and the DHCP server subnet.
 - Enable the DHCP functionality on the router.
 - Configure DHCP relay agent such that the DHCP relay address points to the DHCP server IP address.
- Step 3** Perform the following on the Linux server to configure the DHCP server:
- Copy the network details of the BMA or the Bare Metal server subnet to `/etc/dhcpd.conf` file.
 - Configure the DHCP configuration file having the 'next-server' IP with the BMA PXE interface IP address.
- Note** DHCP relay configuration is only needed when the DHCP server and the target bare metal servers on the different subnet.
- Configure the PXE binary.

```
if substring (option vendor-class-identifier, 15,5) = "00000" {
filename "/ipxeLinux.0";
}else{
```

```
filename "ipxe.efi";
}
```

The following is a sample of the DHCP configuration file on the Linux OS which is catering DHCP services to two subnets. You can customize the DHCP configuration based on your requirements.

```
#
# DHCP Server Configuration file.
# see /usr/share/doc/dhcp*/dhcpd.conf.sample
#
ddns-update-style interim;
ignore client-updates;
subnet 192.168.4.0 netmask 255.255.255.0 {
    option routers                192.168.4.1;
    option subnet-mask            255.255.255.0;
    option nis-domain              "domain.org";
    option domain-name            "domain.org";
    option domain-name-servers    192.168.55.1;
    option time-offset            -18000; # Eastern Standard Time
    range dynamic-bootp 192.168.4.100 192.168.4.200;
    default-lease-time 21600;
    max-lease-time 43200;
    allow booting;
    allow bootp;
    next-server 192.168.4.20; # IP of the BMA server
    if substring (option vendor-class-identifier, 15, 5) = "00000" {
        filename "/ipxlinux.0";
    }else{
        filename "/ipxe.efi";
    }
}

subnet 192.168.1.0 netmask 255.255.255.0 {
    option routers                192.168.1.1;
    option subnet-mask            255.255.255.0;
    option nis-domain              "domain.org";
    option domain-name            "domain.org";
    option domain-name-servers    192.168.55.1;
    option time-offset            -18000; # Eastern Standard Time
    range dynamic-bootp 192.168.1.100 192.168.1.220;
    default-lease-time 21600;
    max-lease-time 43200;
    allow booting;
    allow bootp;
    next-server 192.168.1.60; # IP of my PXE server
    if substring (option vendor-class-identifier, 15, 5) = "00000" {
        filename "/ipxlinux.0";
    }else{
        filename "/ipxe.efi";
    }
}
```

Configuring the DHCP Server on Windows OS

Step 1 Disable the DHCP services on the BMA. Perform the following:

- a) Log on to the Bare Metal Agent VM using SSH client as 'shelladmin' user. See, [Shelladmin Script for Bare Metal Agent, on page 9](#).
- b) Choose the **Disable DHCP Service** option to stop the DHCP service.

Note In future, if you want to use the DHCP service on the same BMA, you can choose the **Enable DHCP Service** option to start the DHCP service.

Step 2

Perform the following in the router:


- a) Enable routing between the BMA or the Bare Metal server subnet and the DHCP server subnet.
- b) Enable the DHCP functionality on the router.
- c) Configure DHCP relay agent such that the DHCP relay address points to the DHCP server IP address.

Note DHCP relay configuration is only needed when the DHCP server and the target bare metal servers on the different subnet.


Step 3

Perform the following on the Windows server to configure the DHCP server:

- a) Configure the firewall rules on the Windows server to allow the DHCP requests.
- b) Configure the DHCP scope options with the network details of the BMA or the Bare Metal server subnet.
- c) Choose the **066-Boot Server Host Name** option and specify the BMA PXE interface IP address in the **Data entry**

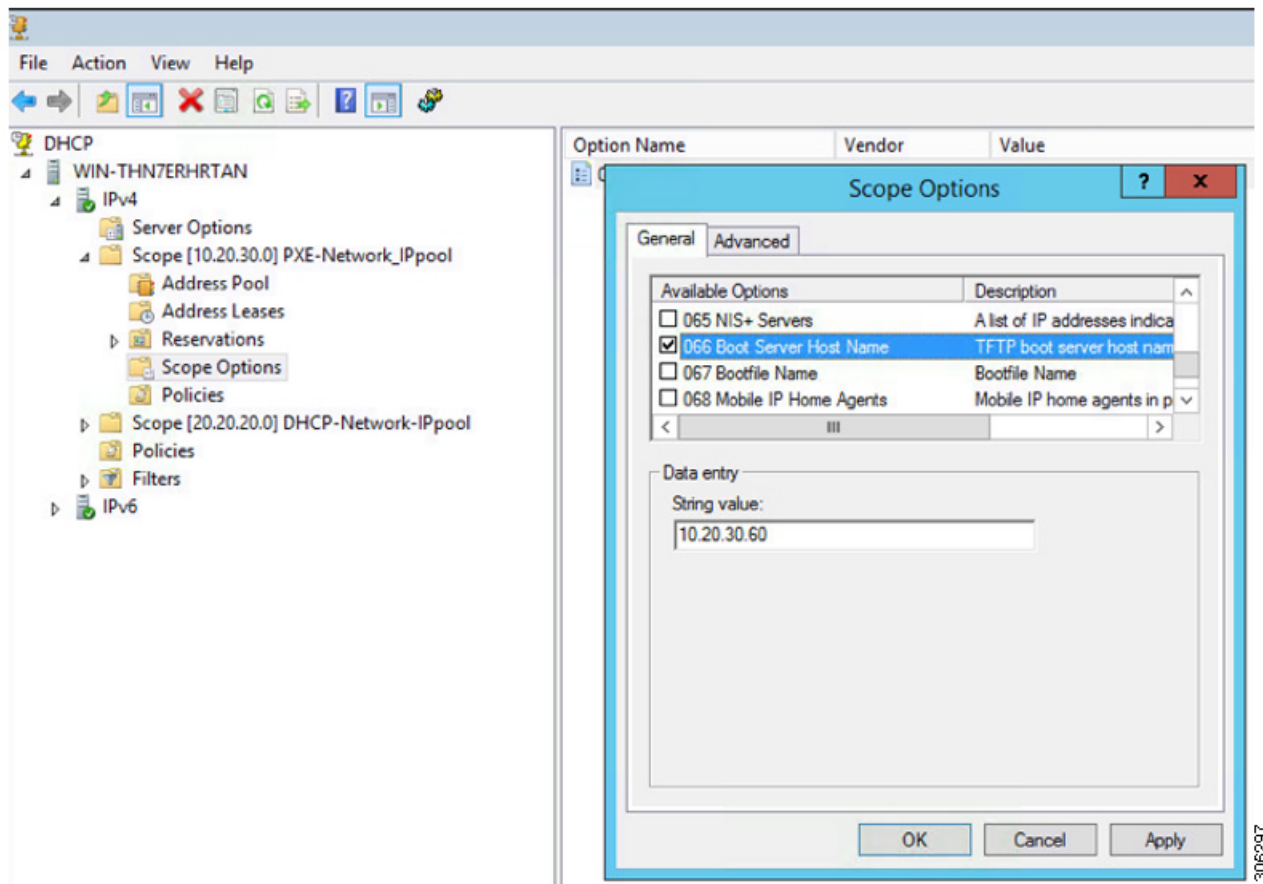

d) Choose the **067-Bootfile Name** option and enter **ipxeLinux.0** in the **Data entry**

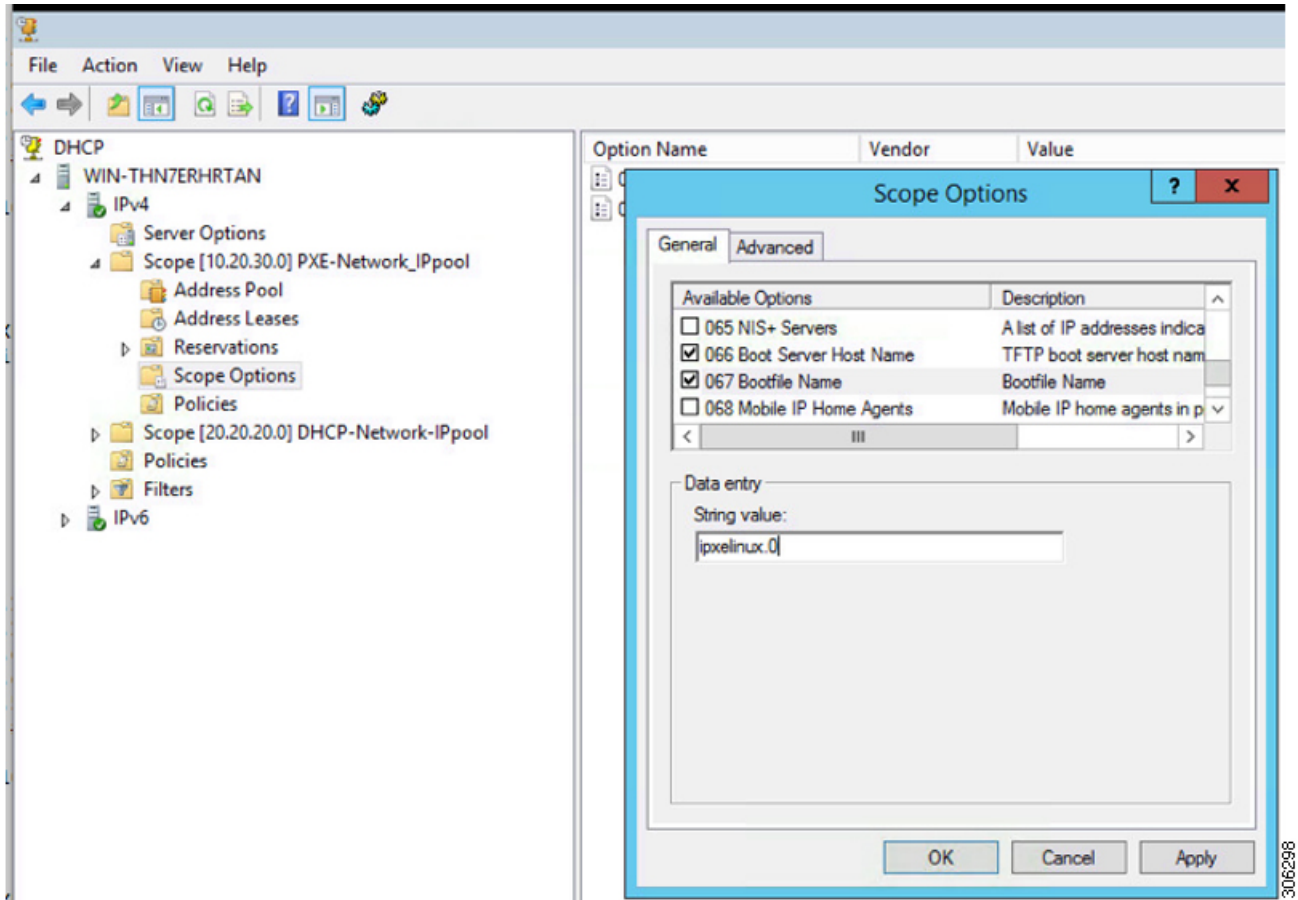

Viewing the DHCP Logs for a Bare Metal Agent Account

Step 1 Choose **Administration > Physical Accounts**.

Step 2 On the **Physical Accounts** page, click **Bare Metal Agents**.

Step 3 Click the row for the Bare Metal Agent account for which you want to view the DHCP logs.

Step 4 Click the down arrow at the end of the button bar and choose **View DHCP Logs**.

The **View Bare Metal Agent DHCP Log** window displays the contents of the DHCP server logs for the account.

Viewing the Logs for a Bare Metal Agent Account

- Step 1** Choose **Administration** > **Physical Accounts**.
- Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
- Step 3** Click the row for the Bare Metal Agent account for which you want to view the logs.
- Step 4** Click the down arrow at the end of the button bar and choose **View BMA Logs**.
- The **View Bare Metal Agent Log** window displays the logs for the account.
-

Viewing Operating System Images

You can view a list of the operating system (OS) images that have been created and are available for a Bare Metal Agent account.

- Step 1** Choose **Administration** > **Physical Accounts**.
- Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
- Step 3** Click the row for the Bare Metal Agent account for which you want to view OS images.
- Step 4** Click **View Details**.
- Step 5** Click **BMA OS List**.
-

Viewing PXE Service Requests

You can view information about PXE requests made through a workflow that have an associated service request. You cannot view details of PXE requests that are not made through a workflow, as those requests are not associated with a service request.

The information provided about each PXE request includes the following:

- Service request ID
- Request type
- User who initiated the request
- Name of the catalog or workflow that was used to create the request
- Any comments provided by the user who initiated the request
- Time of the request
- Status of the request
- Rollback type, if applicable

-
- Step 1** Choose **Administration > Physical Accounts**.
 - Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
 - Step 3** Click the row for the Bare Metal Agent account for which you want to view PXE service requests.
 - Step 4** Click **View Details**.
 - Step 5** Click **PXE Service Requests**.
-

Viewing the Network Interface Details for a Bare Metal Agent Account

- Step 1** Choose **Administration > Physical Accounts**.
 - Step 2** On the **Physical Accounts** page, click **Bare Metal Agents**.
 - Step 3** Click the row for the Bare Metal Agent account for which you want to view the network interface details.
 - Step 4** Click the down arrow at the end of the button bar and choose **View Details**.
 - Step 5** Click **Network Interface Summary**. The network interface details are displayed.
-

Shelladmin Script for Bare Metal Agent

- Step 1** Log on to the Bare Metal Agent VM using SSH client as 'shelladmin' user.

Example:

The following list of services appears:

```
BMA | Version:6.7.4.1 | UpTime: 07:01:36 up 3 days, 13:41
```

- ```
1) Display Services Status
2) Stop Services
3) Start Services
4) Display Samba Service
5) Stop Samba Service
6) Start Samba Service
7) Change Samba Password
8) Disable DHCP Service
9) Enable DHCP Service
10) Time Sync
11) Ping Hostname/IP Address
12) Show Version
13) Configure Network Interface
14) Display Network Details
15) Add DNS Server
16) Tail Network Services Logs
17) Tail DHCP Logs
18) Change DHCP Configuration
```

```

19) Run IsoExtractor Script
20) Apply Patch
21) Apply Signed Patch
22) Shutdown Appliance
23) Reboot Appliance
24) Change Root Password
25) Change ShellAdmin Password
26) Login as Root
27) Show UCSD appliance host name
28) Quit

```

**Step 2** Choose the required option and press **Enter**.

**Note** The default password for the shelladmin user is changeme.

## Setting Up UEFI as Network Boot Manager

The following are the list of operating system supported for UEFI booting:

- Windows Server 2012, Windows Server 2012 R2, Windows Server 2016, and Windows Server 2019
- ESXi 6.5, ESXi 6.7, and ESXi 7.0
- Centos 7.x and Centos 8.x
- RHEL 7.x and RHEL 8.x
- SLES 12 and above

For more information, see [Cisco UCS Director Compatibility Matrix, Release 6.7](#).



**Note** RHEL 7.3 and Centos 7.3 installation are not supported for UEFI booting. OS kernels which are not compiled with EFI stub are also not supported.

**Step 1** Create a catalog from the Bare Metal Agent 6.5.

**Note** For Non-Windows operating system, provision the OS image from the Cisco UCS Director UI or run **isoExtractor.sh** available in `/opt/infra` folder. See, [Configuring Cisco UCS Director Bare Metal Agent](#). However, for Windows operating system, ensure that `ipxe-uefi.cfg` and `autounattend-uefi.xml` files are available in the catalog.

**Step 2** Choose **iPXE-UEFI** as the network boot manager. See, [Provisioning OS Images through Orchestration Workflow Tasks](#).

**Note** iPXE-UEFI supports TFTP protocol by default. However, you can modify the `ipxe-uefi.cfg` with the following details to support the HTTP protocol. HTTP protocol with UEFI does not work on all servers.

```
#!ipxe
initrd http://$PXE_NATIVE_WEBSERVER/$PXE_OS/isolinux/initrd.img
kernel http://$PXE_NATIVE_WEBSERVER/$PXE_OS/isolinux/vmlinuz initrd=initrd.img ks=$PXE_KS_URL
 net.ifnames=0 biosdevname=0
initrd http://$PXE_NATIVE_WEBSERVER/$PXE_OS/isolinux/initrd.img
boot
```

---

