



Installing The Front Mezzanine Module

This chapter contains the following topics:

- [Installing and Removing The Front Mezzanine](#) , on page 1
- [Front Mezzanine Module Configuration](#), on page 7

Installing and Removing The Front Mezzanine

The front mezzanine module installs into the front mezzanine slot of Cisco UCS X-Series compute nodes. See the following:

- [Required Equipment](#), on page 1
- [Installing the Front Mezzanine Module](#) , on page 5
- [Removing the Front Mezzanine Module](#) , on page 3

Required Equipment

There is no special kit required to install the Cisco UCS XE3.S front mezzanine module. However make sure the following items are available during installation:

- The front mezzanine including:
 - The drive cage which supports a maximum of nine E3.S drives.
 - Filler blanks.



Note If you order the Cisco UCS X10c front mezzanine E3.S module with one E3.S drive, the unused E3.S slots are pre-populated with filler blanks. You can purchase additional filler blanks from Cisco (UCSC-E3S1T-F).

The following additional equipment, which is not provided by Cisco, is required to install or remove the E3.S module.

- T8 Torx screwdriver


- #2 Phillips screwdriver
- Torque driver

Removing a Compute Node Cover

To remove the cover of the compute node, follow these steps:

Procedure

Step 1 Press and hold the button down as shown in the figure below.

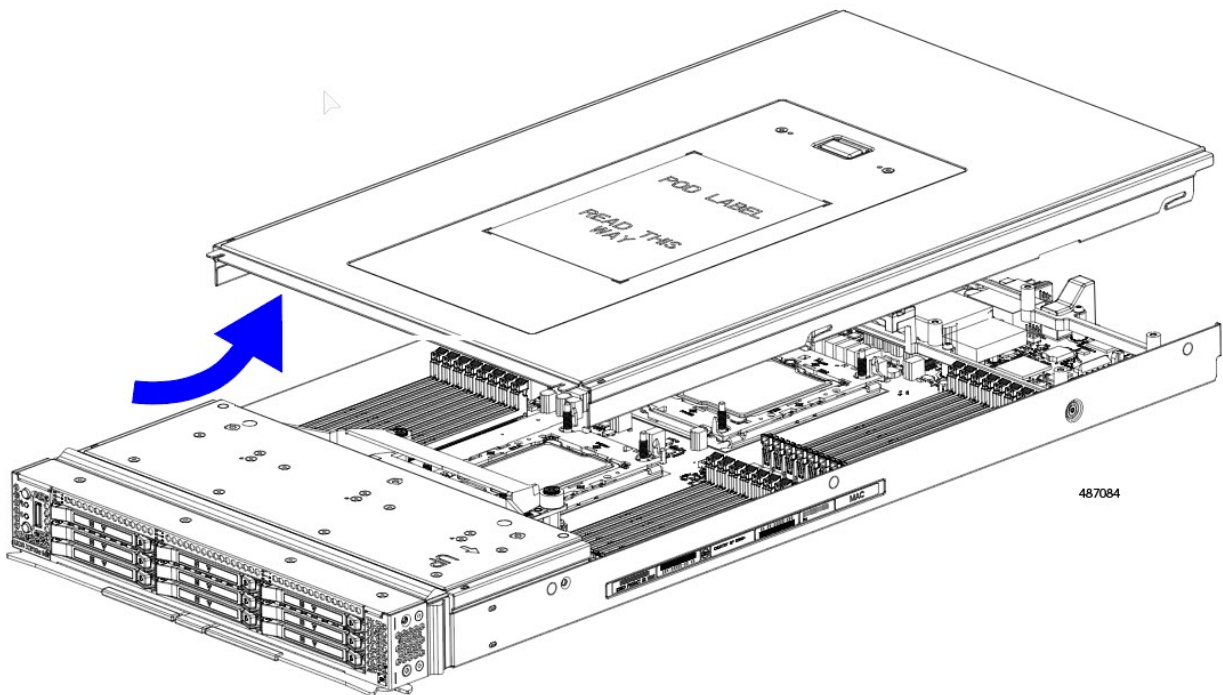


Step 2 While holding the back end of the cover, slide it back, then pull it up to lift the top cover off of the compute node. By sliding the cover back, you enable the front edge to clear the metal lip on the rear of the front mezzanine module.

Installing a Compute Node Cover

Use this task to install a removed top cover on the compute node.

Procedure

- Step 1** Notice the cutouts on the rear of the top cover.
These cutouts receive the stopper pins on the compute node.

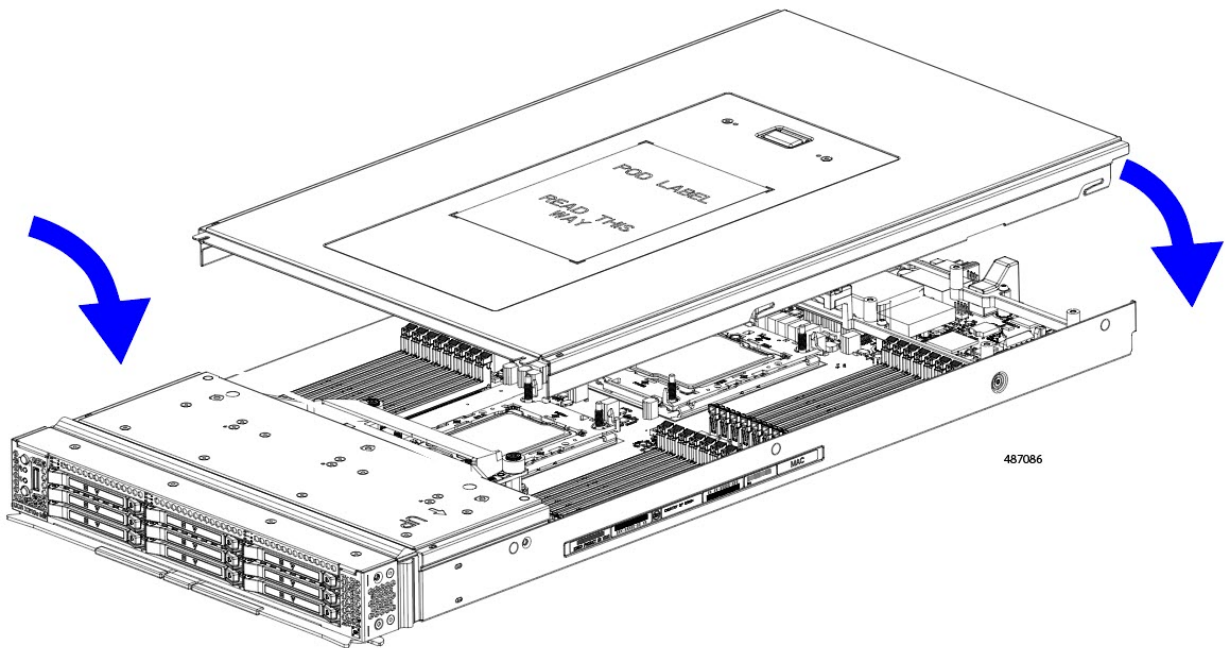

- Step 2** Holding the top cover with the rear angled down, lower it onto the compute node.
Step 3 Slide the compute node's cover until it hits the stopper pins.
Step 4 Lower the front of the top cover onto the compute node.
Step 5 Keeping the compute node's cover flat, slide it forward until the release button clicks.

Removing the Front Mezzanine Module

To remove an existing front mezzanine module, you will remove screws on the side of the compute node's sheet metal tray and on the node's motherboard.



Caution Do not operate the compute node without a front mezzanine module installed.


Use the following procedure to remove an existing front mezzanine module.

Before you begin

The compute node must be removed from the chassis to perform this task.


Procedure

Step 1 Remove the top cover of the compute node. See [Removing a Compute Node Cover](#), on page 2.

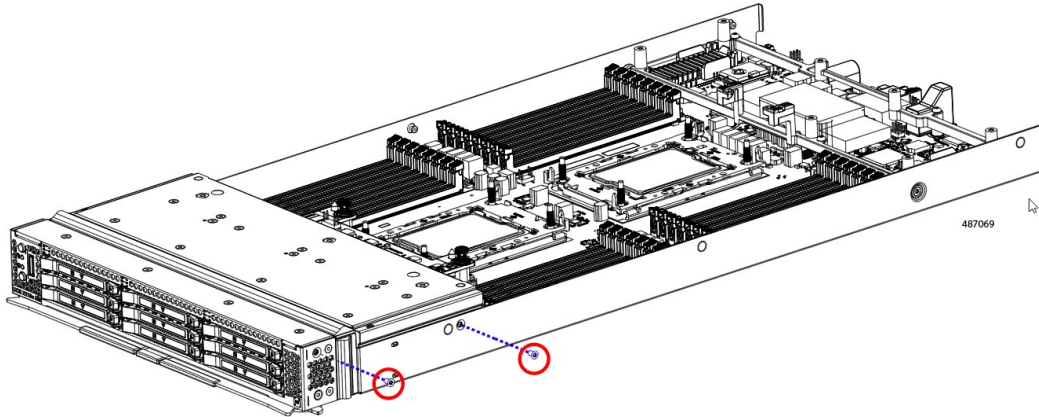


Step 2 Remove the screws.

- Using a T8 Torx screwdriver, remove the four T8 Flat head screws, two screws per side.
- Using a #2 Phillips screwdriver, loosen the two #2 Phillips captive screws at the rear of the front mezzanine module.

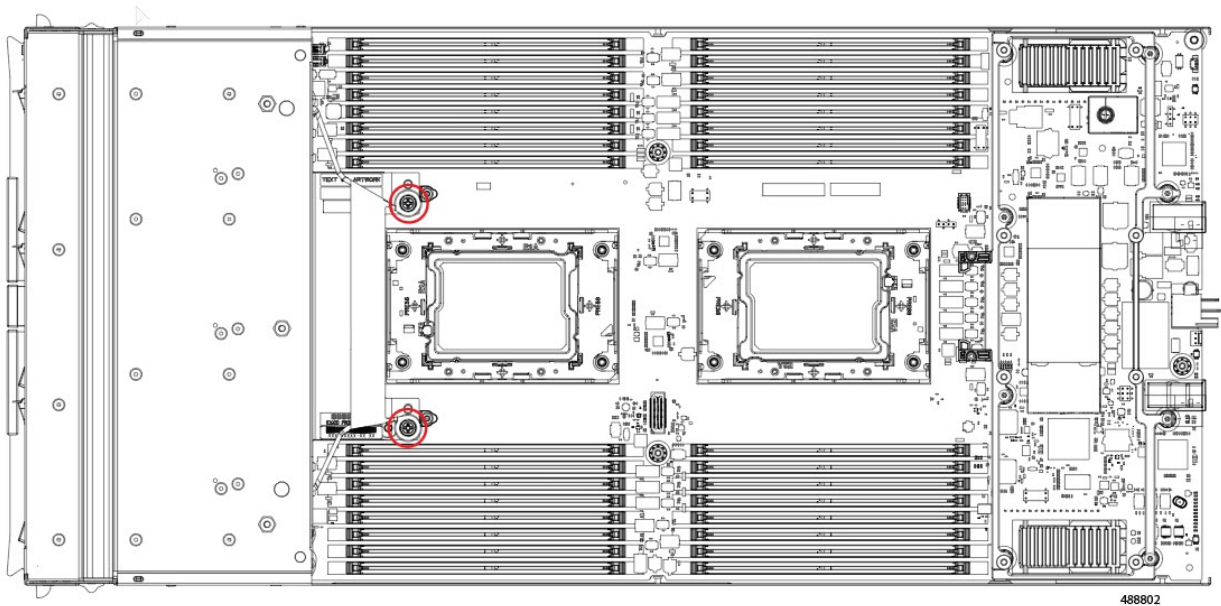

Step 3 Grasp the front mezzanine module at the middle of the top front edge and lift the front mezzanine module straight up to remove it from the compute node.

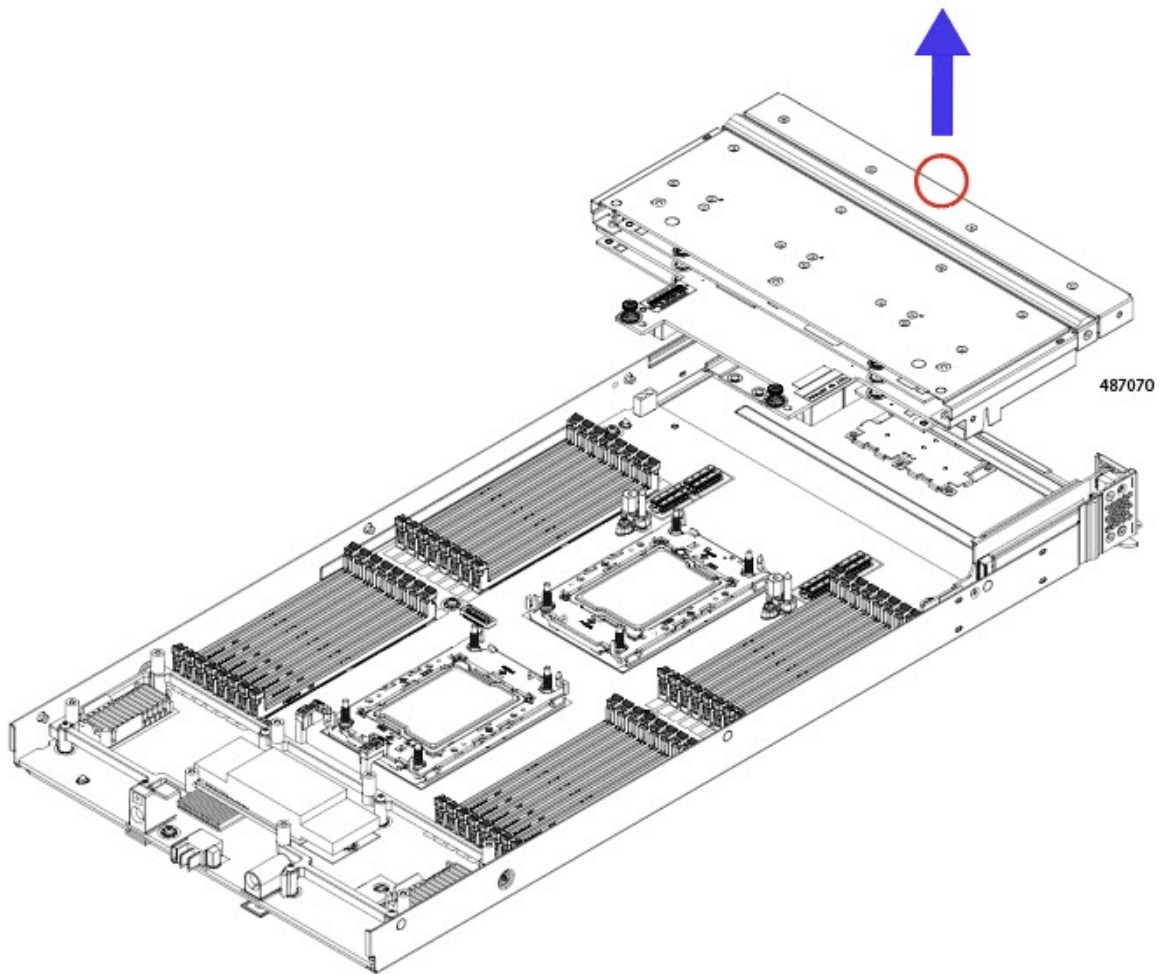**What to do next**

Connect the front mezzanine E3.S Drive module to the compute node. See [Installing the Front Mezzanine Module](#), on page 5

Installing the Front Mezzanine Module

To install the front mezzanine module, you will insert screws on the side of the compute node's sheet metal tray and on the node's motherboard.

Use the following task to install the front mezzanine module.


Procedure

Step 1 Holding the front mezzanine module by the center of the top edge, keep the module level, and lower it down onto the compute node (1).

Step 2 Align the rear captive screws with the threaded standoffs (2).

Note

The front mezzanine and compute node sidewall has guide pins that assist with installing the module onto the compute node. Use these guide pins while installing the module.

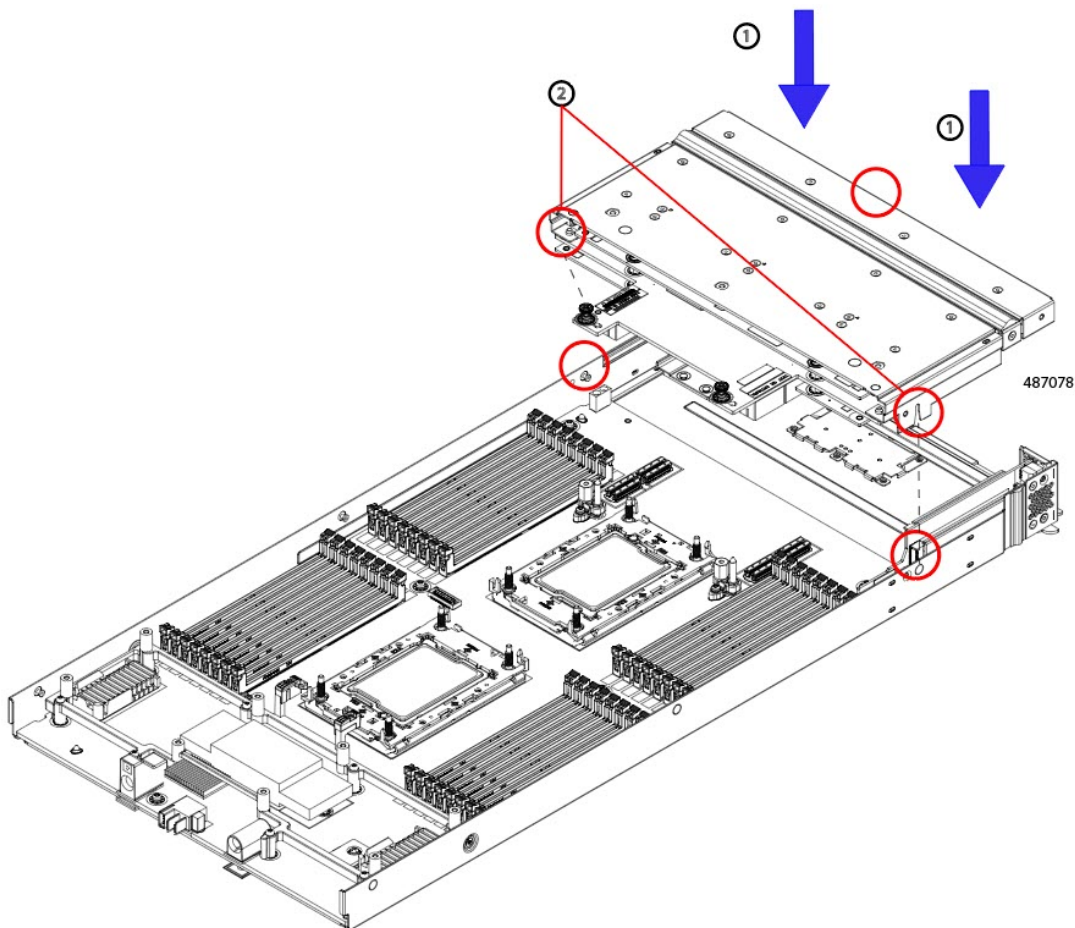


Step 3 Press down evenly on the module to seat the module's connectors into their sockets on the front mezzanine and compute node sidewall.

Step 4 Using a Phillips screwdriver, and the torque driver, tighten the two rear captive screws to 5 in-lb of torque.

Warning

Make sure you do not over tighten the rear captive screws.

- Step 5** Using a T8 Torx driver, tighten the four T8 flat head screws on the sides of the compute node (2 screws per side) to secure the module to the compute node.

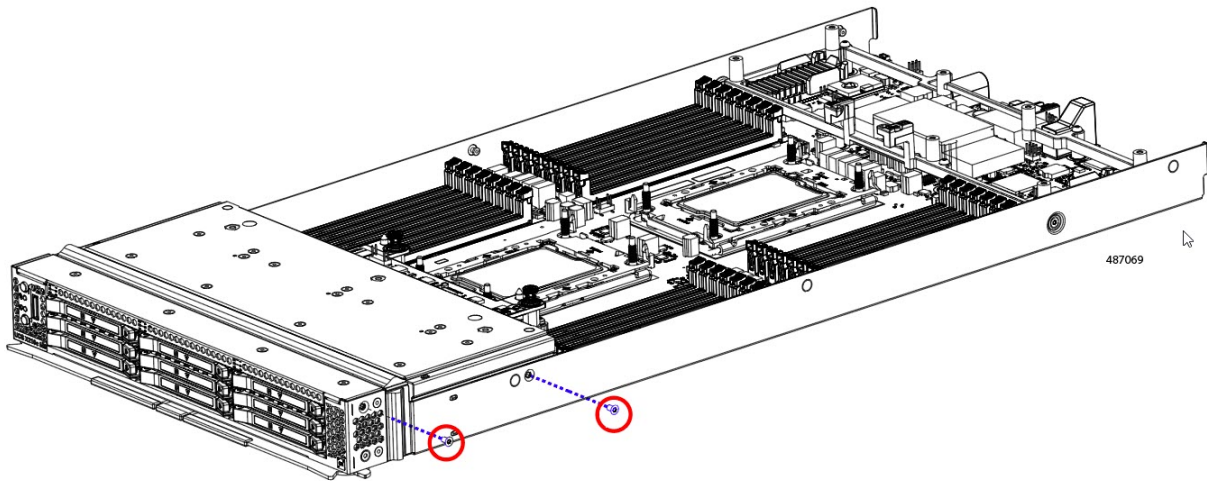

- Step 6** Replace the compute node top cover and reinstall the compute node into the chassis.
See [Installing a Compute Node Cover](#) , on page 2.

Front Mezzanine Module Configuration

The Cisco UCS X10c front mezzanine module can be configured and managed using the Cisco Intersight management platform in Intersight Managed Mode (Cisco Intersight Managed Mode). For details, see the *Cisco Intersight Managed Mode Configuration Guide*, which is available at the following URL: [Cisco Intersight Managed Mode Configuration Guide](#).

