



Cisco Finesse Server Installation

Cisco Finesse server is installed on a virtual machine (VM). The installation runs from an ISO image and uses an OVA template.



Note Configure a DataStore ISO file on the virtual CD/DVD drive of the target VM to install Finesse.

The installation takes about an hour. For most of that time, it can run unattended. Much of the installation requires no action on the part of the person who runs it. When user input is required, use the following keyboard navigation and selection actions. The installation wizard screens do not recognize a mouse or a touchpad.

To do this	Press this key
Move to the next field.	Tab
Move to the previous field.	Alt-Tab
Select an option.	Spacebar
Scroll up or down a list.	Up or Down Arrow keys
Go to the previous screen.	Tab to Back and press the Spacebar
Get information about a screen.	Tab to Help and press the Spacebar

- [Installation Task Flow, on page 1](#)
- [Install Finesse on Primary Node, on page 2](#)
- [Install Finesse on Secondary Node, on page 5](#)
- [Installation Troubleshooting, on page 8](#)

Installation Task Flow

The following table provides an overview of the tasks you perform to install Cisco Finesse. Tasks must be performed in the order they are listed.

1	Install Finesse on the primary node.
2	Configure the database settings.

3	Configure the CTI server settings.
4	Configure the cluster settings for the secondary node.
5	Restart Cisco Finesse Tomcat on the primary node.
6	Install Finesse on the secondary node.
7	Ensure replication is functioning between the two nodes.
8	Install language packs (optional).

Related Topics

[Install Finesse on Primary Node](#), on page 2

[Configure Contact Center Enterprise CTI Server Settings](#)

[Configure Contact Center Enterprise Administration & Data Server Settings](#)

[Configure Cluster Settings](#)

[Restart Cisco Finesse Tomcat](#)

[Install Finesse on Secondary Node](#), on page 5

[Check Replication Status](#)

[Install Language Pack](#)

Install Finesse on Primary Node

Procedure

Step 1

Follow the instructions in the OVA README.txt file to import and deploy the OVA, to edit VM settings, and to power on the VM and edit the BIOS settings in the console. For more information, see the section on *Installation Files*.

Note Do not use Thin Provisioning or a VM snapshot when creating a VM to host Cisco Finesse. The use of Thin Provisioning or snapshots can negatively impact the performance of Cisco Finesse operation.

Messages appear while the preinstallation script runs. When the preinstallation script ends, the DVD Found screen opens.

Step 2

Select **OK** on the Disk Found screen to begin the verification of the media integrity and a brief hardware check.

If the media check passes, select **OK** to open the Product Deployment Selection screen. Continue to Step 3.

If the media check fails, the installation terminates.

Step 3

The Product Deployment Selection screen states that the Cisco Finesse product suite will be installed. This screen has only one choice: **OK**.

Select **OK** to open the Proceed with Install screen.

- Step 4** The Proceed with Install screen shows the version of the product that is currently installed (if any) and the version of the product for this ISO. For the initial installation, the version currently installed shows NONE. Select **Yes** on the Proceed with Install screen to open the Platform Installation Wizard screen.
- Step 5** On the Platform Installation Wizard screen, select **Proceed** to open the Basic Install screen.
- Step 6** Select **Continue** on the Basic Install screen to open the Basic Install wizard.
- The Basic Install wizard presents a series of screens that present questions and options pertinent to the platform and the setup configuration. Help is available for each wizard screen.
- The first Basic Install wizard screen is Timezone Configuration.
- Step 7** On the Timezone Configuration screen:
- Use the up and down arrows to locate the local time zone that most closely matches your server location. You can also type the initial character of the time zone to move to that item in the list. The Timezone field is based on country and city and is mandatory. Setting it incorrectly can affect system operation.
 - Select **OK** to open the Auto Negotiation Configuration screen.
- Step 8** On the Auto Negotiation Configuration screen, select **Continue** to use automatic negotiation for the settings of the Ethernet network interface card (NIC).
- The MTU Configuration screen appears.
- Step 9** In the MTU Configuration screen, select **No** to keep the default setting for Maximum Transmission Units (1500).
- Note** Finesse supports the default setting of 1500 for MTU only. No other value is supported.
- Your selection of No opens the Static Network Configuration screen.
- Step 10** On the Static Network Configuration screen, enter static network configuration values as follows, referring to the Configuration Worksheet if necessary:
- Enter the **Host Name**.
 - Enter the **IP Address**.
 - Enter the **IP Mask**.
 - Enter the **GW Address**.
 - Select **OK** to open the Domain Name System (DNS) Client Configuration screen.
- Step 11** On the DNS Client Configuration screen, select **Yes** to specify the DNS client information.
- Important** DNS client configuration is *mandatory* for Cisco Finesse. Select Yes on this screen. If you select No, after the installation is complete, agents *cannot* sign in to the desktop and you have to reinstall Finesse.
- Step 12** Specify your DNS client information as follows, referring to the Configuration Worksheet if necessary:
- Enter the **Primary DNS** (mandatory).
 - Enter the **Secondary DNS** (optional).
 - Enter the **Domain** (mandatory).
 - Select **OK** to open the Administrator Login Configuration screen.
- Step 13** On the Administrator Login Configuration screen:
- Enter the credentials for the administrator.
 - Select **OK** to open the Certificate Information screen.

- Step 14** On the Certificate Information screen:
- Enter the following data to create your Certificate Signing Request: Organization, Unit, Location, State, and Country.
 - Select **OK** to open the First Node Configuration screen.
- Step 15** On the First Node Configuration screen, select **Yes** to indicate that you are configuring the first node. Your selection of Yes opens the Network Time Protocol Client Configuration screen.
- Step 16** On the Network Time Protocol Client Configuration screen, enter the IP address, NTP server name, or NTP Server Pool name for at least one external NTP server.
- Step 17** After you complete the NTP configuration, select **OK**. This action opens the Security Configuration screen.
- Step 18** On the Security Configuration screen, enter the Database Access Security password, and then select **OK**.
- Step 19** On the Application User Configuration screen, enter the credentials for the application user. Select **OK** to open the Platform Configuration Confirmation screen. This screen states that the platform configuration is complete.
- Step 20** On the Platform Configuration Confirmation screen, select **OK**.

The installation begins.


The installation can take up to an hour to complete and can run unattended for most of that time.

During the installation, the monitor shows a series of processes, as follows:

- Formatting progress bars
- Copying File progress bar
- Package Installation progress bars
- Post Install progress bar
- Populate RPM Archive progress bar
- Application Installation progress bars (multiple Component Install screens, security checks)
- An informational screen saying the system will reboot momentarily to continue the installation

If you see the following virtual machine question, select **Yes**, and then click **OK**:

Figure 1: Virtual Machine Message

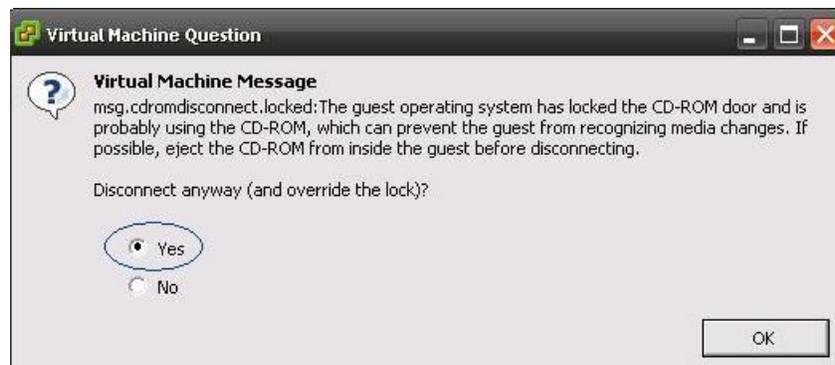

- A system reboot

Messages stream down your monitor during the reboot. Some of them prompt you to press a key. *Do not* respond to these prompts to press a key.

- Application Pre Install progress bars
- Configure and Setup Network progress bars

Note If a Network Connectivity Failure screen appears during the Configure and Setup Network process, click **Review**, and then click **OK** at the Errors screen. Follow the prompts to reenter the information that caused the failure. The installation continues when the connection information is complete.

- Security configuration

A message appears that states the installation of Cisco Finesse has completed successfully.

```
The installation of Cisco Finesse has completed successfully.
```

```
Cisco Finesse <version number>  
<hostname> login: _
```

What to do next

Sign in to the Finesse administration console on the primary Finesse server (<https://FQDN of Finesse server:8445/cfadmin>) to configure CTI server, Administration & Database server, and cluster settings.

After you configure these settings, install Finesse on the secondary node.

Related Topics

[Configuration Worksheet](#)

[Configure Contact Center Enterprise CTI Server Settings](#)

[Configure Contact Center Enterprise Administration & Data Server Settings](#)

[Configure Cluster Settings](#)

[Cisco Finesse CLI](#)

Install Finesse on Secondary Node

Install the same version of Finesse on both the primary and secondary Finesse nodes.



Note Configure a Datastore ISO file on the virtual CD/DVD drive of the target VM to install Finesse.



Note Finesse administration tasks can only be performed on the primary Finesse server. After you install the secondary server, sign in to the administration console on the primary server to perform administration tasks (such as configuring reason codes or call variable layout).

Before you begin

- Install Finesse on the primary server. See *Install Finesse on Primary Node*.
- Use the Finesse administration console on the primary Finesse server to configure CTI server, Administration & Database server, and cluster settings.
- Ensure that the DNS server has forward and reverse DNS set up for both the primary and secondary node.

Procedure

- Step 1** Follow the instructions in the OVA README.txt file to import and deploy the OVA, to edit VM settings, and to power on the VM and edit the BIOS settings in the Console.
- Messages appear while the preinstallation script runs. When the preinstallation script ends, the DVD Found screen opens.
- Step 2** Select **Yes** on the DVD Found screen to begin the verification of the media integrity and a brief hardware check.
- If the media check passes, select **OK** to open the Product Deployment Selection screen. Continue to Step 3.
- If the media check fails, the installation terminates.
- Step 3** The Product Deployment Selection screen states that the Cisco Finesse product suite will be installed. This screen has only one choice: **OK**.
- Select **OK** to open the Proceed with Install screen.
- Step 4** The Proceed with Install screen shows the version of the product that is currently installed (if any) and the version of the product for this ISO. For the initial installation, the version currently installed shows NONE.
- Select **Yes** on the Proceed with Install screen to open the Platform Installation Wizard screen.
- Step 5** On the Platform Installation Wizard screen, select **Proceed** to open the Basic Install screen.
- Step 6** Select **Continue** on the Basic Install screen to open the Basic Install wizard.
- The Basic Install wizard presents a series of screens that present questions and options pertinent to the platform and the setup configuration. Help is available for each wizard screen.
- The first Basic Install wizard screen is Timezone Configuration.
- Step 7** In the Timezone Configuration screen:
- a) Use the up and down arrows to locate the local time zone that most closely matches your server location. You can also type the initial character of the time zone to move to that item in the list. The Timezone field is based on country and city and is mandatory. Setting it incorrectly can affect system operation.
 - b) Select **OK** to open the Auto Negotiation Configuration screen.
- Step 8** On the Auto Negotiation Configuration screen, select **Continue** to use automatic negotiation for the settings of the Ethernet network interface card (NIC).
- The MTU Configuration screen appears.
- Step 9** On the MTU Configuration screen, select **No** to keep the default setting for Maximum Transmission Units (1500).

Note Finesse supports the default setting of 1500 for MTU only. No other value is supported.

Your selection of No opens the Static Network Configuration screen.

- Step 10** On the Static Network Configuration screen, enter static network configuration values as follows, referring to the Configuration Worksheet if necessary:
- Enter the **Host Name**.
 - Enter the **IP Address**.
 - Enter the **IP Mask**.
 - Enter the **GW Address**.
 - Select **OK** to open the Domain Name System (DNS) Client Configuration screen.
- Step 11** On the **DNS Client Configuration** screen, select **Yes** to specify the DNS client information.
- IMPORTANT:** DNS client configuration is *mandatory* for Cisco Finesse. Select Yes on this screen. If you select No, after the installation is complete, agents *cannot* sign in to the desktop and you have to reinstall Finesse.
- Step 12** Specify your DNS client information as follows, referring to the Configuration Worksheet if necessary:
- Enter the **Primary DNS** (mandatory).
 - Enter the **Secondary DNS** (optional).
 - Enter the **Domain** (mandatory).
 - Select **OK** to open the Administrator Login Configuration screen.
- Step 13** On the Administrator Login Configuration screen:
- Enter the credentials for the administrator.
 - Select **OK** to open the Certificate Information screen.
- Step 14** On the Certificate Information screen:
- Enter the following data to create your Certificate Signing Request: Organization, Unit, Location, State, and Country.
 - Select **OK** to open the First Node Configuration screen.
- Step 15** On the First Node Configuration screen, select **No** to indicate that you are configuring the second node.
- A warning message appears that indicates you must first configure the server on the first node before you can proceed. If you already configured the first node, select **OK**.
- Step 16** On the Network Connectivity Test Configuration screen, select **No** to proceed with the installation after connectivity is verified.
- Step 17** On the First Node Configuration screen, specify the information about the first node as follows:
- Enter the **Host Name** of the primary Finesse server.
 - Enter the **IP Address** of the primary Finesse server.
 - Enter the **Security Password** of the primary Finesse server.
 - Confirm the **Security Password**.
- Step 18** Select **OK** to open the Platform Configuration Confirmation screen.
- Step 19** On the Platform Configuration Confirmation screen, select **OK**.

The installation begins.

The installation can take up to an hour to complete and can run unattended for most of that time.

A message appears that states the installation of Cisco Finesse has completed successfully.

The installation of Cisco Finesse has completed successfully.

```
Cisco Finesse <version number>
<hostname> login: _
```

What to do next

Check the replication status. If all nodes in the cluster show a **replication status of 2**, replication is functioning correctly.



Note It can take 10–20 minutes to establish replication fully between the two nodes.



Note To access platform specific applications like Disaster Recovery System, Cisco Unified Serviceability, and Cisco Unified Operating System Administration, use the following URL, <https://FQDN of Finesse server:8443>.

Related Topics

- [Configuration Worksheet](#)
- [Install Finesse on Primary Node](#), on page 2
- [Configure Contact Center Enterprise CTI Server Settings](#)
- [Configure Contact Center Enterprise Administration & Data Server Settings](#)
- [Configure Cluster Settings](#)
- [Check Replication Status](#)
- [Cisco Finesse CLI](#)

Installation Troubleshooting

If	Then
The installation fails.	<p>If the installation fails, a screen appears that asks if you want to copy diagnostic information to a device.</p> <p>In this situation, you must reinstall from the beginning, but first you must attach a serial port to the VM. Then, you dump the install logs into the serial port of the VM.</p>