



Cisco IEC6400 Edge Compute Appliance UCS Firmware Upgrade Guide, Release 4.2.3j

[Overview of the Cisco IEC6400 Firmware Upgrade](#) **2**

[HUU File Details](#) **2**

[Upgrading the CIMC and BIOS Versions of IEC6400](#) **2**

[Verifying the CIMC and BIOS Versions of IEC6400](#) **3**

Overview of the Cisco IEC6400 Firmware Upgrade

This guide describes how to upgrade the Cisco Integrated Management Controller (CIMC) and BIOS components of Cisco IEC6400 using the Host Upgrade Utility (HUU) software.



Note The HUU software file does not update the IEC6400 gateway software.

HUU File Details

The IEC6400-HUU-4.2.3j.img file contains the following modules:

Component	Version
CIMC	4.2(3j)
BIOS	4.3.2e.0

Upgrading the CIMC and BIOS Versions of IEC6400

Before you begin


Ensure that you power off the IEC6400 gateway before performing this firmware upgrade.

Procedure

Step 1 Log into the CIMC web application using your credentials.

Step 2 On the CIMC web application home page, click **Launch vKVM** to open **Cisco vKVM** console.

Step 3 Choose **Virtual Media** > **vKVM-Mapped vHDD**.

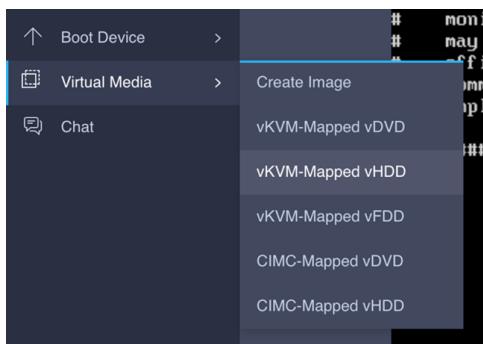


The **Map Virtual Media - Removable Disk** window appears.

Step 4 Click **Browse** and choose the **IEC6400-HUU-4.2.3j.img** HUU image file to connect it.


Step 5 Click **Map Drive**.

Step 6 Choose **Power > Reset System**, to reset the device.

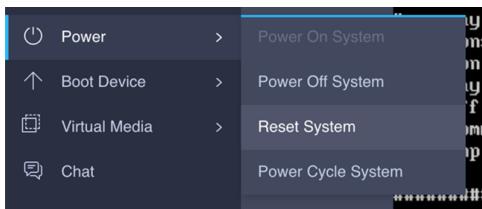


Step 7 From the BIOS prompt, press **F6** to enter the boot menu.

Step 8 In the boot device menu window, choose **UEFI: Cisco vKVM-Mapped vHDD2.00, Partition 1**, and press **Enter** to boot the image.

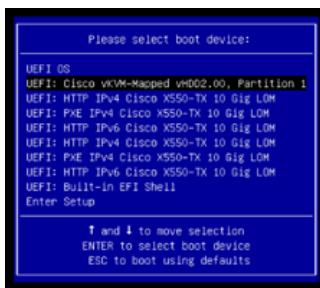

The HUU upgrade process checks the current versions of CIMC and BIOS. If the device prompts you to upgrade, enter **y** from the keyboard to begin the upgrade process.

Step 9 Once the upgrade is complete, press **Enter** to activate the new versions of CIMC and BIOS and to reset the device.

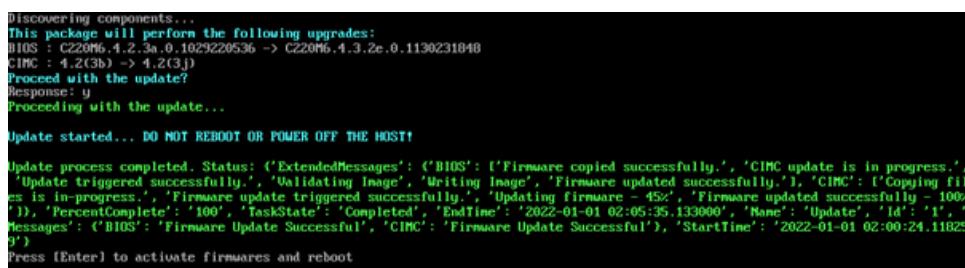

Note You must remain connected until the process completes.

Verifying the CIMC and BIOS Versions of IEC6400

Procedure

Step 1 Log into the **CIMC** web application using your credentials.

Step 2

Click  on the left corner.

Step 3

Choose **Admin > Firmware management** to display the current versions of the CIMC and BIOS.



Component	Running Version	Backup Version	Bootloader Version	Status
<input type="checkbox"/> BMC	4.2(3)	4.2(3)240309.MFGONLY	4.2(3)	Completed Success
<input type="checkbox"/> BIOS	C220M6.4.3.2e.0_URWB	C220M6.4.2.3a.0_URWB	N/A	Completed Success

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2023 Cisco Systems, Inc. All rights reserved.



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA 95134-1706
USA

Asia Pacific Headquarters
CiscoSystems(USA)Pte.Ltd.
Singapore

Europe Headquarters
CiscoSystemsInternationalBV
Amsterdam,TheNetherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.